

 


Cat. No. 63-976

5"×7" Recording Picture Frame

Your RadioShack 5"×7" Recording Picture Frame lets you record and play back up to 10 seconds of sound to accompany a favorite picture. It uses the latest integrated circuit recording technology, so you can record a new message as many times as you like without having to wait for a tape to rewind.

Back View of Picture Frame

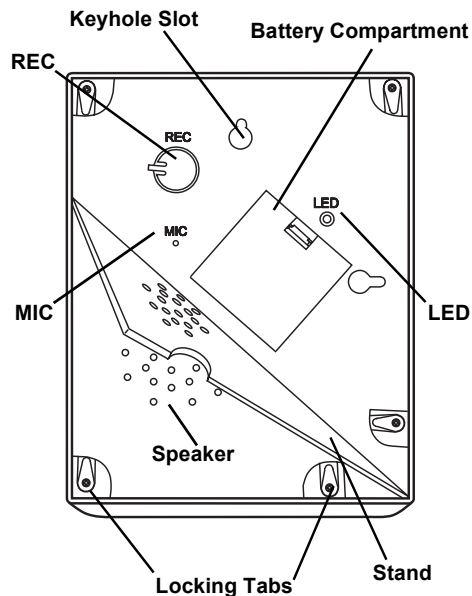


Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

Follow these steps to install batteries.

 1. Press the tab on the battery compartment cover, then lift off the cover.

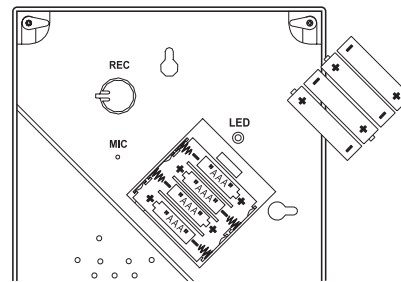

2. Place the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
3. Replace the cover.

When the sound becomes weak or distorted, or the recording picture frame stops operating properly, replace the batteries.

The recording picture frame keeps the message in memory, even if it loses battery power.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

Caution: If you do not plan to use the recording picture frame for a month or longer,

INSTALLING BATTERIES

Your recording picture frame uses four AAA batteries (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

© 1999 Tandy Corporation.
All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

place the frame on a flat surface with the stand extended.

FRAMING THE PICTURE

Follow these steps to place any of three different photo sizes (3"x5", 4"x6", or 5"x7") into the recording picture frame.

1. With the picture frame face-down, unlatch the three locking tabs on the back of the picture frame, then flip up the lower cover (stand) to disengage the other two locking tabs.
2. Grasp the stand and lift it up to detach the back cover.
3. *To place a 3"x5", or 4"x6" picture into the picture frame*, place the supplied black photo frame on the clear PVC plate, then place the picture face-down on the black frame.

 
To place a 5"x7" picture into the picture frame, place the picture face-down on the clear PVC plate.

4. Replace the back cover and secure it with the five locking tabs.

Mounting the Picture Frame

You can place the picture frame vertically or horizontally on a desk, shelf, or table using the built-in stand. Or, you can mount it on a wall using one screw (not supplied) and the keyhole slot on the back of the frame.

Extend the stand as far away as it will go from the back of the picture frame. Then

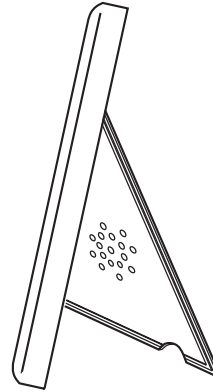

RECORDING A MESSAGE

 
Follow these steps to record a message up to 10 seconds long.

1. Hold down **REC** on the back of the picture frame. **LED** lights and the picture frame records for as long as you hold the button down (up to 10 seconds).
2. Hold the picture frame about 6 inches away and speak toward **MIC** (microphone) on the back of the frame.
3. To stop recording, release **REC**.

To record a new message, repeat Steps 1–3. The new message replaces the old one.

PLAYING THE MESSAGE

To listen to the recorded message, press the button at the lower right on the front picture frame.

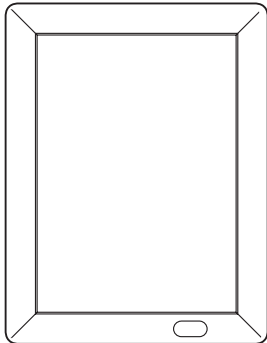

SPECIFICATIONS

Power	Four AAA Batteries
Battery Life	Approximately 1 Year
Recording Time	10 Seconds
Maximum Operating Temperature	32° to 104°F (0° to 40°C)
Dimensions (HWD)	7 ³¹ / ₃₂ × 6 ⁵ / ₃₂ × ³ / ₄ in (203 × 156 × 19 mm)
Weight	9.49 oz (269 g)

 
Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

CARE

To enjoy your Recording Picture Frame for a long time:

- Keep the picture frame dry. If it gets wet, wipe it dry immediately.
- Use and store the picture frame only in normal temperature environments.
- Handle the picture frame gently and carefully. Don't drop it.
- Keep the picture frame away from dust and dirt.
- Wipe the picture frame with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the picture frame's internal components can cause a malfunction and invalidate its warranty. If your picture frame is not performing as it should, take it to your local RadioShack store for assistance.

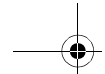

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

 
 
This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

04/99

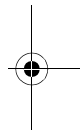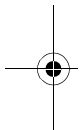

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

06A99

Printed in China

