

DIRECTIONS FOR USING
THIS FOUNTAIN PEN

To Fill—Unscrew section containing gold pen from barrel and hold point or dropper against inside wall of barrel, slowly forcing in the ink until barrel is nearly full, replace section, screwing it in firmly.

Should a new pen flood or bleed on first filling, allow the ink to run out, and refill. This is sometimes caused by the interior surfaces being somewhat oily. A second filling will correct this fault.

Allow the ink to get well soaked through the feed to the gold pen, after which the pen should write without trouble.

When pen begins to flow too freely it is an indication that ink is too low in barrel. Heed this warning and refill reservoir.


Carry in Pocket point up to prevent ink from running out into the cap.

To Clean—Rinse reservoir with cold water and place section or nozzle under a faucet, allowing the water to run through it. Wipe out the inside of the cap occasionally with a piece of tissue paper to remove moisture.

Do not remove the feed or gold pen from the holder, as it is difficult to replace them with proper adjustment, and careless handling will change action of gold pen.

Be sure that vent hole in top of cap is open—This hole permits the escape of the moisture as the ink evaporates from reservoir. One hole is usually sufficient for this, but if not, a second vent is provided inside of cap to be opened if necessary. By following this important direction the condensation of moisture on pen or suction is avoided.

Ink—For ordinary writing use a fluid ink. In using copying ink clean pen more frequently.

 Do not send a pen through the mail without emptying out the ink and cleaning out the section; be sure to send all parts of the pen when sending for repairs; put your name on outside of the package and send separate letter of advice.

CAREY.

BOSTON, MASS.
367 Washington Street

196 BROADWAY,
NEW YORK, N. Y.

PHILADELPHIA, PA.
1315 Market Street