


**Directions for Filling and Cleaning the Standard Dropper Filler Style**

**WAHL PEN**

Matches  
**EVERSHARP**

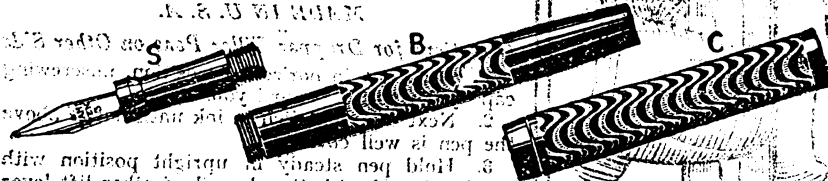

**Directions for Self-Filling Models on Other Side**  
Hold pen in horizontal position, unscrewing cap (C) by turning it toward you.

To fill pen with ink, unscrew the point section (S) by turning it toward you. With the use of the glass dropper, fill the barrel within  $\frac{1}{4}$  of an inch from the end. Screw point section on  $\frac{1}{2}$  way then turn pen point downward and screw upright in this position.

This method primes the feed and satisfactory results will follow if this method is adhered to.

With a piece of cloth dry off barrel and section—Pen is then ready for use.

To clean the section, hold it under the faucet and allow cold water to run through it. The barrel can be rinsed out repeatedly until it becomes clean. The best results may be obtained by carrying the holder in a perpendicular position in the pocket, cap upward. If by any reason it should be found in other than an upright position you may have no fear of the pen leaking, provided the cap is screwed on tight.




No other pencil can compare with Eversharp. Its rifled steel tip holds the lead in position at all times—one of many exclusive Eversharp features. Eversharp is always ready to write. Steadily, smoothly it writes your message. Carries twelve leads—many months' supply. Extra Eversharp Leads, packed in Red Top boxes, may be bought from all Eversharp dealers. Eversharp is beautiful, convenient, and represents true pencil economy. Made in many designs, in silver and in gold—each made with jeweler precision. Be sure you get the genuine Eversharp—the name is on the pencil for your protection.

**EVERSHARP**

Made by

**The Wahl Company**

1800 Roscoe Street, Chicago, Illinois

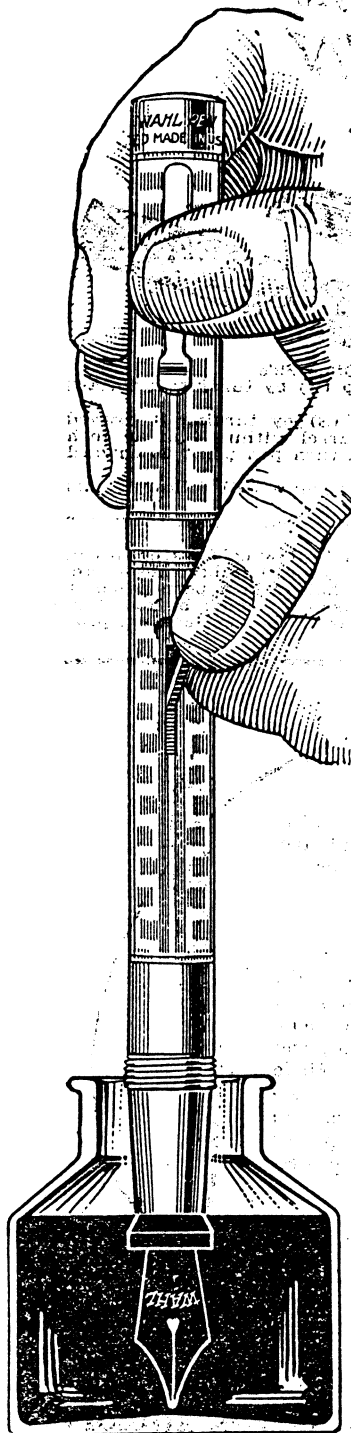

## DIRECTIONS

For Filling and Cleaning all  
Self-Filling Models of the

# WAHL PEN

Matches

## EVERSHARP

MADE IN U. S. A.

### Directions for Dropper Filler Pens on Other Side

1. Hold pen in horizontal position, unscrewing cap by turning it toward you.
2. Next dip Gold Pen in ink until flange above the pen is well covered.
3. Hold pen steady in upright position with one hand, and with thumb nail of other lift lever until it is at right angles with barrel.
4. While Gold Pen remains in ink raise and lower lever two or three times. By thus flushing out the pen and completely expelling the air you clean the reservoir and give it the fullest ink capacity, then bring lever back slowly to its original position in the groove in the barrel.

To clean pen thoroughly immerse the pen point in cold water containing a little ammonia and thoroughly flush the reservoir by slowly raising and lowering lever several times. It is a good plan to give your pen a bath once a week.

When you are through writing always be sure to screw cap on firmly, thus making the chamber between pen and cap absolutely air-tight. Keep air holes in the cap open.

### IMPORTANT

Never try to take pen apart. If it needs repairs take it to your dealer who will put it in order and return it to you. If necessary to send pen to us for repairs be sure to

1. Send the complete pen.
2. Write your name and address plainly on package.
3. State definitely what repair is wanted.
4. Remove all ink from barrel.
5. Send it by registered mail.
6. Enclose sufficient postage for return of package by return mail.

If new gold pen is wanted, state style desired.

Prices for repair work and new parts are always fair and moderate.

## The Wahl Company

1800 Roscoe St. Chicago, Ill.

Eastern Branch and Export Department,  
427-429 Broadway,  
New York, N. Y.

Western Branch,  
444 Market St.,  
San Francisco, Cal.

IMPORTANT Read About

# EVERSHARP

On Other Side