

# SNAPFIL

FOUNTAIN PEN

## SUGGESTIONS

The "Safety device" should be attached to the clothing several inches above the pocket. For lady to carry, the ring at top of cap may be slipped over "tongue" of the guard pin, leaving the pen pendent.

## THINGS TO REMEMBER


A fountain pen is made to use and not to play with. If you insist upon dissecting the pen and taking it to pieces for the pleasure of seeing what it is composed of, you may have difficulty in putting it together in the proper way. The pen when it leaves the factory is in perfect adjustment and everything has been thoroughly tested so the pen cannot fail to give perfect satisfaction.

## TO FILL PEN

Remove cap covering pen point as in Cut No. 1.




RAISE TRIGGER to position as shown in Cut 2, holding pen point downward.

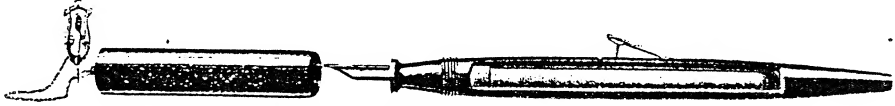

This X-Ray view shows the Snapfil in position for filling.

SUBMERGE THE ENTIRE PEN POINT IN INK and press on the trigger as shown in Cut 3.

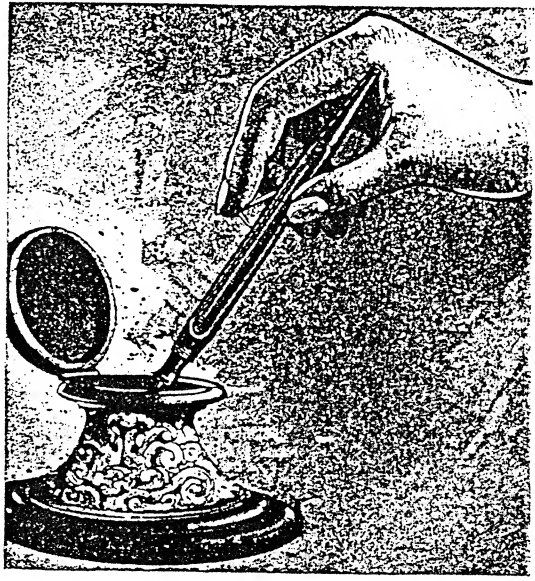

## When Pen Snaps It Is Filled

We repair our own makes of Fountain Pens. In sending pens for repairs, always enclose name and address. Always empty ink out of fountain pens before sending through mail.

### PRICES FOR REPAIRS

No.	New Gold Pens	Caps	Feeds	Barrels	Sections	Allowance for Old Gold Pen
2	\$1.25	\$0.40	\$0.40	\$0.75	\$0.50	\$0.20
3	1.50	.40	.40	.75	.50	.30
4	1.75	.50	.50	1.00	.60	.40
5	2.25	.60	.50	1.00	.60	.50
6	2.75	.70	.60	1.50	.75	.55
7	3.00	.70	.60	1.50	.75	.60

Chains and Pins.....	.50c	Rubber Sacks.....	.20c
Clips.....	.25c	Triggers.....	.50c

MANUFACTURED BY

**GENERAL MANUFACTURING CO.**  
SIOUX CITY, IOWA