

DIRECTIONS

FOR USING

THE PARKER "LUCKY LOCK" PENCIL

OPERATION: The lead in writing position is propelled outward by turning the cap clockwise. When the lead is used up very short no stub remains in the chamber—this is automatically ejected from the pencil by turning the cap clockwise. The lead may be repelled by turning the cap in a counter clockwise direction. In brief, the position of the lead is instantly adjustable by turning the cap. Moreover, the lead will always be clutched tightly by the mechanism—it will never be loose at the writing point.

HOW TO REFILL: The refilling operation is uncommonly simple—nothing need be disassembled or taken apart in the process. But when you first become the owner of a PARKER PENCIL learn how to refill it properly once and for all. You have the directions before you now—so please learn this simple process now and avoid the possibility of future annoyance.



After the old lead has been entirely used up or ejected, turn the cap of the pencil in a counter-clockwise direction until it clicks. Then make one clockwise turn. The mechanism is then set to receive the fresh lead. Insert the fresh lead through the tip, (see illustration), ease it down until it seats—and then adjust the position of the lead by turning the cap. That is all there is to it—it can be done in a very few seconds.

Eraser: The eraser is instantly accessible for use—it is underneath the cap. The cap is held on by an ingenious bayonet lock—the Lucky Lock. To remove the cap, do this: Push in, turn left smartly, and take it off. To replace it, simply reverse the operation—push the cap on and twist to the right (clockwise.)



We earnestly recommend the exclusive use of PARKER LEADS for all PARKER PENCILS. In most leads on the market there is a considerable variation in their diameters. Parker Leads are not issued for sale if their diameter is more than $1\frac{1}{2}$ thousandths of an inch over or undersize. The com-

position and structure of the leads are equally good and uniform. All in all, this insures you complete and perfect satisfaction in the matter of leads.

EXTRA LEADS: The chamber for extra leads is discovered by unscrewing the eraser cup—this unscrews counter-clockwise. This chamber accommodates from 12 to 14 extra leads of standard size, $1\frac{1}{4}$ inches long.



View of pencil partially disassembled, showing cap and eraser cup removed, and the location of the extra lead chamber.

THE PARKER PEN COMPANY
JANESVILLE, WISCONSIN, U. S. A.