

FIG. 50

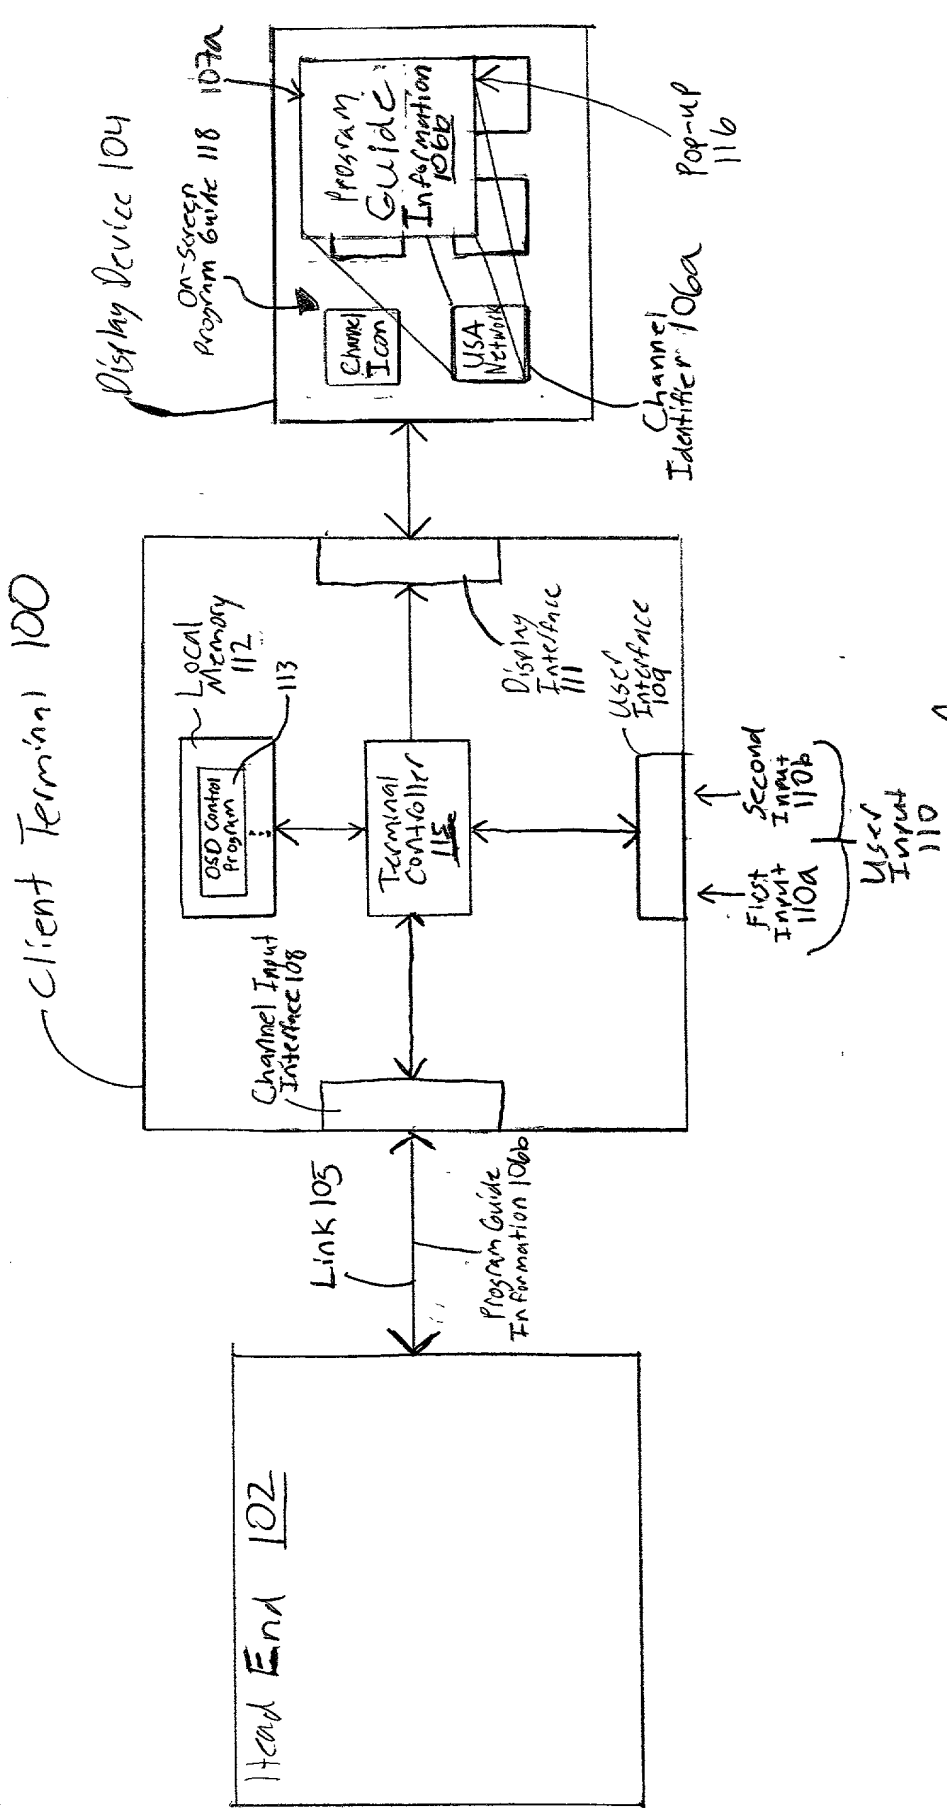


Figure 1

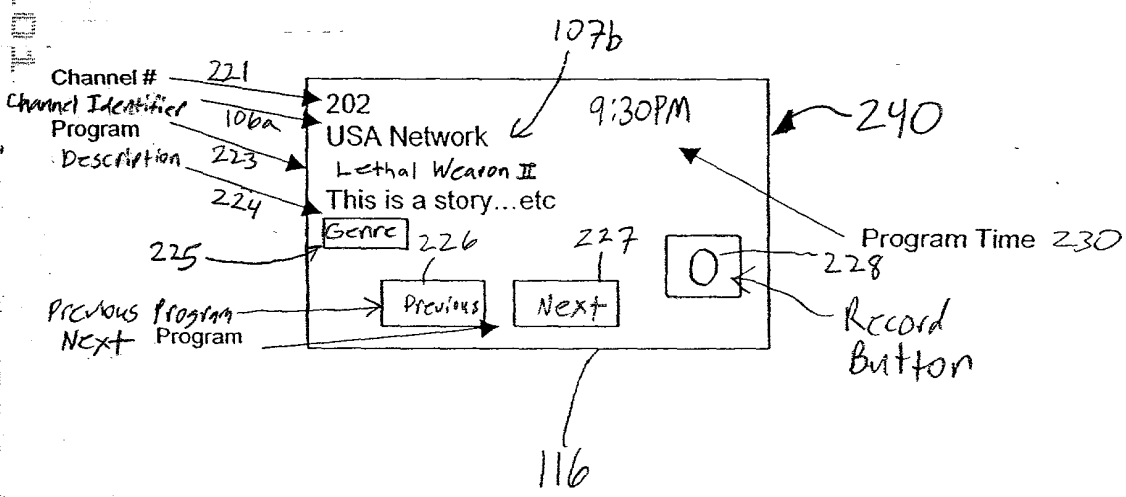
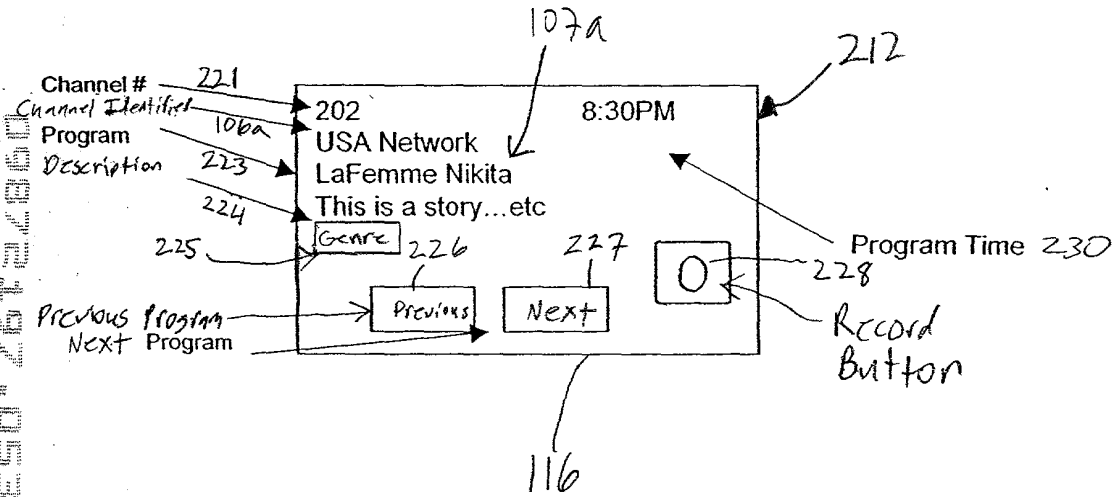
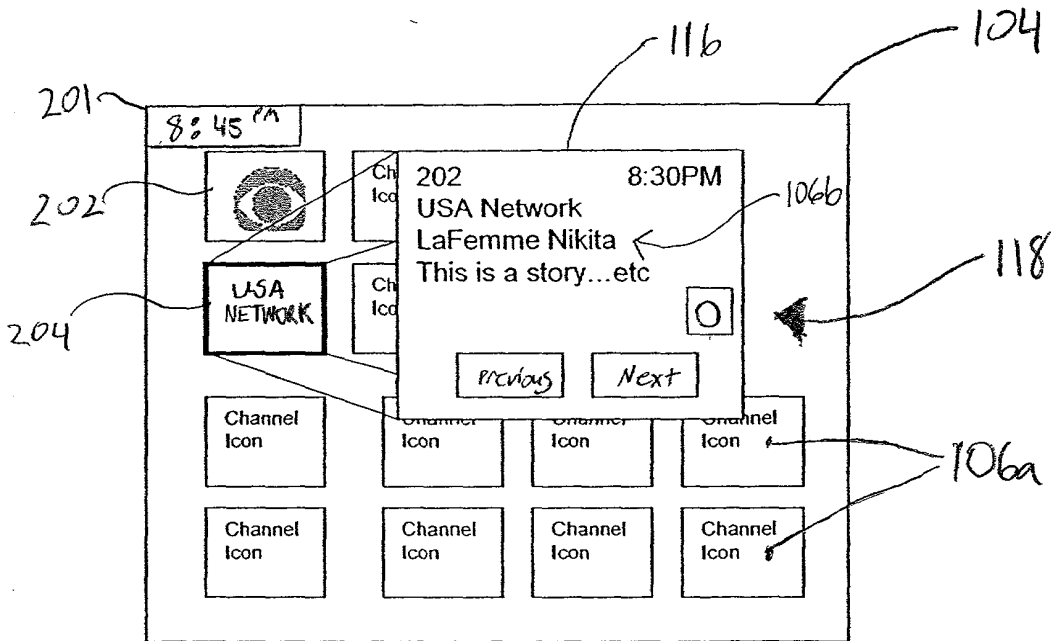


Figure 2

Method of Displaying Program Guide Information on a Display Device

300

Displaying Channel Identifiers on a Display Device

310

Receiving a First Input to select one of the Channel Identifiers

315

Display a pop-up for the Selected Channel Identifier on the Display Device that Includes First Program Data

320

Receive Second Input (e.g. Next Previous)

325

Display a pop-up for the Selected Channel Identifier on the Display Device that Includes Second Program Data

330

YES

Select Another Channel Identifier

335

Display Selected Channel

340

End

09876543210

