



## Part of 595-3973-01


## ILLUSTRATION BOOKLET PARTS PICTORIAL

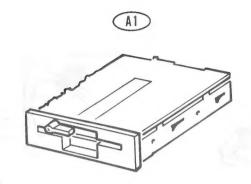


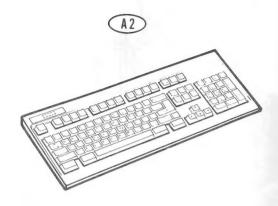


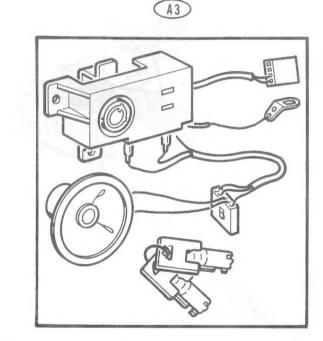


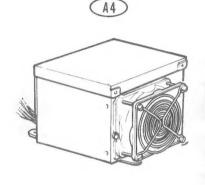


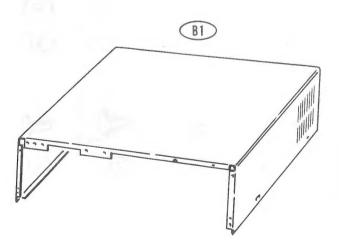

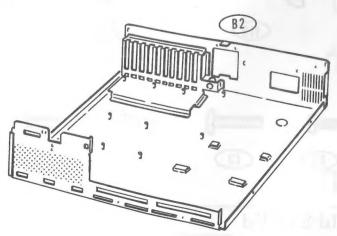

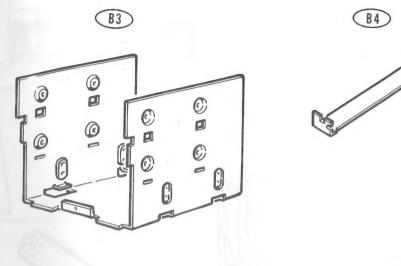

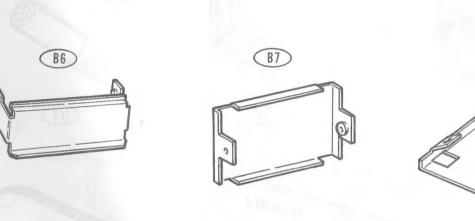

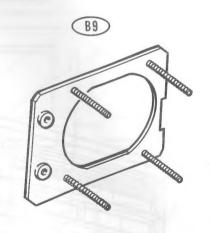





Model H-386

Copyright © 1987 Heath Company All Rights Reserved Printed in the United States of America

## PARTS PICTORIAL (Cont'd)

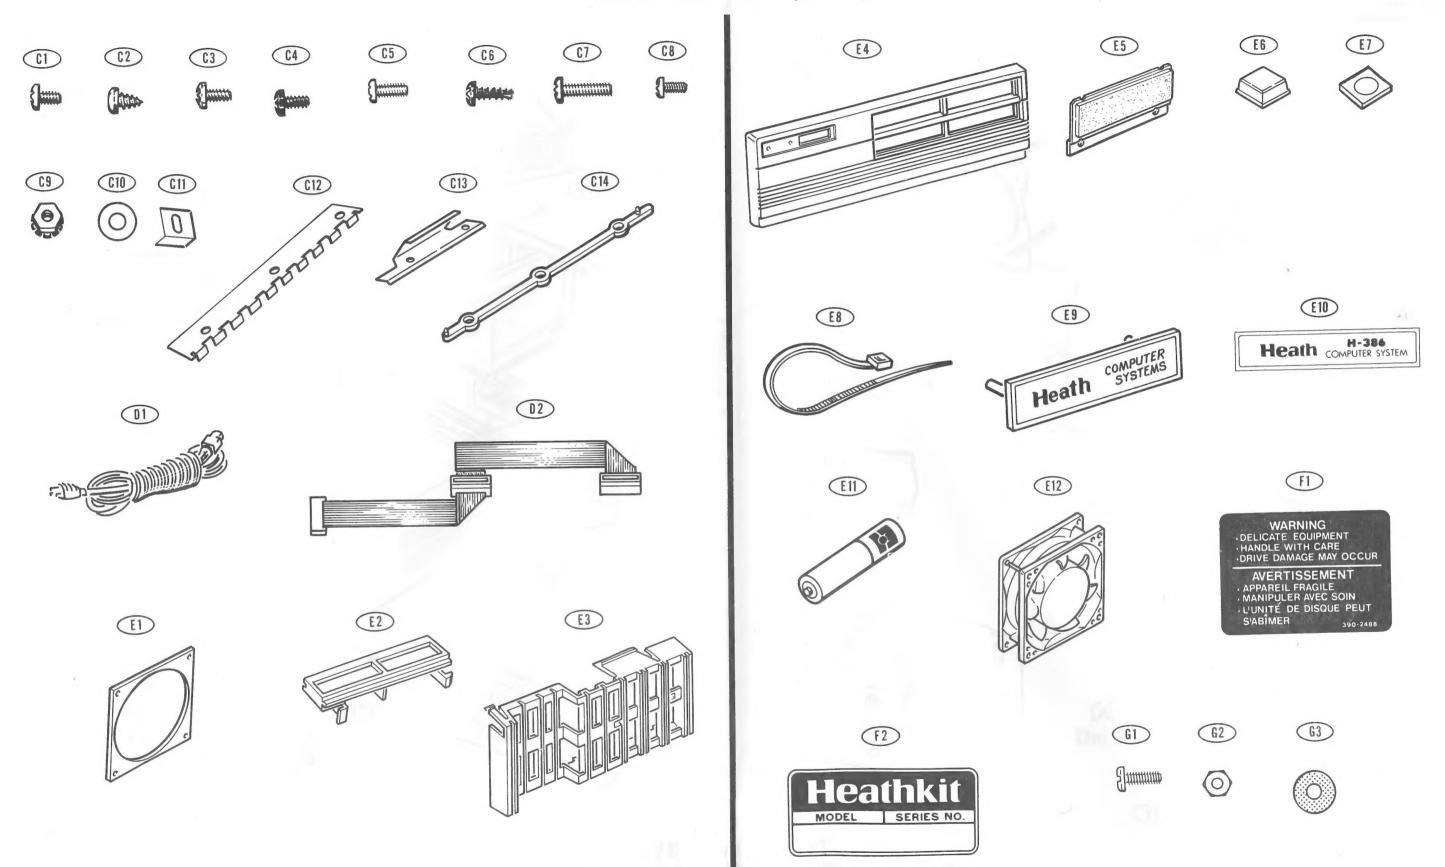

9

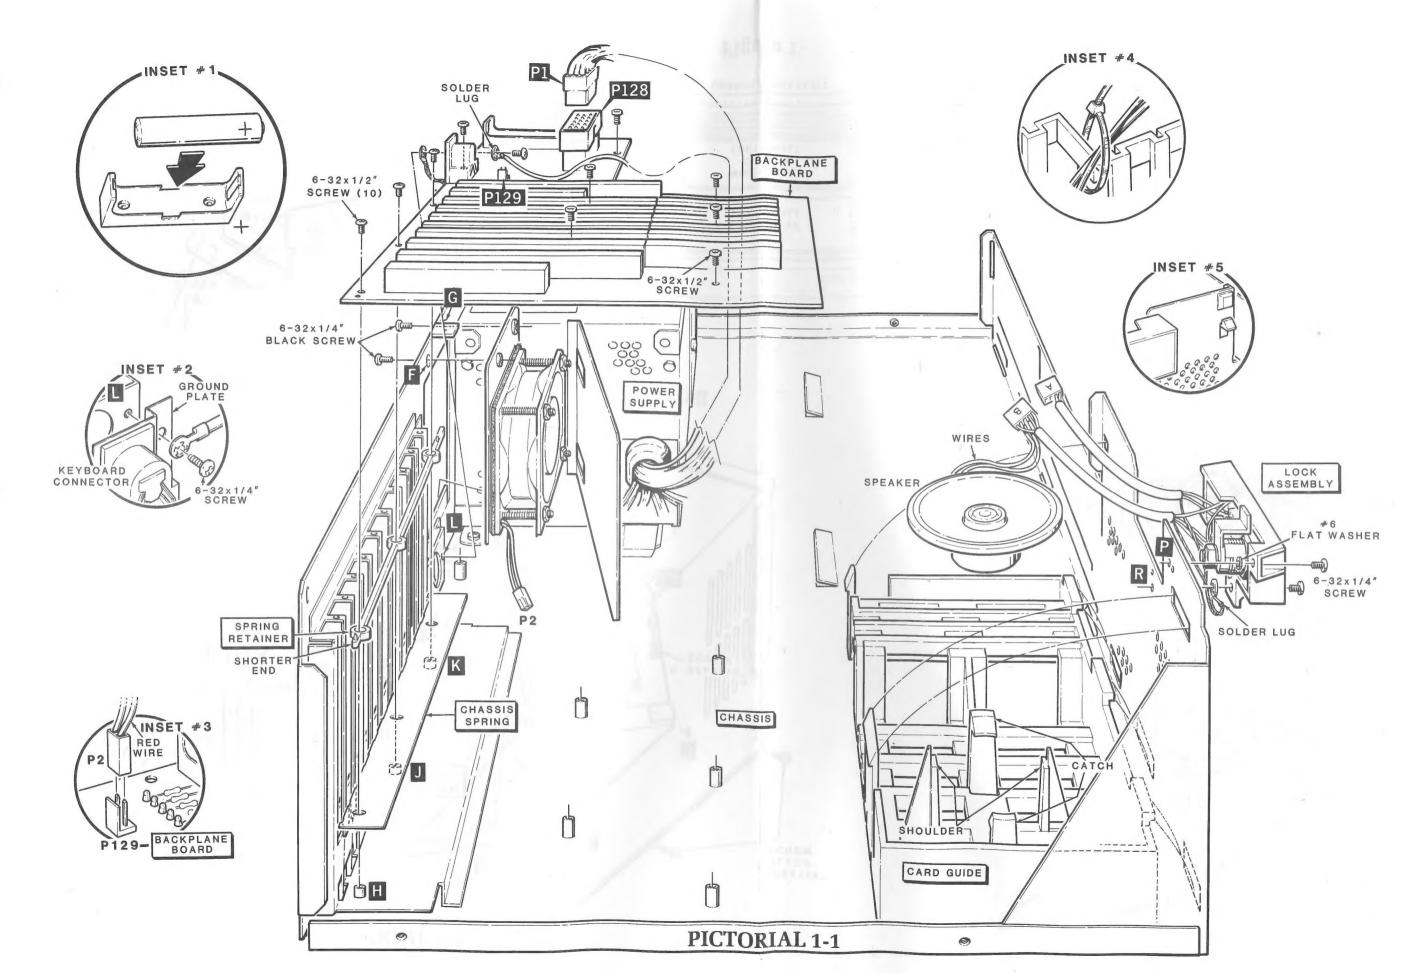



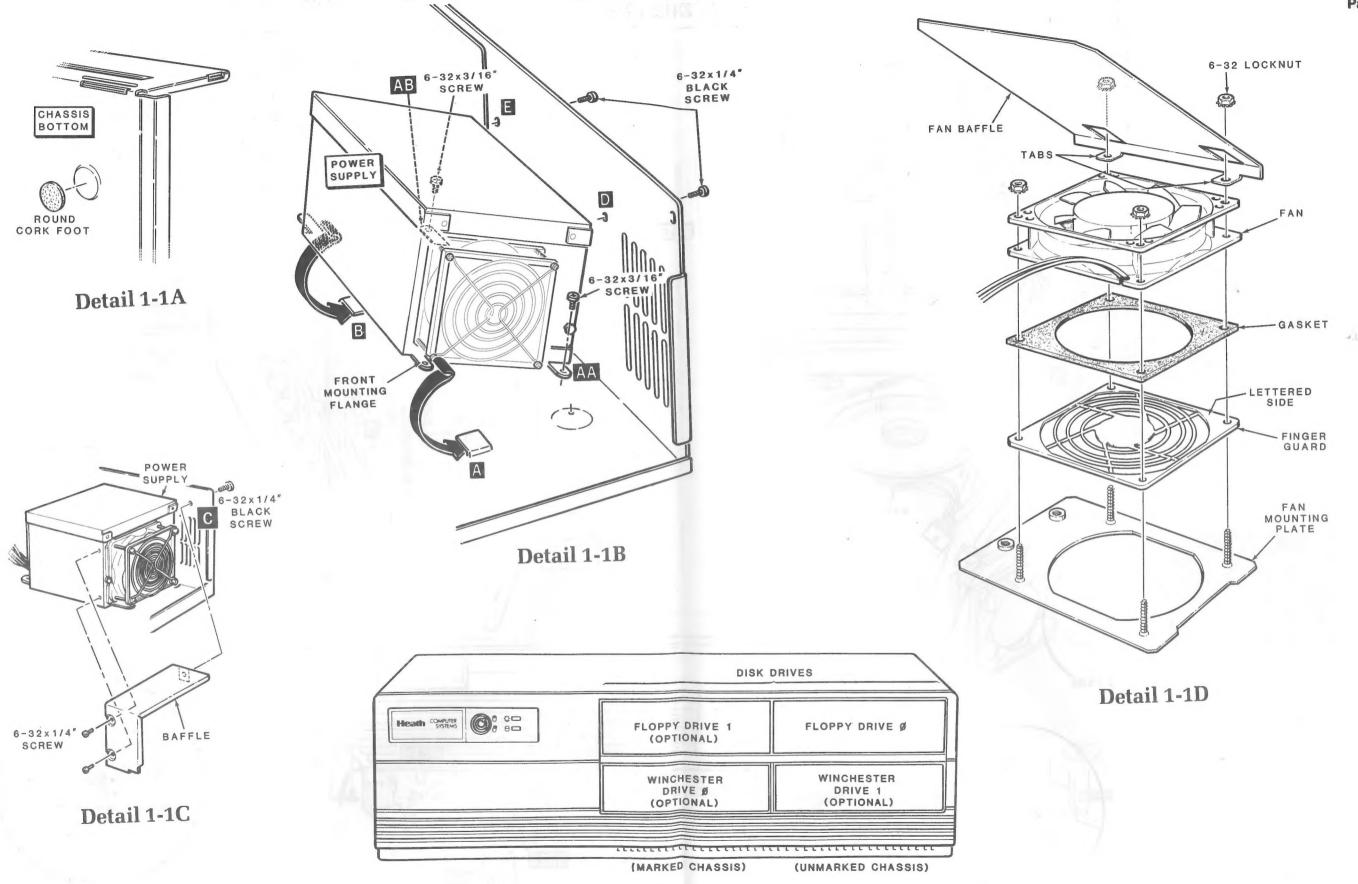



Figure 1

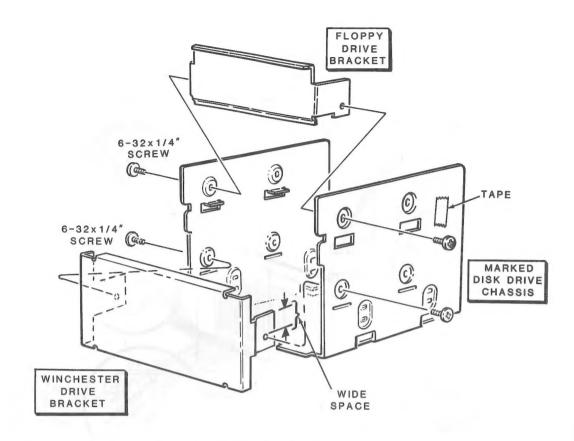


PICTORIAL 1-2

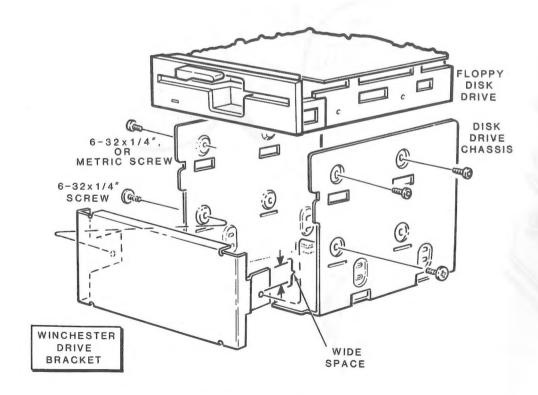


**PICTORIAL 1-3** 

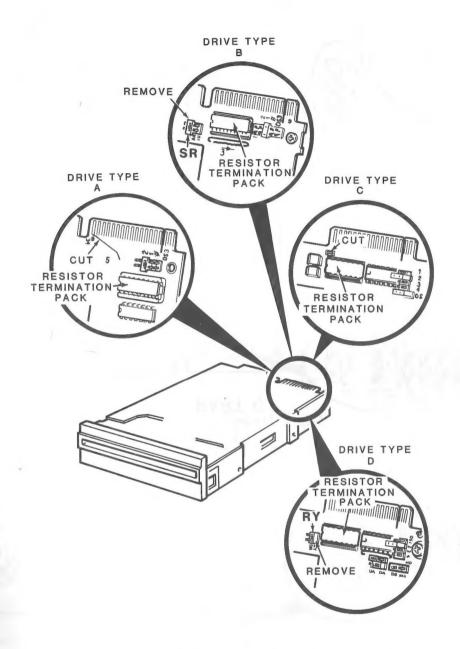


**PICTORIAL 1-4** 

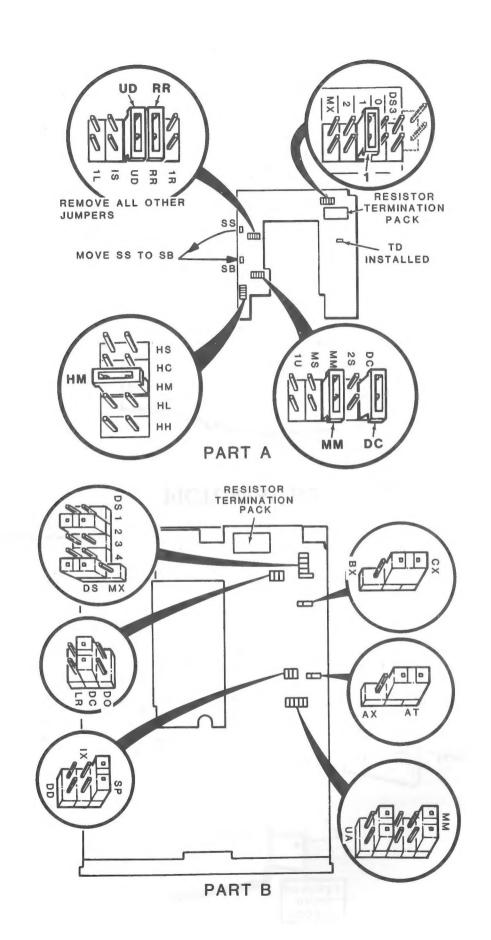

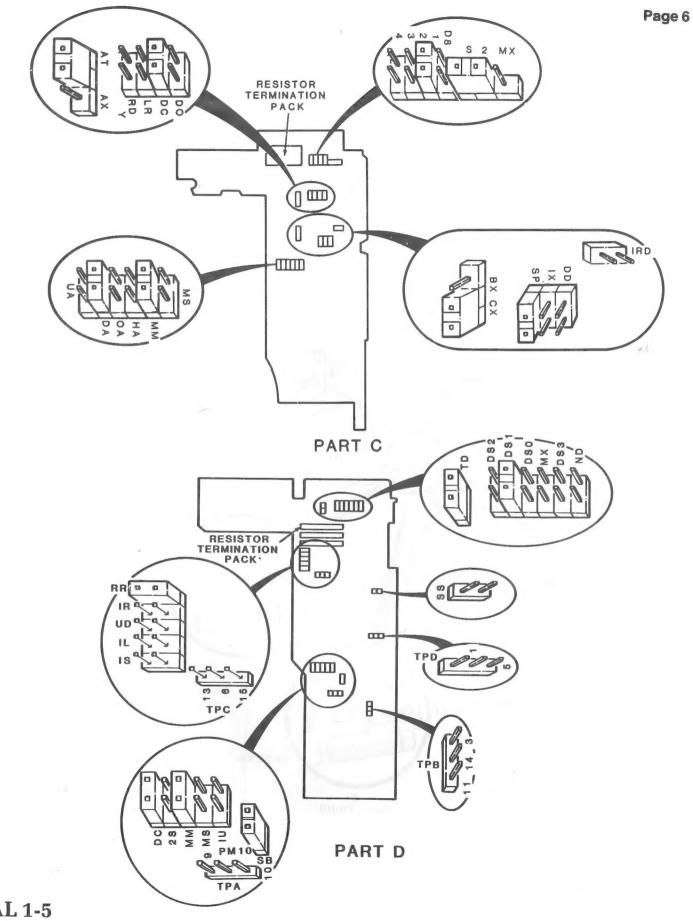

PICTORIAL 1-5

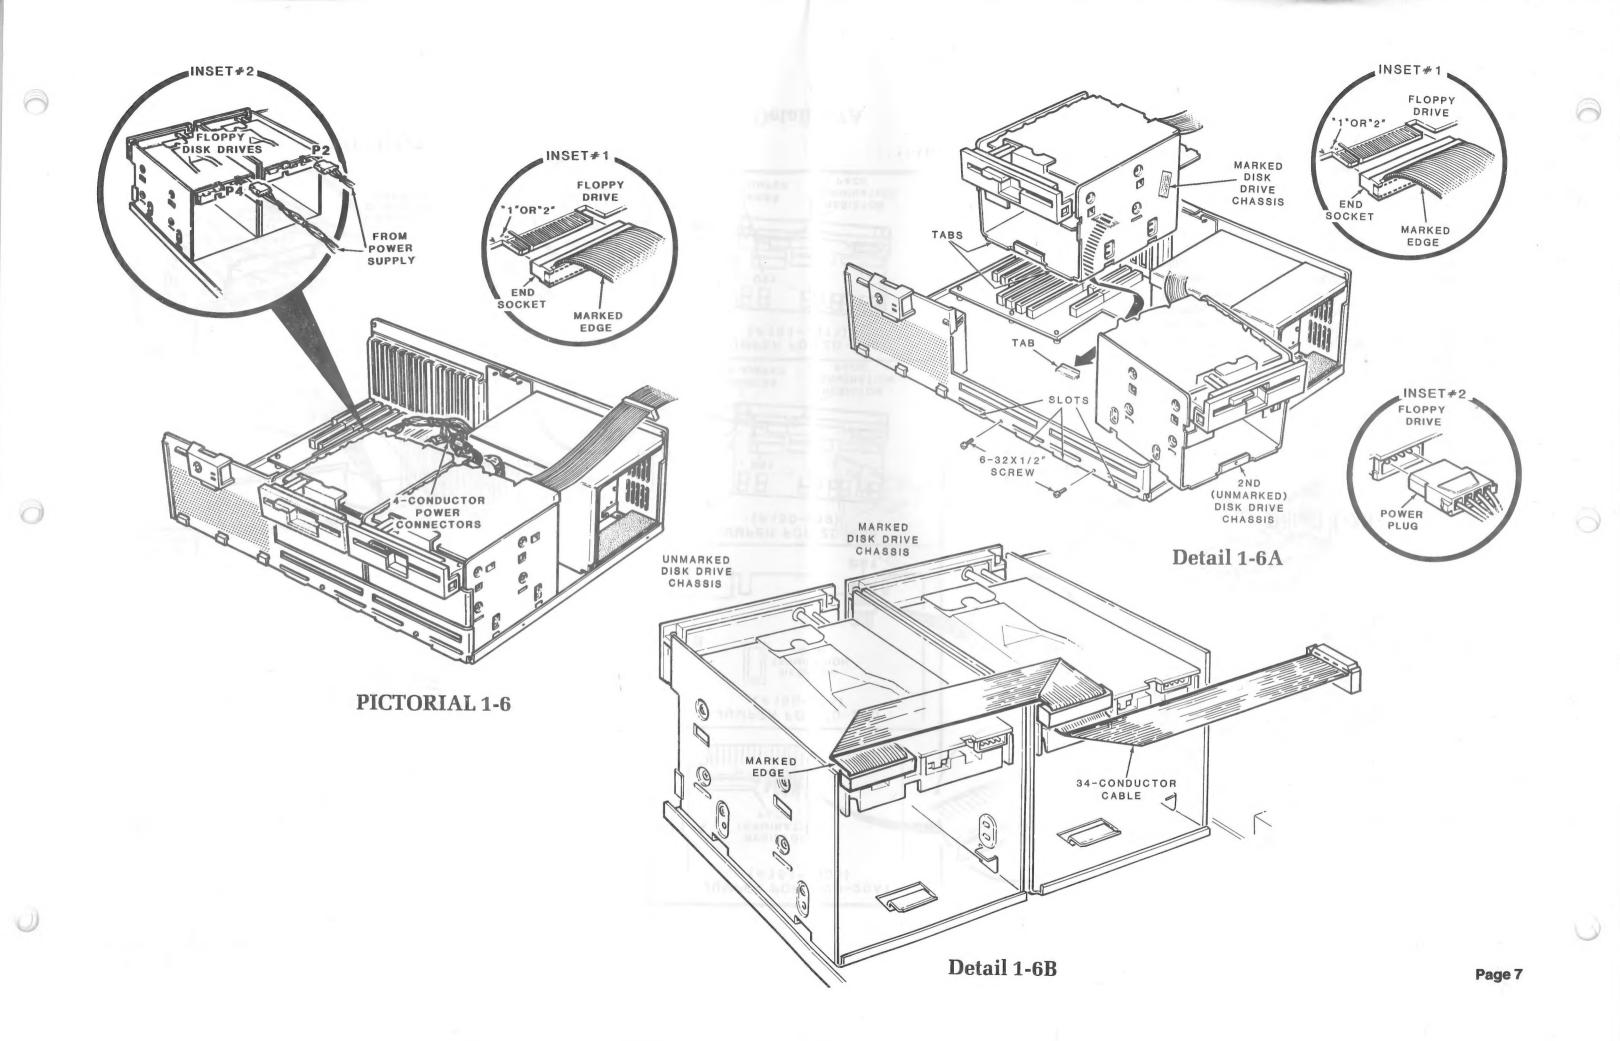




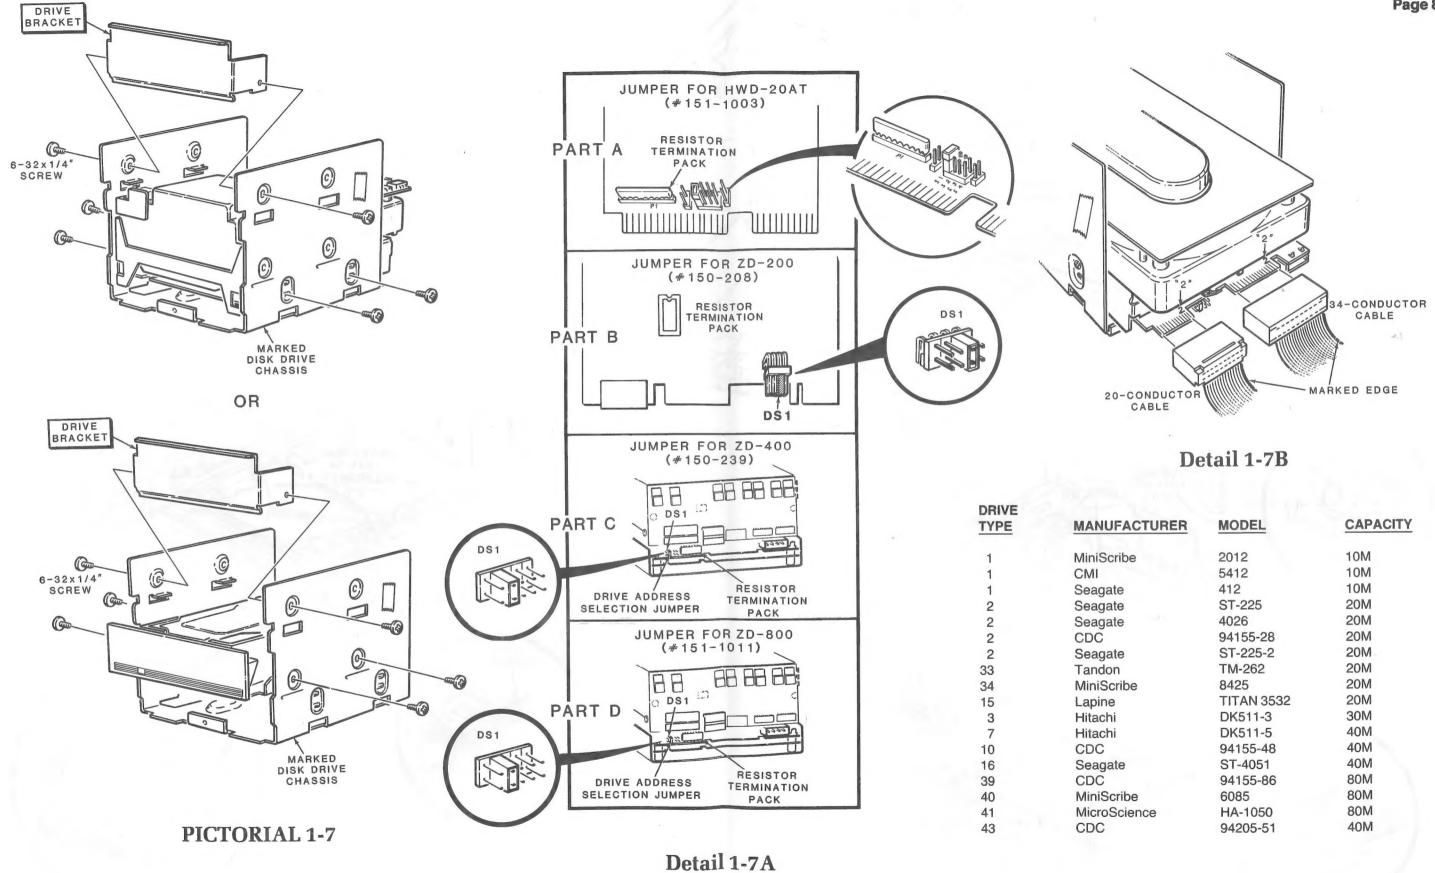



Figure 2

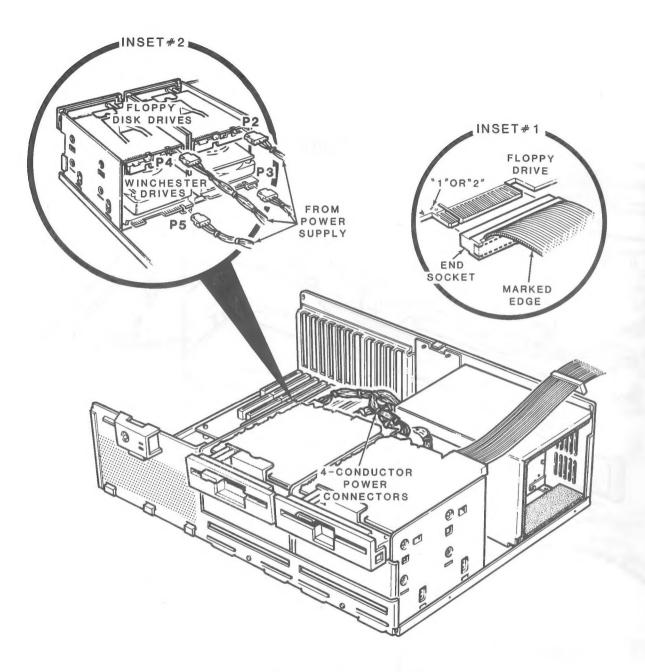


PICTORIAL 1-8

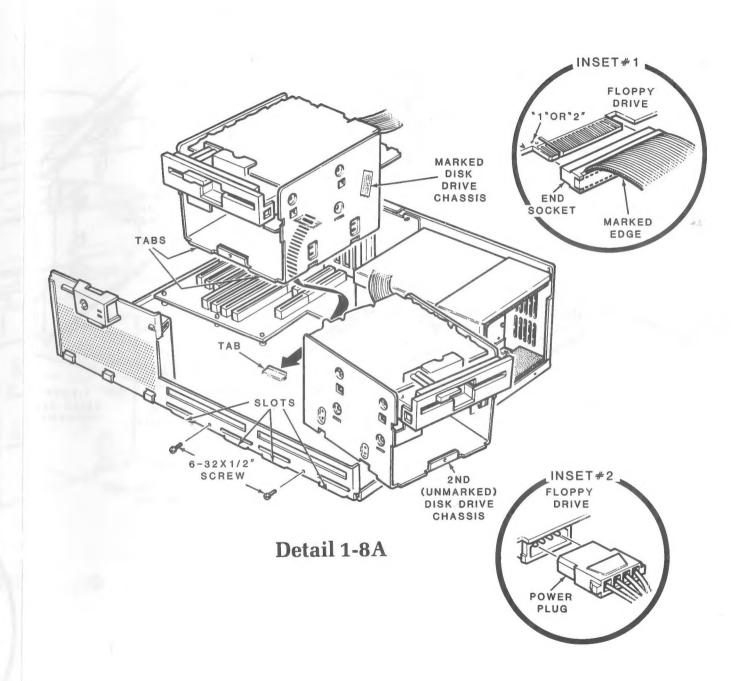


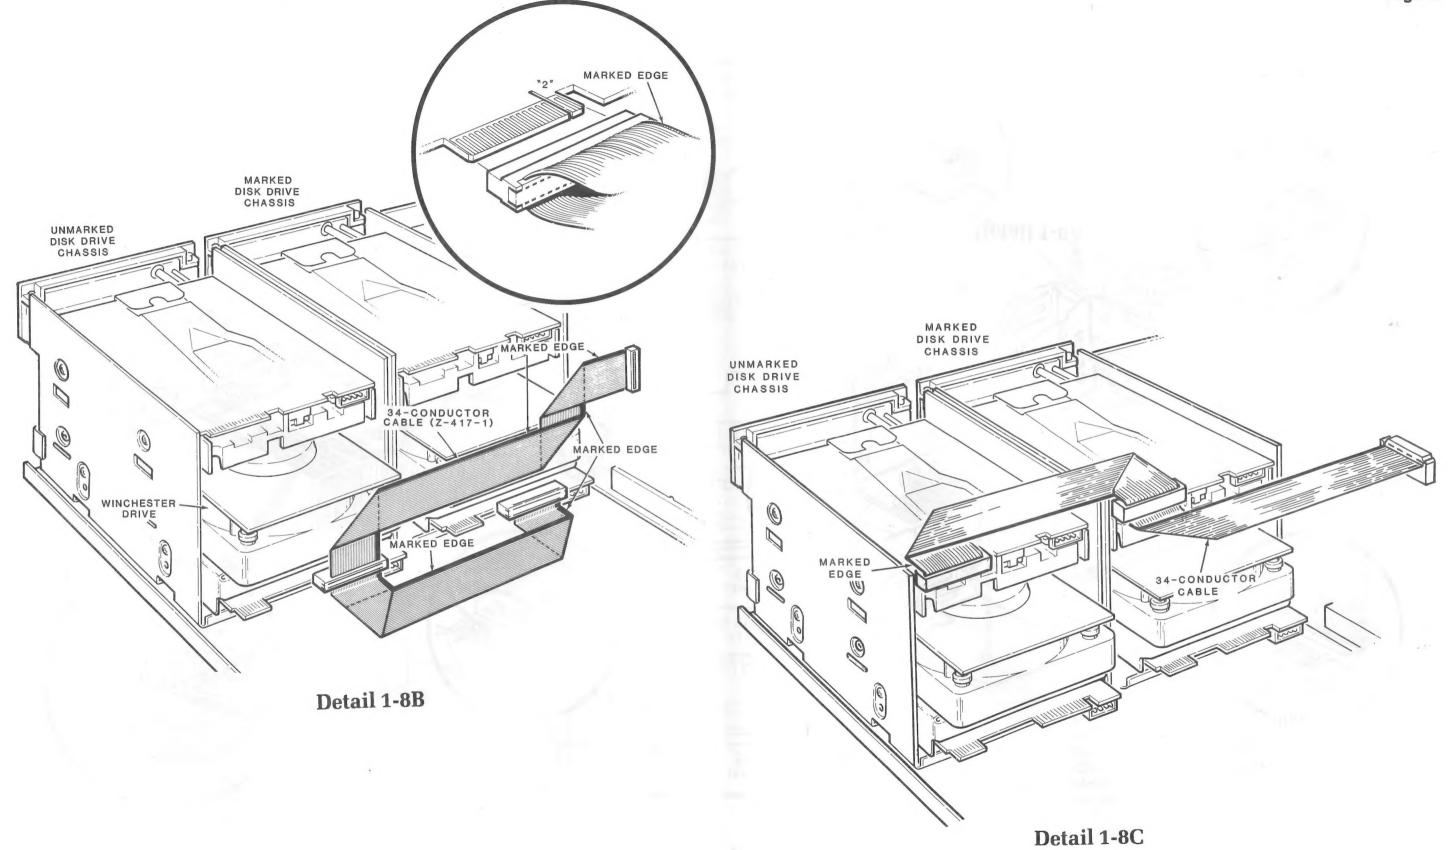

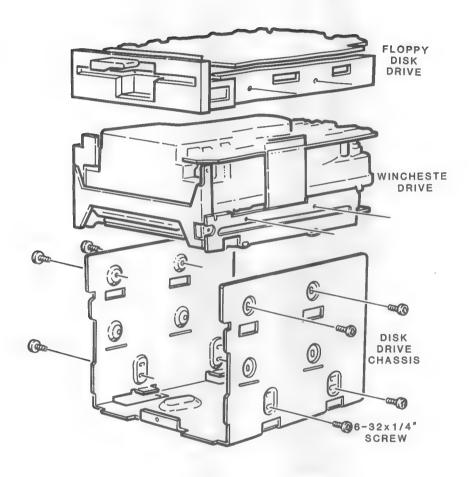

PICTORIAL 1-9

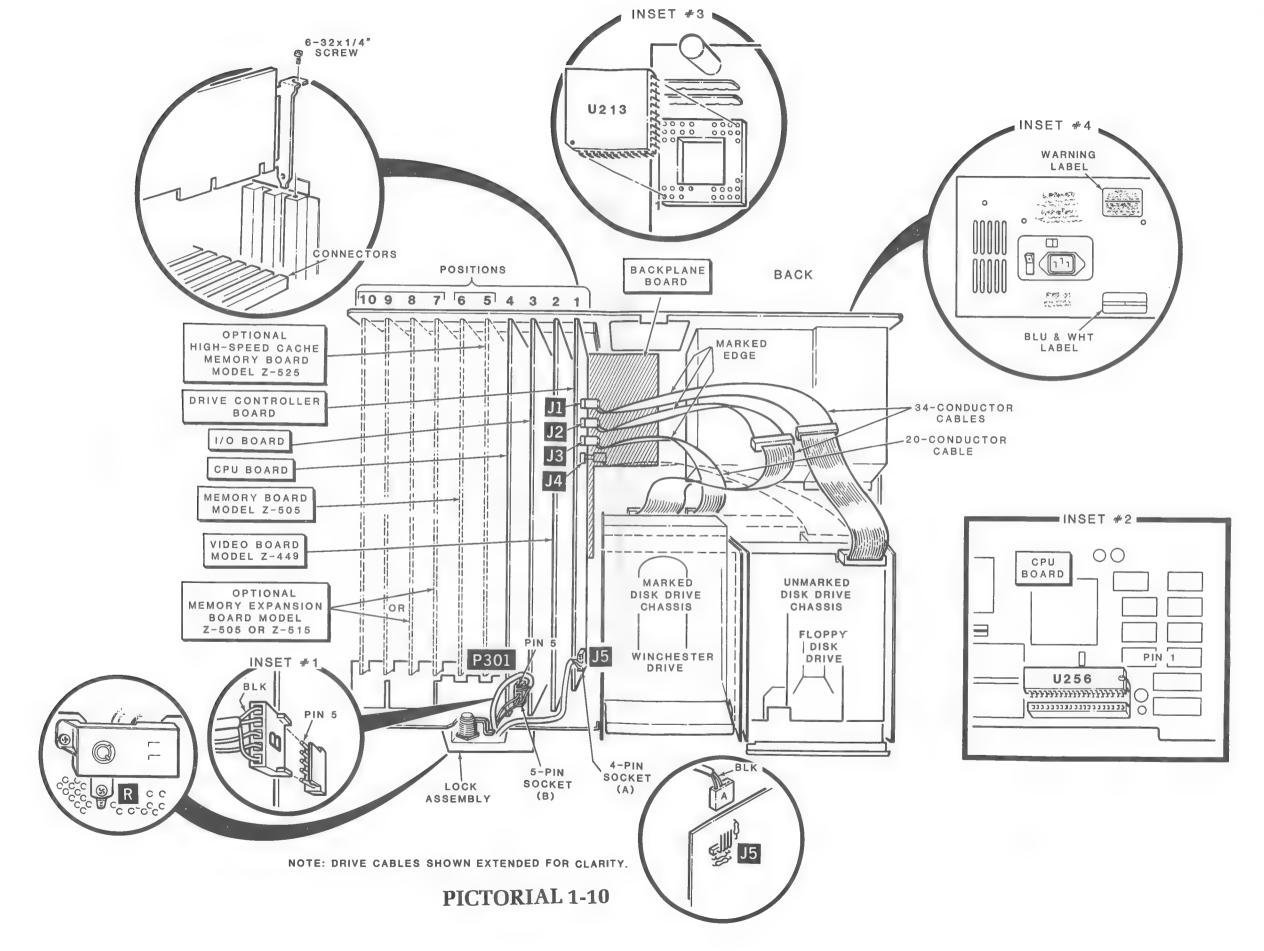

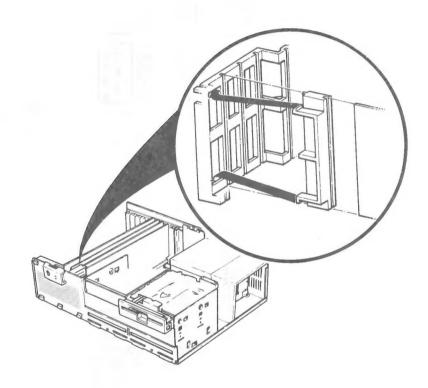

Detail 1-10A


The pins on the IC's may be bent out at an angle, so they do not line up with the holes in the IC socket. DO NOT try to install an IC without first bending the pins as described below. To do so may damage the IC pins or the socket, causing intermittent contact.




Before you install an IC, lay it down on its side as shown below and very carefully roll it toward the pins to bend the lower pins into line. Then turn the IC over and bend the pins on the other side in the same manner.



Compare the IC to the drawing shown below. Then determine which end of the IC is the pin 1 end.

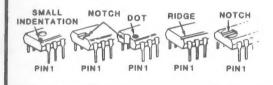

Position the pin 1 end of the IC over the index mark on the circuit board. Then start the pins into the socket. Make sure that all of the pins are started; then push the IC down firmly. NOTE: An IC pin can become bent under the IC and it will appear as though it is correctly installed in the socket.

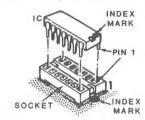

If it is ever necessary to remove an IC from its socket, use an IC puller (if one was supplied with your kit) or a small-bladed screwdriver as shown. Push the end of the IC puller or screwdriver blade between the IC and the socket and carefully lift the IC free. If any IC pins become bent, straighten them carefully.



Figure 3


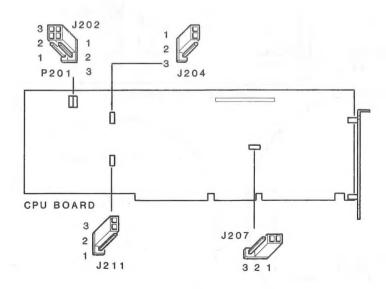


Figure 4

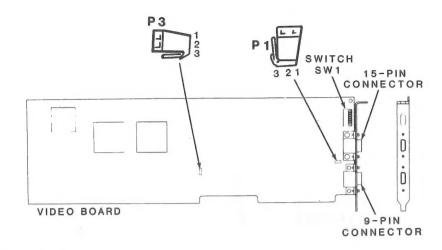



## VIDEO BOARD


			SWITCH	JUMPERS	
MONITOR	DISPLAY	CONNECTOR	SW1	P1	P3
ZVM-1330 or other CGA monitor	CGA (15.70 kHz) (Color Graphics Adapter)	9-pin	© OFF ON ON OFF ○ OFF ○ OFF	3 2 1	3 2 1
ZVM-1380-C or other EGA monitor	EGA (Enhanced Video RGBI/ RGBrgb)	9-pin	© OFF	321	3 2 1
ZMM-1470-G or other EGA monitor	EGA (Enhanced Video RGBI/ RGBrgb)	9-pin	OFF ON ON ON ON ON ON ON OFF	3 2 1	3 2 1
ZVM-1240 or other MDA monitor	MDA (TTL monochrome display)	9-pin	OFF	3 2 1	321
ZCM-1390* or other VGA monitor ZCM-1490*	VGA (Video Graphics Array) VGA (Video	15-pin 15-pin	ON ON ON ON ON ON ON ON ON	3 2 1	3 2 1
or other VGA monitor ZMM-149	Graphics Array)	15-pin	□ □ □ ON ON ON ON ON ON OFF	3 2 1	3 2 1
or other VGA monochrome monitor	Graphics Array monochrome)		→ ON ON ON ON ON ON	3 2 1	3 2 1

<sup>\*</sup> Default Settings.

The card is shipped pre-configured to drive the ZCM-1390 and ZCM-1490 monitors. If you are using either monitor, no action is necessary.

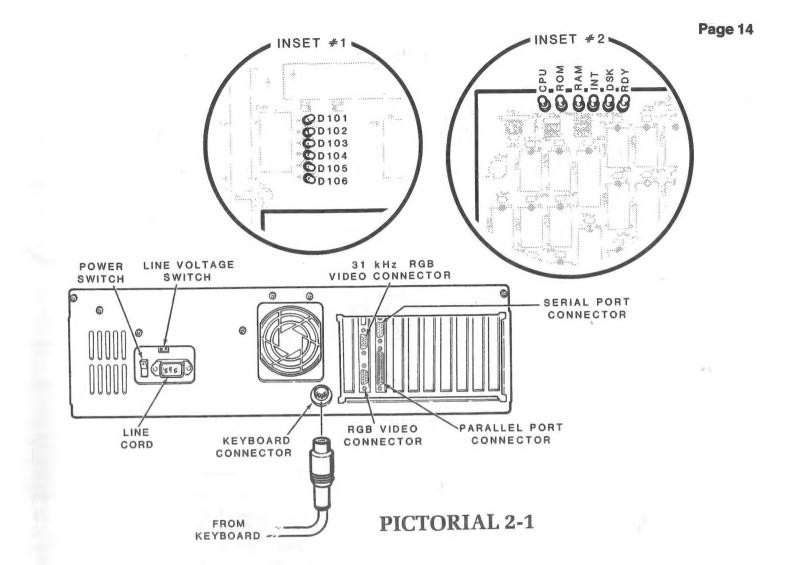


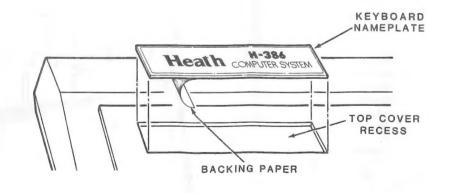

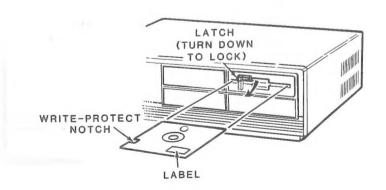


**PICTORIAL 2-2** 


Detail 1-10B

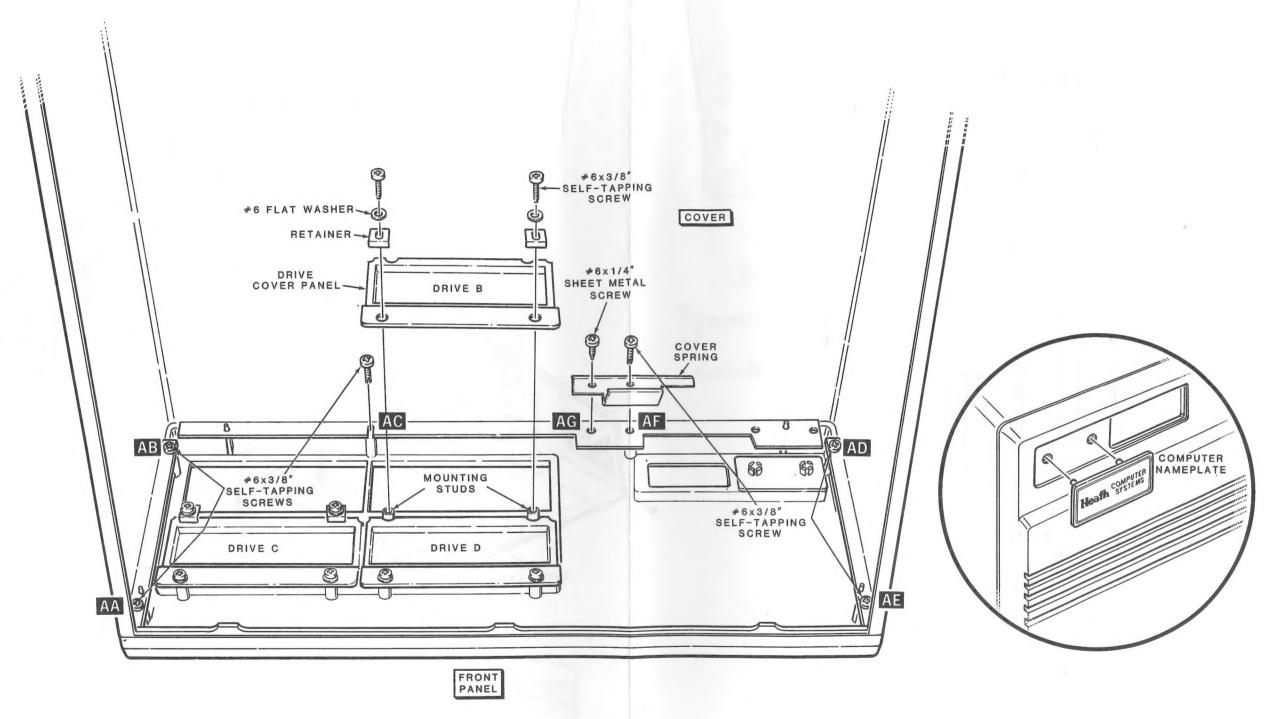

PICTORIAL 3-1

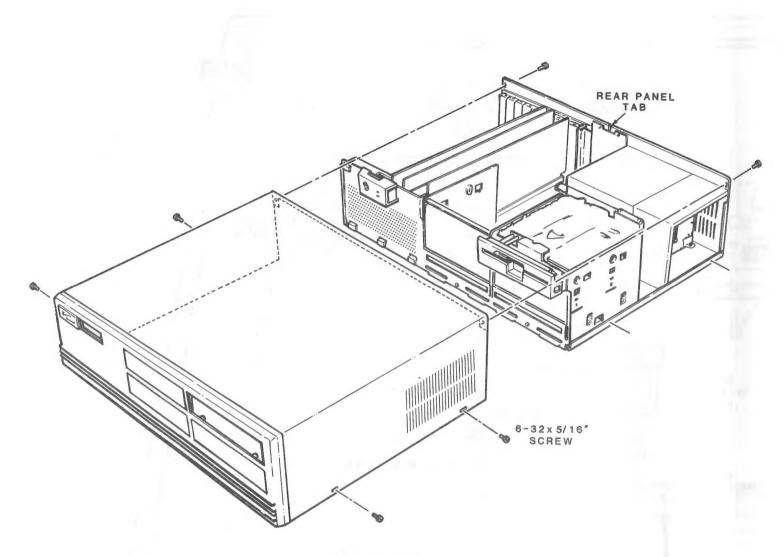

PICTORIAL 3-2

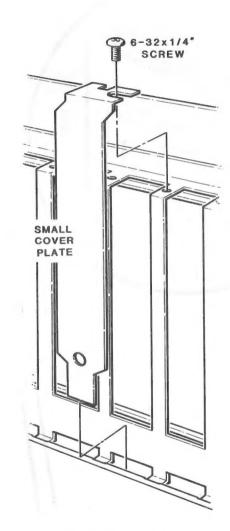

Detail 3-2A