

**READ ALL INSTRUCTIONS & WARNINGS CAREFULLY BEFORE USE AND KEEP FOR REFERENCE. PARENTAL SUPERVISION IS RECOMMENDED.**



**Item No. 14111, 14112, 14113  
14212, 14213, 14214  
14411, 14412, 14413**

**INSTRUCTIONS 6+**

**Create your very own one-of-a-kind collectible stuffed toy at home like never before with Printies™ Design Studio! No cutting, no sewing, no gluing, and most importantly, no mess! Creating your own plush toy is as easy as 1-2-3.**

- 1. Design online at [www.MyPrinties.com](http://www.MyPrinties.com)      2. Print your creation.      3. Stuff and show off!**

**DESIGN YOUR PRINTIES™**

- Go to [www.MyPrinties.com](http://www.MyPrinties.com) and create your account. If you are under 13, please have a parent register your account.
- Follow the simple download instructions to install the software.
- Enter your Printies™ Passcode\* to unlock the online design studio.

Note: You can only enter your Printies™ Passcode once. You cannot reuse the code for multiple accounts.  
\* If you have purchased a Refill Pack, you can log-in to your previously created Printies™ account and start designing!

**PRINT YOUR CREATION**

**IMPORTANT: Printies™ Fabric sheets should only be used with inkjet printers and never with a laser printer or commercial copier.** After you have finished designing your Printies™ character online, follow the on-screen instructions. Use Printies™ Test sheets to make sure your printed design looks the way you want and prints out correctly. Pay close attention to the side and direction your design prints out on.

- When you are satisfied with the test sheet print outs, load the Printies™ Fabric sheet into the printer tray on the appropriate side and print the front side.
- Allow the ink to completely dry (approximately 5 minutes).
- Print the back side of the Printies™ Fabric sheet and let the ink dry for an additional 5 minutes before proceeding to tear it out from the sheet.

**Note: Both Mini-Printies designs must be printed out at the same time. If you print and pop-out only one of the Mini-Printies, you will not be able to use your sheet again to print out the other.**




**TIPS:**

- To save ink, set your printing parameters to "Fast" or "Draft" when printing onto your Printies™ Test sheets.
- For more vibrant colors, set your printing parameters to "Best", "High", or "Fine" when printing your design onto the Printies™ Fabric sheets.

**STUFF AND SHOW OFF!**

After you have printed both sides of the sheet, you are now ready to bring your Printies™ character to life!

- Start by tearing the paper off by following the perforated lines from the edges of the paper. Pop out your Printies™ character by holding the character in one hand (hold it close to the edge of the fabric) and slowly pulling the paper with your other hand. (Fig. 1) Gently peel the stuffing tab off the paper.
- Stuff your Printies™ character by using the stuffing tool and inserting small amounts of stuffing material into the stuffing hole. Each stuffing sleeve contains enough material for one regular size Printies™ character or two mini-Printies™ characters. Printies™ should only be stuffed with the stuffing material provided in the pack.

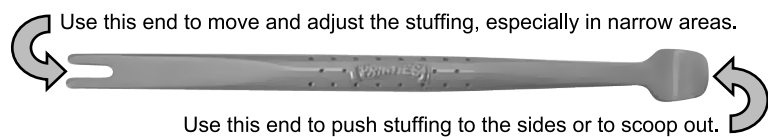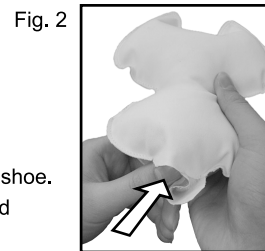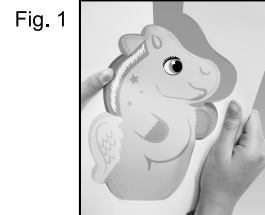

- Tuck the stuffing tab into the stuffing hole once the Printies™ character is stuffed. (Fig. 2)
- Time to accessorize! Open the shoes/stand by using your finger to gently pull the plastic tab located on the side of the shoe.
- Place the open shoe on a table and position the stuffed Printies™ character so the bottom touches the table. Close and snap the shoe shut to lock it in. For a better fit and centered stuffed toy, pull the fabric under the shoes to adjust as necessary. Shoes should not be removed once placed on your Printies™ character.
- Decorate your shoes/stand by choosing from the sticker sheet. Think of a name for your Printies™ character and write it on the sticker!
- Display!

**TIPS:**

- Pull or cut any loose threads or paper residue once you pop out the Printies™ character from the sheet.
- Start by stuffing the farthest area from the stuffing hole. For small spaces (i.e. ears, arms), roll the stuffing material into tiny little balls before inserting into the stuffing hole.
- If your Printies™ character won't fit or stand upright in the shoes, try adding or removing some stuffing.
- In addition to the stickers, use your own markers or crayons to decorate your shoes/stands.

**HELPFUL HINTS FOR BEST RESULTS:**

- Please consult your printer manuals for detailed instructions on making adjustments to printer settings for optimal color and print quality.
- Before each session, run all printer cleaning utilities to ensure high-quality prints (refer to your printer's instruction manual).
- Use only your printer company's ink for usage on Printies™ Fabric sheets to ensure safety and the highest print quality.
- Remove all paper in the printer tray except for a single Printies™ Fabric sheet before printing.
- Allow printed sheets to thoroughly dry before handling and stuffing. Use a hair dryer or fan to speed the drying time.
- For best results, avoid exposure to direct sunlight and humid environments.
- Store unused Printies™ Fabric sheets flat, and in a cool, dry place.

**CAUTION**

- Handle Printies™ Fabric sheets with completely dry hands.
- Do not wash, put into the washing machine, or allow liquids to come into contact with printed Printies™ Fabric sheets; the ink will bleed and staining could occur.
- Wash your hands with soap and water after stuffing or handling the product to remove any form of ink residue.
- Avoid putting printed and stuffed Printies™ characters in mouth or eyes.
- Ink from printed sheets may stain clothing, furniture, finished or unfinished wood, wall paper, vinyl or other materials that cannot be washed or laundered.

TROUBLESHOOTING	
PROBLEM	SOLUTION
My Printies™ character is not lining up properly on the sheet when I print.	<ul style="list-style-type: none"> <li>Make sure to print a test sheet before printing on your Printies™ Fabric sheet. Print on the test sheets until the character is printing properly.</li> <li>Make sure that the page size setting matches the Printies™ Fabric paper size (8.5"x11").</li> <li>Remove all paper from the paper tray except for the single Printies™ Fabric sheet.</li> <li>Make sure the Printies™ Fabric sheet is inserted all the way into the tray.</li> </ul>
When I print, my Printies™ character: <ul style="list-style-type: none"> <li>Looks faded / blurry</li> <li>Has line streaks</li> <li>Has smudges on it</li> </ul>	<ul style="list-style-type: none"> <li>Adjust the print quality setting on your printer (refer to your printer's manual) to "High", "Best" or "Fine".</li> <li>Replace ink cartridge(s) in order to maximize color vibrancy and print quality.</li> <li>Run all printer cleaning utilities (i.e. clean print nozzle heads, fix printer alignment, bottom plate &amp; roller cleaning).</li> </ul>
My Printies™ sheet jammed inside the printer.	<ul style="list-style-type: none"> <li>Try to remove the paper by doing the following. Slowly pull the paper out, either from the paper feed tray or the output slot. If the paper tears and pieces remain inside the printer, turn the printer off, and open the print head cover to remove it. After removing, close the cover and turn the printer back on.</li> <li>To avoid printer jams, do not print sheets that are curled, wrinkled, previously folded, or have bent corners. Remove all paper from the paper tray except for the single Printies™ Fabric sheet.</li> </ul>
My child was touching and playing with wet ink from a printed sheet. What can I do to protect him/her?	<ul style="list-style-type: none"> <li>Keep ink cartridges out of the reach of children. In case ink is accidentally licked from a printed Printies™ sheet, rinse out mouth. If irritation or discomfort occurs, obtain medical advice immediately.</li> <li>In case ink gets in contact with eyes, rinse with water immediately.</li> <li>Wash hands with soap and water after handling your Printies™ stuffed toy.</li> </ul>
Can I wash my Printies™ stuffed toy?	<ul style="list-style-type: none"> <li>Do not wash or allow liquid to come into contact with the printed fabric. Since inkjet ink is water soluble, the ink will "blur" or "run" on the fabric.</li> </ul>

**PRINTIES™ PRODUCT WARNINGS, TERMS AND CONDITIONS OF USE, WARRANTY AND LIMITATION OF LIABILITY**

**IMPORTANT WARNINGS - READ BEFORE USING PRINTIES™**

PRINTIES™ may be used in connection with most INKJET printers.

PRINTIES™ should NEVER be used with LASER printers or COMMERCIAL COPIERS. Laser printers use heat and use of PRINTIES™ with a laser printer may cause a fire or cause the product to heat to a level that could cause injury.

The user should always make sure the ink used with your inkjet printer is appropriate for use with PRINTIES™. Read and understand the instructions for the inkjet printer and inkjet ink or toner for proper use.

Always test a finished PRINTIES™ product for problems associated with use of ink or toner, including but not limited to, rubbing off or staining. Also, follow manufacturer instructions regarding proper use of ink or toner.

PRINTIES™ is designed to be used to create items for display purposes only. DO NOT use or allow completed PRINTIES™ products to be placed in mouths or eyes.

**TERMS AND CONDITIONS FOR YOUR PRINTIES™ PRODUCT**

Techno Source is in no way responsible for PRINTIES™ compatibilities with your computer system or peripherals, including but not limited to printers or components or consumables (ink or toner) associated therewith (hereinafter, collectively referred to as the "Peripherals"). Techno Source is in no way responsible for jamming of printers or damage to any printer components. Techno Source does not give technical support or information regarding your computer, Peripherals, or other components and/or equipment used in connection with PRINTIES™. Questions involving computer, the Peripherals or other components and/or equipment issues should be directed to the appropriate vendor or manufacturer.

**NO WARRANTY/LIMITATION OF LIABILITY:**

TECHNO SOURCE ASSUMES NO LIABILITY, WHATSOEVER, AND MAKES NO WARRANTY OF ANY KIND, WHATSOEVER, EXPRESS OR IMPLIED, WITH RESPECT TO PRINTIES™ PRODUCTS, USE IN CONNECTION WITH YOUR COMPUTER, PERIPHERALS, THE INTERNET OR ANY OTHER ON-LINE SITE, AS WELL AS ANY DAMAGE, ALTERATION OR IMPACT OF ANY KIND TO YOUR PERSON OR YOUR COMPUTER, PRINTER, COMPUTER PERIPHERALS OR COMPUTER COMPONENTS OR ANY CONTENTS, PROGRAMS, DATA OR INFORMATION THEREON THAT MAY RESULT FROM YOUR INSTALLATION OR USE OF PRINTIES™ OR ANY COMPUTER, COMPUTER PERIPHERALS, OR HARDWARE OR SOFTWARE ASSOCIATED THEREWITH. ALL EXPRESS OR IMPLIED WARRANTIES, INCLUDING THOSE RELATED TO MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR QUALITY, DESIGN, CONDITION, CAPACITY, SUITABILITY, INTERFERENCE, INFRINGEMENT, OR DURABILITY, ARE HEREBY DISCLAIMED BY TECHNO SOURCE, TO THE EXTENT PERMITTED BY LAW, AND EXPRESSLY WAIVED BY YOU.

TECHNO SOURCE SHALL NOT HAVE ANY LIABILITY OR OBLIGATION TO YOU OR ANY OTHER PARTY, EITHER IN CONTRACT OR IN TORT, FOR ACTUAL, PUNITIVE, EXEMPLARY, SPECIAL, CONSEQUENTIAL, OR INDIRECT DAMAGES OR ANY KIND, INCLUDING, BUT NOT LIMITED TO, CLAIMS OR DAMAGES FOR PERSONAL INJURY, DAMAGES TO PROPERTY OF ANY KIND, LOSS OF PROFITS, LOSS OF DATA, LOSS OF USE OR INTERRUPTION OF USE OF YOUR COMPUTER SYSTEM OR PERIPHERALS, OR ANY SOFTWARE THEREON OR HARDWARE THEREIN OR ANY BUSINESS CONDUCTED THEREON OR FOR THE RECONSTRUCTION OR RECOVERY OF ANY LOST DATA OR SOFTWARE OR ECONOMIC LOSSES OF ANY KIND INCURRED BY YOU OR ANY OTHER PARTY DIRECTLY OR INDIRECTLY RESULTING FROM OR RELATED TO ANY USE OF THE PRINTIES™ PRODUCT WHETHER OR NOT CAUSED BY THE NEGLIGENCE OF TECHNO SOURCE, TO THE FULLEST EXTENT THE SAME MAY BE DISCLAIMED BY LAW.

TECHNO SOURCE RESERVES THE RIGHT TO TERMINATE PRINTIES ONLINE SERVICES AFTER DECEMBER 31, 2011.

© 2009 Techno Source.  
All Rights Reserved.  
TECHNOSOURCE is a registered trademark of Techno Source.  
PRINTIES and the PRINTIES logo design are trademarks owned by Techno Source.  
Patents Pending  
30 Canton Road, Kowloon, Hong Kong  
MADE IN CHINA

Product specifications and colors may vary.

<b>Windows Requirements:</b> PIII 1.8 Mhz or higher, Windows XP/2000/Vista, RAM: 512MB recommended; Browsers: Internet Explorer 6, Firefox 3.0, Safari 3.0; Monitor Resolution: 1024x768 or higher; High Speed Internet Required Adobe Flash 10	<b>Mac Requirements:</b> PowerPC® G4 1GHz or faster processor Mac OS X 10.3; RAM: 512MB recommended; Browsers: Safari 1.2.3 or higher, Firefox 3; Monitor Resolution: 1024x768 or higher; High Speed Internet Required Adobe Flash 10
--	--

Check out our award-winning products at:



[www.technosourceusa.com](http://www.technosourceusa.com)

IM-14111,14112,14113,14212,14213,14214,14411,14412,14413