




user manual guide de l'utilisateur

ARS1i

Made for
iPod iPhone

 Conçu pour
iPod iPhone

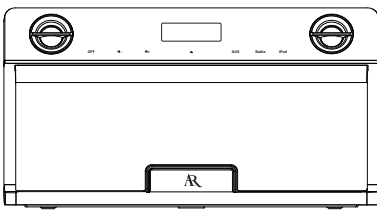

EN/F

It is important to read this user manual prior to using your new product for the first time.
Nous vous recommandons de lire ce manuel avant d'utiliser votre nouveau produit pour la première fois.

FCC Information

FCC Information

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Audiovox could void the user's authority to operate the equipment.

General controls

Back view

POWER – Switch on/off the power


DC IN – Connect to the power adapter

AUX IN – Auxiliary input jack

AM loop antenna socket – Connect to the AM loop antenna

FM antenna socket – Connect to the FM antenna

 Backup battery compartment – Insert 3 "AAA" batteries into the compartment to operate the battery back-up function

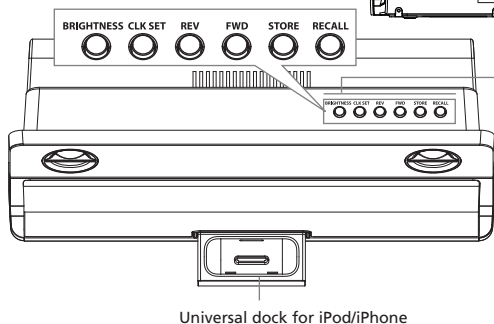

Top view

BRIGHTNESS – Adjust display brightness

CLK SET – Enter setting mode for setting clock time

REV or **FWD** – Search radio frequencies; skip or search music file in iPod/iPhone; adjust clock time

STORE – Save radio stations as presets

RECALL – Recall preset radio stations

iPod/iPhone

- Made for:
- iPhone 3GS 16GB, 32GB
 - iPhone 3G 8GB, 16GB
 - iPod touch 3rd generation 32GB, 64GB
 - iPod touch 2nd generation 8GB, 16GB, 32GB, 64GB
 - iPod touch 1st generation 8GB, 16GB, 32GB
 - iPod nano 5th generation 8GB or 16GB
 - iPod nano 4th generation (video) 8GB, 16GB
 - iPod nano 3rd generation (video) 4GB, 8GB
 - iPod classic 80GB, 120GB, 160GB
 - iPod nano 2nd generation (aluminum) 2GB, 4GB, 8GB
 - iPod nano 1GB, 2GB or 4GB
 - iPod 5th generation (video) 30GB, 60GB, 80GB
 - iPod mini 4GB, 6GB
 - iPod 4th generation 20GB, 40GB
 - iPod 4th generation (color display) 20GB, 30GB, 40GB, 60GB

To control the playback:

1. During playback, press **iPod** to pause the playback and press again to resume.
2. Press **REV** or **FWD** to skip to the previous or next file.
3. Press and hold **REV** or **FWD** to search backward or forward. Press again to cancel the function (shows on the iPod/iPhone display).
4. Press **REPEAT** to select a repeat playback mode (repeat 1 or repeat all). Press **REPEAT** until no repeat mode is selected (shows on the iPod/iPhone display) to cancel the repeat playback.

To charge the iPod/iPhone:

- You may charge the battery of your iPod/iPhone through the universal dock for iPod/iPhone while the unit is turned off (standby mode) or in the AUX, Radio (FM band only) or iPod mode. Charging control should be operated on the iPod/iPhone. It is not necessary to charge in iPod mode, unless you are listening to the iPod/iPhone.

Sleep function

In the sleep mode, the radio, iPod or AUX mode can be set to operate for a certain period of time before turning off automatically.

To set the sleep time:

1. Press **SLEEP** repeatedly to cycle among the sleep time available (90min, 60min, 30min, 15min and Off; 30min is the default setting).
 - The icon flashes while selecting.
2. When the desired sleep time is selected, release **SLEEP** and wait about 5 seconds, the sleep time is now set.
 - The icon lights on the display.

To listen to different sources:

- In standby mode, press **SLEEP** to turn on the sleep mode and your last selected source will be started to play.
- To listen to other sources, press the source buttons as usual.

To change or check the remaining time in sleep mode:

- Press **SLEEP** once to check the remaining sleep time. Press **SLEEP** repeatedly to select another sleep time.

To cancel the sleep mode:

- If you decide to turn off the unit sooner, press **OFF** or press **SLEEP** repeatedly to select "OFF".

Auxiliary source

To select auxiliary mode:

1. Connect your auxiliary source (e.g. mp3 player) to the AUX input jack at the back of the unit with an audio cable (not supplied).
2. Press **AUX** to turn on the unit or to switch to listen to AUX from other modes and the word "AUX" is displayed on the display.
 - Adjust the auxiliary player to mid-range volume and adjust the master volume on the unit. Do not turn the volume of the auxiliary player too high as this may affect the sound quality. For other playback operations, control them on your auxiliary player.

Display brightness

Press **BRIGHTNESS** repeatedly to adjust the brightness level among bright, dim and off.

When the unit is reconnected to the AC power, the display backlight will be readjusted. You can press **BRIGHTNESS** to adjust the brightness level again.

Display readout:

If you have the unit on, and an input is selected, but the volume is turned to 0, the display will show d00 as a reminder. To prevent this, simply press the volume up, e.g. UP10.

Warranty information

Limited warranty

12 Month Limited Warranty Applies to Acoustic Research Audio/Video Products

AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or

cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR

ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage to the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

How to make a warranty claim:

- If your product is capable of storing content (such as an mp3 player, digital voice recorder, etc.), it is recommended to make periodic backup copies of content stored on the product. If applicable, before shipping a product, make a back up copy of content or data stored on the device. Also, it is advisable to remove any personal content which you would not want exposed to others. IT IS LIKELY THAT CONTENT AND DATA ON THE DEVICE WILL BE LOST DURING SERVICE AND REFORMATTING. AUDIOVOX ACCEPTS NO LIABILITY FOR LOST CONTENT OR DATA, OR FOR THE SECURITY OF ANY PERSONAL CONTENT OR DATA ON THE RETURNED DEVICE. Product

Illustrations contained within this publication are for representation only and subject to change.

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice.

Acoustic Research is a registered trademark of Audiovox Electronics Corporation.

 
Visit <http://store.audiovox.com> to find the best accessories for your products.

For Customer Service Visit Our Website At www.acoustic-research.com Product Information, Photos, FAQ's, Owner's Manuals

© 2010 Audiovox Accessories Corporation
111 Congressional Blvd., Suite 350
Carmel, IN 46032
Trademark(s) * Registered
Printed in China

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ AND SAVE THIS FOR FUTURE REFERENCE

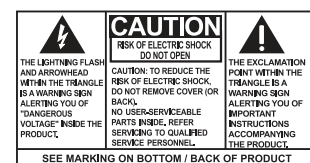

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories

specified by the manufacturer.

- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

ADDITIONAL SAFETY INFORMATION

- The AC/DC adaptor supplied with this product is intended to be correctly oriented in a vertical or floor mount position.
- Do not use unauthorized chargers or power adapters. Use only chargers or power adapters that came with your product or that is listed in the user's guide.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases,

shall be placed on the apparatus.

- Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent openings.
- Do not place lighted candles, cigarettes, cigars, etc. on the product.
- Care should be taken so that objects do not fall into the product.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- The marking information is located at the bottom of apparatus.
- To be completely disconnect the power input, the AC/DC adaptor of apparatus shall be disconnected from the mains.
- AC/DC adaptor is a disconnect device. The AC/DC adaptor should not be obstructed OR should be easily accessed during intended use.
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- No naked flame sources such as lighted candle should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- The use of apparatus in moderate climates.

Important battery precautions

- Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more.
- If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak.
- Discard any leaky or deformed battery immediately. They may cause skin burns or other personal injury.
- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

Ecology

Help protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles.

CAUTION
Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

For your records

In the event that service should be required, you may need the model number and the serial number. In the space below, record the date and place of purchase and the serial number:
Model No.:
Date of Purchase:
Place of Purchase:
Serial No.:

Technical information

 
Product: Portable audio system for iPhone and iPod
Brand: Acoustic Research
Model: ARS1i

Electrical power information

AC/DC Adaptor:
Input: 100 - 240 V ~ 50/60 Hz
Output: 18 VDC / 2.0 A

General controls

Front view

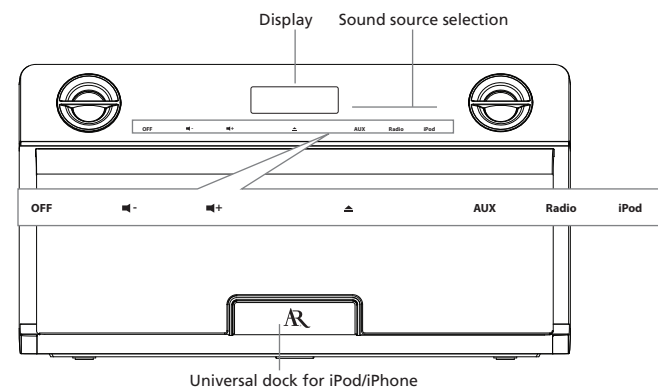

OFF – Switch the unit to standby mode

◀ / ▶ – Adjust volume

▶ – Open or close the motorized universal dock for iPod/iPhone. This button will not open or close the universal dock whenever an iPod or iPhone is docked.

Warranty information

will be returned with factory default settings, and without any pre-loaded content which may have been installed in the originally purchased products. Consumer will be responsible for reloading data and content. Consumer will be responsible to restore any personal preference settings.

- Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However DO NOT return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials.
- Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

covered by the warranty.

- A new or refurbished unit will be shipped to you freight prepaid.

What we will do:
Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.

For Canada Customers, please ship to:

Audiovox Return Centre
c/o Genco
6685 Kennedy Road,
Unit#3, Door 16
Mississauga, Ontario
L5T 3A5

**Audiovox Electronics Corp.
Attn: Service Department.
150 Marcus Blvd.
Hauppauge N.Y. 11788
1-877-833-3491**

- Insure your shipment for loss or damage. Audiovox accepts no liability in case of damage or loss en route to Audiovox.
- Pay any charges billed to you by the Exchange Center for service not