


# ORECK<sup>®</sup> XL

SIMPLY AMAZING<sup>®</sup>

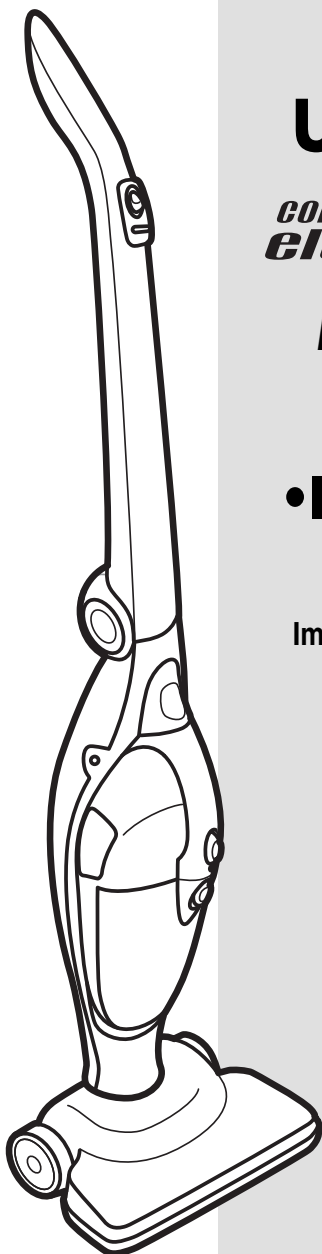

## USER'S GUIDE

*cord-free*  
**electricbroom<sup>®</sup>**  
*QuickStick*

MODEL QS110 SERIES

### •IMPORTANT•

SAVE THIS BOOKLET!

Includes:

Important Safety Instructions

Warranty

Operating Instructions



USA: 1-800-989-3535  
CANADA: 1-888-676-7325



[WWW.ORECK.COM](http://WWW.ORECK.COM)



VISIT ONE OF OUR OVER  
450 STORE LOCATIONS

# IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER**



## WARNING

**To reduce the risk of fire,  
electric shock, or injury:**

- Do not use outdoors or on wet surfaces.
- Do not charge the unit outdoors.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center for inspection.
- Do not abuse the cord. Never carry the charger or base by the cord or yank to disconnect from an outlet; instead grasp the charger and pull to disconnect. Keep cord away from heated surfaces. Do not pull cord around sharp edges or corners. Do not close door on the charger cord.
- Do not handle plug or appliance with wet hands.
- This product includes rechargeable nickel cadmium batteries. Do not incinerate batteries or expose to high temperatures, as they may explode.
- Unplug the charger from the outlet before any routine cleaning or maintenance.
- Do not put any object into openings.
- Do not use with any opening blocked; keep free of dust, lint, hair, and all parts of body away from openings and moving parts.
- Keep hair, loose clothing, fingers, and all other body parts away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Leaks from battery cells can occur under extreme conditions. If the liquid, which is 20-35% solution of potassium hydroxide, gets on the skin (1) wash quickly with soap and water or (2) neutralize with a mild acid such as lemon juice or vinegar. If the liquid gets into the eyes, flush immediately with clean water for a minimum of 10 minutes. Seek medical attention.
- Use only the charger supplied by the manufacturer to recharge.

**SAVE THESE INSTRUCTIONS**  
**Household Use Only**

If the adapter or the interconnection cord is damaged, it must be scrapped.

# Warranty

ORECK MANUFACTURING COMPANY: (ORECK gives you the following limited warranty for this product only if it was originally purchased for use, not resale, from ORECK or an ORECK Authorized Retail Dealer.)

ORECK will repair or replace, free of charge, to the original purchaser, any part which is found to be defective in material or workmanship within one (1) year of the date of purchase. This limited warranty applies to normal domestic use. Any commercial use of this product will void this limited warranty.

This limited warranty does not cover the replacement of expendable or consumable parts such as belts, brushes, bulbs, dirt filters, batteries and other parts subject to normal wear.

This limited warranty does not apply to any part subjected to accident, abuse, commercial use, alteration, misuse, damage caused by fire or act of God, the use of voltages other than indicated on the serial number plate of this product or service of this product by other than ORECK or an ORECK Factory Authorized Service Center.

ORECK does not authorize any person or representative to assume or grant any other warranty obligation with the sale of this product.

ORECK's limited warranty is valid only if you retain proof of purchase from ORECK or an ORECK Authorized Retail Dealer for this product. If you purchase this product from any other source, your purchase is "AS IS," which means ORECK grants you no warranty, and that you, not ORECK, assume the entire risk of the quality and performance of this product, including the entire cost of any necessary servicing or repairs of any defects.

ORECK's liability for damages to you for any costs whatsoever arising out of this statement of limited warranty shall be limited to the amount paid for this product at the time of original purchase, and ORECK shall not be liable for any direct, indirect, consequential or incidental damages arising out of the use or inability to use this product.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD, AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THIS PERIOD.


Some states do not allow limitations on the duration of implied warranties, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.


# Assembly

## Model QS110 Series

1. Main housing
2. Hand held vacuum
3. Power head
4. Dirt Cup
5. ON/OFF handle switch
6. Handle control button
7. Release button for hand held vacuum
8. Charging socket
9. Hand held vacuum ON/OFF switch
10. Charging lamp
11. Release button for dirt cup
12. Dust filter (included in the hand held unit)
13. Adapter (power supply/charger)

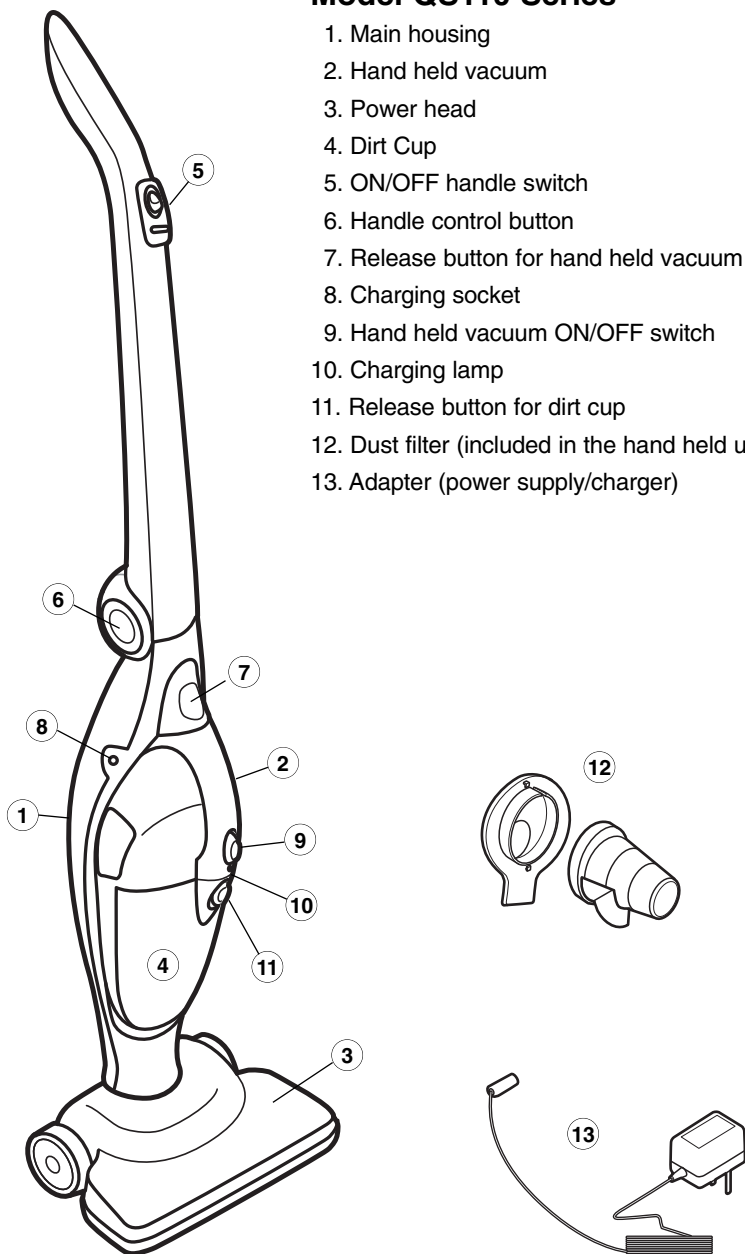


# Operating Instructions

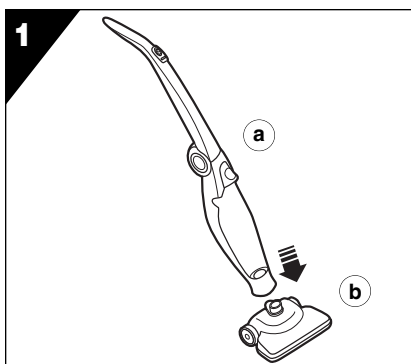

## Start-Up Instructions

The box should include  
(a) Main housing (fig. 1)  
(b) Power head (fig. 1)  
(c) Adapter (power supply/charger)  
(d) User's Guide


**Fig 1.** Insert the power head into the air intake of the main unit.

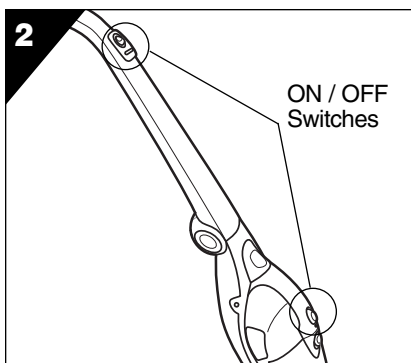

## Charging the Unit

**Fig 2.** Before charging, make sure both switches are in the "OFF" position. Then insert the adapter into an electrical outlet and the plug into the charging socket on the unit. **Charge batteries for 16 hours before initial use.**


**Caution: Do not allow the battery to run down completely before charging. Running down battery will cause battery life to shorten severely.**

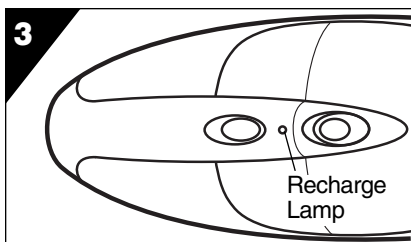

**Fig 3.** A red lamp indicates the unit is charging. It is normal for the adapter to feel warm while the battery is charging.

Recharge the unit as soon as the motor power decreases noticeably. The unit can be on a constant charge so it is always ready for use.

However, if the unit will not be used for several weeks at a time, unplugging it is recommended.

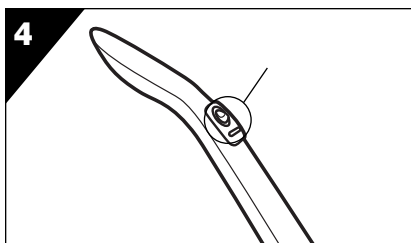


## Vacuuming

**Fig 4.** Push the slide switch forward on the stick handle to clean hard floor or carpet.

**FLOOR** - uses suction only for vacuuming hard floors.


**CARPET** - uses suction and engages brush roll to vacuum

# Operating Instructions

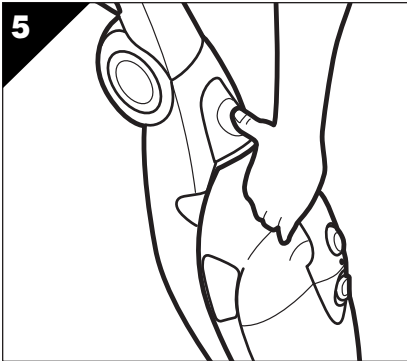


## Combining/Detaching Hand Vac

**Fig. 5** To remove the hand held unit, push the release button and pull the hand held unit outward.

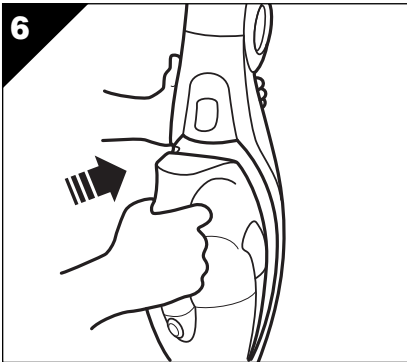


**Fig. 6** To replace the hand held unit, insert the air intake of the hand held unit into the main housing (at the base of the unit). Push the hand held unit back against the back of the main unit housing until the unit "clicks" into place.

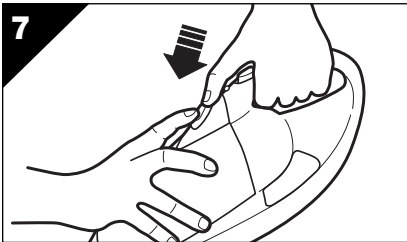


## Emptying the Dirt Cup

**Fig. 7** Press the release button and remove the dirt cup from cleaner.

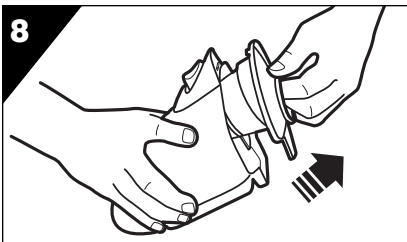


**Fig. 8** Remove the dust filter from the dirt cup.

# Operating Instructions

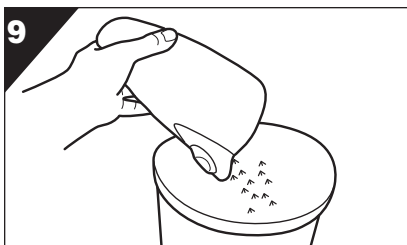


## Cleaning the Dust Filter

**Fig. 9** Empty dirt cup.

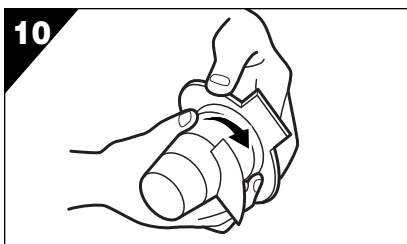


**Fig. 10** Remove the filter frame from the dust filter.

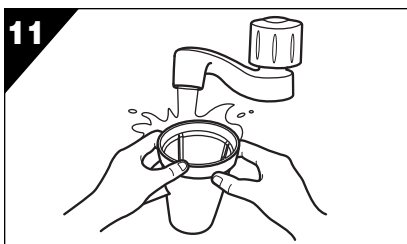

**Fig. 11** Wash the filter in warm soapy water, using a soft brush if necessary. Dry the filter completely before replacing it into the filter frame and dirt cup.

Replace the dust filter on the filter frame and insert into dirt cup.


Replace dirt cup onto handheld vacuum.

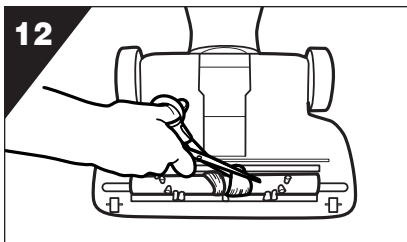

## Power Brush

**Important: Disconnect cleaner from electrical outlet.**

**Fig. 12** To maintain cleaning effectiveness, regularly remove hair, lint, strings, threads, etc. from the brush roll with a knife or scissors.

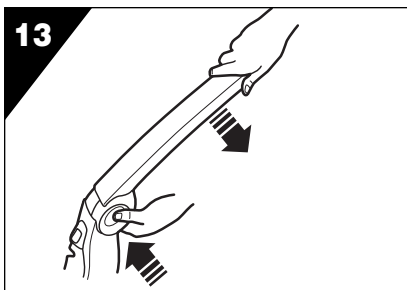

## Storing the Vacuum

**Fig. 13** Press the handle control button and bend the handle down for easy storage.

# Troubleshooting Guide

PROBLEM	AREAS TO CHECK
What happens if the red charging indicator is not lit while charging?	<ol style="list-style-type: none"> <li>1. Make sure the adapter plug and socket are plugged in properly.</li> <li>2. Both the hand held unit and the stick broom need to be turned off while charging.</li> </ol>
Suction power is not sufficient.	<ol style="list-style-type: none"> <li>1. Empty dirt cup and clean dust filter.</li> <li>2. Charge battery again.</li> <li>3. Contact an Authorized Service Center.</li> </ol>
Running time is not sufficient.	<ol style="list-style-type: none"> <li>1. Charge battery again.</li> <li>2. Contact an Authorized Service Center.</li> </ol>
Machine does not stop when switched off.	<ol style="list-style-type: none"> <li>1. Separate hand held unit from the stick broom.</li> <li>2. The switch on the hand held unit and the switch on the the stick broom must both be in the off position.</li> </ol>
Brush does not work while operating.	<ol style="list-style-type: none"> <li>1. Clean the power brush.</li> <li>2. Make sure switch on handle is in the "Carpet" position.</li> <li>3. Contact an Authorized Service Center.</li> </ol>
Hand held unit works, but the stick broom does not.	<ol style="list-style-type: none"> <li>1. Take the hand held unit off and locate the three (3) silver prongs on the bottom of the unit. Make sure the contacts are clean and free of debris.</li> <li>2. Contact an Authorized Service Center.</li> </ol>

## Accessories

### QuickStick Accessory Kit

Includes:

- Upholstery Brush
- Accessory Stand
- Flex Hose
- Extension Tubes
- Small Nozzle
- Crevice Tool

**QSKIT**

### Replacement Dust Filter

**QSFILTER**



## Discarding the Vacuum

Remove the batteries by cutting the connector wires one by one before you discard the appliance. Do not dispose of batteries with your regular household trash. Dispose of them in an environmentally safe manner.

## Battery Disposal



To preserve natural resources, please recycle or dispose of expired battery pack properly.

THIS PRODUCT CONTAINS A NICKEL-CADMIUM BATTERY. IT MUST BE DISPOSED OF PROPERLY. LOCAL, STATE, OR FEDERAL LAWS MAY PROHIBIT DISPOSAL OF NICKEL-CADMIUM BATTERIES IN ORDINARY TRASH. CONSULT YOUR LOCAL WASTE AUTHORITY FOR INFORMATION REGARDING AVAILABLE RECYCLING AND/OR DISPOSAL OPTIONS. FOR DISPOSAL INFORMATION, CALL THE RECHARGEABLE BATTERY RECYCLING CORPORATION AT 1-800-8-BATTERY.



### WARNING:

Upon removal, cover the battery pack's terminals with heavy duty adhesive tape. Do not attempt to destroy or disassemble battery pack or remove any of its components. Nickel-cadmium batteries must be recycled or disposed of properly. Also, never touch both terminals with metal objects and/or body parts as short circuit may result. Keep away from children. Failure to comply with these warnings could result in fire and/or serious injury.





©2004 Oreck Holdings, LLC. All rights reserved. All word marks, logos, product configurations, and registered trademarks are owned and used under the authority of Oreck Holdings, LLC.

**40322-01 REV A**

**01/05 ECN # R-7844**