
stantປn S.252

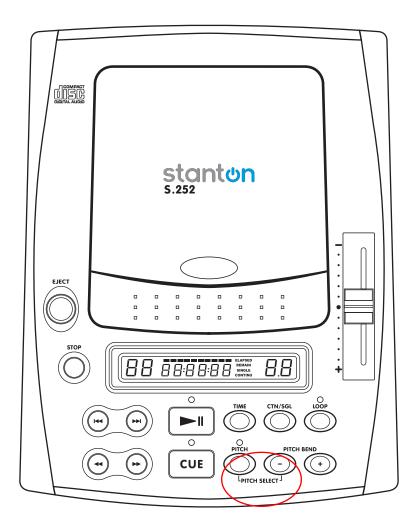

USER MANUAL

IMPORTANT SAFETY INSTRUCTIONS

- 1. Read these instructions All the safety and operating instructions should be read before this product is operated.
- Keep these instructions The safety and operating instructions should be retained for future reference.
- Heed all warnings All warnings on the appliance and in the operating instructions should be adhered to.
- 4. Follow all instructions All operating and use instructions should be followed.
- 5. Do not use this apparatus near water The appliance should not be used near water or moisture for example, in a wet basement or near a swimming pool, and the like.
- 6. Clean only with dry cloth.
- 7. Do not block any ventilation openings. Install in accordance with the manufacture s instructions.
- Do not install near any heat sources such as radiators, heat registers,stoves,or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the ther. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used,use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13. Unplug the apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- 15. Caution-To prevent electrical shock, match wide blade plug wide slot fully insert.
- 16. Please keep the unit in a good ventilation environment.
- 17. WARNING:To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
- 18. WARNING: The mains plug or appliance inlet is used as disconect device, the disconnect device shall remain readily operable.
- 19. Power Sources This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, onsult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer the perating instructions.
- 20. Safety Check Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- Don't touch conductive parts of output terminals to prevent hazardous electrical shock. The external wiring connected to the terminals requires installation by an instructed person or the used of ready made leads or cords.
- 22. This product is in compliance with EU WEEE regulations. Disposal of end of life produc should not betreated as municipal waste. Please refer to your local regulations for instructions on proper disposal of this product.



- 23. To prevent hazardous electrical shock, do not touch the conductive parts of the output terminals.The external wiring connected to the terminals requires installation by an qualified technician or the use of ready made leads or cords.
- 24. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- 25. Invisible laser radiation when open and interlocks defeated. Avoid exposure to beam of laser.







CAUTION: To reduce the risk of electric shock, do not remove any cover. No user-serviceable parts inside. Refer servicing to qualified service personnel only.

The lightning flash with arrowhead symbol within the equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying this appliance.

CAUTION: To prevent electric shock, do not use this polarized plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

Line voltage selection (for multiple voltage model only)



1) The desired voltage may be set with the VOLTAGE SELECTOR switch on the rear panel of the main unit, using a screwdriver.

2) Do not twist the VOLTAGE SELECTOR switch with excessive force as this may cause damage. 3) If the VOLTAGE SELECTOR switch does not move smoothly contact a qualifited serviceman.

NOTE ON USE


- Allow for sufficient heat dispersion when installed on a rack.
- Handle the power cord carefully.
- Hold the plug when unplugging the cord.
- · Keep the set free from moisture, water, and dust.
- Unplug the power cord when not using the set for long periods of time.
- Do not obstruct the ventilation holes. (For sets with ventilation holes.)
- Do not let foreign objects in the set.
- Do not let insecticides, benzene, and thinner come in contact with the set.
- Never disassemble or modify the set in any way.


FUNCTIONS

- 1) EJECT: Opens the CD door
- 2) STOP: Stops the CD.
- SKIP: Skips through the tracks on the CD, forward or back.
- 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
 4)
- PLAY/PAUSE: Plays or pauses the CD. Autocue function sets the cue point automatically when this button is used.
- 6) CUE: Used to recall and preview the cue point.
- TIME: LCD display reads the time remaining or time elapsed, according to this button.
- 8) PITCH: Turns pitch fader ON and OFF.
- PITCH SELECT: Pressing the PITCH and PITCH BEND - (minus) buttons simultaneously changes the pitch fader range between +/- 8, 12, and 16%.
- 10) **PITCH BEND**: Maximum pitch on this unit is 16%. If the pitch fader is already physically set to 16%, this function will not work.
- 11) **SGL/CTN** : Switches between Single or Continuous play modes.

- 12) **LOOP**: Press once to set starting loop point, press again set ending point and enter loop. Press a third time to exit loop.
- 13) **LCD DISPLAY**: Shows time (minutes, seconds, frame), and pitch information.
- PITCH FADER: Used to speed up or slow down current track.
- AUDIO OUT: This stereo line output connects to the line input on any DJ mixer.
- 16) DIGITAL OUTPUT: This coaxial (S/P DIF) digital output connects to any RCA S/P DIF input, as found on most standard computer sound cards or CD burners.
- 17) **FADER START**: Connects to any DJ mixer equipped with a fader start input. This enables the user to start the CD from the cue point, using the mixer's cross or line fader, depending on the mixer.
- 18) **VOLTAGE SELECTOR**: Used to select the unit's voltage according to the local setting. *Note: The voltage should preset correctly from the factory, however, make sure to check it before powering the unit.*
- *Just for Dual Voltage model only.
- 19) **AC IN**: This is the connection for the supplied power cable.
- POWER: This button is used to power the unit ON and OFF.
- PHONES: Use this stereo jack to connect a pair of headphones.

-

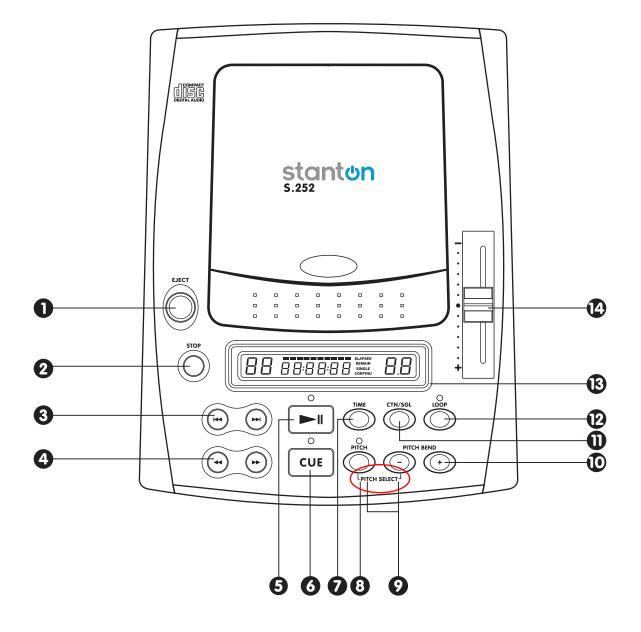

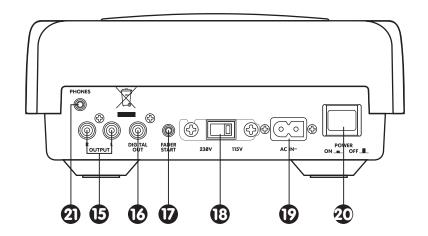

- SPECIFICATION

POWER SOURCE	Dual Voltage:
	AC 115/230V, 50/60Hz
	Single Voltage:
	AC 100V, 50/60Hz (For Japan)
	AC 110V, 60Hz (For Taiwan)
	AC 120V, 60Hz (For U.S.A., Canada, Mexico)
	AC 220V, 50Hz (For United Arab Emirates, Chile, Argentina)
	AC 220V, 60Hz (For Philippines)
	AC 230V, 50Hz (For Europe, New Zealand, South Africa, Singapore, Israel)
	AC 240V, 50Hz (For Australia,U.K.)

DIMENSIONS 216(W) x 275(H) x 88(D) mm

WEIGHT 2.3Kgs

WARRANTY & RETURN POLICY

Warranty

Through Stantons authorized dealers around the World, Stanton, or one of Stantons authorized distributors outside the U.S., will, without charge, repair or replace, at the sole discretion of the entity responsible for making the repair or providing the replacement, any Stanton merchandise proved defective in material or workmanship for a period of one (1) year following the date of original purchase. Exceptions to this warranty are as noted below:

The warranty for mechanical parts which are subject to wear and tear are limited to the earlier of either thirty (30) days following the date of original purchase or the following number of cycles: Faders - 15,000; Rotary potentiometers - 10,000; and Switches - 10,000.

Stanton will warrant all replacement parts and repairs for ninety (90) days from the date of original shipment. Repairs made necessary by reason of miuse, alteration, normal wear, or accident are not covered under this warranty.

Returns

Authorized Stanton dealers are only authorized to sell and distribute merchandise within a specific country. All goods requiring warranty repair or replacement must be returned (freight prepaid if not hand-delivered) to the authorized Stanton dealer from whom the merchandise was purchased and in the same country where the merchandise was purchased. For purposes of purchases made via the Internet, the merchandise must be returned to the authorized Stanton dealer in the country where the authorized Stanton dealer which sold the merchandise to purchaser is located and not the authorized Stanton dealer in the country where the purchaser is located or the country in which the merchandise was received. Any returns to a non-authorized dealer or to an authorized Stanton dealer not in the same country as the merchandise was intended to be sold or as set forth above will void this warranty.

To initiate a warranty repair, you must contact the authorized Stanton dealer from whom you purchased the merchandise, and follow such authorized Stanton dealers return policy.

Stanton assumes no risk and shall be subject to no liability for damage or loss resulting from the specific use or application made of the merchandise. Stantons liability for any claim, whether based on breach of contract, negligence, infringement of any rights of any party, or product liability, and relating to the merchandise shall not exceed the price received by Stanton from our purchase of such merchandise. In no event will Stanton be liable for any special, incidental or consequential damages (including loss of use, loss of profit and claims of third parties) however caused, whether by the negligence of Stanton or otherwise. To the extent permitted by law and except as otherwise provided above, Stanton disclaims any express or implied warranties of merchantability or fitness for a particular purpose.

The above warranty provides you with specific legal rights. You may also have additional rights, which are subject to variation from state to state and country to country.

If there is a dispute regarding the warranty of merchandise that does not fall under the warranty conditions stated above, please include a written explanation with the merchandise when returned pursuant to the terms and conditions set forth herein.

Please register your product online at www.stantondj.com.

Stanton Magnetics 3000 SW 42nd Street Hollywood FL 33312 Phone: +1 954.316.1500

Technical Support: HYPERLINK "mailto:service@stantonmagnetics.com" service@stantonmagnetics.com