# 802.11b/g MIMO Wireless LAN PCI Card


# **Quick Install**


#### Caution


This Quick Installation is meant to help you install the product quickly and easily. For detailed instructions on installation, configuration, and further setup options please consult the User Manual.



#### **Hardware Installation**

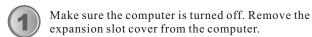

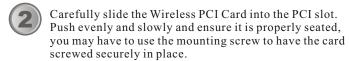


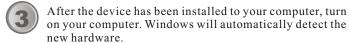




# **Software Installation**

Exit all Windows programs. Insert the CD-ROM into the CD-ROM drive of your computer. If the CD-ROM is not launched automatically, go to your CD-ROM drive (e.g. drive D) and double-click on **Setup.exe** 

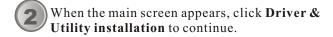

When the License Agreement screen appears, please read the contents and then click Yes to continue.

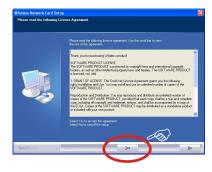

Select the check box to choose a configuration Tool from the listed two choices.

**Wireless Configuration Tool**: Choose to use our configuration Utility.


Microsoft Zero Configuration Utility (ZCU). Click Next to continue.



There are two modes for you to choose in this screen, either choose WiFi mode or Performance mode (Tx Burst mode). This mode selection screen is set for the default mode shown in the utility screen. You can still change its mode later in the utility screen. Click **Next** to continue.



6 Click Continue Anyway to proceed with the Installation.

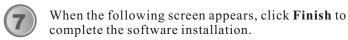





### **Installation Verification**

To verify if the device exists in your computer and is enabled, go to Start —>
System (Hardware) —>
Device Manager. Expand the Network Adapter category. If the 802.11b/g
MIMO Wireless LAN PCI Card is listed here, it means that your device is properly installed and enabled.






# **Utility Configuration**

All settings are categorized into SIX tabs, including Profile Tab, Link Status Tab, Site Survey Tab, Statistics Tab, Advanced Tab and About Tab


#### **Profile Tab**

The **Profile** screen enables you to create, edit, delete, activate, de-activate and raise/lower priorities of the profiles, which are used by the station to connect to WLAN networks.

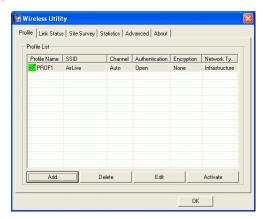


#### **Link Status Tab**

The Link Status screen displays the Link Quality, Signal Strength and some other current linking information.

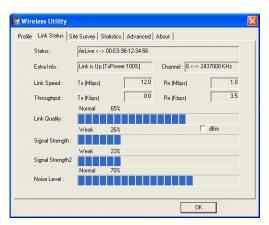


# **Site Survey Tab**

The **Site Survey** screen displays a list of infrastructure and ad-hoc networks available for connection.

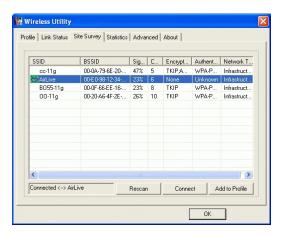


#### **Statistics Tab**

The **Statistics** screen displays the statistics on your current network settings.

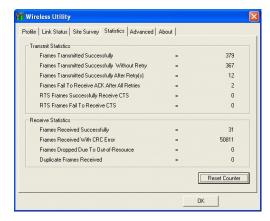

#### **Advanced Tab**

The **Advanced** screen lets you configure the advanced wireless settings including wireless security settings.

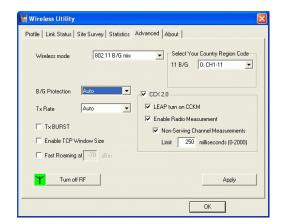

#### **AboutTab**

The About screen displays the basic version information about the Config Version, Driver Version, EEPROM Version and Firmware Version.

