



Using Quick Restore

In the event of a system failure, you can use the Quick Restore Recovery CD to bring your system back to an operating state.



CAUTION: Full restore deletes all information on your hard drive. Save all personal files, software, and data to diskettes or other external storage device before proceeding.

To run the Quick Restore CD, complete the following steps:

First, if your Presario Notebook is attached to a Port Replicator (QuikDock), you must turn the power to the computer off, disconnect it from the QuikDock, and plug it into an external power socket. Disconnect any printer cables or other peripherals from the computer before using Quick Restore.

1. Insert the Quick Restore CD (bootable disk) in the CD drive, and press **Enter**. A **WARNING** message appears advising that you are attempting to totally reformat your hard drive. Confirm by following the next step.
2. Press **1** and then **Enter** to continue. The Power Quest Quick Restore Wizard starts copying and uncompressing data to the local hard drive. This process takes approximately 7-10 minutes.

When prompted, remove the CD from the CD drive and restart the computer. Restarting the computer is required for all changes to take effect.

After the operating system completes the installation process, you may install any application software.

NOTICE

The information in this card is subject to change without notice.

COMPAQ COMPUTER CORPORATION SHALL NOT BE LIABLE FOR TECHNICAL OR EDITORIAL ERRORS OR OMISSIONS CONTAINED HEREIN; NOR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE FURNISHING, PERFORMANCE, OR USE OF THIS MATERIAL.

This card contains information protected by copyright. No part of this card may be photocopied or reproduced in any form without prior written consent from Compaq Computer Corporation.

©2000 Compaq Computer Corporation. All rights reserved.

Compaq is registered with the U.S. Patent and Trademark Office. Printed in the U.S.A., Brazil, Canada, Japan, Korea, Singapore, Taiwan, and the U.K.

Microsoft, Windows, Internet Explorer, Works, Word, Microsoft Network (MSN), and Outlook Express are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Product names mentioned herein are trademarks and/or registered trademarks of their respective companies.

First Edition, January 2000



176779-001