

# <image>

Mounting Instructions for Model 6370C Parallel Power Kit For Honda E3000i Generators Only

> Thank you for purchasing this Parallel Power Kit. Do not return this product to the store! If any parts are missing or damaged, please contact us toll free at 1-888-GEN-TRAN or visit our website at www.gen-tran.com. This product is intended for use with two Honda EU3000i generators ONLY. Do NOT attempt to parallel two unlike generators! For 125 Volt Use Only.

TOOLS NEEDED FOR ASSEMBLY: 10 mm socket wrench or nut driver 11/32 nut driver

HARDWARE INCLUDED: (2) 8/32 Nylok nuts (2) M6-35 Standoffs




Configuration of receptacle 50 amps, 125 V (L6377)




# STEP 1

NEVER connect Parallel Power Kit while generator is running! Using the 10 mm socket wrench, remove the four (4) cap nuts on the end of the generator, and set aside.

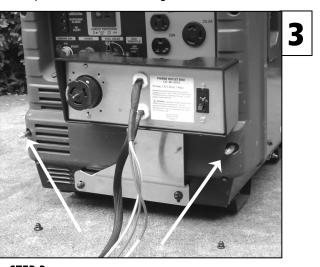


**STEP 3** Insert two standoffs into the two upper holes, and hand tighten.

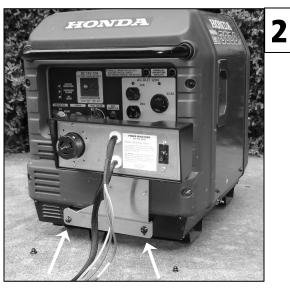

### STEP 2

Mount Parallel Power Kit mounting plate on two bottom studs, and reattach bottom two cap nuts loosely.

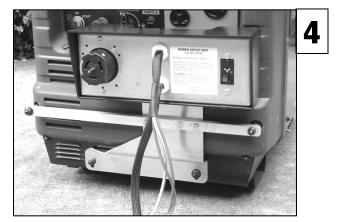

### STEP 4

Attach support bar with recesses over the standoffs. Reattach the remaining two cap nuts over the standoffs, and hand tighten. Then attach two Nylok nuts onto the studs protruding from the mounting plate to secure the support bar. Tighten all nuts moderately using a tool.




# Mounting Instructions for Model 6370C Parallel Power Kit

For Honda E3000i Generators Only



# STEP 5

Insert short Parallel Cables into "Parallel Operation" jacks on the first generator. Do not be concerned with polarity when connecting to these outlets, as the polarity is handled by the internal computer chip within the EU3000i. Then attach the first green/yellow ground cable to grounding stud on the lower right side of the first generator using a screwdriver.

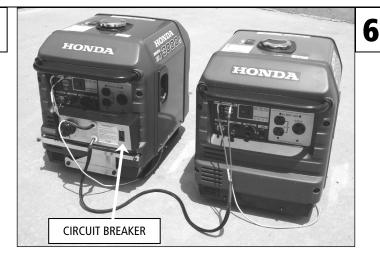


# **STEP 6**

Insert the set of longer Parallel Cables into "Parallel Operation" jacks on second generator. Attach green/yellow ground cable to grounding stud on the lower right side of the second generator as well.

During operation, if the Parallel Power Kit is not feeding power to your load when generators are running, it is possible that the circuit breaker has been tripped. You will need to reset circuit breaker on the front of the Parallel Power Kit to "ON".

Be sure to shut down generators before connecting to or disconnecting from Parallel Power Kit.

For 120 volt applications ONLY.

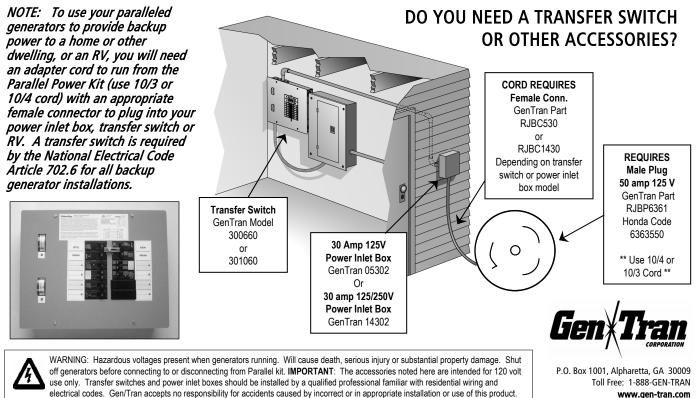

www.gen-tran.com PN 511759 Rev A