

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

HTS3111



---

EN **User manual**

---

DA **Brugervejledning**

---

DE **Benutzerhandbuch**

---

EL **Εγχειρίδιο χρήσης**

---

ES **Manual del usuario**

---

FI **Käyttöopas**

---

FR **Mode d'emploi**

---

IT **Manuale utente**

---

NL **Gebruiksaanwijzing**

---

---

NO **Brukerhåndbok**

---

PT **Manual do utilizador**

---

SV **Användarhandbok**

---

TR **Kullanım kılavuzu**

---

CS **Příručka pro uživatele**

---

HU **Felhasználói kézikönyv**

---

PL **Instrukcja obsługi**

---

RO **Manual de utilizare**

---

SK **Príručka užívateľa**

---

**PHILIPS**



# Contents

---

<b>1</b>	<b>Notice</b>	2
	Compliance	2
	Mains fuse (UK only)	2
	Trademarks	2

---

<b>2</b>	<b>Important</b>	3
	Safety	3
	Product care	4
	Disposal of your old product and batteries	4
	Contact us	4

---

<b>3</b>	<b>Your SoundBar</b>	5
	Main unit	5
	Remote control	5

---

<b>4</b>	<b>Connect your SoundBar</b>	7
	Connectors	7

---

<b>5</b>	<b>Use your SoundBar</b>	8
	Before you start	8
	Play audio from TV or other devices	8
	Adjust the volume	8
	Choose your sound	8
	Apply factory settings	9

---

<b>6</b>	<b>Wall mount your SoundBar</b>	9
----------	---------------------------------	---

---

<b>7</b>	<b>Product specifications</b>	10
----------	-------------------------------	----

# 1 Notice

---

## Compliance



This product is in compliance with the essential requirements and other relevant provisions of Directives 2006/95/EC (Low Voltage), 2004/108/EC (EMC).

---

## Mains fuse (UK only)

This product is fitted with an approved moulded plug. Should it become necessary to replace the mains fuse, this must be replaced with a fuse of the same value as indicated on the plug (example 10A).

- 1 Remove fuse cover and fuse.
- 2 The replacement fuse must comply with BS 1362 and have the ASTA approval mark. If the fuse is lost, contact your dealer in order to verify the correct type.
- 3 Refit the fuse cover.



### Note

 
- To conform with the EMC directive (2004/108/EC), the mains plug on this product must not be detached from the mains cord.

---

## Trademarks



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks & DTS Digital Surround and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

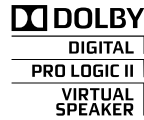

Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories.

## 2 Important

Read and understand all instructions before you use your SoundBar. If damage is caused by failure to follow instructions, the warranty does not apply.

---

### Safety

#### Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

#### Risk of short circuit or fire!

- Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

#### Risk of injury or damage to the SoundBar!

- For wall-mountable products, use only the supplied wall mount bracket. Secure the wall mount to a wall that can support the combined weight of the product and the wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.
- Never place the product or any objects on power cords or on other electrical equipment.

- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.

#### Risk of overheating!

- Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

#### Risk of contamination!

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Remove battery if it is exhausted or if the remote control is not to be used for a long time.
- Battery contains chemical substances, it should be disposed of properly.

#### Risk of swallowing batteries!

- The product/remote control may contain a coin type battery, which can be swallowed. Keep the battery out of reach of children at all times!

---

## Product care

Only use microfiber cloth to clean the product.

---

## Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

---

## Contact us



### Warning

- Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, register your product and get support at [www.philips.com/welcome](http://www.philips.com/welcome).

If you contact Philips, you will be asked for the model and serial number of your product. The model number and serial number are on the back or bottom of your product. Write the numbers here:

 
Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_


# 3 Your SoundBar

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your SoundBar at [www.philips.com/welcome](http://www.philips.com/welcome).

## Main unit

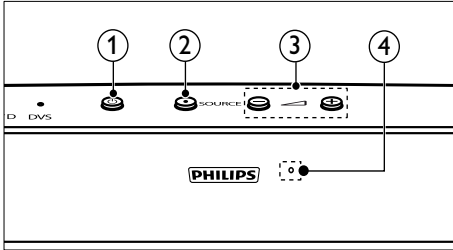


 - ① **⏻ (Standby-On)**
  - Switch the SoundBar on.
  - When the SoundBar is on standby, the standby indicator is red.
- ② **SOURCE**  
Select an audio source.
- ③ **▲ +/- (Volume)**  
Increase or decrease volume.
- ④ **LED indicator**  
Blink when a remote control button is pressed.

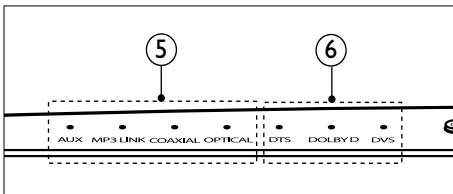

- ⑤ **Source indicators**  
Light up when the source is selected.
- ⑥ **Sound mode indicators**
  - **DTS**: Light up when you play a source with DTS.
  - **DOLBY D**: Light up when you play a source with Dolby Digital.
  - **DVS**: Light up when you select DVS mode.

## Remote control

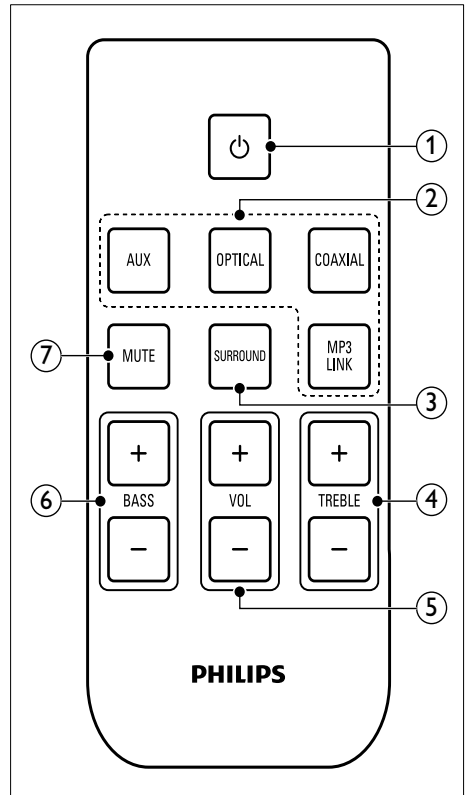 

- ① **⏻ (Standby-On)**
  - Switch the SoundBar on.
  - When the SoundBar is on standby, the standby indicator is red.
- ② **Source buttons**
  - **AUX**: Switch your audio source to the AUX connection.
  - **OPTICAL**: Switch your audio source to the optical connection.
  - **COAXIAL**: Switch your audio source to the coaxial connection.
  - **MP3 LINK**: Switch your audio source to the MP3 link connection.

- ③ **SURROUND**
  - Switch to DVS mode or stereo mode.
  - Press and hold to set night mode.
- ④ **TREBLE +/-**  
Increase or decrease treble.
- ⑤ **VOL +/-**  
Increase or decrease volume.
- ⑥ **BASS +/-**  
Increase or decrease bass.
- ⑦ **MUTE**  
Mute or restore volume.

## Replace battery



 
### Warning

- The product/remote control may contain a coin type battery, which can be swallowed. Keep the battery out of reach of children at all times!



### Caution

- The battery contains perchlorate material, handle it with care. For information see [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).

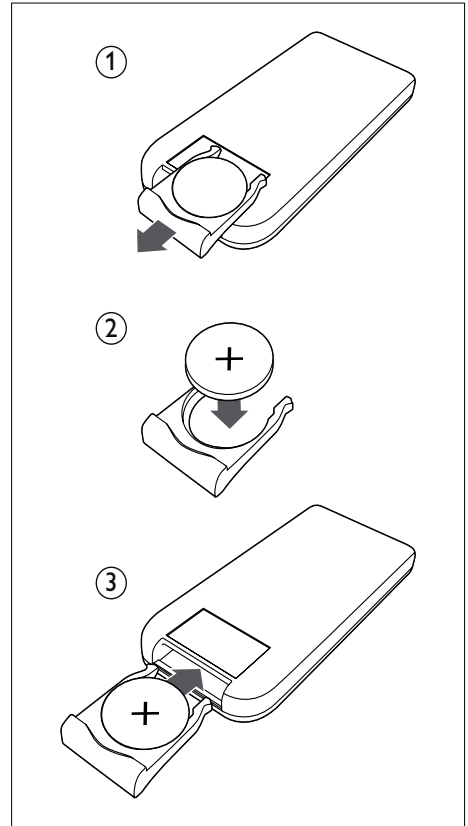

- 1 Open the battery compartment.
- 2 Insert one CR2025 battery, with the polarity (+/-) as indicated.
- 3 Close the battery compartment.



# 4 Connect your SoundBar

 
This section helps you connect your SoundBar to a TV and other devices. For information about the basic connections of the SoundBar and accessories, see the Quick start guide.

### Note

- Refer to the type plate at the back or bottom of the product for identification and supply ratings.
- Before you make or change any connections, ensure that all devices are disconnected from the power outlet.

## Connectors


### Side connector

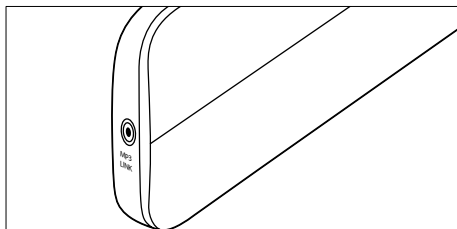

#### MP3 LINK


Audio input from an MP3 player.
 
### Bottom connectors

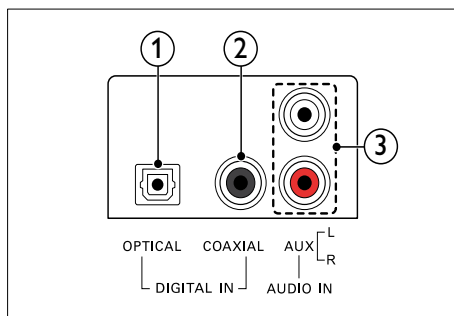

- ① **DIGITAL IN-OPTICAL**  
Connect to the optical audio output on a TV or digital device.
- ② **DIGITAL IN-COAXIAL**  
Connect to the coaxial audio output on a TV or digital device.
- ③ **AUDIO IN-AUX L/R**  
Connect to the analog audio output on a TV or analog device.

### Back connector

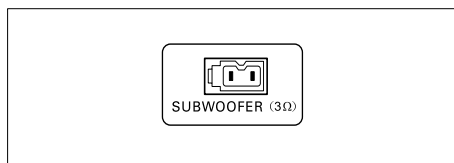 

#### SUBWOOFER

Connect to the subwoofer.

 
## 5 Use your SoundBar

This section helps you use the SoundBar to play audio from connected devices.

### Before you start


Check that you make the necessary connections.

### Play audio from TV or other devices

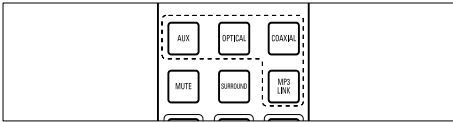

Press the **Source buttons** to select the audio output of the connected device.

### Adjust the volume

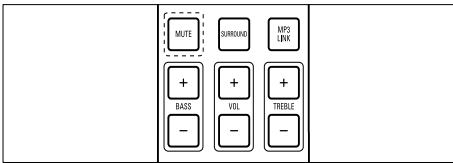 

To increase or decrease volume, press **VOL +/-**.

- The **LED indicator** on the front panel lights up for five seconds when the volume is set to maximum.

To mute sound, press **MUTE**.


- ↳ The **LED indicator** on the front panel blink continuously.
- To restore the sound, press **MUTE** again or press **VOL +/-**.

## Choose your sound

 This section helps you choose the ideal sound for your video or music.

### Change treble or bass

Change the high frequency (treble) or low frequency (bass) settings of the SoundBar to suit your video or music.




Press **TREBLE +/-** or **BASS +/-** to increase or decrease treble or bass.

- The **LED indicator** on the front panel lights up for five seconds when the treble or bass is set to maximum.

### Change virtual surround mode

 DVS (Dolby Virtual Speaker) technology creates a highly compelling 5.1-channel listening experience from as few as two speakers.




Press **SURROUND** to switch DVS mode or stereo mode.

- ↳ In DVS mode, the **DVS indicator** lights up on the top panel.

### Change night mode

 For quiet listening, decrease the volume of loud sounds when you play discs. Night mode is only available for Dolby encoded DVD and Blu-ray discs.



Press and hold **SURROUND** to switch night mode on or off.

- ↳ When the night mode is on, the **indicators** dim.

---

## Apply factory settings

You can reset your SoundBar to the default settings programmed at the factory.

In AUX mode, press **TREBLE+**, **VOL-**, and **BASS+** within three seconds.

- ↳ When the restore factory settings process is complete, the standby indicator blinks five times. Your SoundBar automatically switches off and back on again.

## 6 Wall mount your SoundBar

For detailed steps about how to wall mount your SoundBar, refer to Quick start guide.



### Note

- You can remove the three rubber feet at the bottom of the SoundBar before wall mount.
- If the rubber feet are removed, you cannot place them back again at the bottom of the SoundBar.

# 7 Product specifications

## Note

- Specification and design are subject to change without notice.

### Amplifier

- Total output power: 100W RMS (30% THD)/ 75W RMS (10% THD)
- Frequency response: 20 Hz-20 kHz /  $\pm 3$ dB
- Signal-to-noise ratio: > 65 dB (CCIR) / (A-weighted)
- Input sensitivity:
  - AUX: 1.0 V
  - MP3 LINK: 0.5 V

### Audio

- S/PDIF Digital audio input:
  - Coaxial: IEC 60958-3
  - Optical: TOSLINK

### Main Unit

- Power supply: 110-240 V~; 50-60 Hz
- Power consumption: 20 W
- Standby power consumption:  $\leq 1$  W
- Impedance: 4 ohm woofer, 4 ohm tweeter
- Speaker drivers: 65 mm (2.5") woofer, 38 mm (1.5") tweeter
- Frequency response: 150 Hz ~ 20 kHz
- Dimensions (WxHxD): 945 x 93 x 58 mm
- Weight: 1.7 kg

### Subwoofer

- Impedance: 3 ohm
- Speaker drivers: 165 mm (6.5") woofer
- Frequency response: 20 Hz-150 Hz
- Dimensions (WxHxD): 123 x 309 x 369 mm
- Weight: 3.81 kg
- Cable length: 4 m

### Wall Mount

- Dimensions (WxHxD): 260 x 40 x 15 mm
- Weight: 0.16 kg

