

A blurred photograph showing the lower half of a person, likely a woman, sitting on a chair. Her legs are crossed at the ankles, and her hands are resting on her lap. The background is out of focus, showing what appears to be a window with blinds. The overall tone is soft and ethereal.

© graphic design, photos and translations by ORFGEN · Essen / Germany · www.orfgen-nm.de

BALANCE





KH 228



**Operating and safety
instructions**

page 4 - 6

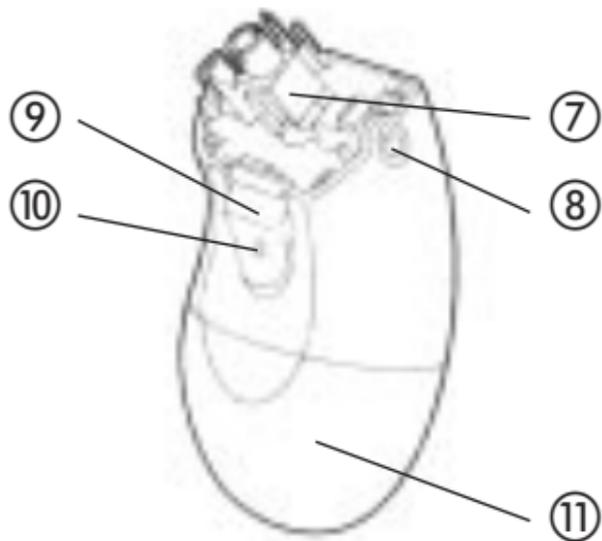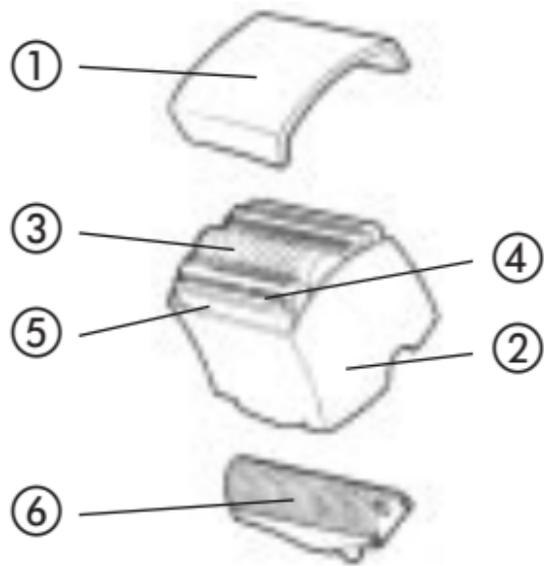

Safety advice

Please read carefully through the following information about safety and proper use.

Before reading, fold out the page with the illustrations and make yourself familiar with all the functions of the shaver.

Be careful to keep these safety advice notes and if necessary pass them on to a third party.

- △ Warning! People with sensitive skin or allergies to cosmetics or similar conditions who suffer sudden skin irritations in reaction to shaving should first try the shaver on a small place on an arm or leg as a test.
- △ To avoid injury, never use the shaver if it has a damaged foil or cutter.
- △ Never allow the shaver to be immersed in water for long periods.

- △ Never use shaving cream. It could cause the inner cutter to stick.
- △ Only use shaving foam or soap lather.
- △ Clean the shaver under running water.
- △ Do not use salty water, cleaning agents or hot water.
- △ Do not dismantle the shaver body as this can lead to an ineffective watertight seal.
- △ If the shaver does not work properly, have it examined at an authorised service centre.
- △ Use the shaver only for the purposes described above.

Before using for the first time

This wet/dry lady shaver can be used with shaving foam as a wet shaver or a dry shaver. It is also intended for use in the shower. Tests have shown that better results are achieved with warm water and shaving foam.

The shaver is perfect for use in the shower. Try using it as a wet shaver with shaving foam for about 3 weeks and experience the difference compared to dry shaving. Cleaning is child's play. Just rinse the shaving head under running water. It's that easy.

Description of components

- ① Protective cap
- ② Housing for outer foil
- ③ Outer foil
- ④ Outer cutter/long hair trimmer
- ⑤ Guide
- ⑥ Inner cutter
- ⑦ Inner cutter support block
- ⑧ Shaving head release button
- ⑨ On/Off switch
- ⑩ Continuous operation switch
- ⑪ Battery compartment lid

Changing the batteries

Change the batteries when required without delay (see Figs. ⑫ to ⑭). If the cutter motion becomes slower, it is time to change the batteries.

Never use the shaver if the batteries are weak.

- 1) Remove the battery compartment lid ⑪ (see ⑫).
- 2) After checking the correct polarity, insert two AA batteries (see ⑬).
- 3) Refit the battery compartment lid again (see ⑭).

You should remove the batteries if the shaver is to remain unused for a long period.

Using the shaver

- Apply a generous amount of shaving foam to your skin.
- Take off the protective cap ① and switch on the shaver ⑨.
- You will obtain the best results if you move the shaver up and down keeping the shaving head flat against your skin so that the foil and cutters are able to work effectively at the same time. If necessary, trim long hairs with the trimmer ④ before shaving.

Maintenance/cleaning

Press the release button ⑧ to release the shaving head and take off the housing.

Switch on the shaver and rinse the inner cutter under running water.

DO NOT USE HOT WATER!

Then switch off the shaver, close the housing and dry carefully. When the shaving head is dry, replace the protective cover ①.

 
Statement of conformity

We, Kompernaß Handelsgesellschaft mbH,
Burgstr. 21, D-44867 Bochum, Germany, hereby
declare that this product conforms with the
following EC regulations:

EC low voltage regulations,
Electromagnetic compatibility,
Applicable harmonised standards.

Type / Description: Wet and dry
lady shaver KH 228

Bochum, 31.10.2002



Hans Kompernaß
- Managing Director -