



*Thinking of you*  
**Electrolux**

user manual

Tumble Dryer

EDE 57160W



**We were thinking of you**  
when we made this product

## Welcome to the world of Electrolux

Thank you for choosing a first class product from Electrolux, which hopefully will provide you with lots of pleasure in the future. The Electrolux ambition is to offer a wide variety of quality products that make your life more comfortable. You find some examples on the cover in this manual. Please take a few minutes to study this manual so that you can take advantage of the benefits of your new machine. We promise that it will provide a superior User Experience delivering Ease-of-Mind. Good luck!

GB

**4 contents** electrolux

## Contents

Safety information.....	5
Product description .....	7
Control panel.....	8
Use .....	9-12
Drying hints .....	13-14
Drying programme .....	15-16
Programme information .....	17
Care and cleaning .....	18-19
Something not working .....	20-21
Technical data .....	22
Consumption values .....	23
Installation .....	24-27
Environment concerns.....	28
Guarantee/Customer Service.....	29
Service and Spare Parts .....	30

The following symbols are used in this manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance.



General information and tips



Environmental information

## Safety Information



**In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that everyone using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it will be properly informed on its use and safety.**

### General safety

- It is dangerous to alter the specifications or attempt to modify this product in any way.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- In order to avoid danger of fires caused by excessive drying, do not use the appliance to dry the following items: Cushions, quilts and the like (these items

accumulate heat).

- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Always unplug the appliance after use, clean and maintenance.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.
- Items that have been soiled with substances such as cooking oil acetone, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- **Danger of explosion:** Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substance are volatile, they could cause an explosion. Only tumble dry items washed with water.
- **Risk of fire:** items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer.
- If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer.
- Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance

### WARNING:

Never stop a tumble dry before the end of the drying cycle unless all

## 6 electrolux **safety information**

items are quickly removed and spread out so that the heat is dissipated. **Risk of fire.**

### Installation

- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- All transit packaging must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.
- The final part of a tumble dryer cycle occurs without heat ( cool down cycle ) to ensure that the items are left at a temperature that ensures that items will not be damaged.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Care must be taken to ensure that the appliance does not stand on the electrical supply cable.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance.
- After having installed the appliance, check that it is not pressing or standing on its electrical supply cable, or vent hose.
- If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory).

### Use

- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.

- Only wash fabrics which are designed to be machine dried. Follow the instructions on each garment label.
- Do not dry unwashed items in the tumble dryer.
- Do not overload the appliance. See the relevant section in the user manual.
- Clothes which are dripping wet should not be placed in the dryer.
- Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.
- Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible.


### Child safety

- This machine is not intended for use by young children or infirm persons without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach
- Keep all detergents in a safe place out of children's reach.
- Make sure that children or pets do not climb into the drum.


## Product description

GB

- 1** Control panel
- 2** Fluff filters
- 3** Rating Plate
- 4** Adjustable feet
- 5** Drum Light

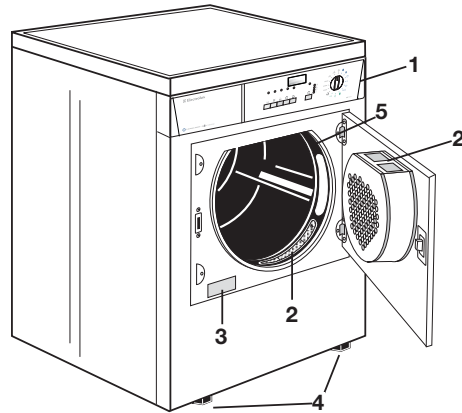


- 6** Side vent outlets
- 7** Ring nut
- 8** Rear vent outlet

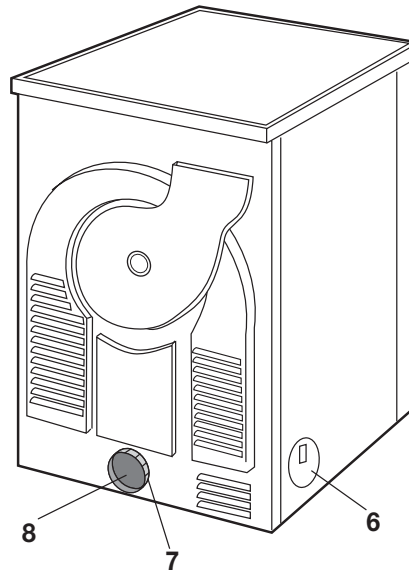

## 8 electrolux control panel

### Control panel

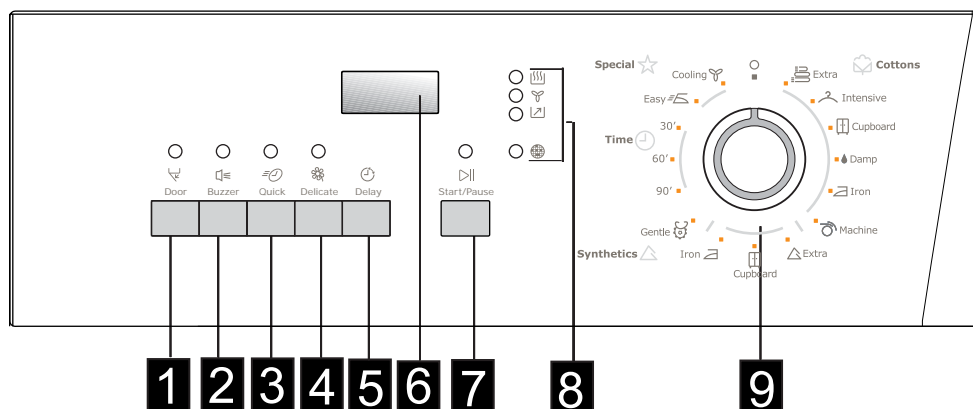

**1** Door button

**2** Buzzer button

**3** Quick button

**4** Delicate button

**5** Delay start button

**6** Display

**7** Start/Pause button

**8** Indicator lights:

- Drying

- Cooling

-End

- Filtres

**9** Programme selector dial



## Use

### First Use




- Ensure that the electrical connections comply with the installation instructions.
- Remove the polystyrene block and any material from the drum.
- Before using your tumble dryer for the first time, we recommend that you place a few damp cloths inside the appliance and dry for 30 minutes. There may be dust inside a brand new tumble dryer.

### Daily Use



Connect the appliance.  
Open the door (see picture).

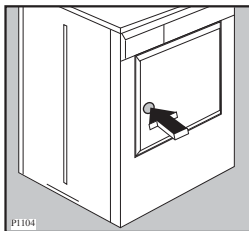


Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door. Please check the laundry does not get caught between the door and filter.



### Select the required programme

Turn the programme selector dial to the required programme.  
The Start/Pause light starts to flash.

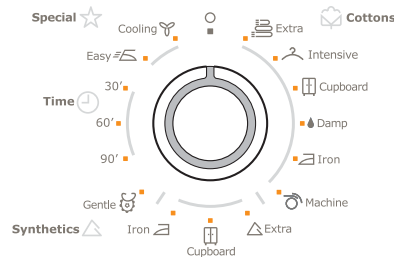

The selector dial is divided into following sections:

- Cottons ☐
- Synthetics ▲
- Time ⌚
- Special ☆

It allows you to select electronically controlled or time controlled drying. Turn the dial to the required programme or time.

#### Electronically controlled drying (automatic)

The appliance runs these programmes with the help of probes which detect the degree of dampness of the laundry. Simply select the programme according to the type of laundry and degree of drying required.

#### Time controlled drying

Can be used to finish off drying if necessary. Select the 90 or 60 minute programme for cottons or the 30 minute programme for synthetics. To cancel a programme which is running, turn the programme selector dial to "0". At the end of drying, turn the selector dial to "0" to switch the machine off before removing the laundry.

#### Programme Option buttons

Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the

**10 electrolux use**

Start/Pause button. When these buttons are pressed, the corresponding pilot lights come on. When they are pressed again, the pilot lights go out.

**Select Door**

Press this button to open the door. The light above the button will light up. Opening the door by means of this button is possible only if the tumble dryer is on (programme selector dial set to a programme or drying time)



If you open the door during a programme, in order to restart the programme you must re-press the Start/Pause button again after having closed the door.

**Select the Buzzer**

When the drying cycle has finished, an intermittent audible signal will sound.



By depressing button  the acoustic signal is switched off in the following cases:

- when selecting the programme
- when depressing the buttons
- when the programme selector dial is turned to another position during the programme or when you depress an option button during the cycle
- at the end of the programme.

The corresponding light comes on

**Select the Quick button**

By depressing this button the drying time is reduced in the following COTTON programmes:

- extra dry
- ready to wear
- store dry

The corresponding light illuminates. This option cannot be selected together with “low temperature” function .

**Select Delicate**

Pressing this button allows drying to be performed at a lower temperature, for delicate items.



The corresponding pilot light comes on. This option can also be used for time controlled drying. This function cannot be used with QUICK DRYING.

**Select Delay start**

This button allows you to delay the starting of the programme by 12 hours max. This option must be selected after having selected the programme and before pressing Start/Pause to start the programme.

Every time the button is pressed, the time is increased by 30 minutes, until


the display shows a delay of “2 hours”. After this, the delay is displayed hour by hour. The minutes or hours of delay that have been selected are displayed for 2 seconds, then the display shows the duration of the previously selected programme. The countdown begins after you have pressed the Start/Pause button. To cancel the delay time press the DELAYED START button until the display indicates 0’h. Then press the Start/Pause button again. When the delay is cancelled, the display shows the duration of the programme. During the delayed start, it is not possible to change the programme or the delay time that have been selected. To do this, you must first switch off the machine by setting the programme selector dial to “0”. Select the new programme, the options and the delayed start, then press the Start/Pause button. To cancel or change options that have been selected, simply set the appliance to Pause. Once you perform the desired operation, press once again the Start/Pause button. If you wish to add more laundry while the machine is performing the countdown, simply open the door. When you close the door, press the Start/Pause button again to continue the countdown.

### Display

The display shows the following information:

#### Duration of selected programme


After you have selected the programme, its duration (in hours and minutes) appears on the display. It is calculated automatically on the basis of the maximum load accepted for each type of fabric and of the required degree of drying.

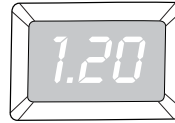

When the programme starts, the remaining time is displayed every 5 minutes.


#### Delayed start

If you have selected a delay time by means of the relevant button, the display shows it for 3 seconds; then it shows the duration of the previously selected programme. The countdown is displayed every 30 minutes until it displays “90 minutes” and then hour by hour.

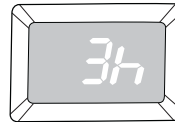


#### End of programme

A flashing zero indicates the end of the programme and it is displayed after the “anticreasing” phase.

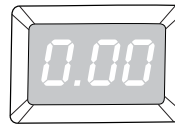

#### Incorrect option selection

If you select an option that is not compatible with the programme you have selected, the display shows Err (error).

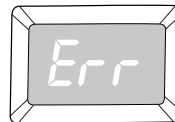

This code will reappear during the execution of the programme if you press one of the option buttons or turn the programme selector.

#### Alarm code

In case of a functional anomaly, the display shows an alarm code (e.g. E21).

## 12 electrolux use



### Select the Start/Pause



Press this button to start the dryer after having selected the programme and the options. The relevant light will stop flashing. If the door of the appliance or the small door at the bottom is opened while the programme is running, this button must be pressed again after closing the door in order to restart the programme from the point at which it was interrupted. In both cases the light of the Start/Pause button flashes to remind you that the start button needs to be pressed again.

### Indicator lights

These lights indicate the following functions:

#### “Drying” light

This light indicates that the appliance is in the drying phase.

#### “Cooling” light

This light indicates that the appliance is in the cooling phase. At the end of drying, there is a 10 minute cooling phase to cool the laundry.

#### “End of programme” light

This light is on at the end of the cooling phase, during the anti-creasing phase and at the end of the programme.

#### “Filter cleaning” light

It comes on every 80 cycles to remind you that the condenser must be cleaned.

### At the end of the programme

All drying programmes end with a 10 minute cooling phase.

If the laundry is not removed at the end of the cycle, the dryer performs an anti-creasing phase (duration: 30 minutes maximum).

If you do not remove the laundry, the dryer will stop automatically at the end of the anti-creasing phase.

Lights end and filter remain lit and the buzzer sounds for 2 minutes.

Turn the programme selector dial to “0”; all the lights go out. The appliance is switched off.



Remove the laundry.

If you open and then close the door before turning the selector dial to “0” all the indicator lights come on.

### After each use

- Clean the filters.

### Important!

If the drying programme has to be stopped before it reaches the end, we recommend that you turn the programme selector dial to position Cooling  and wait until the end of this cooling phase before removing the laundry. This will avoid a build-up of heat inside the appliance. To do this first turn the dial to “0” and then to Cooling  and depress the Start button.

### Modifying the programme

To change a programme which is running, first cancel it by turning the programme selector dial to “0”. Select the new programme and press the Start button .

## Drying hints



### Before loading the laundry

Never tumble dry the following:

Particularly delicate items such as net curtains, woollen, silk, fabrics with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdowns, sleeping bags, feather quilts and any items containing rubber foam or materials similar to rubber foam.

- Always follow the instructions on garment labels:



may be tumble dried



normal drying (high temperature)



delicate drying (low temperature)



do not tumble dry

- Close pillowcases and covers with fasteners to prevent small laundry items getting tangled inside them. Close press studs, zips and hooks and tie belts and apron strings.
- Sort laundry according to type and degree of drying required.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Avoid drying dark clothes with light coloured fluffy items such as towels as they could attract the fluff.
- The laundry must be thoroughly spun before tumble drying.
- **Easy-care items**, too, e.g. shirts, should be briefly pre-spun before

drying (depending on crease resistance approx. 30 seconds or using the special brief spin programme of your washing machine).

- Knitted textiles (knitted underwear) may shrink a little during drying. Please do not overdry items of this type. It is advisable to allow for shrinkage when choosing the size of new purchases.
- You can also put starched items into your dryer. However, to achieve the desired starched effect, choose the programme "iron dry". To remove any starch residues, wipe out the internal drum after drying with a moist cloth and then rub it dry.
- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Remove the laundry when the dryer has finished drying.
- If individual items are still damp after drying, set a brief post-drying time, but **at least 30 minutes**. This will be necessary particularly for multilayered items (e.g. collars, pockets, etc.).

### **Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins).**

Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes.

Remove persistent stains before washing.

Rub particularly soiled areas with a special detergent or detergent paste.

Treat curtains with special care. Remove hooks or tie them up in a bag or net.

**14 electrolux drying hints****Maximum loads**

Recommended loads are indicated in the programme charts.

General rules:

**Cotton, linen:** drum full but not too tightly packed;

**Synthetics:** drum no more than half full;

**Delicate fabrics and woollens:** drum no more than one third full.

















































Try to load to the maximum capacity of the machine as small loads are uneconomical.

**Laundry weights**

The following weights are indicative:






















bathrobe	1200 g
napkin	100 g
quilt cover	700 g
sheet	500 g
pillow case	200 g
tablecloth	250 g
towelling towel	200 g
tea cloth	100 g
night dress	200 g
ladies' briefs	100 g
man's work shirt	600 g
man's shirt	200 g
man's pyjamas	500 g
blouse	100 g
men's underpants	100 g

## Drying programmes

Programme	Type of laundry	Options	Description of programme
 <b>Extra</b>	Cotton and linen 	   	Drying thick or multi-layered textiles, e.g. terry towelling items
 <b>Intensive</b>	Cotton and linen 	   	Drying thick textiles, e.g. terry towelling items, towels.
 <b>Cupboard</b>	Cotton and linen 	   	Drying textiles of even thicknesses, e.g. terry towelling items, knitted items, towels.
 <b>Damp</b>	Cotton and linen 	  	For thin textiles which are still to be ironed, e.g. knitted items, cotton shirts.
 <b>Iron</b>	Cotton and linen 	  	For cotton or linen laundry which are still to be put through a machine, e.g. bedding, table linen.
 <b>Machine iron</b>	Cotton and linen 	  	For cotton or linen laundry which are still to be put through a machine, e.g. bedding, table linen.
 <b>Extra</b>	Synthetics 	  	Drying thick or multi-layered textiles, e.g. pullovers, bedding, table linen.
 <b>Cupboard</b>	Synthetics 	  	For thin textiles which are not ironed, e.g. easy care shirts, table linen, baby's clothes, socks, underwear.
 <b>Iron</b>	Synthetics 	  	For thin textiles which are still to be ironed, e.g. knitted items, cotton shirts.

16 electrolux **drying programmes**

## Drying programmes

Programme	Type of laundry	Options	Description of programme
<b>Gentle</b> 	Jumpers	  	Baby cycle  is a special programme for jumpers to be dried "ready to wear".
 <b>Time</b> <b>30 min</b> <b>60 min</b> <b>90 min</b>	Synthetics  Cotton  Cotton 	  	Drying thick or multi-layered textiles, e.g. terry towelling items. For drying individual items of laundry or for small volumes.
<b>Special</b>  <b>Easy</b>	Synthetics 	  	Special programme with anti-crease mechanism for easy care textiles such shirts and blouses; for minimum ironing effort. The result depends on the type and quality of textiles. (The loading volume corresponds to approx. 4 to 5 shirts.) Recommendation: Place textiles in the dryer straight after spinning. Once dried, immediately remove textiles and place on clothes hanger.
<b>Special</b>  <b>Cooling</b>	Cotton and linen  Synthetics 		Special programme, lasting around 10 minutes, for refreshing or gently cleaning textiles with commercially available dry cleaning sets. (Only use those products which are declared as suitable for the dryer by the manufacturer; please observe the manufacturer's instructions for use.)



Max Cottons load: 7 kg  
 Max Synthetics load: 3 kg  
 Max Cooling load: 7 kg  
 Max Time load:  
**30 min** 3 kg


 



**60 min** 7 kg  
**90 min** 7 kg  
 Max Gentle load: 2 kg



## Programme information



GB

Objective	Implementation														
<p><b>Adjusting the level of conductivity</b></p>	<p>Water contains, a variable quantity of limestone and mineral salts of which quantities vary according to geographical locations thus varying its conductivity values.</p> <p>Relevant variations of the conductivity of the water compared to those prefixed by the factory could slightly influence the residual humidity of the laundry at the end of the cycle. Your dryer allows you to regulate the sensitivity of the drying sensor based on conductivity values of the water by using the following procedure.</p> <p><b>To access adjustment mode:</b></p> <ol style="list-style-type: none"> <li>1. Turn the programme selector dial to switch on the appliance.</li> <li>2. In selection mode, press simultaneously the buttons  and .</li> </ol> <p>Press the buttons down until «CO» appears on the digits.</p> <p><b>Adjusting the level of conductivity:</b></p> <p>Press the Delay Start  button sequentially: the level of conductivity is indicated by the lighting of the horizontal hyphens.</p> <table border="1" data-bbox="566 1094 1232 1241"> <thead> <tr> <th>Display</th> <th>Conductivity</th> <th>Approximate value <math>\mu\text{S}/\text{cm}</math></th> </tr> </thead> <tbody> <tr> <td>CO    -</td> <td>Low</td> <td>&lt; 300</td> </tr> <tr> <td>CO    =</td> <td>Medium</td> <td>300-600</td> </tr> <tr> <td>CO    ≡</td> <td>High</td> <td>&gt;600</td> </tr> </tbody> </table>			Display	Conductivity	Approximate value $\mu\text{S}/\text{cm}$	CO    -	Low	< 300	CO    =	Medium	300-600	CO    ≡	High	>600
	Display	Conductivity	Approximate value $\mu\text{S}/\text{cm}$												
	CO    -	Low	< 300												
CO    =	Medium	300-600													
CO    ≡	High	>600													
<p>Normally, the appliance is factory-set to the highest level; however, certain models may be configured differently.</p> <p><b>Memorizing the new setting:</b></p> <p>Simultaneously press the buttons  and . Press the buttons down until the previous drying cycle time appears again on the display and the buzzer sounds.</p>															
<p><b>O = Cancelling/OFF</b></p>	<p>To reset a programme and to switch off the machine turn the selector dial to <b>O</b>. Now can a new programme be selected.</p>														

## 18 electrolux care and cleaning

### Care and cleaning



You must **DISCONNECT** the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.


#### External cleaning

Use only soap and water and then dry thoroughly.

**Important:** do not use methylated spirit, diluents or similar products..


#### Cleaning the door


Clean periodically the interior part of the door to remove any fluff from the seals around the filter. Accurate cleaning ensures correct drying.

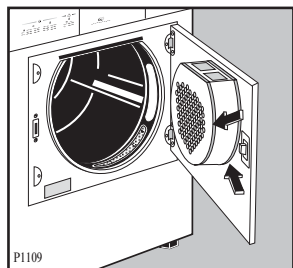


#### Cleaning the filters

Your dryer will only function well if the filters are clean.

The filters collect all the fluff which accumulates during drying and they must therefore be cleaned **at the end of each programme**, before removing the laundry, with a damp cloth. The light  is on to remind you of this operation.

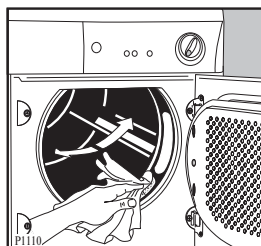


The filter in the inner door must be removed for cleaning.

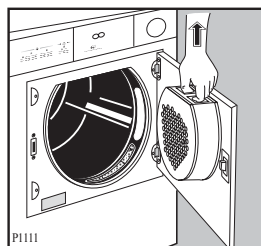

Do not be alarmed by the amount of fluff. It is not due to excessive wear caused by the dryer.

All fabric loses fluff when drying but it goes un-noticed in the air. In a tumble dryer it simply collects in the filter.

After a while, a whitish patina due to detergent residue on laundry forms on the filters. When this occurs, clean the filters with warm water using a brush. Remove the filter in the door opening as per picture (it can be positioned with the tooth facing to the left or to the right).

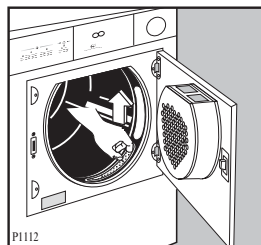



Do not use the appliance without filters.

### Cleaning the drum

When your laundry does not reach the desired degree of dryness, in other words, when it turns out either too dry or too damp, we advise you to clean the inside of the drum with a cloth soaked with white vinegar.

This will eliminate the slight patina that has formed in the drum (due to residues of detergent and softeners used in the washing, and to the lime contained in the water), which prevents the probes from detecting the correct degree of dryness.

GB



**20** electrolux **something not working**

## Something not working



Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below.

During machine operation it is possible that the Start/Pause pilot light flashes to indicate that the machine is not working.

Once the problem has been eliminated, press the **Start/Pause** button to restart the programme. If after all checks, the problem persists, contact your local Service Centre.


Malfunction	Possible cause	Solution
Dryer does not work.	<ul style="list-style-type: none"> <li>● Mains plug is not plugged in or fuse is not working correctly.</li> <li>● Loading door is open.</li> <li>● Have you pressed the  button?</li> </ul>	<ul style="list-style-type: none"> <li>● Plug in at mains socket. Check fuse in fuse box (domestic installation).</li> <li>● Close loading door.</li> <li>● Press the  button again.</li> </ul>
Drying results unsatisfactory.	<ul style="list-style-type: none"> <li>● Wrong programme selected.</li> <li>● Lint filter clogged.</li> <li>● Incorrect volume of laundry.</li> <li>● Ventilation slots in base area covered up.</li> <li>● Residue on inside surface of drum or drum ribs.</li> </ul>	<ul style="list-style-type: none"> <li>● Select a different programme the next time you dry (see "Overview of programmes" section).</li> <li>● Clean lint filter.</li> <li>● Observe recommended loading volumes.</li> <li>● Uncover ventilation slots in base area.</li> <li>● Clean inside surface of drum and drum ribs</li> </ul>
Loading door does not close.	<ul style="list-style-type: none"> <li>● Fine strainer not in place and/or large mesh filter not locked in place.</li> </ul>	<ul style="list-style-type: none"> <li>● Install fine strainer and/or snap large mesh filter into place.</li> </ul>

## something not working electrolux 21

Malfunction	Possible cause	Solution
When pressing a button, the corresponding button flashes several times.	<ul style="list-style-type: none"> <li>Washing protection. After the start of the programme, the option can no longer be set.</li> </ul>	<ul style="list-style-type: none"> <li>Turn the programme knob to OFF. Set the programme again</li> </ul>
Drum light does not work	<ul style="list-style-type: none"> <li>Programme selector in OFF position.</li> <li>Defective light bulb</li> </ul>	<ul style="list-style-type: none"> <li>Turn programme selector to any programme</li> <li>Replace light bulb (see next section).</li> </ul>
Drying cycle ends shortly after programme starts. END light illuminated.	<ul style="list-style-type: none"> <li>Not enough washing loaded or washing loaded is too dry for selected programme.</li> </ul>	<ul style="list-style-type: none"> <li>Select time programme or higher drying level (e.g. EXTRA DRY instead of STRONG).</li> </ul>
Drying cycle lasts an unusually long time. Note: After around 5 hours the drying cycle ends automatically (see „Drying cycle complete“)	<ul style="list-style-type: none"> <li>Lint filter clogged.</li> <li> button pressed and load volume too big.</li> <li>Load volume too big.</li> <li>Laundry insufficiently predrained.</li> </ul>	<ul style="list-style-type: none"> <li>Clean lint filter</li> <li> is only suitable for use with loads of up to 3 kg!</li> <li>Reduce load volume.</li> <li>Laundry must be adequately pre-drained.</li> </ul>
When a button is pressed, Err appears in the multi-display.	<ul style="list-style-type: none"> <li>Washing protection. After the start of the programme, the option can no longer be set.</li> </ul>	<ul style="list-style-type: none"> <li>Turn the programme knob to OFF. Set the programme again.</li> </ul>



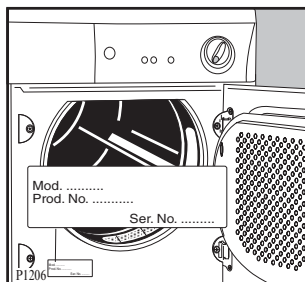

If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.



**IMPORTANT:** if you call out an engineer to a fault listed below, or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee.






**22** electrolux **technical data**
     
## Technical data

Dimensions	Width	60 cm
	Height	85 cm
	Depth	58 cm
Electrical connection Voltage - Overall power - Fuse	Information on the electrical connection is given on the rating plate on the inner edge of the appliance door	
Depth with loading door open		109 cm
Maximum Load	Cotton 	7 kg
	Synthetics 	3 kg
Use	Domestic + 5°C à + 35°C	

- CE** This appliance conforms with the following EU Directives:
- 73/23/EEC dated 19.02.1973 Low Voltage Directive
  - 89/336/EEC dated 03.05.1989 EMC Directive inclusive of  
Amending  
Directive 92/31/EEC
  - 93/68/EEC dated 22.07.1993 CE Marking Directive

## consumption values electrolux 23

Consumption values			
Programme	Programme duration (in minutes)	Energy consumption (in kWh)	Revolutions per minute
Cottons Cupboard  <sup>1)</sup>	103	3.9	1000
Cottons Iron  <sup>1)</sup>	78	3.05	1000
Cottons Cupboard  <sup>1)</sup>	94	3.7	1400
Cottons Iron  <sup>1)</sup>	70	2.1	1400
Synthetics Cupboard  <sup>2)</sup>	32	1.15	1200

GB



<sup>1)</sup> Max Cottons  load: 7 kg

<sup>2)</sup> Max Synthetics  load: 3 kg



The consumption values have been established under standard conditions. They may deviate when the machine is operated in domestic circumstances.

## 24 electrolux installation

### Installation



It is dangerous to alter the specifications or attempt to modify this product in any way.



Care must be taken to ensure that the appliance does not stand on the electrical supply cable.



Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.




#### **Important:**

**The appliance must not built-in.**

#### **Unpacking**

All transit bolts and packing must be removed before using the appliance. Slide out the polythene bag with the polystyrene stuffing before using the appliance. Pull off adhesive strips from inside machine on top of drum.

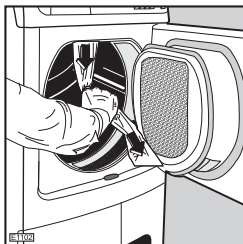

Should the appliance be moved, it must be transported vertically.

The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance.




#### **Positioning**

It is recommended that, for your convenience, the machine is positioned close to your washing machine. Whilst drying, the tumble dryer will expel a certain amount of warm, very moist air, and this should be removed from the room as quickly as possible to prevent condensation. In an extremely well ventilated room or close to an open window, this may occur naturally.

However, in general, it is better to carry the dryer's exhaust outside via the 100 mm diameter flexible hose supplied with the appliance; ending either temporarily at an open window, or permanently at a fixed ventilation grille, fitted to an exterior wall or window.

The tumble dryer must be installed in a clean place, where dirt does not build up. Make sure there are no obstructing items or material near the air-intake louvres provided at the back (e.g. paper, rags etc.). To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface.

Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the feet until it is.

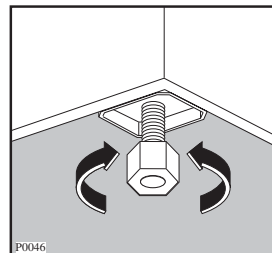

P0046



The feet must never be removed.  
Do not restrict the floor clearance through deep pile carpets, strips of wood or similar. This might cause heat build-up which would interfere with the operation of the appliance.



### Important

The hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures.


When operating the tumble dryer, the room temperature must not be lower than +5°C and higher than +35°C, as it may affect the performance of the appliance.

### Fitting the vent hose




A special stacking kit is available through your local Service Force Centre. To simplify the installation, there is a choice of vent outlets: one at the back, the others in the left and right-hand side.

Connect the hose to whichever is the more convenient by pulling the ring nut (A) from the vent outlet at the back, screwing it on to the hose and pushing it firmly back into place. The unused vents should now be sealed with the special snap covers provided.

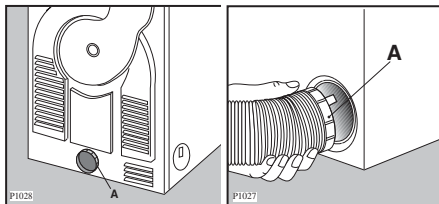

**Advice:** If the hose is long and the


room temperature low, the moisture might condense inside the hose. This is an unavoidable natural phenomenon. To prevent this water from lying in the hose or flowing back into the tumble dryer, it is advisable to drill a small hole (dia. 3 mm) in the lowest point of the hose and to place a small container below it. (See picture, point B).

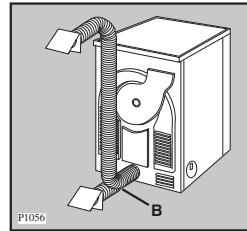

Once connected to the dryer, run the vent hose to the desired outlet point, ensuring that the run's overall length is less than 2 m, and that it contains no more than two bends. As to the outlet itself, if you have decided on a fixed wall/window grille, a good local builder's merchant should be able to supply you with the necessary fittings and installation advice.



**It is important not to connect the vent hose to, for example, a cooker hood, or a chimney or flue pipe designed to carry the exhaust from a fuel burning appliance.**

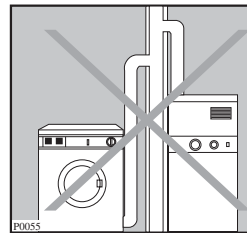

## 26 electrolux installation

Note that to avoid condensation problems, it is essential that the dryer be fitted with the flexible hose to carry its "exhaust" at least beyond the kitchen units; preferable outside the kitchen.

In order to prevent the appliance from overheating, it is important that the steam exhaust is unobstructed. Therefore, in case of a permanent hose fitted to an exterior wall or ceiling, it must be ensured an exhaust capacity of at least 150 m<sup>3</sup>/h.


If the dryer is fitted next to kitchen units, make sure that the vent hose is not squashed. If the hose is partially squashed, drying efficiency will be reduced, resulting in longer drying times and higher energy consumption. If the hose is completely squashed, the safety cut-outs with which the machine is fitted may operate.

When operating the tumble dryer, the room temperature must not be lower than +5°C and higher than +35°C, as it may affect the performance of the appliance.

### Stacking kit

A special stacking kit is available through your dealer, to enable the mounting of the dryer on top of a front loading washing machine with cover's depth between 48 and 60 cm.

Read carefully the instructions supplied with the kit.

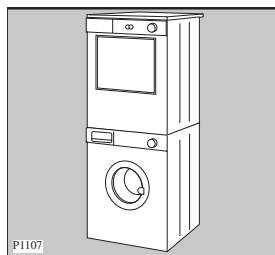

### Door reversal

To make it easier to load or unload the laundry the door can be reversed.

This operation must be carried out by qualified personnel.

Please contact the nearest Electrolux Service Centre.

**This will be a chargeable option.**

### Electrical connection

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

**WARNING: THIS APPLIANCE MUST BE EARTHED.**



**The manufacturer declines any liability should this safety measure not be observed.**

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. (See picture on page 5).


The appliance is supplied with a 13amp plug fitted.


In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1362) fuse must be used.


Should the plug need to be replaced for any reason, proceed as described below.

The wires in the mains lead are coloured in accordance with the following code:

- |                  |           |
|------------------|-----------|
| Green and Yellow | - Earth   |
| Blue             | - Neutral |
| Brown            | - Live    |

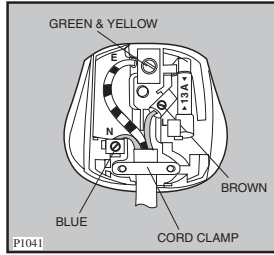

The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol  or coloured green and yellow.

The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol  or coloured green and yellow.



**WARNING:**

**A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard.**

**Ensure that the cut off plug is disposed of safely.**

**Permanent connection**

In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations.

The switch must not break the yellow and green earth cable at any point.

## Environment concerns

### Packaging materials



The materials marked with the symbol  are recyclable.

>PE<=polyethylene

>PS<=polystyrene


>PP<=polypropylene

This means that they can be recycled by disposing of them properly in appropriate collection containers.

### Old machine

Use authorised disposal sites for your old appliance. Help to keep your country tidy!



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

### Ecological hints



To save energy and to help protect the environment, we recommend that you follow these hints:

- Try to load the maximum capacity of the machine as small loads are uneconomical.
- Always load well spun laundry. The higher the spin speed, the lower the electricity consumption and the shorter the drying times.
- Do not over-dry laundry, this avoids creasing and saves energy.  
Select the drying programme according to the type of laundry and the required degree of dryness.
- To utilize the maximum load, laundry which is to be dried ready to put away (store dry) can be dried together with items to be ironed. To do this, select the programme for iron-dry, remove the iron-dry items at the end of the programme and then finish-dry the rest of the load.
- Clean the filters regularly to avoid excessive drying times and high electricity consumption.
- Ventilate the room well. The room temperature should not exceed +35°C during.

## Guarantee/Customer Service

### Standard guarantee conditions

We, Electrolux, undertake that if within 12 months of the date of the purchase this Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by a Service Force Centre.
- Any appliance or defective part replaced shall become the Company's property.
- This guarantee is in addition to your statutory and other legal rights.

Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged.

### Exclusions

#### This guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of Electrolux manufacture which are not marketed by Electrolux.

**30** electrolux **service and spare parts**

## Service and Spare Parts

If the event of your appliance requiring service, or if you wish to purchase spare parts, please contact Service Force by telephoning:

**0870 5 929 929**

Your telephone call will be automatically routed to the Service Force Centre covering your post code area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at

**[www.serviceforce.co.uk](http://www.serviceforce.co.uk)**

Before calling out an engineer, please ensure you have read the details under the heading „What to do if...“

When you contact the Service Force Centre you will need to give the following details:

1. Your name, address and post code.
2. Your telephone number.
3. Clear and concise details of the fault.
4. The model and serial number of the appliance (found on the rating plate)
5. The purchase date.

Please note that a valid purchase receipt or guarantee documentation is required for in-guarantee service calls.

### **Customer Care**

For general enquiries concerning your Electrolux appliance, or for further information on Electrolux products please contact our Customer Care Department by letter or telephone at the address below or visit our website at **[www.electrolux.co.uk](http://www.electrolux.co.uk)**.

**Customer Care Department  
Electrolux Major Appliances  
Addington Way  
Luton  
Bedfordshire  
LU4 9QQ**

**08705 950950 (\*)**

\*calls to this number may be recorded for training purposes.

