

Before you begin

Read all instructions before set up.

- Select a level campsite clear of rocks, branches, and other hard or sharp objects, to install your tent.

⚠ WARNING: Keep clear of overhead power lines.

- Do not set up your tent under trees.
- For best results in windy conditions, position end of tent into the wind.
- Enlist the help of at least one other person to assist you when it is time to assemble the tent.

Parts and Components

Description	Part Number
Main Poles, Black (2)	5010000360
Side Poles, Gray (2)	5010000361
Rainfly	5010000362

To Set Up Tent

1. Unfold tent and spread out on a clean, level surface with the door facing the desired direction. Unzip door. (Fig. 1)



2. Assemble main tent poles by interlocking both longer, black shock-corded, poles.
3. Insert black poles through sleeves, with the black seams, in top of tent forming an "X" as shown. (Fig. 2)



4. Insert one end of each black pole into pins in front corners of tent. (Fig. 3)




5. Go to opposite end of each pole and gradually apply pressure to the pole forming an arch. Insert the pin into the pole end at the tent corners. (Fig. 4)

6. Stretch corners of tent until floor is taut then hammer stakes through loops to secure.



To Set Up Tent (continued)

7. Attach frame clips along edges of tent to black main poles (Fig. 5)
8. Assemble first interlocking shock-corded, gray pole.

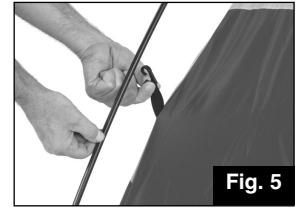

9. Slide the gray pole through sleeve on front of tent. (Fig. 6)



10. Pull down on pole and insert into center pin location on side of tent. (Fig. 7)



11. Go to opposite side of tent and gradually apply pressure to the pole to form an arch. Insert the pin into the pole, then drive stake through metal ring to secure.
12. Attach frame clips on both sides of tent to gray pole.


To Attach Rainfly

1. Drape rainfly over tent with vestibule centered over the door on the front of tent (Fig 8).

NOTE: Hook and loop fasteners, located on seams of underside of rainfly, should be centered over black and gray poles.



2. Secure rainfly with velcro hook & loop fasteners, on underside of rainfly, around black poles at the back of tent and gray pole on both sides. (Fig. 9)

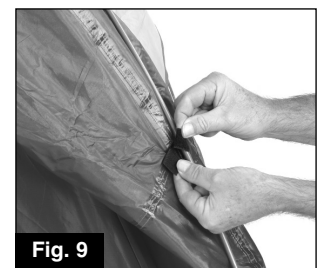

3. Assemble remaining interlocking shock-corded gray pole.
4. Fold back vestibule on front of tent to locate sleeve on under side of rainfly. (Fig. 9)
5. Slide gray pole through sleeve in rainfly. (Fig. 9)



(continued on other side)

To Attach Rainfly continued

- Insert one end of each gray rainfly pole into remaining pin in front corner of tent. Gradually apply pressure to other end of pole to form an arch & insert into other front pin. (Fig. 10)



Fig. 11

- Fasten longer hook and loop fasteners, located on underside of rainfly at the front of the tent, around overlapping gray and black poles. (Fig. 12)

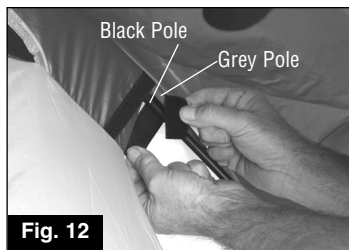


Fig. 12

- Hook clips on elastic loops of rainfly onto rings on all four corners of the tent. (Fig. 13)

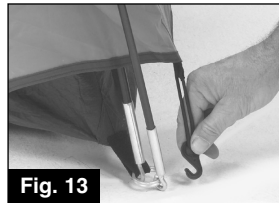


Fig. 13

- Extend out straps on vestibule until taut.
- Drive stakes through loop in end of both outside web straps to secure. (Fig. 14)



Fig. 14

- Tie on the two longer guylines through loops on web straps on the vestibule, and the remaining shorter guylines onto the web straps on sides and back of tent. (Fig. 15)
- Stretch guylines until taut, then secure with stakes.



Fig. 15

- Unzip flap on vestibule, roll up, and tie with attached straps. (Fig. 16)



Fig. 16

Overhead Storage

- Insert toggles at top of tent through loops on the storage net. (Fig. 17)

Important: Overhead storage is for small, lightweight, items only. Heavier items may cause damage to the tent.



Fig. 17

Electrical Cord Access

- Unzip access panel in the lower right corner of tent and bring in electrical cord. Use only UL approved cords that are rated for outdoor usage. (Fig. 18)



Fig. 18

To Store

- All metal poles and stakes must be placed in the storage bag to prevent damage to the fabric items placed in the carry case.
- Make sure tent is clean and dry before placing in carry case.
- Remove rainfly, spread out on floor of tent, then unzip door & vents before taking tent down for storage.
- Neatly fold tent to width of pole storage bag, place on tent, roll tightly, and place in carry case.
- Store in a clean, dry area.

Things You Should Know:

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside the tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT TO REMOVE STAKE.
- TENT POLES SHOULD NOT BE LEFT TELESCOPED TOGETHER DURING STORAGE.
- Do not leave your tent set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.

⚠ WARNING: Keep all flame and heat sources away from this tent fabric.

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



The Coleman Company, Inc. • 3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com

MADE IN CHINA • PRINTED IN CHINA

© 2007 The Coleman Company, Inc.

Coleman® and Coleman® are registered trademarks of The Coleman Company, Inc.

STITCH LINE