

User guide



MPC270

PORTABLE CD PLAYER

Read this manual first! If you have any problems, do not attempt to return this product to the store. For fast help, call us first! 1-800-705-2000



PHILIPS CONSUMER ELECTRONICS, A Division of Philips Consumer Electronics North America P.O. Box 671539, Marietta, GA 30006-0026 http://www.usasupport.magnavox.com

or call 1-800-705-2000



MPC270



Be responsible Respect copyrights

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. ©2005 Koninklijke Philips Electronics N.V. All rights reserved.



Printed in China

WK0549

Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

- Once your Magnavox purchase is registered, you're eligible to receive all the privileges of owning a Magnavox product.
So complete and return the Warranty Registration Card enclosed with your purchase at once, and take advantage of these important benefits.

Warranty Verification, Owner Confirmation, Model Registration. Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your Magnavox warranty.

Know these safety symbols. CAUTION: RISK OF ELECTRIC SHOCK. DO NOT OPEN. DO NOT REMOVE COVER OR BACK, NO USER-SERVICEABLE PARTS INSIDE.

For Customer Use. Enter below the Serial No. which is located on the rear of the cabinet. Model No. Serial No.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

IMPORTANT SAFETY INSTRUCTIONS

- 1. Read these instructions. 2. Keep these instructions. 3. Heed all warnings. 4. Follow all instructions. 5. Do not use this apparatus near water. 6. Clean only with a dry cloth. 7. Do not block any of the ventilation openings. 8. Do not install near any heat sources. 9. Only use attachments/accessories specified by the manufacturer. 10. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer.

EL 6475-E005: 04/01

MAGNAVOX LIMITED WARRANTY

Ninety (90) Days Free Product Exchange

MAGNAVOX warrants this product against defect in material or workmanship, subject to any conditions set forth as follows:

PROOF OF PURCHASE: You must have proof of the date of purchase to exchange the product. A sales receipt or other document showing the product and the date that you purchased the product as well as the authorized retailer included, is considered such proof.

COVERAGE: Warranty coverage begins the day you buy the product. For a period of ninety (90) days from the date of purchase, if the product is determined to be defective, Magnavox will exchange the defective product with a new or renewed product, at its option, at no charge.

EXCLUDED FROM WARRANTY COVERAGE: Your warranty does not cover: Shipping charges to return defective product. Labor charges for installation or setup of the product.

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province. Magnavox, P.O. Box 671539, Marietta, GA. 30006-0026 (Warranty: 4835 710 27750)

QUICK START

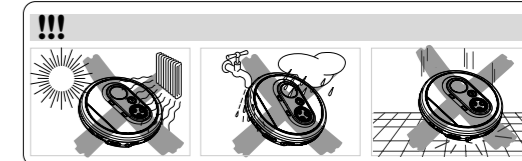 
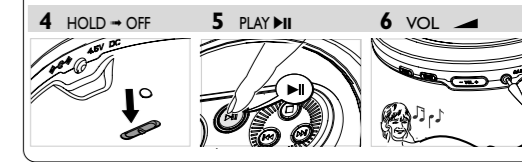 
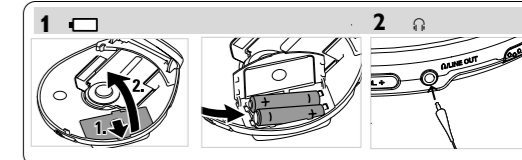 


Diagram 1: Exploded view of the CD player showing internal components and their locations. Includes labels for the CD tray, motor, and various buttons.

English CONTROLS

CONTROLS (see figure 1)

- 1 .....display
2 II .....switches the player on, starts or pauses CD play
3 II .....skips and searches tracks backward
4 II .....stops CD play, clears a program or switches the player off
5 II .....skips and searches tracks forward
6 OPEN .....opens the CD lid
7 / LINE OUT .....3.5 mm headphone jack and LINE OUT jack to connect the player to another audio input of an additional appliance
8 - VOL + .....adjusts the volume
9 ESP .....selects between the battery powersave mode and Electronic Skip Protection (ESP). ESP prevents playback interruptions caused by shocks
10 MODE .....selects the different playing possibilities
11 DBB .....switches the bass enhancement on and off
12 PROG .....programs tracks and reviews the program
13 4.5V DC .....jack for external power supply
14 OFF .....switches HOLD off
15 RESUME .....stores the last position of a CD track played
16 HOLD .....locks all buttons
17 .....type plate

The type plate is located on the bottom of the set. The production number is located inside the battery compartment.

POWER SUPPLY / GENERAL INFORMATION

Mains adapter (supplied or optionally available)

Use only a 4.5 V adapter (450 mA direct current, positive pole to the center pin). Any other kind of adapter may damage the player.

- 1 Make sure the local voltage corresponds to the power adapter's voltage.
2 Connect the power adapter to the 4.5V DC jack of the player and to the wall outlet.

Note: Always disconnect the adapter when you are not using it.

Environmental information

- All redundant packing material has been omitted. We have done our utmost to make the packaging easily separable into two materials: cardboard (box) and polyethylene (bags, protective foam sheet).
Your set consists of materials which can be recycled if disassembled by a specialized company.

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure.

BATTERIES

Batteries (supplied or optionally available)

- You can use the following batteries with this CD-player: normal batteries type LR6, UM3 or AA (preferably Philips), or alkaline batteries type LR6, UM3 or AA (preferably Philips).

Notes: - Old and new or different types of batteries should not be combined. - Remove batteries if they are empty or if the player is not going to be used for a long time.

Inserting batteries

- 1 Push OPEN to open the CD lid.
2 Open the battery compartment and insert either 2 normal or alkaline batteries.

Battery indication

The approximate power level of your batteries is shown in the display. Battery full. Battery low. The symbol flashes.

Batteries contain chemical substances, so they should be disposed of properly.

CD PLAY

In-car use (connections supplied or optionally available)

Only use a 4.5 V DC car voltage converter (positive pole to the center pin) and cassette car adapter. Any other converter may damage the set.

- 1 Put the set on a horizontal, vibration-free and stable surface. Make sure it is in a safe place, where the set is neither a danger nor an obstacle to the driver and the passengers.
2 Plug the voltage converter into the cigarette lighter socket (only for 12 V car battery, negative grounding), then connect the wired end with 4.5V DC input socket on the set.
3 If necessary, clean the cigarette lighter socket to obtain a good electrical contact.
4 Turn down the volume and connect the cassette adapter plug to LINE OUT on the set.
5 Carefully insert the cassette adapter into the car radio's cassette compartment.
6 Make sure the cord does not hinder your driving.
7 Decease the volume on the set, if necessary. Start playback on the set and adjust the sound with the car radio controls.

Always remove the voltage converter from the cigarette lighter socket when the set is not in use.

Note: If your car radio has a LINE IN socket, it is better to use it for the car radio connection instead of the cassette adapter. Connect the signal lead to this LINE IN socket and to LINE OUT on the set.

CD PLAY

CD player and CD handling

- Do not touch the lens (A) of the CD player.
Do not expose the unit, batteries or CDs to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight).
You can clean the CD player with a soft, slightly dampened, lint-free cloth. Do not use any cleaning agents as they may have a corrosive effect.
To clean the CD, wipe it in a straight line from the center toward the edge using a soft, lint-free cloth. A cleaning agent may damage the disc! Never write on a CD or attach a sticker to it.
The lens may cloud over when the unit is moved suddenly from cold to warm surroundings. Playing a CD is not possible then. Leave the CD player in a warm environment until the moisture has evaporated.
Active mobile phones in the vicinity of the CD player may cause malfunctions. Avoid dropping the unit as this may cause damage.

Headphones AY 3806

Connect the supplied headphones to the LINE OUT jack of the player.

Note: LINE OUT can also be used for connecting this set to your HiFi system. To adjust the sound and volume, use the controls on the connected audio equipment and on the CD player.

IMPORTANT!

Hearing safety: Do not play your headphones at a high volume. Hearing experts advise that continuous use at high volume can permanently damage your hearing. Traffic safety: Do not use headphones while driving a vehicle. It may create a hazard and it is illegal in many countries. Even if your headphones are an open-air type designed to let you hear outside sounds, do not turn up the volume so high that you cannot hear what is going on around you.

TROUBLESHOOTING

WARNING: Under no circumstances should you try to repair the set yourself as this will invalidate the warranty. If a fault occurs, first check the points listed, before taking the unit for repair. If you are unable to solve a problem by following these hints, consult your dealer or service center.

The CD player has no power, or playback does not start

- Check that your batteries are not dead or empty, that they are inserted correctly, that the contact pins are clean.
Your adapter connection may be loose. Connect it securely.
For in-car use, check that the car ignition is on. Also check player's batteries.

The indication 15C is displayed

- Check that the CD is clean and correctly inserted (label-side upward).
If your lens has steamed up, wait a few minutes for this to clear.
CD-RW (CD-R) was not recorded properly. Use FINALIZE on your CD-recorder.

The indication HOLD is on and/or there is no reaction to controls

- If HOLD is activated, then deactivate it.
Electrostatic discharge. Disconnect power or remove batteries for a few seconds.

The CD skips tracks

- The CD is damaged or dirty. Replace or clean the CD.
RESUME, SHUFFLE or PROGRAM is active. Switch off whichever is on.

No sound or bad sound quality.

- PAUSE might be active. Press II.
Loose, wrong or dirty connections. Check and clean connections.
Volume might not be appropriately adjusted. Adjust the volume.
Strong magnetic fields. Check player's position and connections. Also keep away from active mobile phones.
For in-car use, check that the cassette adapter is inserted correctly, that the car cassette player's playback direction is correct (press autoreverse to change), and that the cigarette lighter jack is clean. Allow time for temperature change.

CD PLAY

Playing a CD

This CD-player can play all kinds of Audio Discs such as CD-Recordables and CD-Rewritables. Do not try to play a CD-ROM, CDi, VCD, DVD or computer CD.

- 1 Push the OPEN button to open the player.
2 Insert an audio CD, printed side up, by pressing the CD onto the hub.
3 Close the player by pressing the lid down.
4 Press II to switch the player on and start playback. The current track number and elapsed playing time are displayed.

- You can pause playback by pressing II. The time at which playback was paused starts flashing.
You can continue playback by pressing II again.

- 5 Press ■ to stop playback. The total number of tracks and the total playing time of the CD are displayed.

- 6 Press ■ again to switch the player off.
To remove the CD, hold it by its edge and press the hub gently while lifting the CD.

Note: If there is no activity, the set will automatically switch off after 20 seconds.

FEATURES

Playback information

- If a CD-Recordable (CD-R) or a CD-Rewritable (CD-RW) is not recorded properly, 15C is displayed, indicating that the CD has not been finalized. In that case, use FINALIZE on your CD recorder to complete the recording.
When playing a CD-Rewritable (CD-RW), please note that it takes 3-15 seconds after pressing II for sound reproduction to start.
Playback will stop if you open the CD lid.
While the CD is read, I - - - - flashes in the display.

Volume and bass

- Adjust the volume by using - VOL + on the cd player.

Bass adjustment

- Press DBB to switch the bass enhancement on or off. The DBB appears if the bass enhancement is activated.

FEATURES

Selecting a track and searching

- Selecting a track during playback: Briefly press II or II once or several times to skip to the current, previous or next track. Playback continues with the selected track, and the track's number is displayed.
Selecting a track when playback is stopped: Briefly press II or II once or several times to select the desired track. The track number is displayed.
Press II to start CD play. Playback starts with the selected track.

Searching for a passage during playback

- 1 Keep II or II pressed to find a particular passage in a backward or forward direction. Searching starts while playback continues at low volume. After 2 seconds the search speeds up.
2 Release the button when you reach the desired passage. Playback continues from this position.

Notes: - If the player is in SCAN mode (see MODE chapter), searching is not possible. - In shuffle, shuffle repeat all or repeat mode (see MODE chapter), or while playing a program, searching is only possible within the particular track.

FEATURES

Programming track numbers

You can store up to 30 tracks to play in a program. A single track may be stored more than once in the program.

- 1 While playback is stopped, select a track with II or II.
2 Press PROG to store the track. PROG lights up; the track number programmed and P with the total number of stored tracks are displayed.
3 Select and store all desired tracks in this way.
4 Press II to start playback of your selected tracks. PROG is shown and playback starts.

- You can review the program by pressing PROG for more than 2 seconds. The display shows all the stored tracks in sequence.

Notes: - If you press PROG and there is no track selected, SEL is displayed. - If you try to store more than 30 tracks, FULL is displayed.

Clearing the program

- While playback is stopped, press ■ to clear program. CLF is displayed once, PROG goes off, and the program is cleared.

Note: The program will also be cleared if the power supply is interrupted, or if the CD-player lid is opened, or if the set switches off automatically.

FEATURES

Selecting different playing possibilities-MODE

It is possible to play tracks in random order, to repeat a single track or the entire CD, and to play the first few seconds of each track.

- 1 Press MODE during playback as often as required in order to activate one of the following modes. The active mode is shown in the display. - SHUFFLE: All tracks of the CD are played in random order until all of them have been played once. - SHUFFLE REPEAT ALL: All tracks of the CD are played repeatedly in random order. - REPEAT: The current track is played repeatedly. - REPEAT ALL: The entire CD is played repeatedly. - SCAN: The first 10 seconds of each of the remaining tracks are played in sequence.
2 Playback starts in the chosen mode after 2 seconds.
To return to normal playback, press MODE repeatedly until the display shows no active modes.

ESP

With a conventional portable CD-player you might have experienced that the music stopped e.g. when you were jogging. The Electronic Skip Protection prevents loss of sound caused by light vibrations and shocks. Continuous playback is ensured. However ESP does not prevent playback interruptions during vigorous running. It also does not protect the unit against any damage caused by dropping!

In this set ESP is default ON. It is possible to set ESP off. Press ESP. ESP disappears. Press ESP again. ESP is displayed. ESP on -> ESP off -> ESP on

Envíe hoy su Tarjeta de Registro de la Garantía para recibir todas las ventajas correspondientes.

Una vez que se registre la compra de su aparato Magnavox Ud. tiene derecho a todas las ventajas correspondientes al dueño de un producto Magnavox.

- Verificación de la garantía: Registre su producto dentro de 10 días para confirmar su derecho a máxima protección bajo los términos y condiciones de la garantía de Magnavox.
Confirmación del dueño: Su Tarjeta de Registro de la Garantía comprueba que Ud. es el dueño del aparato en caso de robo o pérdida del producto.
Registro del modelo: La devolución inmediata de la Tarjeta de Registro de la Garantía le garantiza que recibirá toda la información y todas las promociones especiales que le corresponden por ser el dueño de su modelo.

Para uso del cliente: Escriba abajo el número de serie que se encuentra en el panel posterior. Guarde esta información para el futuro.
No. de modelo
No. de serie

 
ADVERTENCIA: PARA EVITAR EL RIESGO DE SACUDIDA ELÉCTRICA O INCENDIO, NO EXPONGA ESTE EQUIPO A LLUVIA NI A HUMEDAD.
PRECAUCIÓN: Para evitar sacudida eléctrica, introduzca la patilla ancha del enchufe al fondo de la ranura ancha.

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

- 1. Lea estas instrucciones.
2. Conserve estas instrucciones.
3. Lea todos los avisos.
4. Siga todas las instrucciones.
5. No utilice este aparato cerca del agua.
6. Para limpiar el aparato utilice sólo un trapo seco.
7. No tape las aperturas de ventilación. Proceda a su instalación de acuerdo con las instrucciones del fabricante.
8. No instale el equipo cerca de fuentes de calor...
9. Utilice exclusivamente aquellos dispositivos/accesorios recomendados por el fabricante.
10. Coloque el equipo exclusivamente sobre aquellos carros, bases, trípodes, soportes o mesas especificados por el comerciante o vendidos con el equipo.
11. Confíe el mantenimiento y las reparaciones a personal técnico especializado.

GARANTÍA LIMITADA MAGNAVOX

Cambio gratuito del producto hasta noventa (90) días
MAGNAVOX garantiza este producto contra defectos en el material o en la mano de obra, sujeto a las condiciones que se establecen a continuación:
COMPROBANTE DE COMPRA: Para cambiar el producto, debe presentar un comprobante de la fecha de su compra.
COBERTURA: La cobertura de la garantía comienza el día en que usted compra el producto.
PARA REALIZAR CAMBIOS EN EE.UU., PUERTO RICO O EN LAS ISLAS VIRGENES DE EE.UU.
PARA REALIZAR CAMBIOS EN CANADÁ...
EL REEMPLAZO, SEGÚN LO DISPONE ESTA GARANTÍA, ES LA SOLUCIÓN EXCLUSIVA PARA EL CLIENTE MAGNAVOX NO SER RESPONSABLE DE LOS DAÑOS CASUALES O EMERGENTES QUE INFRINGAN ALGUNA GARANTÍA EXPRESA O IMPLÍCITA SOBRE ESTE PRODUCTO.

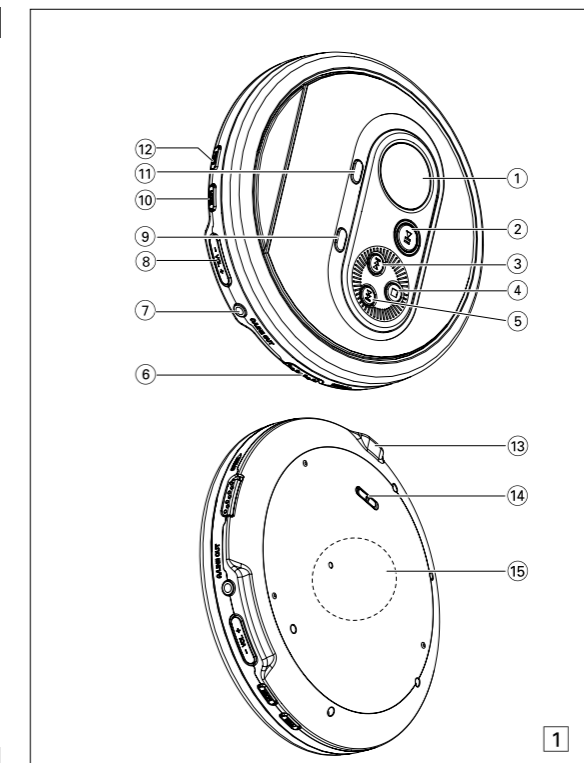

ENCENDIDO RAPIDO
1. Insertar CD.
2. Presionar botón de reproducción.
3. Presionar botón de reproducción.
4. HOLD -> OFF.
5. PLAY -> II.
6. VOL ->
!!!
7. Presionar botón de reproducción.

Español CONTROLES

- 1 pantalla
2 II
3 <<
4
5
6 OPEN
7 / LINE OUT
8 VOL +
9 ESP
10 MODE
11 DBB
12 PROG
13 4.5V DC
14 OFF
15 RESUMÉ
16 HOLD

ALIMENTACIÓN ELÉCTRICA / INFORMACIÓN GENERAL

Adaptador de red (incluido u opcional)
Utilice sólo el adaptador de red AY 3162 (4,5 V/450 mA corriente continua, con el polo positivo en la patilla central).
Información medioambiental
Desecho del producto antiguo
ATENCIÓN
El uso de mandos o ajustes o la ejecución de métodos que no sean los aquí descritos puede ocasionar peligro de exposición a radiación.

PILAS

Pilas (incluidas o disponibles de forma opcional)
Con este equipo puede utilizar:
• pilas normales de tipo LR6, UM3 o AA (preferiblemente, Philips) o
• pilas alcalinas tipo LR6, UM3 o AA (preferiblemente, Philips).
Instalación de las pilas
Indicación de las pila
Al deshacerse de las pilas, hágalo con precaución, ya que éstas contienen sustancias químicas peligrosas.

REPRODUCCIÓN DE UN CD

Utilización en el automóvil (conexiones incluidas u opcionales)
Manejo del reproductor de CD y de los CDs
Auriculares AY 3806
¡IMPORTANTE!
Advertencia de seguridad: No emplee los auriculares a gran volumen. Los especialistas de oídos advierten que el uso continuado a gran volumen puede dañar el oído de manera permanente.

REPRODUCCIÓN DE UN CD

Este equipo puede reproducir toda clase de discos de audio, como CD grabables y CD regrabables.
1 Pulse el botón deslizando para abrir el reproductor.
2 Inserte un CD de audio, cara impresa hacia arriba presionando el CD en el centro.
3 Cierre el reproductor empujando la tapa hacia abajo.
4 Pulse para ponerlo en funcionamiento e iniciar la reproducción.

REPRODUCCIÓN DE UN CD

Este equipo puede reproducir toda clase de discos de audio, como CD grabables y CD regrabables.
1 Pulse el botón deslizando para abrir el reproductor.
2 Inserte un CD de audio, cara impresa hacia arriba presionando el CD en el centro.
3 Cierre el reproductor empujando la tapa hacia abajo.
4 Pulse para ponerlo en funcionamiento e iniciar la reproducción.

REPRODUCCIÓN DE UN CD

Este equipo puede reproducir toda clase de discos de audio, como CD grabables y CD regrabables.
1 Pulse el botón deslizando para abrir el reproductor.
2 Inserte un CD de audio, cara impresa hacia arriba presionando el CD en el centro.
3 Cierre el reproductor empujando la tapa hacia abajo.
4 Pulse para ponerlo en funcionamiento e iniciar la reproducción.

Placa de características técnicas están situados en la base del aparato. El número de serie están situados dentro del compartimento de las pilas.

CARACTERÍSTICAS

Selección de una pista y búsqueda
Selección de una pista durante la reproducción
Selección de una pista cuando se ha detenido la reproducción
Búsqueda de un pasaje durante la reproducción

CARACTERÍSTICAS

Programación de números de pista
Se pueden guardar hasta 30 pistas para reproducirlas en un programa. Una sola pista puede ser guardada más de una vez en el programa.
1 Mientras la reproducción se encuentra detenida, seleccione una pista mediante.
2 Pulse PROG para guardar la pista.

CARACTERÍSTICAS

Selección de las distintas posibilidades de reproducción - MODE
Se pueden reproducir pistas en orden aleatorio, repetir una pista o todo el CD y reproducir los primeros segundos de cada pista.
1 Pulse MODE durante la reproducción las veces que sean necesarias para activar una de las siguientes funciones.
SHUFFLE: Todas las pistas del CD se reproducirán en orden aleatorio hasta que todas ellas se hayan reproducido una vez.

CARACTERÍSTICAS

RESUME y HOLD
Se puede interrumpir la reproducción y continuarla (incluso tras un período largo de tiempo) en el punto en que fue interrumpida (RESUME) y se pueden bloquear todos los botones de modo que no se ejecute ninguna acción (HOLD).
RESUME - continúa desde donde fue interrumpida
1 Coloque el interruptor deslizable en la posición RESUME durante la reproducción para activar RESUME.
2 Pulse cuando desee detener la reproducción.

SOLUCIÓN DE PROBLEMAS

ADVERTENCIA: Bajo ninguna circunstancia intente reparar el equipo Ud. mismo, anularía la garantía.
El reproductor de CD no tiene corriente o la reproducción no se inicia
1 Compruebe que sus pilas no están agotadas, que estén colocadas correctamente y que no espigan de contacto entre las pilas.
2 Compruebe que la conexión del adaptador está floja. Conéctela bien.
3 Para utilizar en el automóvil, compruebe que el motor esté encendido.
Aparece la indicación
1 Compruebe que el CD esté limpio y colocado correctamente (con el lado de la etiqueta hacia arriba).

SOLUCIÓN DE PROBLEMAS

No hay sonido o éste es de mala calidad.
Es posible que el modo de pausa (PAUSE) esté activado. Pulse para desactivarlo.
Conexiones flojas, incorrectas o sucias. Compruebe las conexiones y límpielas.
Campos magnéticos potentes. Compruebe la posición y las conexiones del reproductor.
Para utilizar en el automóvil, compruebe que el adaptador de cassette esté insertado correctamente, que la dirección de reproducción del reproductor de cassette del automóvil sea correcta (pulsar autoreverse para cambiarla), y que el conector del encendedor de cigarrillos esté limpio.

Canada

English: This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.
Français: Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le Règlement sur le Bruitage Radioélectrique édicté par le Ministère des Communications du Canada.
El aparato cumple las normas FCC, Parte 15 y 21 CFR 1040.10. Funcionamiento dependiente de dos condiciones siguientes:
1. Este aparato no puede provocar interferencia dañina, y
2. Este aparato debe aceptar cualquier interferencia recibida, incluyendo las interferencias que pueden provocar un funcionamiento insuficiente.