



 
WELCOME TO THE WORLD OF SANYO

Thank you for purchasing a Sanyo Multimedia Remote Control. You made an excellent choice for Performance, Reliability, Value, and Styling.

BEFORE YOU BEGIN

Installing The Batteries

- Step 1. Release the battery cover by pressing the tab and tilting the cover upward.
Step 2. Install two "AAA" batteries as shown. Be sure to match the +/- signs on the batteries with the +/- marks inside the case.

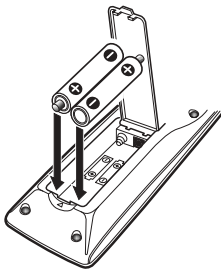


Note: Do Not mix new and used batteries or mix different types of batteries together.

IMPORTANT NOTE: SPENT OR DISCHARGED BATTERIES MUST BE RECYCLED OR DISPOSED OF PROPERLY IN COMPLIANCE WITH ALL APPLICABLE LAWS. FOR DETAILED INFORMATION, CONTACT YOUR LOCAL COUNTY SOLID WASTE AUTHORITY.

PROGRAMMING THE REMOTE CONTROL

- Step 1. Find your equipments' codes in the charts in this instruction guide.
Step 2. Press and hold the VCR, TV, Cable Box, DVD Player, or Satellite Receiver mode key while entering a three-digit code number. Then release the key.

 If the code was accepted, the Activity Lamp will flash 5 times after the Mode key is released. If you entered an invalid code, the Activity Lamp will not flash. Check the code number and repeat Step 2.

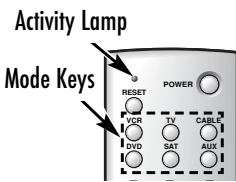

The VCR, TV, Cable Box, DVD, and Satellite modes will accept only each mode's specific code type.

The AUX mode will accept all code types, but only one at a time.

Perform Steps 1 and 2 for each piece of equipment you have. After entering each code number check the unit's operation by pressing the Power and/or Channel keys. If these keys operate your equipment, you have probably entered the correct code number for that device. If not, follow Steps 1 and 2 and enter another code, if available.

After programming the remote control and confirming its operation, enter your codes in the spaces below for easy reference.

VCR CODE [ ][ ] SATELLITE CODE [ ][ ]
TV CODE [ ][ ] DVD CODE [ ][ ]
CABLE BOX CODE [ ][ ] AUX CODE [ ][ ]

 
OPERATING THE REMOTE CONTROL

This remote control has six operating modes. To select a mode, press and release the mode key that matches the unit you want to control, TV, VCR, Cable Box, DVD Player, or Satellite Receiver. (The AUX mode can be programmed to operate any of these devices.)

OPERATING TIPS AND TROUBLESHOOTING HINTS

- To operate each device, you must first program the remote control, then press the proper mode key.
- Some manufacturers use many different codes. If your brand of equipment has more than one code listed, try programming your remote with the different available codes until you locate the correct one for your device.
- There may be brands and models that this remote control cannot operate. Some units may operate only partially..
- The Reset and Caption keys only operate Sanyo TVs.
- Codes will remain in memory for five minutes as you replace batteries.
- Remove batteries from the remote control if it will not be used for a month or more. Weak batteries may leak and damage the remote control.
- This remote control uses an invisible (infrared) beam of light to operate the equipment. Objects between the equipment and the remote control can block the beam of light. Therefore, the remote control must be pointed directly at the equipment you want to operate.
- This remote control cannot add keys or features to your equipment.
- When switching from the VCR or DVD mode to the TV mode, the VCR/DVD specific control keys will continue to operate the last device (mode) selected. For example, when switching from DVD to TV mode, the VCR/DVD control keys will continue to function as DVD keys.
- Replace the batteries if the remote control fails to operate any of your equipment. Be sure to install batteries correctly.
- Many of the remote control keys are multi-functional. Refer to the chart on the inside of the carton for a brief description of the keys and their functions. Refer to your original operating manuals for specific feature operation.
- The keys on this remote operate functions similar to those of your original remote controls. Refer to your original instructions for specific key and features operation.

Model RMT-U340A
6-Function
Multimedia Remote Control
Owner's Manual

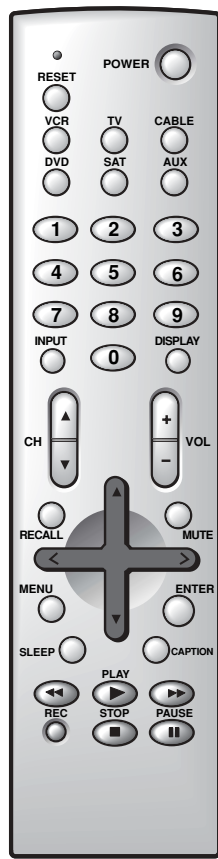

Need assistance? Visit our web site at www.sanyoctv.com.

Printed in U.S.A.: SMC, January 2005
Service Code: 610 315 0284
Part Number: 1JC6P1P0192--

90-DAY LIMITED WARRANTY

THIS LIMITED WARRANTY IS VALID ONLY ON SANYO PRODUCTS PURCHASED AND USED IN THE UNITED STATES OF AMERICA AND PUERTO RICO, HOWEVER, EXCLUDING ITS OTHER TERRITORIES AND PROTECTORATES. THIS LIMITED WARRANTY APPLIES ONLY TO THE ORIGINAL PURCHASER, AND DOES NOT APPLY TO PRODUCTS USED FOR INDUSTRIAL OR COMMERCIAL PURPOSES.

FOR 90 DAYS from the date of purchase, Sanyo Manufacturing Corporation will replace any defective unit without charge to the original purchaser.

To ensure proper warranty exchange, keep the original sales receipt for evidence of purchase. Return the defective remote control along with the receipt to the retailer. The defective remote control will be exchanged for the same model, or a replacement model of equal or greater value, if necessary. Replacement model will be contingent on availability and at the sole discretion of Sanyo Manufacturing Corporation.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

OBLIGATIONS

For 90 days from the date of purchase, Sanyo Manufacturing Corporation warrants this product to be free from defects in material and workmanship under normal use and conditions. Should replacement be necessary under this warranty for any reason due to manufacturing defect or malfunction during the first 90 days from date of original purchase, Sanyo Manufacturing Corporation will provide a new remote control via exchange at the retailer at no charge.

This warranty expresses specific contractual rights; retail purchasers may have additional statutory rights which vary from state to state.



Sanyo Manufacturing Corp.
3333 Sanyo Road, Forrest City, AR 72335
(EFFECTIVE: January 1, 2002)

Television Codes

Table of television codes for various brands including Admiral, Aiwa, Akai, America Action, Anam, AOC, Apex, Audiovox, Baysonic, Beaumark, Belcar, Bell & Howell, Bradford, Broksonic, Brokwood, Candle, Carver, Celebrity, Ceneral, Citizen, Concerto, Contec, Craig, Cranivale, Crosley, Crown, Curtis Mathes, CXK, Daewoo, Daytron, Dumont, Electroband, Electrohome, Emerson, Envision, Fisher, Funai, Futuretech, GE, Gradiante, Grundy, Hallmark, Harman/Kardon, Harvard, Hitachi, Infinity, Inteq, JBL, JCB, JVC, KEC, Kenwood, Konkka, KTV, LG, Logik, Luxman, LXI, Magnasonic, Magnavox, Majestic, Marantz, Megatron, Memorex, MGA, Midland, Mitsubishi, MTC, Multitech, NAD, NEC, Newtech, Nikko, Onwa, Optonica, Orion, Panasonic, Penny, Philco, Philips, Pilot.

Table of television codes for various brands including Pioneer, Proscan, Proton, Portland, Pulsar, Quasar, Radio Shack, RCA, Realistic, Runco, Sampo, Samsung, Samsux, Sansui, Sansei, Sanyo, Scimitsu, Scotch, Scott, Sears, Semivox, Semp, Sharp, Shogun, Signature, Simpson, Sony, Soundesign, Squarview, SSS, Starlite, Supreme, Sylvania, Symphonic, Tandy, Tatung, Technics, Techwood, Teknika, Telefunken, Toshiba, Television, TMK, Vector Research, Victor, Vidikron, Vidtech, Wards, W. Westinghouse, Yamaha, Zenith.

VCR Codes

Table of VCR codes for various brands including Admiral, Adventura, Aiko, Aiwa, Akai, America Action, America High, Bell & Howell, Broksonic, Candle, Majestic, Canon, CCE, Ceneral, Citizen, Craig, Craver, Curtis Mathes, Daewoo, Daytron, Denon, Dynatech, Emerex, Emerson, Fisher, Fuji, Funai, GE, Goldstar, Go Video, Gradiente, Garrard, Harley Davidson, Headquarter, Hitachi, Hughes.

VCR Codes (cont.)

Table of VCR codes for various brands including JBL, Jensen, JVC, KEC, Kenwood, Kodak, Lloyd's, Logik, LXI, Magnasonic, Magnavox, Marita, Matsushita, MEI, Memorex, Minolta, Mitsubishi, Motorola, MTC, Multitech, NEC, Olympus, Optimus, Orion, Panasonic, Penny, Pentax, Philco, Philips, Pioneer, Proscan, Proton, Pulsar, Quarter, Quartz, Quasar, Radio Shack, RCA, Realistic, Samsung, Samtron, Sansui, Sanky, Sanyo, Scott, Sears, Semp, Shintom, Sharp, Signature, Sony, STS, Sylvania, Symphonic, Yamaha, Tatung, Teac, Technics, Teknika, Toshiba, Tomas, Vector, Video Concept, Wards, W. Westinghouse, XR-1000, Zenith.

Table of VCR codes for various brands including Magnavox, Memorex, Motorola, Movie Time, Northcoast, NSC, Oak, Paragon, Panasonic, Philips, Pioneer, Quasar, RCA, Regal, Rembrandt, Radio Shack, Samsung, Scientific Atlanta, Signal, Signature, Sony, Sprucer, Starcom, Stargate, Teleview, Tocom, Toshiba, Unika, United Artists, United Cable, U.S. Electronics, Viewstar.

Satellite Codes

Table of satellite codes for various brands including AlphaStar, EchoStar, ExpressVU, Fujitsu, GE, Gen. Instruments, Hitachi, HTS, Hughes, Janel, Jerrold, JVC, Magnavox, Memorex, Next Level, Optimus, Panasonic, Philips, Primestar, Proscan, Radio Shack, RCA, Samsung, Sony, Star Choice, Toshiba, Uniden, Video Pall, Viewstar, Zenith.

DVD Codes

Table of DVD codes for various brands including Akai, Apex, Broksonic, Daewoo, Denon, Emerson, Fisher, GE, Hitachi, JVC, Kenwood, Koss, Lasonic, Magnavox, Marantz, Mintek, Norcent, Onkyo, Optimus, Orion, Oritron, Panasonic, Philips, Pioneer, Proscan, RCA, Samsung, Sanyo, Sharp, Sony, Sylvania, Symphonic, Technics, Theta Digital, Toshiba, Yamaha, Zenith.

Cable Box Codes

Table of cable box codes for various brands including ABC, AIM, Archer, Bell & Howell, Contec, CPI, Diamond, Eagle, Emerson, Gemini, Gen. Instruments, Goldstar, Goodmind, Hamlin, Headquarter, Hitachi, Hytex, Jerrold.

