



• Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
 • Depending on your country, your phone and accessories may appear different from the picture in this guide.

Installing the Battery


Installing the Battery

- To install the battery, align the battery contacts (1) with those in the battery compartment. Press the battery down until it clicks into place (2).
- With the battery in position in the phone, replace the battery cover on the back of your phone.



Removing the Battery

- With your phone turned off, slide backward from the bottom of the battery cover (1) on the back of your phone, slide the battery cover up and lift off (2).

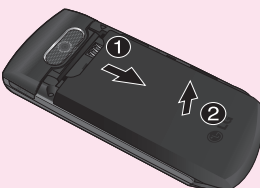

- Lift the battery up (1) and away (2) from the phone, as shown.



Charging the Battery

Your phone is powered by a rechargeable Li-ion battery. Use the wall charger to charge the battery. Please remember to only use LG approved batteries and chargers.

- Open the cover on the accessory port on the right side of the phone and plug the charger connector into the jack. Be sure to orient the connector as shown below in order to avoid damaging your phone.
- Plug the other end of the charger into a standard AC wall outlet.
- When the phone is completely charged (100%), unplug the charger from the wall outlet.
- Remove the charger from the phone by gently pulling out the connector. Replace the plastic cover over the open jack.

Important: Do not remove the battery from the phone while charging and make sure the charger is disconnected from the phone before removing the battery.



Please make sure that the 'B' side of the connector is facing up.


Phone layout and key functions



- Messaging, voice mail, and caller ID.
- Speakerphone feature.
- Menu-driven interface with prompts for easy operation and configuration.
- Any Key answer, Auto Redial, One-Touch dial and Speed Dial (with 9 locations).
- Bilingual (English and Spanish) capabilities.
- Internal Antenna.
- Easy-to-read LCD with status icons.

Display

Idle mode is when you are not on a call or using a menu. You must be in Idle mode to enter a phone number to dial.

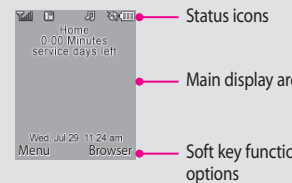

Your phone displays the following status indicators on the top of the screen:

Icon Description					
	Signal Strength		Silent Mode		TTY
	Flight Mode		Silence All & Speaker		Location On
	Battery Strength		Alarm Only		E911 Only
	In Call State		Alarm & Speaker		Active Data
	No Service		Vibrate Only		Dormant Data
	New Message		Vibrate & Speaker		Voice Privacy
	New Voicemails		Alarm		Announce
	Msg & Voicemail		Calendar		Announce Ring
	Speaker Phone		Alarm & Calendar		Bluetooth On
	Ring		Roaming		Device Connected
	Ring & Speaker		Digital		Visible
	1 Beep		1X		
	1 Beep & Speaker		SSL		

Turning the Phone On or Off

- To turn on, install a charged battery.
- Then press **Power** until the LCD screen lights up.
- To turn off, press and hold **Power** until the display turns off.

Changing the display language

Allows you to use the bilingual feature according to your preference. Choose between English and Spanish.

- In Idle mode, press the Left soft key **Menu**.
- Select **Language** → **Language** → **Language**.
- Use **Left Soft Key** to select **Automatic**, **English**, or **Español**, then press **Right Soft Key** **Select**.

Making Calls

- Make sure the phone is turned on.
- Enter the phone number (include the area code if needed).
- Press **Call** to dial.
- Press **End Call** to end the call.

Recent Calls

The Recent Calls Menu is a list of the last phone numbers or Contacts entries for calls missed, received, or dialed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Note: To view a quick list of all your recent calls, press **Recent Calls** while in standby mode.

- Missed Calls** : Allows you to view a list of the most recent missed calls. Press Left Soft Key **Recent Calls**, **Missed Calls** → Use **Left Soft Key** to highlight an entry.
- Dialed Calls** : Allows you to view a list of the most recent dialed calls. Press Left Soft Key **Recent Calls**, **Dialed Calls** → Use **Left Soft Key** to highlight an entry.
- Received Calls** : Allows you to view a list of the most recent received calls. Press Left Soft Key **Recent Calls**, **Received Calls** → Use **Left Soft Key** to highlight an entry.
- All Calls** : Allows you to view the list of the most recent missed, received and dialed calls. Press Left Soft Key **Recent Calls**, **All Calls**.
- Call Duration** : Allows you to view the duration of the calls, by type. Press Left Soft Key **Recent Calls**, **Call Duration** → Use **Left Soft Key** to highlight one of the call types (below). All Calls/ Dialed calls/ Received calls/ Last call.

Sound

Options to customize your phone's sounds:

Ringers

- Press the Left soft key **Options**, **Ringtones**.
- Select Radio recordings, Ringtone, Voice recordings, or Default sounds.
- Use **Left Soft Key** to highlight a sound and press **Right Soft Key** **Play** to listen to it.
- Press the Left soft key **Options** and choose Use As.
- Choose from Voice ringtone, Message tone, Start up or Shut down and press **Right Soft Key** **Select** to set the sound to your phone.

Volume

- Press the Left soft key **Options**, **Volume**.
- Use **Left Soft Key** to highlight the profile you want to edit.
- Press the Left soft key **Options** and choose Edit.
- You can change all of the tones, its volumes, and alert options from this menu.

Using the menus

Selecting or Modifying a Menu or Feature :

- Press the Left soft key **Menu** to access Main menu.
- Use **Left Soft Key** to reach a desired menu and then press **Right Soft Key**.
- If the menu contains any submenus, locate the one you want by using the **Left Soft Key**. Press **Right Soft Key** **Select** to enter the submenu. If the selected menu contains additional submenus, repeat this step.

Using the menus

1. Prepaid

- 1.1 Add Airtime
- 1.2 Buy Airtime
- 1.3 My Phone Number
- 1.4 Airtime Info
- 1.5 Airtime Display
- 1.6 Serial Number
- 1.7 SIM Number
- 1.8 Code Entry Mode

4. Messages

- 4.1 Create Message
- 4.2 Inbox
- 4.3 Sent Items
- 4.4 Saved Items
- 4.5 Voicemail
- 4.6 Drafts
- 4.7 Outbox
- 4.8 Emoticons
- 4.9 Message Settings

7. My Folder

- 7.1 Pictures
- 7.2 Sounds
- 7.3 Videos
- 7.4 Games & Apps
- 7.5 Other Files
- 7.6 Memory Card

2. Contacts

- 2.1 Contact List
- 2.2 New Contact
- 2.3 Speed Dials
- 2.4 Groups
- 2.5 Own Number
- 2.6 My Business Card
- 2.7 Settings

5. Browser

- 5.1 Home
- 5.2 Bookmarks
- 5.3 Enter URL
- 5.4 Saved Pages
- 5.5 Recent Pages
- 5.6 Browser Settings

8. Tools

- 8.1 Alarm Clock
- 8.2 Calendar
- 8.3 Notepad
- 8.4 Secret Notes
- 8.5 Calculator
- 8.6 World Clock
- 8.7 Tasks
- 8.8 Stopwatch
- 8.9 Unit Converter
- 8.0 Date Finder
- 8.* SIM App.
- 8.# Settings

3. Recent Calls

- 3.1 Missed Calls
- 3.2 Dialed Calls
- 3.3 Received Calls
- 3.4 All Calls
- 3.5 Call Duration
- 3.6 Data Counter

6. Media

- 6.1 Camera
- 6.2 Video
- 6.3 Music
- 6.4 FM Radio
- 6.5 Voice Recorder
- 6.6 Ringtone Creator

9. Settings

- 9.1 Sound Profiles
- 9.2 Phone Settings
- 9.3 Display
- 9.4 Connection
- 9.5 Call
- 9.6 Memory
- 9.7 Phone Information



Entering text

In a text input field, press the **Key** to toggle between capitalization and **123** modes. To switch between **T9Word** mode and **ABC** mode, press and hold the **Key**.

To access Symbols, press **Key** and select Symbols.

Using T9Word mode

1. Press **Key** to **Key** to start entering a word. Press each key once for one letter. The word you are entering appears on the display. Options may change with each keypress. For example: To enter "Hello" in **T9Word** mode, press **Key**, **Key**, **Key**, **Key**, and **Key**.

2. Press **Key** to insert a space and enter the next word.

Using ABC mode

Press the keys labeled with the letter you want once for the first letter, twice for the second letter, and so on.

For example, press **Key** three times to enter "C" and **Key** two times to enter "K".

Using 123 mode

Press the keys that correspond with the digits you want to enter.

Using Symbols mode

Use **Key** to find the symbol you want and press the **OK**.

Only some of the symbols available can be displayed at one time; scroll down to display more symbols.

Tips for entering text

To move the cursor, use **Key**.

- To delete characters one by one, press the Right soft key **Key** **CLK**. To delete all of the characters, press and hold Right soft key **Key** **CLK**.

- To insert a space between characters, press **Key**.

- To enter punctuation in **T9Word** mode or **ABC** mode, press **Key**.

Sending an SMS message

Allows you to send text and email messages.

1. Press the Left soft key.

2. Highlight **Message** and press **Select**.

3. Enter the recipient's number or address.

- Press the Left soft key **Key** **Options** and choose **Add recipient** to import a Contact already saved in your Contacts List or from another menu.

4. Enter your message.

5. Press **Send**.

Quick feature reference

This section provides instructions on how to access "some of your phone's features (Not all options are listed below).

Menu	Description
Key , 1 , Key	Add Airtime allows you to start an over-the-air request for additional airtime.
Key , 1 , 2	Buy Airtime allows you to start an over-the-air request to purchase additional airtime.
Key , 1 , 5	My Phone Number displays your phone number.
Key , 1 , 4	Airtime Info displays the airtime balance and due date information.
Key , 1 , 5	Airtime Display allows you to disable/enable the display of Balance and Due Date info on the idle screen.
Key , 1 , 5	Serial Number simply displays the phone's serial number.
Key , 1 , 8	Code Entry Mode will allow the phone to accept Tracfone-related codes in order to add units, modify specific data and troubleshoot the phone. In using the Code Entry Mode, you can't receive incoming calls or use events alert.
Key , 2 , 1	Contact List allows you to view your saved contacts and groups.
Key , 2 , 2	New Contact allows you to add a new contact to your Contact List.
Key , 2 , 5	Speed Dials allows you to view your Speed Dials list, designate new Speed Dials, or remove Speed Dial designations entered in your Contacts.
Key , 2 , 4	Groups allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a whole group.
Key , 2 , 5	Own Number allows you to view your phone number. You can also send this Name Card to another handset via Bluetooth.
Key , 2 , 6	My Business Card allows you to view, enter, and edit your personal Contact information, including name and phone number. You can also send this Business Card to another handset via text message, multimedia message, or Bluetooth.
Key , 3 , 1	Missed Calls allows you to view the list of missed calls.
Key , 3 , 2	Dialed Calls allows you to view the list of dialed calls.
Key , 3 , 3	Received Calls allows you to view the list of received calls.
Key , 3 , 4	All Calls allows you to view the list of missed, received and dialed calls.
Key , 3 , 5	Call Duration allows you to view the duration of calls by call type.
Key , 3 , 6	Data Counter allows you to view the amount of Sent and Received data.
Key , 4 , 1	Create Message allows you to send text and e-mail messages.
Key , 4 , 2	Inbox allows you to view your received messages.
Key , 4 , 3	Sent Items allows you to view your sent messages. Sent messages can be stored in the Sent folder. Access to view contents of sent messages and verify whether the transmission was successful or not.
Key , 4 , 4	Saved Items allows you to view saved messages and text and multimedia templates.

Menu	Description
Key , 4 , 5	Voicemail allows you to call your voicemail box.
Key , 4 , 6	Drafts allows you to view your saved (message) Drafts.
Key , 4 , 7	Outbox is a temporary storage folder while messages are being sent and for messages that have failed to send.
Key , 4 , 8	Emoticons allows you to add, edit and delete emoticons. You can insert an emoticon when writing a message.
Key , 4 , 9	Message Settings allows you to configure settings for Messaging.
Key , 5 , 1	Home allows you to access the Browser homepage on the web.
Key , 5 , 2	Bookmarks allows you to add, edit, and delete bookmarks for easy and fast access to your favorite websites.
Key , 5 , 3	Enter URL allows you to enter your desired URL for viewing on the Browser.
Key , 5 , 4	Saved Pages allows you to access saved pages.
Key , 5 , 5	Recent Pages allows you to view the list of web pages you have accessed recently. To access one of these pages, simply highlight the desired page and press Open .
Key , 5 , 6	Browser Settings allows you to configure settings for the Browser.
Key , 6 , 1	Camera allows you to take a photo. Point the lens towards the subject of the photo; then press Key .
Key , 6 , 2	Video allows you to take a video. Press Key once to start recording. Rec will blink in red at the bottom of the viewfinder. Press Key Stop to stop recording.
Key , 6 , 3	Music allows you to access the music player.
Key , 6 , 4	FM Radio allows you to listen to the radio. You will need to insert your headset in order to listen to the radio.
Key , 6 , 5	Voice Recorder allows you to record voice memos or other sounds.
Key , 6 , 6	Ringtone Creator
Key , 7 , 1	Pictures allows you to view a list of images, including default images, preloaded onto your phone, images downloaded by you and images taken on your phone's camera.
Key , 7 , 2	Sounds allows you to view the Radio recordings, Voice recordings, Ringtone or Default sounds.
Key , 7 , 3	Videos allows you to play, send, and delete videos you have recorded on your phone.
Key , 7 , 4	Games & Apps allows you to buy and play games and view any applications you have.

Menu	Description
Key , 7 , 5	Other Files allows you to view the list of files which are not My images, My sounds, My videos, Games or Applications.
Key , 7 , 6	Memory card allows you to view the list of files stored in your microSD™ memory card.
Key , 8 , 1	Alarms Clock allows you to set up to five alarms. At the alarm time, any set alarm will sound (depending on your volume settings) the tone of your choice and an alarm message will be displayed on the LCD screen.
Key , 8 , 2	Calendar allows you to access your Calendar appointments. Simply enter your appointments in the Calendar and your phone can alert you with a reminder.
Key , 8 , 3	Notepad allows you to add, read, edit, and erase notes.
Key , 8 , 4	Secret Notes allows you to write a private note to protect your privacy. A security code must be entered to access this menu.
Key , 8 , 5	Calculator allows you to perform simple mathematical calculations.
Key , 8 , 6	World Clock allows you to determine the current time in another city.
Key , 8 , 7	Tasks allows you to add an item to your task list.
Key , 8 , 8	Stopwatch allows you to use your phone as a stopwatch.
Key , 8 , 9	Unit converter allows you to convert units of Currency, Area, Length, Weight, Temperature, Volume, and Velocity.
Key , 8 , 10	Date Finder helps you calculate what the date will be once a certain number of days have passed.
Key , 8 , # , 5	Settings allows you to configure settings for your Calendar.
Key , 9 , 1	Options to customize your phone's Sound Profiles.
Key , 9 , 2	Options to customize your Phone Settings.
Key , 9 , 3	Options to customize your phone's Display.
Key , 9 , 4	Connection allows you to configure and use the Bluetooth and USB Connection functions on your phone.
Key , 9 , 5	Call allows you to configure the settings for calls.
Key , 9 , 6	Memory allows you to check out the memory status of your phone.
Key , 9 , 7	Phone Information allows you to easily view some of your phone's information quickly.

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

Consumer Information on SAR

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to Radio Frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model phone when tested for use at the ear is 0.54 W/kg and when worn on the body, as described in this user guide, is 0.54 W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC requirements).

While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID BEJLG620G. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

*Many of the features and services described are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas.

Other conditions and restrictions may apply. See carrier for more information.

© 2010 LG Electronics, Inc.