Tanaka.

Parts Catalog

Chain Saw

Model: ECS-351

Part # 11536 8-26-97

ECS-351

OPTIONS AND ACCESSORIES

 
BARS & CHAINS



12 In. Chain 91SG045X 14 In. Chain 91SG052X 16 In. Chain 91SG057X


12 In. Bar 120SDEA041 14 In. Bar 140SDEA041 16 In. Bar 160SDEA041

12in. Bar/Chain Kit 844001 14in. Bar/Chain Kit 844002 16in. Bar/Chain Kit 844004



DEPTH GUAGE CDG-600


PERFECT MIX® 2-Cycle Engine Oil

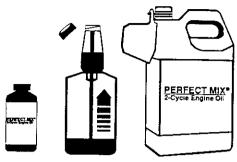

700109 2.8 oz. Bottle, 1 Gallon Size (24*) 700108 16 oz. Self-measuring Bottle (24*) 700110 1 Gallon Jug Commercial Size (6*) * Case Quantity



 FILE ASS'Y 5/32 CSF-532



FLAT FILE 8" CSF-800

18782

11536

976-42367-205

MANUALS & CATALOGS

Owner's Manual

Safety Manual

Parts Catalog

SPECIAL TOOLS

 006-29326-000
 Flywheel Remover
 890-32600-200
 Clutch Remover

 009-29326-000
 Piston Pin Remover
 001-29000-000
 Tachometer

 898-20000-900
 Screw Gear Remover
 070-2000W-500
 Pressure Tester

 002-29323-501
 Screw Gear Inserter
 070-2000W-501
 Carb. Tool Kit


 








FIG.1 ENGINE

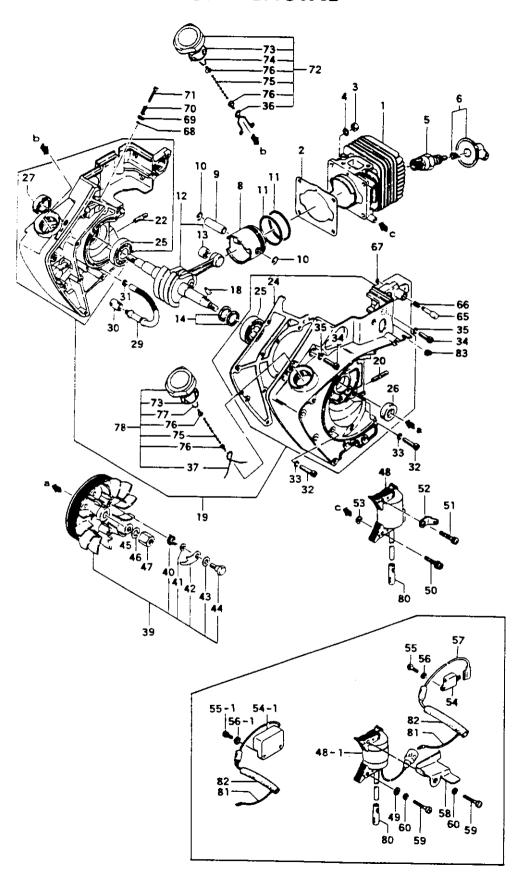


PIGU	76 1	ECS-351 PA	IH I	5	LIS	STING	
REF.		PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS
1	002-01800-211		1		D	~F187020	
1	002-0180A-211	CYLINDER	1		D	F187021~	
2		GASKET,CYLINDER	1		D		
3	991-01050-011	NUT,5	4		Α		
4	992-10050-012	WASHER,S,5	4		Α		
5	018-01805-200	PLUG,SPARK	1		В		
6		CAP,SPARK PLUG ASS'Y	1		D		
8	031-01800-200	PISTON	1	l	D		
9		PIN,PISTON	1		C		
10	039-00000-201	CIRCLIP, PISTON PIN	2		A		
11	1	RING,PISTON	2		В		
12	046-01800-800	CRANKSHAFT	1		D		
10	000 00001 005	DEADING NEEDLE 5 040					
		BEARING, NEEDLE, F-910			D		
14		SHIM,15.2X20X.05	V		D		Shims are "as needed" to obtain
14		SHIM,15.2X20X.10	V		D		correct c/s side clearance.
14		SHIM,15.2X20X.15	V		D		
		SHIM,16X21X.20	V		D		
18	068-10100-200	KEY,WOODRUFF,3X13X4.5	1		С		
19	072-01800-902	CRANKCASE,ASS'Y	1		ח	~F097142	Includes hearings and socia
19	072-01850-901	CRANKCASE,ASS'Y			l i		Includes bearings and seals Includes bearings and seals
20		BOLT,STUD,5X26	2	İ	D	FU31143~	includes bearings and seals
22		BOLT,STUD,5X21	2		D		
24		GASKET, CRANKCASE	1		D		
25	999-61620-200	BEARING,BALL,#6202	2		В		
	000 01020 200	<i>527</i> (111 (3,5) (22,#6262	-	ı			
26	999-66122-240	SEAL,OIL,#12227	1	İ	Α		
27		SEAL,OIL,#VE15X25X7	1	İ	Α		
29	505-32350-203		1		D		
30	510-32350-200	NET,FILTER	1]	Ы		
31	680-00803-202	CLIP	1				
32		BOLT,HEX,5X25	10	ŀ	В		
33	992-10050-012	WASHER,S,5	10		Α		
34	990-51050-223	BOLT,HEX,5X22	2		C		
35	992-10050-012	WASHER,S,5	2		Α		
36		HOOK,OIL TANK CAP	1		D		
37		HOOK,TANK CAP	1		D		
39	155-21704-911	ROTOR,MAGNETO ASS'Y	1		D		
40	700 04075 ===	000000 074 5775					
		SPRING,STARTER PAWL	2				
41	786-00601-200	WASHER, RECOIL STARTER	2		D		
42	788-00601-203	PAWL,STARTER	1]		A		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

, ,,,,,	· · · · · · · · · · · · · · · · · · ·	ECS-351 P/					
REF.		PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
43	822-00601-200	SHIM,7X11.8X.60	2		С		
44	793-10200-202	BOLT,STEP	2		С	•	
45	065-00000-200	WASHER,FLYWHEEL	1		D		
46	992-10070-012	WASHER,S,7	1		D		
47	066-01800-200	NUT,FLYWHEEL	1		D		
48-1	167-20763-800	COIL,IGNITION	1		С	~F097142	1
			١.				
48	167-21951-800	COIL,IGNITION	1		С	F097143~	•
49	992-00040-011	WASHER,4	1		В		
50	994-16040-226	SCREW,WS,4X22	1		D		
51	994-16040-226	SCREW,WS,4X22	1		D		
52	f	TAB, TERMINAL	1		D		
53		WASHER, SPECIAL	1		D		
54-1	159-21401-870	IGNITOR,TTI-ID	1		R	~F097142	
1		IGNITOR,TTI-1F			1	F097143~	
1	990-11040-161	SCREW,4X16	2		- 1	~E104940	
i	990-11040-081	SCREW,4X8	1		- 1	E104941~	
1	992-10040-012	1	2		c	L104941~	
57		WIRE,IGNITOR LEAD					
)	., 0 0 1021 1 000	THIRE, IGINITOR EEAD		ŀ	$^{\prime}$		
58	198-01800-230	CLAMP CORD	1		Б		
1	990-11040-181	SCREW,4X18	2	ı			
1 1	992-10040-012	WASHER,S,4	1 1		- 1		
[]	064-32300-201		2		D		
	066-32300-201	SPRING,STOPPER		ı	D		
	993-55030-002	RING,STOP					
"	993-33030-002	INING,STOP	1		C		
68	999-67003-000	O-BING P3			c		
: :		WASHER,4			c	i	
l I		SPRING,ADJUSTER		- 1	E		
		ADJUSTER, PUMP, OIL		- 1	D		
1 1	624-32350-901	CAP,OIL TANK,ASS'Y					
! 1	999-67022-000	O-RING,P22	2		D D		
'		O-1 (114G, F & 2			기		
74	634-32350-200	HOOK,TANK CAP,A			D		
l I		CHAIN, TANK CAP		- 1	- 1		
l I	627-32350-201	END,BALL CHAIN	2	ı	D		
l I		HOOK, TANK CAP	4	- 1			
l I	1	CAP, TANK, ASS'Y			D		
1		TUBE,CORD	1	- 1	D		
"	700-02000-200	TOBE,COND	1		D		
81	178-00601-810	CORD,STOP	$ $		$^{\prime}$	C190750	
}		CORD, PRIMARY		- 1		-C189752	
1 1		CORD, PRIMARY CORD, GROMMET	1	ļ		C189753~	
l I			1	- 1			
03	203-00000-200	GROMMET,PRIMARY CORD	2		<u>C </u>		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part


FIG.2 CLUTCH & MUFFLER

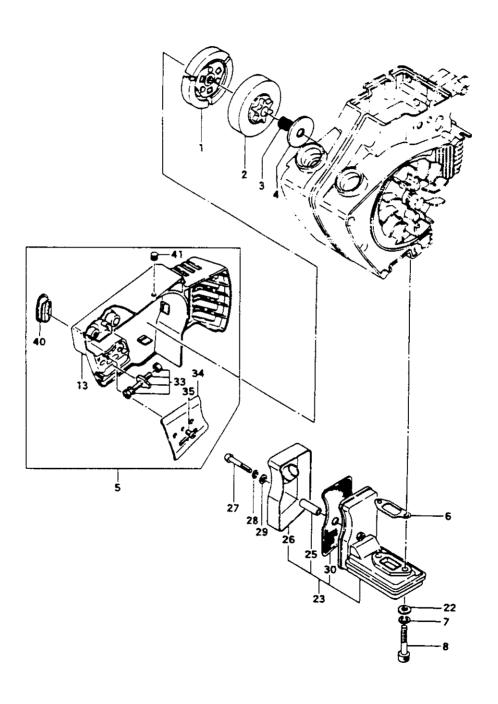

		LU3-331 FA	177 /	3	<u></u>	אווווכ	
REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
1	287-01801-801	CLUTCH	1		D		
2	310-01801-801	HOUSING,CLUTCH,3/8"	1		В		
3	999-62101-301	BEARING,NEEDLE,101310	1		В		
4	358-01800-201	WASHER,CLUTCH	1		D	•	
5	040-3236A-900	CASE,SIDE ASS'Y	1		D		
6	737-01800-200	GASKET, MUFFLER	1		С		
7	992-10060-012	WASHER,S,6	2		Α		
8	990-51060-353	BOLT,HEX.HOLE,6X35	2	ł	С		
13	040-3236A-230	CASE,SIDE	1		D		
22	992-01060-011	WASHER,6	2		Α		
23	705-01802-930	MUFFLER,ASS'Y	1		D		
25	740-01802-200	COLLAR, MUFFLER	1		D		
26	717-01800-820	BODY,MUFFLER,B	1		D		
27	990-11050-351	SCREW,5X35	1		В		
28	992-10050-012	WASHER,S,5	1		Α		
29	992-00050-011	WASHER,SMALL,5	1		С		
30	732-01802-201	PLATE, PARTITION	1		D		
33	116-32382-900	BOLT, TENSION, CHAIN, ASS'Y	1		В		
34	462-32350-210	PLATE,B	1		D		
35	990-11040-061	SCREW,4X6	1		c		
40	052-3236A-200	GROMMET	1		D		
41	130-00206-202	PLUG	1		D		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part


FIG.3 CARBURETOR & CLEANER

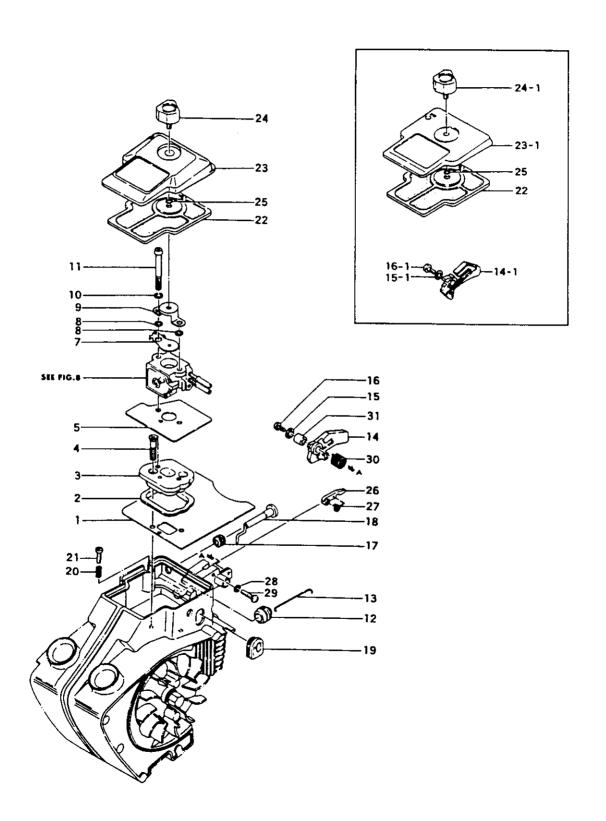

REF.	PART NO.	PART DESCRIPTION	-		_	SERIAL NO	DEMARKS
1	·	SHIELD, HEAT	1	 	D	OLI IIAL NO	REMARKS
2		RUBBER,INSULATOR,CARB			D		
3		INSULATOR, CARBURETOR	1		D		
4		SCREW,FH,5X25	2		D		
5	ļ	GASKET, CARBURETOR	1		D		
7	700-32350-211	VALVE,CHOKE	1		D		
8	708-32350-200	SHIM,5.2X8X.80	2		С		
9	476-01800-200	BOARD,BLOW OVER CHECK	1		С		
10	992-10050-012	WASHER,S,5	2		Α		
11	990-11050-451	SCREW,5X45	2		С		
12	491-32350-201	GUIDE,THROTTLE	1		D		
13	490-32350-210	ROD,THROTTLE	1		D	~F097142	
13	490-32050-201	ROD,THROTTLE	1		D	F097143~	,
14-1	060-32350-211	LEVER,THROTTLE	1			~F097142	
14	060-32050-214	LEVER,THROTTLE	1		D	F097143~	
l	l	WASHER,3	1	İ	C	~F098142	
	513-32057-200	WASHER	1		D	F098143~	
16-1	990-11030-121	SCREW,3X12	1		В	~F097142	
10	000 11000 111	0005111 0111		ļ			
	990-11030-141	·	1		- 1	F097143~	
17		GROMMET, SECONDARY CORD					
		BUTTON, CHOKE				-	
20		CAP,ADJUSTER			D		
21	990-06040-181	SPRING,CONTROL LEVER,RK-11 SCREW,4X18 F.F.H.	1		D		
- '	330-00040-101	30nEW,4X16 F.F.A.	١, ١		٦		
22	420-01800-801	ELEMENT, CLEANER	1		в	:	
		COVER,CLEANER	1		- 1	~F097142	
1 1		COVER,CLEANER	1	-	- 1	F097143~	
1 1	156-32350-801		1			~F097142	
1 1		CAP,CLEANER	1		- 1	F097143~	
25		O-RING,P3	1				
26	259-32350-202	LOCK,THROTTLE LEVER	1		D		
27		SPRING,THROTTLE LOCK	1		D		
28	992-10040-012	WASHER,S,4	1		D		1
29	990-11040-201	SCREW,4X20	1		c		1
30	061-32057-200	SPRING,THROTTLE LEVER	1				1
31	511-32050-200	COLLAR	1		C	F097143~	

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part


FIG.4 RECOIL STARTER

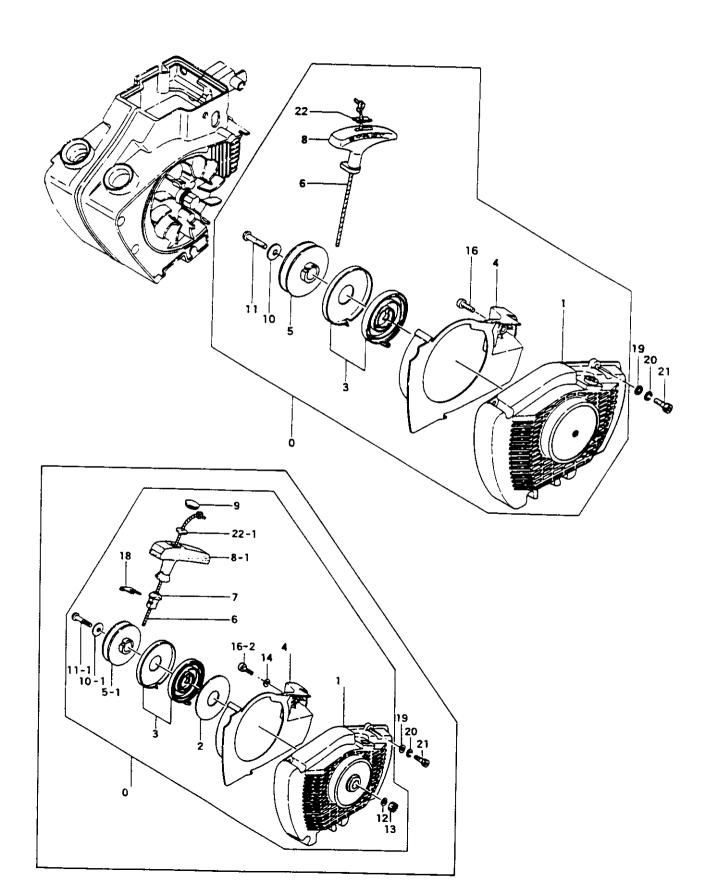

		E03-331 FF	4Л І	5	LI.	FING	
REF.		PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS
0	756-3236A-900	STARTER, RECOIL ASS'Y	1		D		
1	112-0181A-800	CASE,FAN	1		D		
2	778-00601-201	CASE,RECOIL SPRING	1		С	~D209450	
2	827-04060-210	COVER,SPRING CASE	1		D	D209451~	
3	778-00601-900	SPRING,RECOIL,ASS'Y	1		В		
4	145-01850-203	COVER	1		D		
5-1		PULLEY,STARTER	1	-	Α	~F097142	
5		REEL,STARTER ROPE	1		D	F097143~	
6	1	ROPE,STARTER	1		D		
7	780-11600-201	GUIDE,ROPE	1		В	F097143~	
8-1	785-11600-202	HANDLE,STARTER	1		D	~F097142	
8	785-04063-200	HANDLE,STARTER	1		D	F097143~	
1	i	CAP,STARTER HANDLE	1		С		
		WASHER,5	1		С	~F097142	
1		WASHER,5	1		С	F097143~	
1		SCREW,5X25	1		D	~F097142	
	l	SCREW,5X12	1		D	F097143~	
12	992-20050-000	WASHER,INNER TOOTHED	1		С		
Į		NUT,HEX.SLOTTED	1		D		
i		WASHER,SMALL,5	1		С		
1 1		SCREW,MX20	1			~F097142	
1 1		SCREW,5X18	1	ļ	D	F097143~	
1		CLIP,ROPE GUIDE	1	}	С		
19	992-00050-011	WASHER,SMALL,5	4		С		:
20	992-10050-012	WACLED C.					
			4		A		
1 1		BOLT,HEX.HOLE,5X15	4	į	C	E0074.40	
1 1	795-11600-200 795-04063-200	STOPPER,ROPE	1		- 1	~F097142	
~	7 95-04063-200	STOPPER,ROPE	1		וט	F097143~	
1 1			1 1	- 1			

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.5 REAR HANDLE

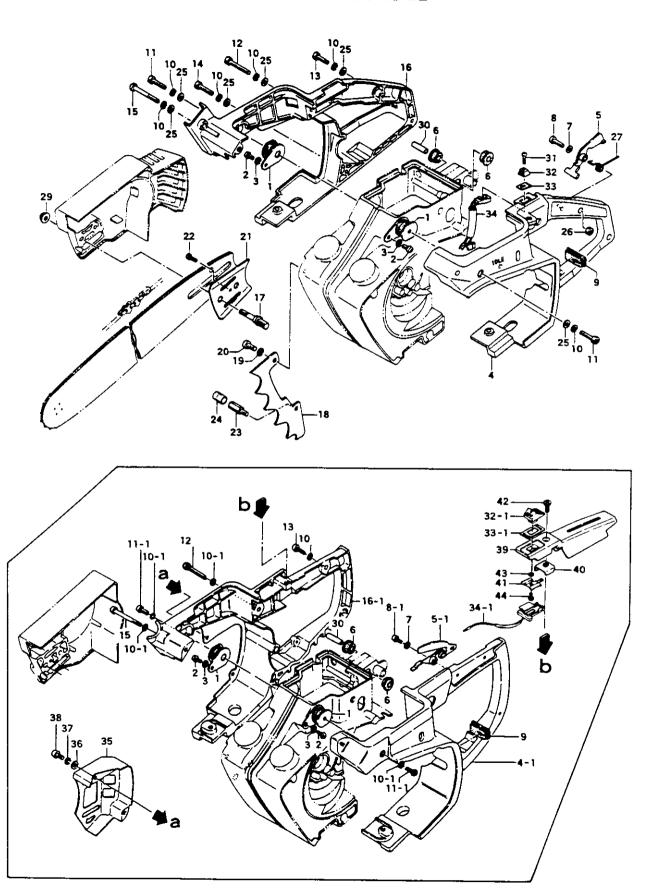

	JHE 5	ECS-351 PA	AH I	5	LI:	STING	
REF.		PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
1	222-32350-801	DAMPER,SIDE	2		С		
2	990-11050-121	1	2		Α		
3	992-10050-012	WASHER,S,5	2		Α		
4-1	010-32353-201	HANDLE,REAR,A	1		D	~F144001	
4	010-3236A-801	HANDLE,REAR,A	1		D	F144002~	
5-1	257-32350-212	LEVER,SAFETY	1		D	~F097142	
5		LEVER,SAFETY	1		D	F097143~	
6		DAMPER,SAFETY	2		D		
7	i	WASHER,3	1		C		
8-1	990-11030-101	SCREW,3X10	1		Α	~F097142	
8		SCREW,3X8	1		D	F097143~	
9	202-01800-202	GROMMET, SECONDARY CORD	1		D		
1	992-10050-012	1	7		Α		
	990-11050-151		2		С	~D124640	
•		BOLT,HEX.HOLE,5X15	2		C	D124641~	
ſ		BOLT,HEX,5X40	1		D		
		BOLT,HEX.HOLE,5X20	2		С		
14	990-51050-303	BOLT,HEX,5X30	1		D		
]				
	990-11050-451		1	i	С		
1		HANDLE,REAR,B	1		D	~F144001	
		HANDLE,REAR B	1		D	F144002~	
	1	BOLT,STUD,BAR/CHAIN	2	ŀ	В		
	CBS-350	SPIKE,BUCKING	1		D		
19	992-10050-012	WASHER,S,5	1		Α		
00	000 14050 404			- 1			
		SCREW,5X12	1	- 1	A		
		PLATE, GUIDE A	1	- 1	D		
	990-11040-061	SCREW,4X6	1		의		
23	125-32060-210	CATCHER,CHAIN	1	- 1	D		
	700-01012-018	PIPE,FUEL,10X12X18	1	- [D		
25	992-00050-011	WASHER,SMALL,5	7		디		ļ
0.0	001 70050 010	AULT & COKE					
1	991-78050-010	i i	4	- 1	잌		
		SPRING, SAFETY	1		미		
		NUT,CLAMP,BAR	2		В		
		COLLAR, SAFETY DAMPER] [- 1	- 1	~F144001	
l I		COLLAR, SAFETY DAMPER	1		. 1	F144002~	į
ا د	990-11030-101	SCREW,3X10	1	'	^		
32-1	258-04015-202	BUITTON STOP			_	E0074 40	
1 1		·	<u> </u>	l i	- 1	~F097142	
]		CORD,PRIMARY DECAL,ON-OFF/CAUTION	1			F097143~	
JQ-1	920-0200U-20U	DECAL, ON-OFFICAUTION	1	'	٠ _[.	~F097142	
<u> </u>			ŀ	l_			


^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIGURE 5 cont.

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
33	925-32600-200	DECAL,STOP BUTTON	1		D	F097143~	
34-1	178-01800-804	CORD,STOP	1		D	~F097142	
34	170-04064-800	BUTTON,STOP	1		D	F097143~	
35	738-32371-200	PROTECTOR, MUFFLER	1		D		
36	992-00050-011	WASHER,SMALL,5	2	i	Ç		
37	992-10050-012	WASHER,S,5	2		Α		
38	990-11050-101	SCREW,5X10	2	ļ	В		
39	226-32350-202	GRIP,HANDLE B	1		D	!	
40	272-04015-204	TERMINAL,GROUND	1		D		
41	261-01800-201	TERMINAL,STOP BUTTON	1	1	D		
42	990-12050-151	SCREW,FH,5X15	1		С	~F097142	
42	990-15050-121	SCREW,5X12	1	-	D	F097143~	
43	992-00040-011	WASHER,4	1	İ	В		
44	990-11040-061	SCREW,4X6	1		C		
					i		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part


FIG.6 HANDLE

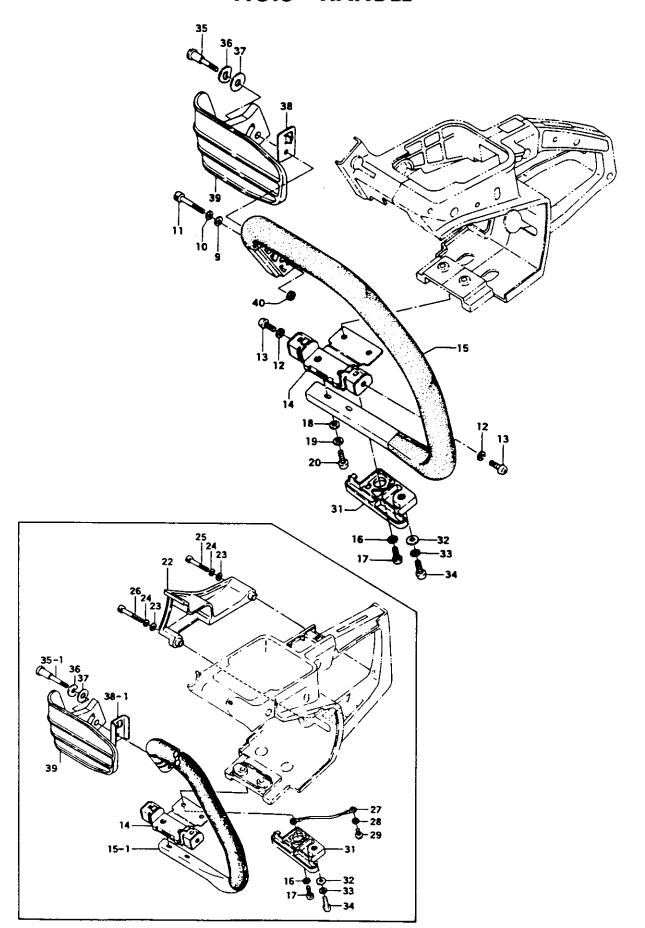

REF.	PART NO.	PART DESCRIPTION		С	_	SERIAL NO	DEMADIZO
9	<u> </u>	WASHER, SMALL, 5	2	٦	C	OLINAL NO	REMARKS
10	992-10050-012		2		A		
11	990-51050-253		2		В		
12		WASHER,S,5	2		Α		
13		SCREW,5X12	2		Α		
14		DAMPER,FRONT	1		С		
15-1	209-32371-800	HANDLE,FRONT	1		D	~F144001	
15	209-3236A-800	HANDLE, FRONT	1			F144002~	
16	992-10050-012	WASHER,S,5	1		Α		
17	990-11050-121	SCREW,5X12	1		Α		
18	992-01050-011	WASHER,5	2		Α		
19	992-10050-012	WASHER,S,5	2		Α		
20	990-11050-161	SCREW,5X16	2		в		
22	800-32350-802	GUARD,HAND,REAR	1		D	F097143~	
23	992-00050-011	WASHER,SMALL,5	2		С		
24	992-10050-012	WASHER,S,5	2	Ì	Α		
25	990-51050-303	BOLT,HEX,5X30	1		D		
26	990-51050-403	BOLT,HEX,5X40	1		D		
27	274-01800-800	CORD,GROUND	1	ľ			
28	992-10050-012	WASHER,S,5	1		Α		
	990-11050-101	SCREW,5X10	1		В		
31	797-32050-800	COVER,EARTH CORD	1		D		
ļ	99201050011	WASHER,5	1		Α		
33	992-10050-012	WASHER,S,5	1		Α		
	000 440 55 15 1						
	990-11050-161	l i	1		В		
	855-32356-200		1		- 1	~F097142	
	855-3236A-200		1		- 1	F097143~	
1	i	WASHER,8	1		C		į
1	i	WASHER,CLUTCH B	1		A		
38-1	216-32356-201	METAL,HANDLE	1		ט	~F097142	
38	216-22264 200	HOLDER,HANDLE				E007140	
		,		- 1	- 1	F097143~	
40	1	GUARD,FRONT HAND NUT,LOCK 5			D C		
	001-70000-010	NOT, LOCK 5	'				
L	l	<u></u>					

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part


FIG.7 OIL PUMP

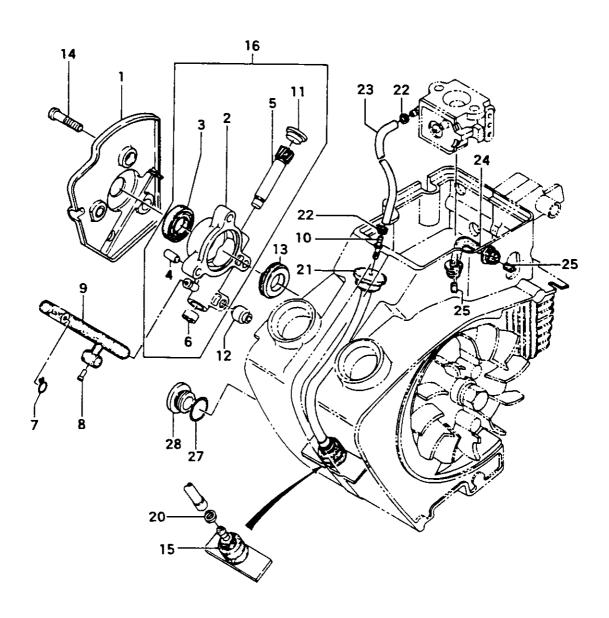

, ,,,,,	,, , <u>L</u> ,	EUS-351 PA	M	5	LI	SIIIVG	
REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
1	097-32350-801	COVER,OIL PUMP	1		D		
2	088-32350-800	CASE,OIL PUMP	1		D		
3	999-66132-420	SEAL,OIL,#AC13246	1		D		
4	999-05040-800	PIN,KNOCK,4X8	1		D		
5	085-32350-201	GEAR,PUMP	1		D		
6	086-32350-211	GROMMET,A	1		D		
7	1	' ' '	1		D		
8	516-32350-201	JET,OIL	1		D		
9	515-32350-201	PIPE,OIL,A	1		D		
10	497-32350-200	JOINT,PIPE	1		C		
11	053-32500-201	GROMMET,B	1		D		
12	622-00604-201	PIPE,AIR	1		D	~F097142	
	}						
	428-32350-200	RUBBER, JOINT	1		D	F097143~	
13	084-32350-200	GEAR,SCREW	1		D		
14	990-11050-221	SCREW,5X22	3		В		
15	i	i '	1	i	C		
	088-32350-901	CASE,OIL PUMP,ASS'Y	1		D		
20	680-04019-210	CLIP,7	1		В		
							
21	1	PIPE,SUCTION,RUBBER	1	- 1	D		
22	680-00206-200		2		С		
23	700-13005-055	PIPE,FUEL,3X5X55	1		D		
24	565-01800-202		1	l	D		
25	56701800200	SPONGE,AIR VENT	2		E		
27	999-67012-500	O-RING,P12.5	1		D	ļ	
28	525-32350-201	CAP,OIL LEVEL	1		D		
l				- 1			

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part


FIG.8 CARBURETOR

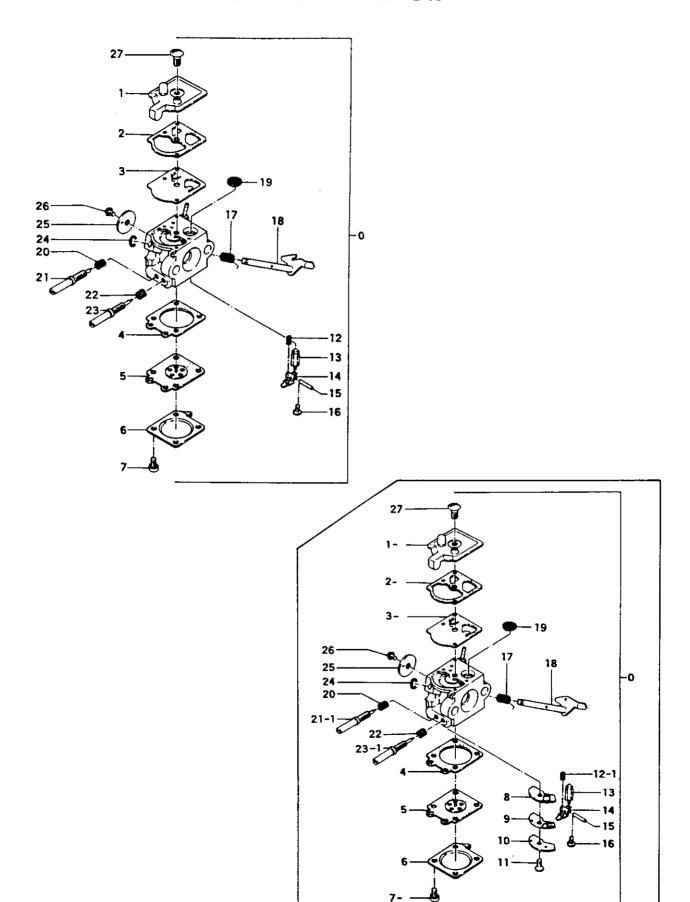



riau	INEO	ECS-351 P.	4 <i>H I</i>	5	LI	STING	
REF.		PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
0	455-25024-900	CARBURETOR, ASS'Y	1		D		
1	575-25024-200	BODY,PUMP	1		D		
2	~~~	*GASKET,PUMP	1	ļ	D		
3	~~~	*DIAPHRAGM,PUMP	1		C		
4	~~~	*GASKET,DIAPHRAGM	1		Α		
5	~~~	*DIAPHRAGM,METERING	1		Α		
6	476-25003-200	COVER,DIAPHRAGM	1		D		* Contained in Carb. Repair Kit
7	548-25012-200	SCREW,SET	4		D		650-25001-910
8	~~~	*GASKET,CIRCUIT PLATE	1		D		(Not availiable individually)
9	~~~	*DIAPHRAGM,CHECK VALVE	1		D		
10	523-25001-200	PLATE,CIRCUIT	1		D		
11	524-25001-200	SCREW,CIRCUIT PLATE	1		D		
12-1	477-25003-200	SPRING, VALVE	1		D	~D209450	
12	477-25007-200	SPRING, VALVE	1		D	D209451~	
13	603-25001-200	VALVE,NEEDLE	1		С		
14	~~~	*HINGE,VALVE	1		c		
15	~~~	*PIN,FLOAT	1		ם		
16	546-25001-200	SCREW,SET,HINGE PIN	1		D		
17	486-25005-200	SPRING,THROTTLE	1		D		
18	464-25003-801	SHAFT,THROTTLE	1,		D		
19	~~~	*SCREEN,INLET	1		С		
20	623-25001-200	SPRING,ADJUST,LOW	1		D		
21-1	46125005200	SCREW,SLOW,ADJUST	1		D	~D209450	
21	461-25016-200	SCREW,LOW ADJUST	1		D	D209451~	
22	485-25003-200	SPRING,ADJUST,HIGH	1		D		
	460-25003-200	SCREW,MAIN ADJUST	1		D	~D209450	
23	460-25016-200	SCREW,HIGH ADJUST	1		D	D209450~	
24	489-25004-200	RING,STOP	1		D		
25	488-25001-200	VALVE,THROTTLE	1		С		
26	467-25003-200	SCREW,SHUTTER	1		С		
27	514-25001-200	SCREW,SET	1		D		
1					ł		


^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.9 TOOLS

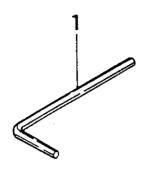

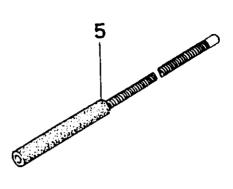

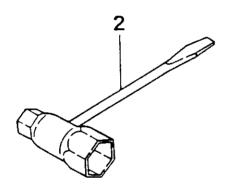

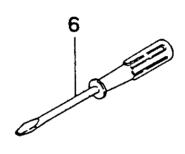

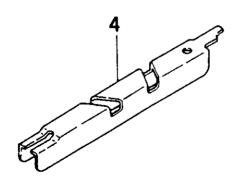


FIGURE 9

ECS-351 PARTS LISTING

. 								
PART NO.	PART DESCRIPTION	Q	C	s	SERIAL NO		BEMARKS	
813-20000-200	WRENCH,HEX,4	1		D			TILIMATIKO	-
013-29325-400	SPANNER,BOX,10X19	11		c				
CDG-300	GUAGE,DEPTH	1		_				
CSF-532	FILE.ROUND.5/32"	1	l					
864-20000-210	1							
	=	'	İ					
	813-20000-200 013-29325-400 CDG-300 CSF-532	813-20000-200 WRENCH,HEX,4 013-29325-400 SPANNER,BOX,10X19 CDG-300 GUAGE,DEPTH	813-20000-200 WRENCH,HEX,4 1 013-29325-400 SPANNER,BOX,10X19 1 CDG-300 GUAGE,DEPTH 1 CSF-532 FILE,ROUND,5/32" 1	813-20000-200 WRENCH,HEX,4 1 013-29325-400 SPANNER,BOX,10X19 1 CDG-300 GUAGE,DEPTH 1 CSF-532 FILE,ROUND,5/32" 1	813-20000-200 WRENCH,HEX,4 1 D 013-29325-400 SPANNER,BOX,10X19 1 C CDG-300 GUAGE,DEPTH 1 D CSF-532 FILE,ROUND,5/32" 1 D	813-20000-200 WRENCH,HEX,4 1 D 013-29325-400 SPANNER,BOX,10X19 1 C CDG-300 GUAGE,DEPTH 1 D CSF-532 FILE,ROUND,5/32" 1 D	813-20000-200 WRENCH,HEX,4 1 D C CDG-300 GUAGE,DEPTH 1 D C CSF-532 FILE,ROUND,5/32" 1 D	813-20000-200 WRENCH,HEX,4 1 D REMARKS 013-29325-400 SPANNER,BOX,10X19 1 C CDG-300 GUAGE,DEPTH 1 D CSF-532 FILE,ROUND,5/32" 1 D

FIG.10 MARKS

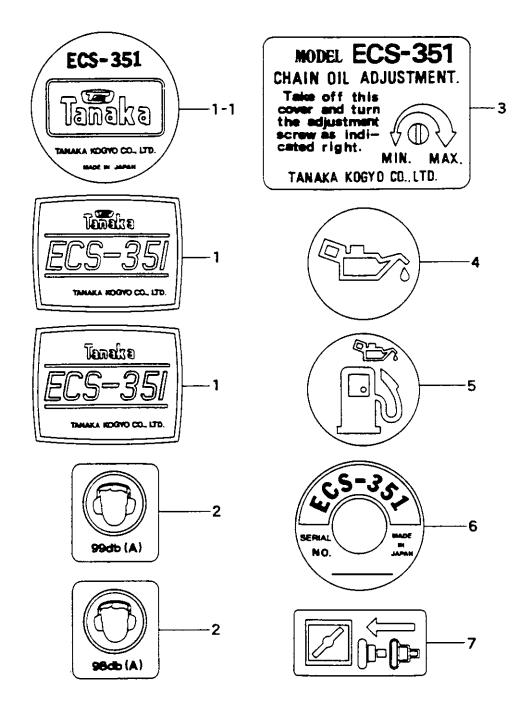


FIGURE 10

REF.	PART NO.	PART DESCRIPTION	Q	C.	s	SERIAL NO	REMARKS
10-1-1	906-32382-200	DECAL	1		_	~F144001	TIENT ON THE
10-1	906-3236A-201	DECAL	11		l	F144002~	
10-2	931-32378-200	DECAL.CAUTION, HEARING	1		D		
10-3	912-32382-210	DECAL, CLEANER	1		D		
10-4	921-32350-201	DECAL, CAUTION, OIL	1		D		
10-5	920-32600-210	DECAL, FUEL	1		D		
10-6	915-32382-200	DECAL,STARTER	11		D		
10-7	913-32377-200	DECAL,CHOKE	1	İ	D		
	10.00007-200	DEOAL, OHORE			ט		