



# VX4270

Get Started Guide



Compact Design with Full-Color Internal Display



External Caller ID Display



Speakerphone



Voice-Activated Dialing



## PHONE OVERVIEW



Volume Up/Down

Voice Command/  
Memo Key

Charging Port

External LCD



Speakerphone

Speakerphone

Left Soft Key

Scheduler

CALL Key

BACK Key

VoiceMail

Manner Mode

Microphone

Speakerphone

OK Key

Right Soft Key

easyedge

Messages

END/PWR Key

Lock Mode

## MAIN MENU



## VOICE SERVICES

## Activating Speakerphone

1. During a call, press the **Speakerphone** icon (up) on the Navigation Key for hands-free conversation.
2. Press the **Speakerphone** icon (up) on the Navigation Key a second time to return to normal conversation.

 
**Warning!** Due to higher volume levels, don't place the phone near your ear while the speakerphone is enabled.



> **Voice-Activated Dialing**

1. From the main menu, select **Contacts (1)** and press OK.
2. Scroll to **Voice Dials (6)** and press OK.
3. Press the **Left Soft Key** for **New**.
4. Select the contact you'd like to create a voice dial for and press **OK**.
5. Select the number you'd like to create a voice dial for and press **OK**.
6. Select **OK** to start recording and say the name when prompted. You will be prompted twice.

Note: To initiate voice-activated dialing, from the main screen, press the **Voice Dial/Memo Key**. When prompted, say the name of the contact you want to call.

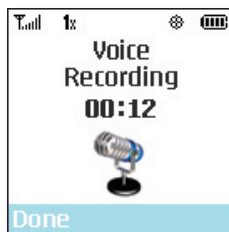

> **Recording a Voice Memo**

1. Press and hold the side **Voice Dial/Memo Key**.
2. Start recording after the tone. To stop recording, press the **Left Soft Key** for **Done**.

Note: Recorded voice memos can be found in the **Tools (7) > Voice Memo (3)** menu.

## CONNECTIVITY FEATURES

DOWNLOADING EASYEDGE<sup>SM</sup> CONTENT

The new VX4270 by LG can store downloaded content from **easyedge<sup>SM</sup>**, a technology and service that allows you to download and use e-mail, pictures, ringtones and games on your phone.



 
> **Downloading New Content From easyedge<sup>SM</sup>**

1. From main screen, press the **easyedge** icon (right) on the Navigation Key.
2. Select the **easyedge Shop** icon and press **OK**.
3. Select a category from the **easyedge Shop** and press **OK**.

## MESSAGING


## Sending a Text Message

1. Press the **Messages** icon (down) on the Navigation Key and select **New Text Msg (2)**.
2. Press the **Left Soft Key** for **Contacts** to enter a recipient from the **Contacts (1)** or **Recent Call (2)** menu, or use the keypad to enter a new e-mail address or phone number. Up to 10 recipients can be added.
3. Select **Message** and press **OK**.
4. Enter the message (up to 150 characters) using the keypad, and press **OK** when done.
5. Press the **Left Soft Key** for **Send**.

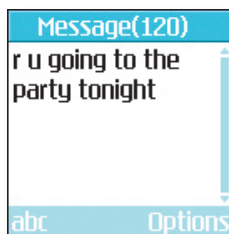

> **Sending a Photo Message**

 1. Press the **Messages** icon (down) on the Navigation Key and select **New Photo Msg (3)**.
2. Press **Left Soft Key** for **Contacts** to enter a recipient from the **Contacts (1)**, **Recent Call (2)**, or **Online Album (3)** menu, or use the keypad to enter a new e-mail address or phone number. Up to 10 recipients can be added.
3. Scroll down using the Navigation Key to enter the **Subject**, **Text**, **Picture** and **Sound** you wish to add to the message.
4. Press the **Right Soft Key** for **Options** and select **Send (2)**.

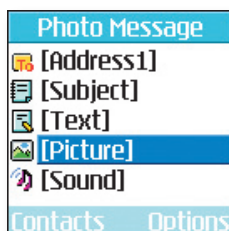

## CUSTOMIZABLE FEATURES



- > **Changing the Wallpaper Image**
  1. From the **Settings (8)** menu, select **Display (2)**.
  2. Select **Screens (3)**, then select **Wallpaper (1)**.
  3. Press left or right on the Navigation Key to select the desired category (**Default** or **Images**), then scroll down to select an image and press **OK** to preview.
  4. To preview other images in the selected category, press left or right on the Navigation Key.
  5. Press the **Left Soft Key** for **Save**.

 


- > **Changing the Call Ringer**
  1. From the **Settings (8)** menu, select **Sounds (1)**.
  2. Select **Ringers (1)**.
  3. Select either **Caller ID (1)**, **No Caller ID (2)**, or **Restricted Calls (3)**.
  4. Choose from the list of available default or downloaded ringers and press **OK**.
- > **Adjusting Volume Settings**
  - Ringer Volume:** While in standby mode, press the side volume keys to adjust the ringer volume.
  - Earpiece Volume:** During a conversation, press the side volume keys to adjust the earpiece volume.
  - Silent Mode:** While in standby mode, press the lower volume key until it reads Silent to mute all sounds.

## PERSONAL INFORMATION TOOLS



- > **THE SCHEDULER**
  - > **Scheduling an Event**
    1. From the **Tools (7)** menu, select **Schedule (1)** and press **OK**.
    2. Highlight the event date using your Navigation Key and press the **Left Soft Key** for **Add**.
    3. You may set the appropriate start and end times, content, recurrence (if any), alarm and ringer by scrolling to the corresponding field, and entering the desired information and pressing **OK**.
    4. Press **Left Soft Key** for **Save**.

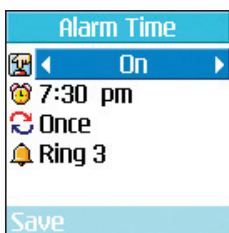

- > **Scheduling an Alarm**
  1. From the **Tools (7)** menu, select **Alarm Clock (2)** and press **OK**.
  2. Select **Alarm 1 (1)**, **Alarm 2 (2)**, **Alarm 3 (3)** or **Quick Alarm (4)** and press **OK**.
  3. Set the appropriate time, recurrence (if any) and ringer by scrolling to the corresponding field and entering the desired information.
  4. Press the **Left Soft Key** for **Save**.

## CONTACTS AND SPEED DIALING



 
- > **Adding a New Contact Entry**
  1. From the **Contacts (1)** menu, select **New Number (2)**.
  2. Enter the telephone number and press **OK**.
  3. Select a label (**Home**, **Home2**, **Office**, **Office2**, **Mobile**, **Mobile2**, **Pager**, **Fax**, **Fax2** or **None**) and press **OK**.
  4. Enter a name for the entry and press **OK**. Highlight the number and press the **Right Soft Key** for **Options**, then select **Set Speed Dial (3)** or **Set Voice Dial (4)** and press **OK**.

### To set speed dial...


1. Enter the speed dial number (2-99) and press **OK**.
2. Add more phone numbers, e-mail addresses or press the **Left Soft Key** for **Done**.

### To set voice dial...

1. Select **OK** to start recording and say the name when prompted. You will be prompted twice.

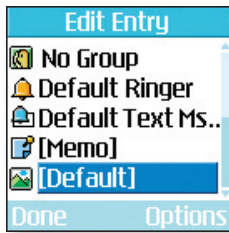

## > Setting an Image as Caller ID

1. From the **Contacts (1)** menu, select **List Contacts (1)**.
2. Choose an existing contact and press **OK**.
3. Press the **Left Soft Key** for **Edit**, scroll down to the  icon, and press **OK**.
4. Scroll down to the desired image and press **OK** to preview.
5. Press the **Left Soft Key** for **Select** and again for **Done**.

## OTHER NOTABLE SETTINGS



 
## > Making a Call from Recent Calls

1. Press the **CALL Key** to view your most recent 30 dialed, received and missed calls.
2. Place a call by selecting the desired entry and press **CALL** to connect.

## > Manner Mode

Use Manner Mode in a public place to disable the ringer and activate Vibrate Mode.

1. From the main screen, activate Manner Mode by pressing the **Manner Mode Key (\*)** for 3 seconds. The phone will vibrate when activated.
2. When set, “**-Manner Mode- Activated**” will appear on the screen.
3. To release Manner Mode, press the key until “**-Normal Mode- Activated**” is displayed.

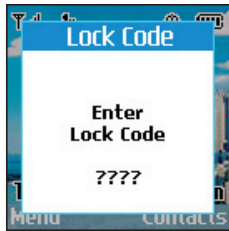







## > Locking the Handset

This helps protect the phone from unauthorized use. Once the phone is locked, the phone is restricted from making calls until the lock code is entered. However, you are able to make emergency calls and calls to up to ten stored security phone numbers, as well as receive any incoming calls while in the locked mode.

1. From the **Settings (8)** menu, select **Security (4)**.
2. Enter your lock code (commonly the last four digits of your mobile phone number).
3. Choose **Lock Phone**, then select **Lock** or **On Power Up**, and press **OK**. The On power up function will lock the handset when the phone is power cycled.
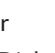
## MENU TREE

<p><b>CONTACTS (1)</b> </p> <ol style="list-style-type: none"> <li>List Contacts</li> <li>New Number</li> <li>New E-mail</li> <li>Groups</li> <li>Speed Dials</li> <li>Voice Dials</li> <li>My Contact Info</li> </ol>	<p><b>MESSAGES (3)</b> </p> <ol style="list-style-type: none"> <li>Voice Mail</li> <li>New Text Msg</li> <li>New Photo Msg</li> <li>Inbox</li> <li>Outbox</li> <li>Saved</li> <li>Msg Settings                     <ul style="list-style-type: none"> <li>&gt; 1. Auto Save</li> <li>&gt; 2. Auto Erase</li> <li>&gt; 3. Text-Auto View</li> <li>&gt; 4. Photo-Auto Receive</li> <li>&gt; 5. Text-Callback #</li> <li>&gt; 6. Edit Voice</li> <li>&gt; 7. Entry Mode</li> <li>&gt; 8. Quick-Text</li> <li>&gt; 9. Text-Auto Play</li> <li>&gt; 0. Text-Signature</li> </ul> </li> <li>Erase All                     <ul style="list-style-type: none"> <li>&gt; 1. Inbox</li> <li>&gt; 2. Outbox</li> <li>&gt; 3. Saved</li> <li>&gt; 4. All</li> </ul> </li> </ol>	<p><b>TOOLS (7)</b> </p> <ol style="list-style-type: none"> <li>Schedule</li> <li>Alarm Clock                     <ul style="list-style-type: none"> <li>&gt; 1. Alarm 1</li> <li>&gt; 2. Alarm 2</li> <li>&gt; 3. Alarm 3</li> <li>&gt; 4. Quick Alarm</li> </ul> </li> <li>Voice Memo</li> <li>My Shortcut</li> <li>Notepad</li> <li>EZ Tip Calc</li> <li>Calculator</li> <li>World Clock</li> </ol>	<ol style="list-style-type: none"> <li>System                     <ul style="list-style-type: none"> <li>&gt; 1. Select System</li> <li>&gt; 2. Set NAM</li> <li>&gt; 3. Auto NAM</li> <li>&gt; 4. Serving System</li> </ul> </li> <li>Security</li> <li>Call Setup                     <ul style="list-style-type: none"> <li>&gt; 1. Auto Retry</li> <li>&gt; 2. Answer Call</li> <li>&gt; 3. Auto Answer</li> <li>&gt; 4. One-Touch Dial</li> <li>&gt; 5. Voice Privacy</li> <li>&gt; 6. Auto Volume</li> <li>&gt; 7. TTY Mode</li> </ul> </li> </ol>	
<p><b>RECENT CALLS (2)</b> </p> <ol style="list-style-type: none"> <li>Dialed Calls</li> <li>Received Calls</li> <li>Missed Calls</li> <li>Erase Calls                     <ul style="list-style-type: none"> <li>&gt; 1. Dialed Calls</li> <li>&gt; 2. Received Calls</li> <li>&gt; 3. Missed Calls</li> <li>&gt; 4. All Calls</li> </ul> </li> <li>Call Timer                     <ul style="list-style-type: none"> <li>&gt; 1. Last Call</li> <li>&gt; 2. Home Calls</li> <li>&gt; 3. Roam Calls</li> <li>&gt; 4. All Calls</li> </ul> </li> <li>KB Counter                     <ul style="list-style-type: none"> <li>&gt; 1. Received</li> <li>&gt; 2. Transmitted</li> <li>&gt; 3. Total</li> </ul> </li> </ol>	<p><b>VOICE (4)</b> </p> <ol style="list-style-type: none"> <li>Voice Dial Prompt</li> <li>Train Words</li> </ol>	<p><b>SETTINGS (9)</b> </p> <ol style="list-style-type: none"> <li>Sounds                     <ul style="list-style-type: none"> <li>&gt; 1. Ringers</li> <li>&gt; 2. Key Tone</li> <li>&gt; 3. Volume</li> <li>&gt; 4. Message Alerts</li> <li>&gt; 5. Service Alerts</li> <li>&gt; 6. Power On/Off Tone</li> <li>&gt; 7. DTMF Length</li> </ul> </li> <li>Display                     <ul style="list-style-type: none"> <li>&gt; 1. Banner</li> <li>&gt; 2. Backlight</li> <li>&gt; 3. Screens</li> <li>&gt; 4. Menu Style</li> <li>&gt; 5. Clocks</li> <li>&gt; 6. Theme Colors</li> <li>&gt; 7. Contrast</li> <li>&gt; 8. Fonts</li> <li>&gt; 9. Language</li> <li>&gt; 0. Power Saver</li> </ul> </li> </ol>	<ol style="list-style-type: none"> <li>Data Settings                     <ul style="list-style-type: none"> <li>&gt; 1. Data/Fax</li> <li>&gt; 2. PC Connection</li> </ul> </li> <li>Location</li> </ol> <p><b>PHONE INFO (9)</b> </p> <ol style="list-style-type: none"> <li>My Phone Number</li> <li>S/W Version</li> <li>Icon Glossary</li> <li>Shortcut Help</li> </ol>	
<p><b>EASYEDGE (5)</b> </p> <ol style="list-style-type: none"> <li>easyedge</li> <li>Help</li> </ol>	<p><b>MEDIA (6)</b> </p> <ol style="list-style-type: none"> <li>Images</li> <li>Sounds</li> </ol>			