
TOSHIBA

Leading Innovation >>>

Using the CAMILEO Remote Control

Getting Started

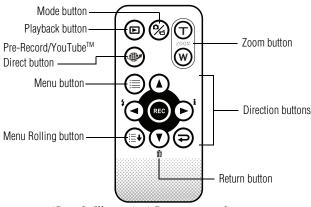

(Sample Illustration) Remote control

Button functions

Direction Buttons:

Right Button

- ❖ Turn the LCD Information ON/OFF.
- Press to scroll to the right in the **Record** menu.
- Press to advance to the next movie/picture in Playback mode.
- Fast forward movies.

Left button

- Turn OFF the Flash, Flash Auto, Red-Eye-Reduction, and Digital Light.
- Press to scroll to the left in the **Record** menu.
- Press to return to the previous movie/picture in **Playback** mode.
- Fast rewind movies.

Up button

Press to scroll up in the **Record** menu.

Press to increase the volume while playing movies.

Down button

- Delete the current movie/picture or all movies/pictures.
- Press to scroll down in the **Record** menu.
- Press to decrease the volume while playing movies.

Record button:

- In Movie Record mode, press to record movies, press again to stop recording.
- Press to take pictures in Picture Record mode.
- Press to play/pause movies in Movie Plackback mode.
- ❖ Press to start/stop the slideshow in **Picture Playback** mode.
- Press to validate the setting.

Zoom button:

Press to zoom in/out.

Return button:

Press to return to the previous menu/mode.

Mode button:

- Switch between **Movie** mode and **Picture** mode.
- Press to capture a still image while recording a movie.
- Press to switch to **Preview** mode while in **Playback** mode.

Playback button:

Press to turn OFF the camcorder.

Pre-Record/YouTubeTM button:

- In Record mode, press to activate the Pre-Record function. The movie will be recorded 3 seconds before the REC button is pressed.
- ❖ In Movie Playback mode, press to select the current movie to upload to You Tube[™].

Menu button:

- Press to advance to the Record menu.
- Press to roll upward on the Wheel menu.

Menu Rolling button:

Press to roll downward on the Wheel menu.

GMAA00228010

