 


Rowenta

 
A C C E S S

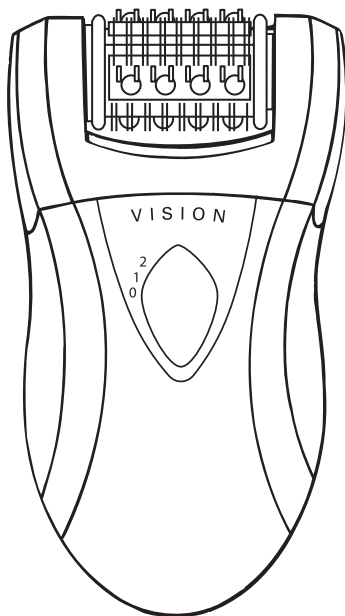

1. DESCRIPTION OF YOUR APPLIANCE

It is normal for the depilator head to vibrate when in operation.
The vibration helps to accentuate the relaxing effect of the massage roller beads. There is nothing wrong with your appliance.

- 1- Pivoting head
- 2- Depilator head
SOFT-PRECISION
- 3- Tweezers
- 4- Hair guides
- 5- Massaging beads
- 6- Micro-peeling head
- 7- Cap
- 8- 2-speed and stop switch /
Précision Light
- 9- Cleaning brush
- 10- Adaptor
- 11- Travel pouch
- 12a- Peeling patch for normal skin
- 12b- Peeling patch "SOFT" for
sensitive skin

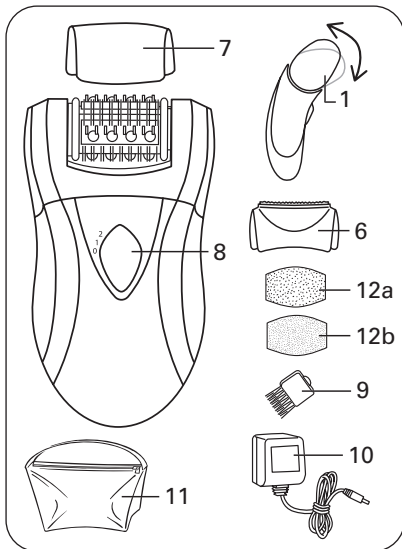

Vision Fonction:


The Vision system installed in your device gives perfect epilation results first time.
By diffusing an ultraluminous halo on the skin, this system makes all your hair – even the finest, shortest and fairest hairs – easier to see.

Pivoting head function:

For comfort of use, your appliance is fitted with a pivoting head that adapts to every contour of the areas to be shaved (legs, arm-pits, bikini line) for a smooth, efficient result.

Pain-free function:

Your appliance is equipped with a roller beads massaging system integrated into the depilation head. The roller beads massage the skin to reduce the sensation of pain linked to depilation.






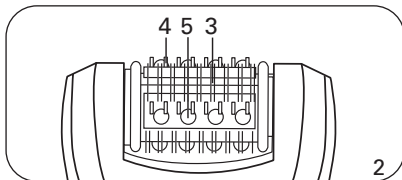


2. SAFETY

GB

Voltage : Ensure that this voltage corresponds to that of your mains supply. Incorrect connection may cause irreparable damage which is not covered by the guarantee. Unplug your appliance after use and before cleaning or other maintenance.

- This appliance is intended for personal domestic use only.
- It must only be used with the enclosed adaptor EM2A1 or EM2A2.
- Never use if the appliance (depilator or adaptor) is damaged or in the event of any damage caused by dropping the appliance (invisible damage may be dangerous).
- This appliance can only be repaired using special tools. In the event of any after sales problem (depilator, adaptor), please consult an approved service agent (see enclosed leaflet).
- We decline any responsibility for damage arising from incorrect use of the appliance or use of the appliance in any way other than that specified in these instructions.
- When the depilator is in use, it must not come into contact with eyelashes, hair, clothes or any other objects, in order to avoid any danger of injury or blockage.
- Do not use the depilator: on your face, on broken, burnt or sore skin, on sensitive areas (varicose veins, moles, birthmarks, warts...), if you suffer from skin complaints, (eczema, inflammations, acne...)
- For hygiene reasons, it is advised that you do not allow anyone else to use your appliance.
- Keep a careful eye on the appliance if used on, or in the presence of children or invalids.

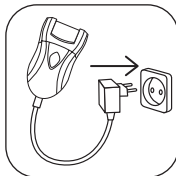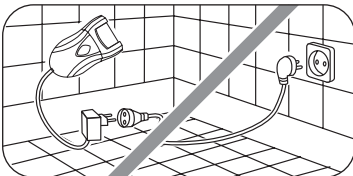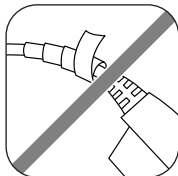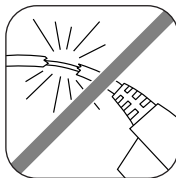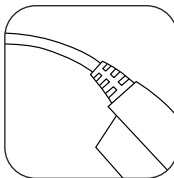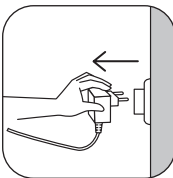





3. PREPARATION OF THE SKIN



- Your skin must be clean and dry.
- Do not apply either cream or hydrating milk before depilation.
- If you previously used a razor for depilation: the first few times you use the depilator, your skin may feel more sensitive, as shaving has made your hair thicker and stronger.
- This sensation will lessen the more you use your depilator: the hair will grow back less quickly and become thinner.
- Your depilator will be much more effective and easier to use if you use it regularly.

We advise you to use your depilator as soon as your hair starts to grow back.

4. CONNECTION

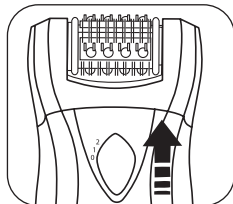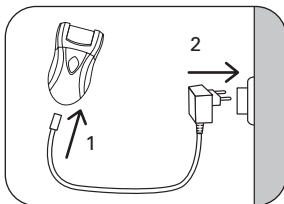

5. STOPPING THE APPLIANCE

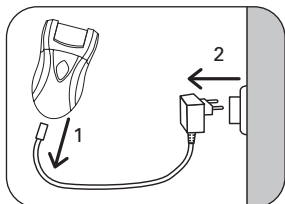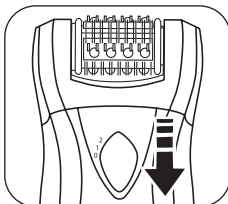

6. PEELING

Peeling will enable you to:

- Raise the hair beforehand for more effective removal.
- Limits growth of subcutaneous hair if practised regularly.

For these reasons, it is advised that you use Access and its Micro-peeling :


- Facility just before shaving and regularly once a week between shaving sessions.
- The sensitivity of the peeling patches to the skin has been dermatologically tested.
- Nevertheless slight, superficial marks may appear on the skin following exfoliation but these will disappear quickly.

You are strongly advised not to use micro-peeling just after shaving to avoid damaging your skin.

And not to use a peeling gel or cream at the same time.



Never carry out peeling on sensitive areas (armpits / bikini line / face).

- After peeling, we advise you to wipe over the area with a moist flannel to remove any dead skin.
- Dry the skin thoroughly afterwards.

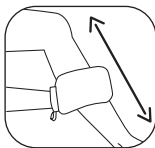

Method :




- Clip on the peeling patch.
- Push the Micro-peeling head in until you hear the click.

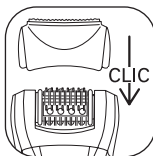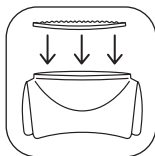

- Move the switch to the on position "1"
- Exfoliate gently, without pressing too hard.

When using the Micro-Peeling function for the first time or if your skin is very delicate, we recommend:

1. skin is wet before peeling, use cotton wool or a flannel to do this
2. making slow and gentle rotating movements when using the appliance
3. not to use the appliance more than twice on the same area.

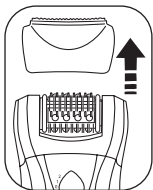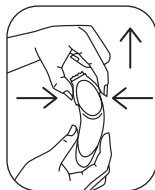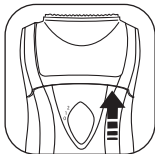


- Remove.

7. LEG HAIR REMOVAL

GB

- Move the switch to the on position "2"

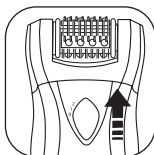

- The switch must always remain visible during use.
- Shave against the lie of the hair, slowly and without pressing, with the shaver perpendicular to your skin.




8. HAIR REMOVAL FROM SENSITIVE AREAS

Preparing the area where you want to remove hair:

- If the hairs are long trim to approximately 1cm.
- Dry the area thoroughly to ensure any trace of deodorant or perspiration are removed.

- Move the switch to the on position "1"

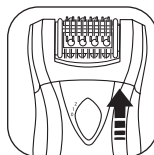

Shave against the lie of the hair, slowly and without pressing, with the shaver perpendicular to your skin.

Important :



- a) Keep your arm raised and stretched throughout the hair removal process.
- b) Stretch the skin to make it easier.

For the armpits:

- First from bottom to top ...
- ... Then from top to bottom.



- For the bikini line:
- After use, remove the head.

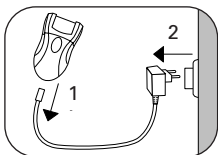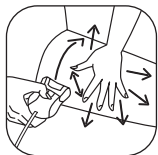

GB

Important: Make sure the skin is stretched properly.

9. CLEANING THE APPLIANCE

- For more thorough cleaning, clean the tweezers with a cloth soaked in alcohol, turning the depilation head manually.



- Cleaning the Micro-peeling head:

It is recommended to change the peeling patch every three peeling sessions or when it becomes worn.



Do not apply alcohol to the body of the appliance to avoid its colours changing.

10. SKIN CARE

Small red spots may appear. They will disappear quickly. For this reason, it is preferable to use your depilator in the evening.
If necessary, apply calming cream after depilation.

11. PROTECTION OF THE ENVIRONMENT

At the end of the life of your product, it should go to a specially-adapted waste recycling centre.



12. CHANGING THE DIODE

Contact your approved Rowenta dealer to replace the switch diode.