


DAEWOO

VACUUM CLEANER

OWNER'S MANUAL

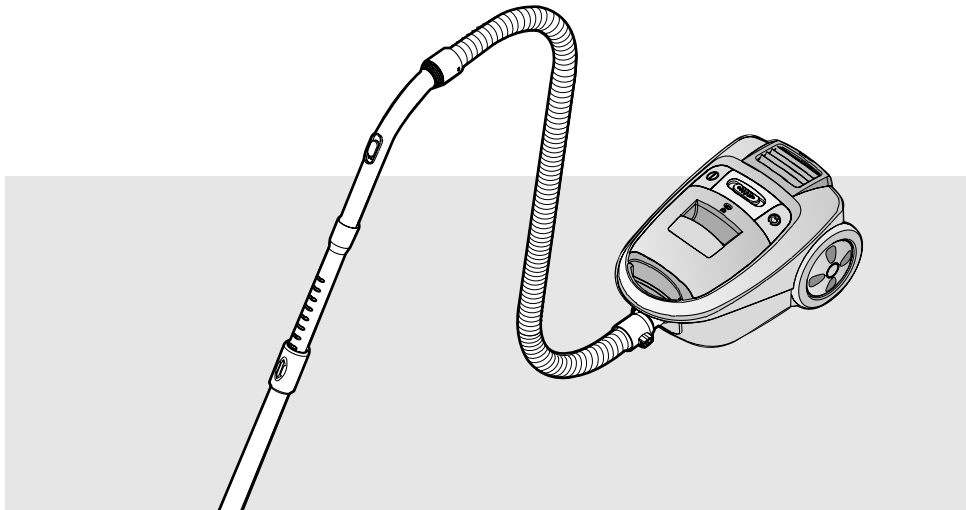

CONTENTS

• Names of parts and operation technique	2
• Replacing the dust bag	4
• Replacing the hepa filter	4
• Empty the dust box	5
• Important safety instructions	6
• Before asking for service	7

READ AND KEEP THIS

- Thank you for purchasing this vacuum cleaner.
- For proper operation, please read this manual before using.

NAMES OF PARTS AND OPERATION TECHNIQUE

EXTENSION PIPE

① Pull(Press)
② Pipe
Button

- Press the button in the direction shown by the arrows and pull(or push) the pipe.

PIPE/BRUSH CONNECTION

① ②
Slide
Suction control
Hose

- Rotate the pipes in the direction shown by the arrows and pull pipes(or floor nozzle) apart.
- If you slide the suction control on the hose, you can control the force required to push the floor nozzle.

DUST INDICATOR

- IF RED : Dust bag(or dust box) is full. Change bag or clean dust box.
- See the next page for instruction on replacing the dust bag or cleaning the dust box.

ON/OFF SWITCH

Press
Slide

- Turn the unit off(on) by pressing the ON/OFF switch button on the unit.
- Slide the knob to control the suction power.(RC-400B Series model)

STORAGE

Nozzle holder
Clip
Nozzle holder
Clip

- Insert nozzle holder in the clip which is built onto the unit.

FLOOR NOZZLE

Carpet
Hard Floor
Press

- Select the appropriate setting of the pedal according to the surface to be cleaned.

HANDLE RELEASE BUTTON

Press
Button
Hose adapter
Hose

- Press the button and pull the hose adapter out of the unit.

CORD REWIND


Press
Cord

- Press the cord rewind button to rewind the cord.

CLEANING THE FILTER


Lift Dust cover
Motor protection filter
Pull
Press

- Lift the dust cover upward toward you and take out the motor protection filter.
- Shake the filter to remove the dust.
- Place the motor protection filter in the correct.
- Press the dust cover firmly.

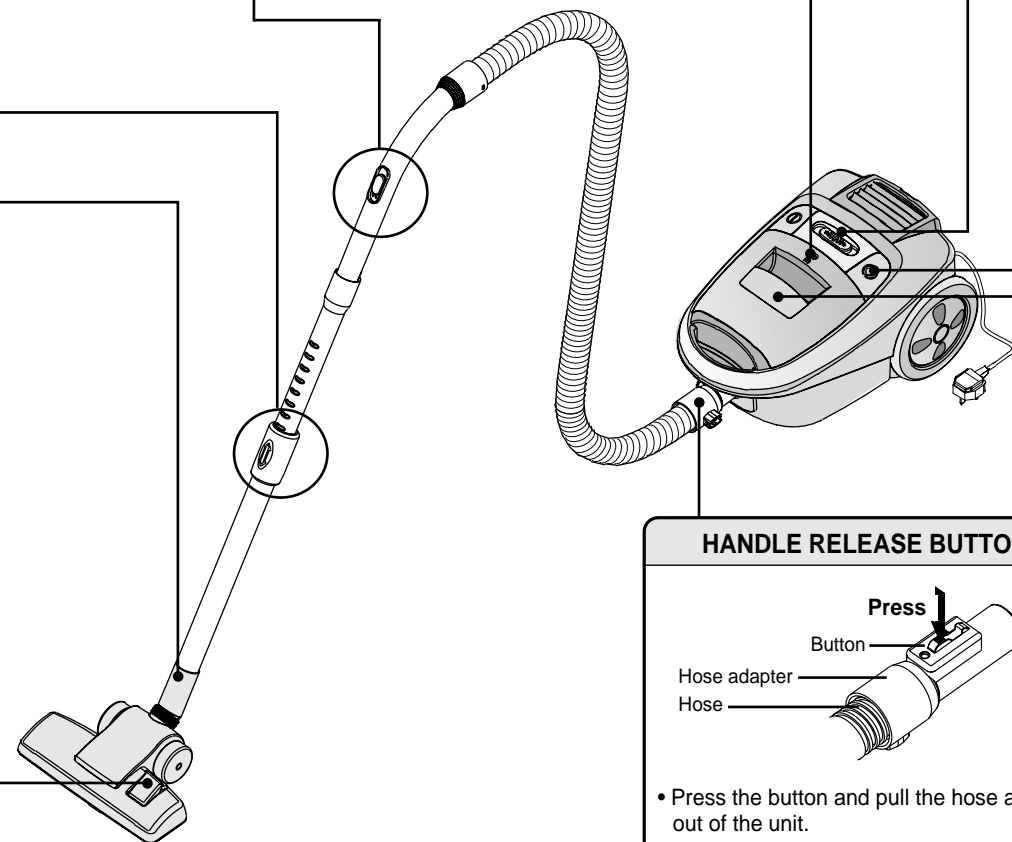

REPLACING THE DUST BAG


1

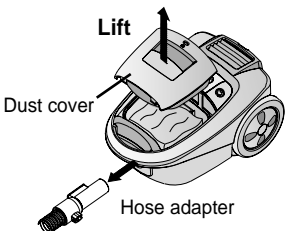

Lift
Dust cover
Hose adapter

- Lift the dust cover upward toward you and pull the hose adapter out of the unit.


2

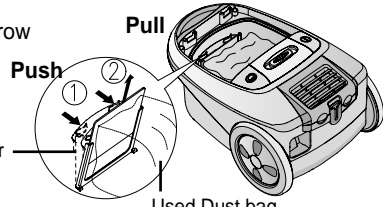

Push
Pull
Dust bag holder
Used Dust bag

- Push the dust bag holder in the direction of the arrow mark and gently pull the used dust bag upward. Throw away the used dust bag.

3

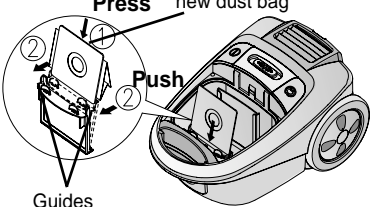


Press
Hard board of the new dust bag
Push
Guides

- When positioning the dust bag over the dust bag holder, you place the hard board of the dust bag between the two guides and insert the lower part of it into the bottom of the holder. Push the dust bag holder in the direction of the arrow mark in the first position. Check to see that the dust bag holder is positioned properly in the unit.

REPLACING THE HEPA FILTER(OPTIONAL)


1

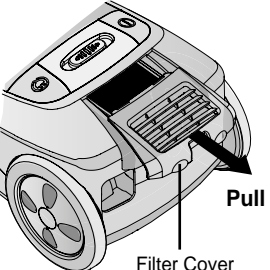

Pull
Filter Cover

- Pull the filter cover toward you.


2

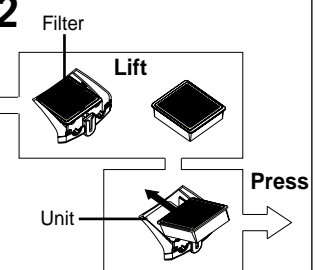

Lift
Filter
Unit
Press

- Lift the end of filter upward and throw away the used filter.

3

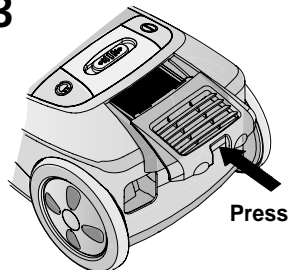


Press

- Insert the end of new filter into the unit and press the filter cover toward unit.

EMPTY THE DUST BOX


1

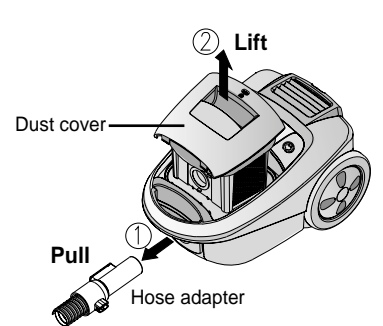

Lift
Dust cover
Pull
Hose adapter

- Pull the hose adapter out of the unit and lift the dust cover upward toward you.


2

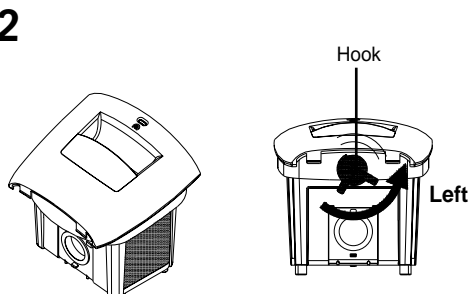

Hook
Left

- When releasing the dust cover, turn the hook to left.


3

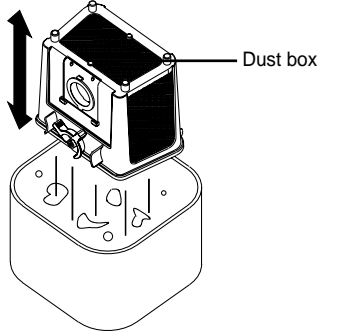

Dust box


- Empty dirt into garbage container.

4

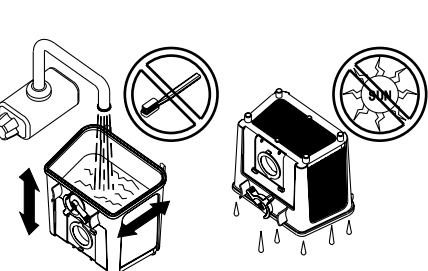

- The dust box may be washed in water. Make sure it is completely dry before using again.


5

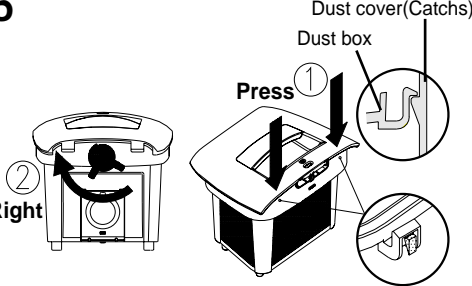

Press
Dust cover(Catches)
Dust box
Right

- Please the dust cover down so that two catches.

6

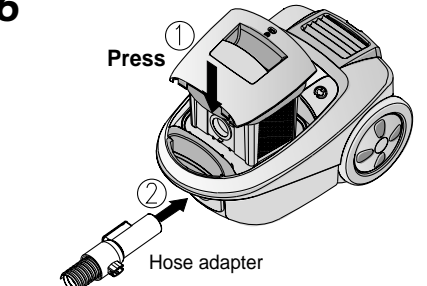

Press
Hose adapter

- Press the dust cover firmly and insert the hose adapter into the unit.

IMPORTANT SAFETY INSTRUCTIONS


This vacuum cleaner should only be used for normal dry household dust and dirt. The manufacturer cannot be held responsible for any damage caused by use or operation of the cleaner contrary to these instructions.

If the cleaner is wrongly operated for a purpose other than that for which it is intended, no liability can be accepted for any possible damage.


- Do not use the cleaner to pick up sharp hard objects, small toys, pins, etc. They may damage the cleaner or dust bag.
- Do not pick up anything that is burning or smoking, such as cigarettes ends, matches or hot ashes.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.




- Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.
- Do not pull the power cord out beyond the specified length.

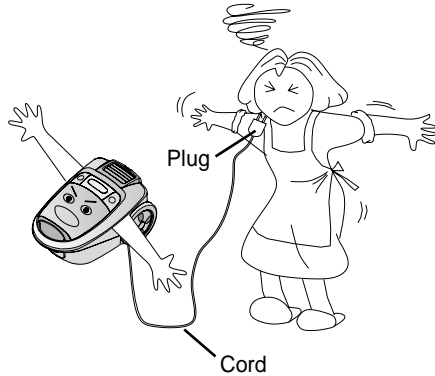

- Never use a damaged dust bag.
- Do not use without dust bag and motor protection filter in place.

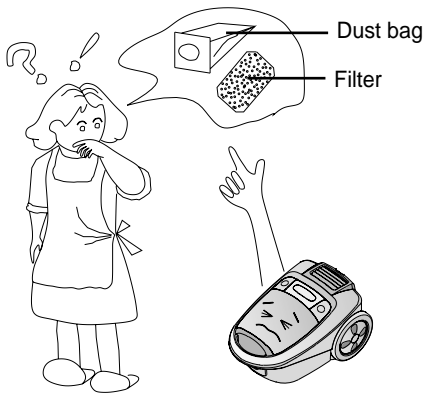

- This product provided with a cable which, if damaged, must be replaced by a repair shop authorized by manufacturer since special tools are required.

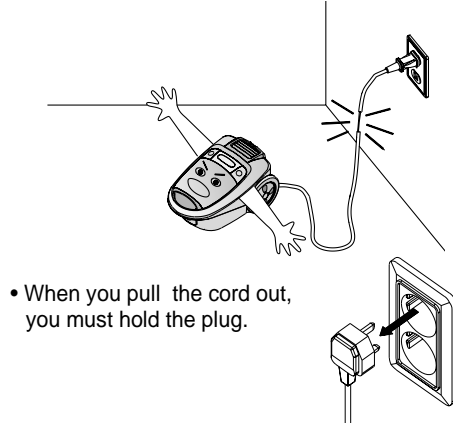

BEFORE ASKING FOR SERVICE

- Please check each item below if you have trouble with your cleaner.
- Before checking, ensure the cleaner is unplugged from the power supply.

PROBLEM	CHECK POINT	SOLUTION
Suction power is weak	Dust bag Floor nozzle Hose, Pipe, Accessories	If it is filled with dust, change it. Remove hair, string and lint build-up in the floor nozzle area. If clogged or blocked, remove the object.
The cleaner does not work.	Plug On/Off switch When the dust bag is full or openings are blocked, the over heating protection for the motor is activated automatically.	Plug in firmly, push On/Off switch to On. Switch off and unplug the cleaner and check the dust bag, openings and blockages. The cleaner can be switched on again after about 30 minutes.
Power cord does not rewind. Power cord is not pulled out of the cleaner.	Power cord	Pull the power cord out a little and press the cord rewind button. Do not pull it by force rewind it a little by pressing the cord rewind button and pull it out.