8. Warranty Information

Swann Communications warrants this product against defects in workmanship and materials for a period of one (1) year from the original purchase date. You must present your receipt as proof of date of purchase for warranty validation.

Any unit which proves defective during the stated period will be repaired without charge for parts or labour or replacement at the sole discretion of Swann. The repair or replacement will be warranted for either ninety days or the remainder of the original one year warranty period, whichever is longer.

The end user is responsible for all freight charges incurred to send the product to Swann's repair centers. The end user is responsible for all shipping costs incurred when shipping to and from any country other than the country of origin.

The warranty does not cover any incidental, accidental or consequential damages arising from the use of or the inability to use this product.

Any costs associated with the fitting or removal of this product. Any costs associated with the fitting or removal of this product by a tradesman or other person or any other costs associated with its use are the responsibility of the end user.

This warranty applies to the original purchaser of the product only and is not transferable to any third party.

Unauthorized end user or third party modifications to any component or evidence of misuse or abuse of the device will render all warranties void.





Theft Deterrent Kit / Anti-Shoplifting Kit

If this product does not work when you first plug it in or you have any concerns, don't take it back to the store!

Use the Installation Guide / Manual in the pack, or

Visit www.swannsecurity.com/help for FAQs, troubleshooting hints & more, or

Contact our expert Tech Support Team...

Email - tech@swannsecurity.com

United States 1-800-627-2799 1-877-274-3695 Sun 4pm-12am, Mon-Fri 8am-12am (PDT)*

Australia 1300 138 324 Mon 9am-5pm, Tues-Fri 1am-5pm (AET) Sat 1am-9am

New Zealand 0800 479 266 Mon I Iam-7pm, Tues-Fri 3am - 7pm Sat 3am-1 Iam (NZDT)

International +61 3 8412 4610 Mon 9am-5pm, Tues-Sat 1am-9am (AET)

*Hours vary during daylight savings times

FCC WARNING STATEMENT:

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation

NOTE: All jurisdictions have specific laws and regulations relating to the use of cameras. Before using any camera for any purpose it is the buyer's responsibility to be aware of all applicable laws and regulations that prohibit or limit the use of cameras and to comply with the applicable laws and regulations.



Quick Start Guide SW276-ASL / SW276-RSL / SW276-TSL

www.swannsecurity.com

I. Package Contents

3 or 4 x MaxiBrite Imitation Camera 3 or 4 x MaxiBrite Stand 4 x Small Security Sticker Large Security Sticker Sign 4 x Imitation Dome Cameras Mounting Hardware Quick Start Guide

2. Attaching Camera Stands



3. Adjusting Camera Angle



Turn the knob to loosen the stand and camera and turn again to tighten

4. Affixing Cameras

I. Find an appropriate location to mount camera

2. Detach stand from camera

3. Use provided scews to fix stand to surface

4. Re-attach camera to stand and adjust angle

5. Affixing Imitation Dome Cameras







I. Find an appropriate location to mount camera

2. Clean surface when dome will be applied


3. Peel back double-sided adhesive

4. Carefully place rim on surface and hold for 30s

6. Placing Cameras



Place cameras near entry points such as front or rear doors, garage etc. Place under eaves and aim towards the garage or down the driveway

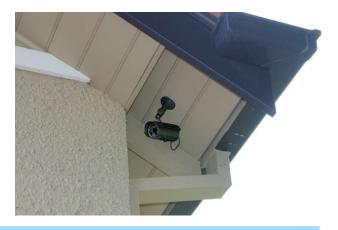

7. Where to Place Security Stickers

- I. In front windows
- 2. On side windows
- 3. On gates/doors
- 4. Near an obvious camera
- 5. On shed doors
- 6. Near cash registers
- 7. In warehouse
- 8. In parking lot



Swann