

JVC

WIDE LCD PANEL TV INSTRUCTIONS

LT-32A1

ENGLISH

HDMI

HIGH-DEFINITION MULTIMEDIA INTERFACE

© 2010 Victor Company of Japan, Limited
GGT0353-001A-H
0610GLT-NF-MT

Safety Precautions

- Thank you for buying this JVC LCD panel television.
To make sure you understand how to use your new TV, please read this manual thoroughly before you begin.
- Follow this manual regarding setup!**
 - Connect only to a 110-240 V, 50/60Hz AC outlet.
 - Make enough room for inserting and removing the power plug!**
 - Place the TV as close to the outlet as possible!
 - The main power supply for this TV is controlled by inserting or removing the power plug.
 - Never cut or damage the power cord!**
 - If the AC plug is not the right shape, or the power cord is not long enough, use an appropriate plug adapter or extension cable. (Consult your retailer)
 - Unplug the power cord when going out!**
 - The power buttons on the remote control and the TV unit cannot completely turn off the TV. (Make appropriate arrangements for bedridden people.)
 - Do not allow the TV to fall!**
 - Do not rest your elbows on, or allow children to hang from the TV.
 - There is a risk that the TV will fall and cause injuries.
 - Make use of the hole on the back of the stand to prevent the TV from falling easily.
 - If the TV is damaged or behaving strangely, stop using it at once!**
 - Unplug the power cord and contact your retailer.
 - Never place anything on the TV!**
 - Placing liquid, naked flames, cloths, paper, etc. on the TV may cause a fire.
 - Never expose to rain or moisture!**
 - To prevent fire or electric shock, never allow liquids to enter the unit.
 - Never insert objects into the cabinet openings!**
 - It may cause a fatal electric shock.
 - Take care when children are near.
 - Hold the TV so as not to scratch the screen!**
 - Do not touch the screen when carrying the TV.
 - Do not carry the TV on your own!**
 - In order to prevent accidents, ensure that the TV is carried by two or more people.
 - For more details on installation, usage and safety → Consult your retailer.**
 - Never insert the power cord by wet hand!**
 - It may cause a fatal electric shock.
 - Keep the TV set away from direct sunlight!**
 - TV set can be damaged.
 - Place the TV set in a neat and dry place. Do not place the product close to source of steam, heat, moisture or oil. Because it may cause a fire hazard or electric shock hazard!**
 - Do not touch an external metal part of the TV set!
 - It may cause an electrocuted.
 - For keep a distance from potential ignition sources to the components or part in side TV set, customer should install TV set with a stand within ± 10 perpendicularly degree.**
 - Never dismantle the rear panel!
 - It may cause an electric shock.
 - Never obstruct the ventilation holes!**
 - It may cause overheating or a fire.
 - Handle LCD panel with care!**
 - Use a soft, dry cloth when cleaning.
 - Never try repair the TV yourself!**
 - If the problem cannot be solved in "Troubleshooting" unplug the power cord and contact your retailer.
 - If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:**
 - Using cabinets or stands recommended by the manufacturer of the television.
 - Only using furniture that can safely support the television.
 - Ensuring the television is not overhanging the edge of the supporting furniture.
 - Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
 - Not standing the television on cloth or other materials placed between the television and supporting furniture.
 - Educating children about the dangers of climbing on furniture to reach the television or its controls.
 - To prevent accidents, firmly attach the TV stands to the TV shelf before using microphone.**
 - Make sure that the subwoofer is in good condition before installing it on the TV.**
 - If the subwoofer has leakage current, it may damage the TV or cause electric shock.

Care when setting

- Power requirements**
 - Connect the power cord only to a 110-240V, 50/60Hz AC outlet.
 - Installation requirements**
 - To avoid overheating, ensure the unit has ample room.
-
- If the microphone is installed, should be lock it's cable follow picture.
-
- Hole for belt
Belt (not provided)
Screw (not provided)
- To prevent the TV from falling thread the belt through the hole on the back of the stand and secure it to the TV rack.
- * Please see how to set up the TV and connection in GGT0356-001A-H.

Using the TV's Menu ---> Area - 2

- Picture Mode** Select the picture as you like. (Standard / Soft / Bright)
- Backlight** Darker <-> Brighter
- Picture** Lower <-> Higher
- Brightness** Darker <-> Brighter
- Detail** Softer <-> Sharper
- Color** Lighter <-> Deeper
- Tint** Reddish <-> Greenish *Only NTSC
- White Balance** Select the white balance of the picture. (Cool / Mid / Warm)
- Features**
 - Clear SD** For clearly picture (Off / Mode-1 / Mode-2)
 - Digital VNR** Reduces the amount of noise in original picture. (Off / On)
 - Color Management** For natural - looking pictures. (Off / On)
 - Picture Management** Fix bright / dark pictures. (Off / On)
 - Dynamic Backlight** Reduces the brightness of the backlight when the screen is dark. (Off / On)
 - Colour System** Select an appropriate colour system. (Auto / PAL / SECAM / NTSC 3.58 / NTSC 4.43 / PAL-M / PAL-N)
 - Zoom** Change the aspect ratio. (Auto / Regular / Panoramic / 14:9 Zoom / 16:9 Zoom / 16:9 Zoom Subtitle / Full)
- MTS** Select the stereo and SAP broadcasted programs. (Stereo / SAP / Mono)
- Sound Meister** Set sound theme to match your listening source. (Off / Dynamic / Pure / Living)
- Bass** Compensates low frequencies to widen the frequency band. (Weaker <-> Stronger)
- Treble** Compensates high frequencies to widen the frequency band. (Weaker <-> Stronger)
- Surround** Expands the stereo sound naturally. (Narrower <-> Wider)
- Balance** Left Stronger <-> Right Stronger
- Voice Enhancer** Uses sound enhancement technology. (Off / On)
- AI Volume** Prevent sudden increase or decrease of sound. (Off / On)
- Subwoofer Out** Chooses to connect subwoofer. (Off / On)
- Subwoofer Level** Adjusts sound level of your subwoofer. (Lower <-> Louder)
 - When Subwoofer Out set to On, you can adjust Subwoofer Level.
- Karaoke** You can enjoy to reduce the vocals for your own karaoke.
 - Karaoke** Chooses to reduce the vocals. (Off / Mode-1 / Mode-2)
 - Main Volume** Adjusts volume level. (Lower <-> Louder)
 - Microphone Volume** Adjusts volume level of microphone. (Lower <-> Louder)
- On Timer** Turns on the TV from standby mode. CH Select a channel. (Air : CH02 - CH69 , Cable : CC01 - CC125)
On Timer Set a time. (00:00 - 12:00)
Turns off the TV to standby mode. (Off / 10 / 20 / ... / 120)
Stop children from watching specific channels
- Sleep Timer Channel Guard** Display a blue screen and mute the sound when the signal is weak or absent. (Off / On)
- Child Lock** Disables the side control buttons of the TV. (Off / On)
- Auto Shutoff** Set the power to turn off if no TV signal (RF) is received and no operation is performed for about 15 minutes. (Off / On)
- Favorite Setting** Delete the favourite channel that you registered by **On Timer**
- Power Lamp** Sets power lamp lighting while the TV is on. (Off / On)
- Eco Mode** Adjust picture contrast to match your room brightness. (Off / Eco-1 / Eco-2 / Max-Eco)
 - Automatically registers channels.
 - Skip** Skip the channel by **Remote**
 - Cancel** Cancel the skip channel by **Remote**
 - ID** Edit a channel name by **Remote**
 - Channels are to be skipped cannot be selected by the CHANNEL + / - button.
 - The skip can be set to all channels of Air (CH02 - CH69) and Cable (CC01 - CC125)
 - Select your desired on screen display language. (Video / Component)
 - Rocket Start** TV can turn on quickly. (Off / On)
 - When Rocket Start is On, power consumption at standby mode will more than normal standby mode.
 - Select the desired caption or text channel.
 - Closed Caption** Select to view close caption or text information. (Off / CC / Text)
 - Caption** Select the desired caption. (CC1 / CC2 / CC3 / CC4)
 - Text** Select the desired text channel. (T1 / T2 / T3 / T4)
 - Closed Caption is not available for component signal.
 - HDMI Setting** Setting for HDMI input. (Size / Audio)
 - PC Setting** Setting for PC input. (Auto / PC Position / Phase / Pixel)
- Auto Program** Automatically registers channels.
- Channel Summary** Skip the channel by **Remote**
 - Cancel the skip channel by **Remote**
 - ID** Edit a channel name by **Remote**
 - Channels are to be skipped cannot be selected by the CHANNEL + / - button.
 - The skip can be set to all channels of Air (CH02 - CH69) and Cable (CC01 - CC125)
 - Select your desired on screen display language. (Video / Component)
 - Rocket Start** TV can turn on quickly. (Off / On)
 - When Rocket Start is On, power consumption at standby mode will more than normal standby mode.
 - Select the desired caption or text channel.
 - Closed Caption** Select to view close caption or text information. (Off / CC / Text)
 - Caption** Select the desired caption. (CC1 / CC2 / CC3 / CC4)
 - Text** Select the desired text channel. (T1 / T2 / T3 / T4)
 - Closed Caption is not available for component signal.
 - HDMI Setting** Setting for HDMI input. (Size / Audio)
 - PC Setting** Setting for PC input. (Auto / PC Position / Phase / Pixel)
- Language** Switch between video and component signal. (Video / Component)
- Rocket Start** TV can turn on quickly. (Off / On)
 - When Rocket Start is On, power consumption at standby mode will more than normal standby mode.
 - Select the desired caption or text channel.
 - Closed Caption** Select to view close caption or text information. (Off / CC / Text)
 - Caption** Select the desired caption. (CC1 / CC2 / CC3 / CC4)
 - Text** Select the desired text channel. (T1 / T2 / T3 / T4)
 - Closed Caption is not available for component signal.
 - HDMI Setting** Setting for HDMI input. (Size / Audio)
 - PC Setting** Setting for PC input. (Auto / PC Position / Phase / Pixel)
- Auto Program** Automatically registers channels.
- Channel Summary** Skip the channel by **Remote**
 - Cancel the skip channel by **Remote**
 - ID** Edit a channel name by **Remote**
 - Channels are to be skipped cannot be selected by the CHANNEL + / - button.
 - The skip can be set to all channels of Air (CH02 - CH69) and Cable (CC01 - CC125)
 - Select your desired on screen display language. (Video / Component)
 - Rocket Start** TV can turn on quickly. (Off / On)
 - When Rocket Start is On, power consumption at standby mode will more than normal standby mode.
 - Select the desired caption or text channel.
 - Closed Caption** Select to view close caption or text information. (Off / CC / Text)
 - Caption** Select the desired caption. (CC1 / CC2 / CC3 / CC4)
 - Text** Select the desired text channel. (T1 / T2 / T3 / T4)
 - Closed Caption is not available for component signal.
 - HDMI Setting** Setting for HDMI input. (Size / Audio)
 - PC Setting** Setting for PC input. (Auto / PC Position / Phase / Pixel)
- Language** Switch between video and component signal. (Video / Component)
- Rocket Start** TV can turn on quickly. (Off / On)
 - When Rocket Start is On, power consumption at standby mode will more than normal standby mode.
 - Select the desired caption or text channel.
 - Closed Caption** Select to view close caption or text information. (Off / CC / Text)
 - Caption** Select the desired caption. (CC1 / CC2 / CC3 / CC4)
 - Text** Select the desired text channel. (T1 / T2 / T3 / T4)
 - Closed Caption is not available for component signal.
 - HDMI Setting** Setting for HDMI input. (Size / Audio)
 - PC Setting** Setting for PC input. (Auto / PC Position / Phase / Pixel)
- Auto Program** Automatically registers channels.
- Edit / Manual Move** Move a channel position by **Remote** and Adjust by **Remote**
 - ID** Edit a channel name by **Remote**
 - Insert** Insert a channel by **Remote**
 - Select a CH/CC by **Remote**
 - Enter number by 0-9 buttons.
 - Delete** Delete a channel by **Remote**
 - Manual** Register a new channel by **Remote**
 - Beginning channel search by **Remote** and Channel fine tuning by **Remote** and **Remote**
 - If the picture or sound is unnatural by **Remote** for select a system.
- Language Video-2 Setting** Switch between video and component signal. (Video / Component)
- Rocket Start** TV can turn on quickly. (Off / On)
 - When Rocket Start is On, power consumption at standby mode will more than normal standby mode.
 - Select Teletext language group. (Group-1 / Group-2 / Group-3 / Group-4 / Group-5)
- Teletext Language** Select your desired on screen display language. (Video / Component)
- HDMI Setting** Setting for HDMI input. (Size / Audio)
- PC Setting** Setting for PC input. (Auto / PC Position / Phase / Pixel)

Useful functions

- Channel Guard** : Stop children from watching specific channels.
1 Select "Channel Guard"
2 Select a channel and lock it (**Remote**) : Locked
- Subwoofer Out** : You can enjoy subwoofer sound from Subwoofer out.
1 Select "Subwoofer Out"
2 Select a channel and lock it (**Remote**) : Locked
- Karaoke** : You can enjoy to reduce the vocals for your own karaoke.
1 Select "Karaoke"
2 Adjust "Main Volume" and "Microphone Volume"
- Channel Guard** : Stop children from watching specific channels.
1 Select "Channel Guard"
2 Select a channel and lock it (**Remote**) : Locked
- Subwoofer Out** : You can enjoy subwoofer sound from Subwoofer out.
1 Select "Subwoofer Out"
2 Select a channel and lock it (**Remote**) : Locked
- Karaoke** : You can enjoy to reduce the vocals for your own karaoke.
1 Select "Karaoke"
2 Adjust "Main Volume" and "Microphone Volume"
- Channel Guard** : Stop children from watching specific channels.
1 Select "Channel Guard"
2 Select a channel and lock it (**Remote**) : Locked
- Subwoofer Out** : You can enjoy subwoofer sound from Subwoofer out.
1 Select "Subwoofer Out"
2 Select a channel and lock it (**Remote**) : Locked
- Karaoke** : You can enjoy to reduce the vocals for your own karaoke.
1 Select "Karaoke"
2 Adjust "Main Volume" and "Microphone Volume"
- Channel Guard** : Stop children from watching specific channels.
1 Select "Channel Guard"
2 Select a channel and lock it (**Remote**) : Locked
- Subwoofer Out** : You can enjoy subwoofer sound from Subwoofer out.
1 Select "Subwoofer Out"
2 Select a channel and lock it (**Remote**) : Locked
- Karaoke** : You can enjoy to reduce the vocals for your own karaoke.
1 Select "Karaoke"
2 Adjust "Main Volume" and "Microphone Volume"

* View a locked channel by use the numerical buttons to enter the channel number. When **Remote** appears, press "Display" button and enter your "ID No."
• You cannot save or export the snapshot.
• Freeze function is not available for HDMI, PC and Component signal.

Remote control buttons and functions

- 1 Power On / Off
- 2 Colour buttons
- 3 Turn on "Clear SD"
- 4 Turn on "Zoom"
- 5 Turn on "Eco Mode"
- 6 Turn on "Karaoke"
- 7 Favourite channel setting
- 8 Display on-screen menu
- 9 Operate the menu
- 10 To previous screen
- 11 Turn on "Sound Meister"
- 12 Adjust Volume
- 13 Function for viewing Teletext
- 14 To Teletext
- 15 Change channel / Page / Hyper Scan
- 16 Channel information
- 17 Switch between TV / Video input
- 18 Return Plus / Return function
- 19 Change channel / page

Volume control / Turn off muting
For button side front will be displayed on-screen menu
When press and hold the button for 3 seconds, on-screen menu will be displayed.
To exit, press and hold the button again for 3 seconds.

Zoom : Change the aspect ratio
V-Sroll
• When 720p or 1080i or 1080p signal is received, "Full" and "Slim" can be selected.
• In PC mode, "Regular" and "Full" can be selected.

Hyper Scan :
Press and hold **Remote** PR changes without changing the picture screen. Once you release the button, the picture of the selected PR will appear.

Return Plus : Return to the frequently viewed channel.
Return Plus Programmed by select the frequently viewed channel then press and hold **Remote**.
Return Plus Canceled by press and hold **Remote**.

Return : Return to the previously viewed channel.

Favourite channel setting.

- 1. Register the favourite channel
2. Recall the favourite channel

Insert the batteries
Use two "AAA/R03" dry cell batteries. Insert the batteries from the **Remote** end, making sure the **Remote** and **Remote** polarities are correct.

WARNING:
Batteries shall not be exposed to excessive heat such as direct sunshine, fire or the like.

If this symbol is shown, it is only valid in the European Union.

WARNING:

To prevent the spread of fire, keep candles or other open flames away from this product at all times.

Initial Settings

- 1 Turn on the TV.
 - 2 Select a language.
 - 3 Select Country Area.
- Area-1 : Asia, Middle East, Europe, Oceania, Africa
Area-2 : South America, Philippines

Useful functions (continued)

- Eco Mode** : Adjusts picture contrast according to the brightness of your room to reduce power consumption.
 - Off** : Deactivates the function.
 - Eco-1** : Picture is darkened for the 1st level.
 - Eco-2** : Picture is darkened for the 2nd level (more than the 1st level).
 - Max-Eco** : Only sound is available, no picture (this is to save energy in such situation as when you want to listen to the news while doing other house works at the same time).
 - After choosing Eco Mode as Max-Eco and exiting the Menu, picture will go off in 3 seconds.
 - When you want the picture to appear again, press any button on the remote control then function will be reset back to "Off".
 - After unplugging the TV or press "Power off" button, this function will be reset back to "Off".
- Viewing Teletext**
You can watch the Teletext broadcast channel with Text Functions.
- Watching Video or DVDs**
1 Select the input source.
2 Select "Set Up" Menu.
 - HDMI setting** : Setting for HDMI input.
 - Auto / 1 / 2
 - If wrong screen size appears in 480p (525p), change to "1" or "2".
 - Audio** : Auto / Digital / Analogue
 - If no sound, change to "Analogue" or "Digital".
 - PC Setting** : Setting for PC input.
 - Automatic adjust by **Remote**.
 - Adjust screen position by **Remote**.
 - Phase** : Sets the focus of screen.
 - Pixel** : Adjusts the horizontal feature of screen.
- Severe noise or snow**
Check the aerial cable and TV connections .
Check the direction of the aerial.
Check the aerial or its cable damaged or not.
- Patterns, stripes or noise**
Interference caused by devices such as an amplifier, personal computer, or a hair drier. Move it away from TV.
Ghosting (Doubling of images)
Interference caused by signal reflection from mountains or building. Try to adjust the aerial's direction or use another antenna.
Cannot turn it on
Ensure the power cord is connected to the AC outlet correctly.
Cannot operate the remote control.
The batteries may be exhausted. Replace with new batteries. Ensure that you are operation the remote control at less than 7 meters from the front of your TV.
Remote control stops working
Unplug TV, several minutes later plug it in again.
Side control buttons do not work
Switch "Child Lock" to "Off".
Aspect ratio changed unintentionally
Press " " button to return to your settings.
PC screen alignment is off
Adjust the "PC Position" in "PC Setting" of Set Up menu.
Blue screen appears on the screen
Switch "Blue Back" to "Off".
Strange picture when using an external device
If the top of the image is distorted, check the video signal quality itself. If movement appears unnatural when receiving a signal from a DVD player, etc. with 625p (progressive-scanning), change the output setting of the external device to 625i (interface-scanning).
- Poor picture quality**
Unnatural colour >>> Adjust "Colour" and "Backlight".
Check "Colour System". If "Auto" is selected. Select the specific colour system manually.
- Poor sound**
Adjust the "Bass" and "Treble".
If receiving a poor signal in "Stereo/Hi" switch to "Mono".
Adjust the channel reception using "Manual".
For HDMI signal, wrong screen size.
Switch "Size" in "HDMI Setting" to "1" or "2".
For HDMI signal, green and distorted screen
Wait a little for the signal to stabilize when switching the signal format an "HDMI" device.
For HDMI signal, no picture / No sound
Use the cable marked with HDMI logo. Check if the device is compliant with HDMI. Switch "Audio" in "HDMI Setting" to "Digital" or "Auto" for HDMI devices, or "Analogue" or "Auto" for DVI devices.
Some functions do not work
It is not a malfunction. Some functions (dark background) in the menu do not work depending on the situation.
Black or white dots appear on the screen.
LCD panels use fine dots ("pixels") to display images. While more than 99.99% of these pixels function properly, a very small number of pixels may not light, or may light all the time. It is not a malfunction.
No picture, No sound
Some input do not output from OUTPUT terminal.
Subwoofer, No sound
May be signal source is not low frequency bass signal. Check subwoofer cable connected correctly.
Feedback sound symptoms
Keep the microphone away from the TV's speakers.
Echo
Lower the sound level in "Microphone Volume" in order to prevent the echo.

Troubleshooting

- Severe noise or snow**
Check the aerial cable and TV connections .
Check the direction of the aerial.
Check the aerial or its cable damaged or not.
- Patterns, stripes or noise**
Interference caused by devices such as an amplifier, personal computer, or a hair drier. Move it away from TV.
Ghosting (Doubling of images)
Interference caused by signal reflection from mountains or building. Try to adjust the aerial's direction or use another antenna.
Cannot turn it on
Ensure the power cord is connected to the AC outlet correctly.
Cannot operate the remote control.
The batteries may be exhausted. Replace with new batteries. Ensure that you are operation the remote control at less than 7 meters from the front of your TV.
Remote control stops working
Unplug TV, several minutes later plug it in again.
Side control buttons do not work
Switch "Child Lock" to "Off".
Aspect ratio changed unintentionally
Press " " button to return to your settings.
PC screen alignment is off
Adjust the "PC Position" in "PC Setting" of Set Up menu.
Blue screen appears on the screen
Switch "Blue Back" to "Off".
Strange picture when using an external device
If the top of the image is distorted, check the video signal quality itself. If movement appears unnatural when receiving a signal from a DVD player, etc. with 625p (progressive-scanning), change the output setting of the external device to 625i (interface-scanning).
- Poor picture quality**
Unnatural colour >>> Adjust "Colour" and "Backlight".
Check "Colour System". If "Auto" is selected. Select the specific colour system manually.
- Poor sound**
Adjust the "Bass" and "Treble".
If receiving a poor signal in "Stereo/Hi" switch to "Mono".
Adjust the channel reception using "Manual".
For HDMI signal, wrong screen size.
Switch "Size" in "HDMI Setting" to "1" or "2".
For HDMI signal, green and distorted screen
Wait a little for the signal to stabilize when switching the signal format an "HDMI" device.
For HDMI signal, no picture / No sound
Use the cable marked with HDMI logo. Check if the device is compliant with HDMI. Switch "Audio" in "HDMI Setting" to "Digital" or "Auto" for HDMI devices, or "Analogue" or "Auto" for DVI devices.
Some functions do not work
It is not a malfunction. Some functions (dark background) in the menu do not work depending on the situation.
Black or white dots appear on the screen.
LCD panels use fine dots ("pixels") to display images. While more than 99.99% of these pixels function properly, a very small number of pixels may not light, or may light all the time. It is not a malfunction.
No picture, No sound
Some input do not output from OUTPUT terminal.
Subwoofer, No sound
May be signal source is not low frequency bass signal. Check subwoofer cable connected correctly.
Feedback sound symptoms
Keep the microphone away from the TV's speakers.
Echo
Lower the sound level in "Microphone Volume" in order to prevent the echo.

Initial Settings (continued)

- If you select Country Area to "Area-1"**
4 Select the teletext language group.
5 Automatically register channels (Auto Program).
6 Check what was registered.
- If you select Country Area to "Area-2"**
4 Select Air or Cable.
5 Searching for the channels (Auto Program).
6 Check what was registered.

Using the TV's Menu ---> Area - 1

- 1 Select Main menu. (Picture / Sound / Features / Set Up)
- 2 Select sub menu.
- 3 Change setting.
- 4 Display function setting.
- 5 Select function.
- 6 Change setting.

- 1 On Timer
- 2 Sleep Timer
- 3 Channel Guard
- 4 Blue Guard
- 5 Child Lock
- 6 Auto Shutoff
- 7 Favourite Setting
- 8 Power Lamp
- 9 Eco Mode
- 10 Auto Program
- 11 Edit / Manual Move
- 12 ID
- 13 Insert
- 14 Delete
- 15 Manual
- 16 Language
- 17 Video-2 Setting
- 18 Rocket Start
- 19 Teletext Language
- 20 HDMI Setting
- 21 PC Setting

Technical information

Sound and Colour system in your country or region		What is "Clear SD"	
Area	Country or Region	System	System
Asia, Middle East	Bahrain, Kuwait, Oman, Qatar, United Arab Emirates, Yemen, Indonesia, Malaysia, Singapore, Thailand, India, etc.	B/G	PAL
	China, Vietnam, etc.	D/K	I
	Hong Kong, etc.	I	
Europe	Islamic Republic of Iran, Lebanon, Saudi Arabia, etc.	B/G	SECAM
	Philippines, Taiwan, Myanmar, etc.	M	NTSC
	Russia, etc.	M	SECAM
	Czech Republic, Poland, etc.	D/K	SECAM
Oceania	Germany, Holland, Belgium, etc.	B/G	PAL
	UK, etc.	I	
Africa	Australia, New Zealand, etc.	B/G	PAL
	Republic of South Africa, etc.	I	
	Nigeria, etc.	B/G	PAL
South America	Egypt, Morocco, etc.	B/G	SECAM
	Argentina, Paraguay, Uruguay	N	PAL
	Brazil	M	PAL
	Chile, Peru, Bolivia, Colombia, Venezuela, Ecuador, etc.	M	NTSC

PC Signals that can be displayed

Resolution	640 x 480 (VGA) / 1024 x 768 (XGA)
Vertical frequency	60.0

* Macintosh* computers are not supported. (Macintosh is a registered trademark of Apple Computer, Inc.)

Specification

Main unit		Terminals / Connectors		
		Terminal name	Terminal type / Signal type (IN)	
Broadcasting systems	Area-1 B / G / I / D / K / M / N	VIDEO-1	RCA connectors x 3 / Composite video, Audio L/R	
	Area-2 M / N	VIDEO-2	RCA connectors x 5 / Composite video, Analogue component 480i (525i) / 576i (625i), Progressve 480p (525p) / 576p (625p), HD : 720p (750p) / 1080i (1125i) / 1080p (1125p)	
Colour systems	Area-2 NTSC 3.58 / PAL-M / PAL-N	HDMI	HDMI 480i (525i) / 480p (525p) / 576i (625i) / 576p (625p) / 720p (750p) / 1080i (1125i) / 1080p (1125p)	
	Area-1 VHF low channel (VL) = 46.25 to 140.25 MHz VHF high channel (VH) = 147.25 to 423.25 MHz UHF channel (U) = 431.25 to 863.25 MHz		HDMI connector x 1	HDMI 480i (525i) / 480p (525p) / 576i (625i) / 576p (625p) / 720p (750p) / 1080i (1125i) / 1080p (1125p)
Channels and frequencies	Area-2 VHF low channel (VL) = 55.25 to 127.25 MHz VHF high channel (VH) = 133.25 to 361.25 MHz UHF channel (U) = 367.25 to 801.25 MHz	HDMI Analog / DVI Analog / PC Audio	PC INPUT	D-SUB (15 pins) x 1 / Analogue PC signal
	Area-1 VHF low channel (VL) = 46.25 to 140.25 MHz VHF high channel (VH) = 147.25 to 423.25 MHz UHF channel (U) = 431.25 to 863.25 MHz		HDMI Analog / DVI Analog / PC Audio	RCA connectors x 2 / Audio L / R
	Area-2 VHF low channel (VL) = 55.25 to 127.25 MHz VHF high channel (VH) = 133.25 to 361.25 MHz UHF channel (U) = 367.25 to 801.25 MHz		Audio output (Rated power output)	6 W + 6 W
Sound-multiplex systems	NICAM (I / B / G / D / K), AZ (B / G / D / K)	PC INPUT	HDMI Analog / DVI Analog / PC Audio	105 W [0.7 W] [16 W]
	MTS (Multi-channel Television Sound)		Speakers	(4 cm x 16 cm) x 2
	FLOF (Fastext), WST (World System Teletext)		Power consumption (standby)	105 W [0.7 W] [16 W]
Teletext systems	NICAM (I / B / G / D / K), AZ (B / G / D / K)	Microphone	Dimensions (W x H x D: mm)	791.8 x 571.7 x 203.5 [791.8 x 520.5 x 103.9]
	MTS (Multi-channel Television Sound)		Weights (without stand)	15 kg [12 kg]
	FLOF (Fastext), WST (World System Teletext)		Accessories	Power cord x 1 / Remote control unit : RM-C2022 x 1 / AAA/R03 dry cell battery x 2 / Screw x 8

• If the characters are unreadable. ➔ Select different Teletext language group.

• HDMI Analog / DVI Analog / PC Audio use terminal common with VIDEO-2.
• We may change the design and specifications without notice.
• HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

• If the characters are unreadable. ➔ Select different Teletext language group.