

Sunbeam

Avalanche

Ice Shaver

Instruction/Recipe Booklet
IS6800

Please read these instructions carefully
and retain for future reference.



Contents

Sunbeam's safety precautions	1
Features of your Avalanche	2
Using your Avalanche	4
Care and cleaning	5
Recipe ideas	7
Cocktail recipes for adults	8

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώστε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاط‌های بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's safety precautions

SAFETY PRECAUTIONS FOR YOUR SUNBEAM AVALANCHE ICE SHAVER.

- This appliance is not a toy.
 - Use caution when washing and drying the appliance as the ice shaving blade is extremely sharp.
 - Do not place any part of this appliance in a dishwasher.
 - The ice shaving blade should be removed before disassembling this appliance for added safety.
 - The appliance should be disconnected from the mains prior to cleaning.
- Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:**
- Read carefully and save all the instructions provided with an appliance.
 - Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
 - Turn the power off and remove the plug when the appliance is not in use and before cleaning.
 - Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
 - Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
 - Close supervision is necessary when your appliance is being used near children or infirm persons.
 - Never leave an appliance unattended while in use.
 - Young children should be supervised to ensure that they do not play with the appliance.
 - Do not use an appliance for any purpose other than its intended use.
 - Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
 - Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
 - For safety reasons and to avoid maintenance by unskilled persons, some appliances are 'sealed' using tamperproof screws. Such appliances should always be returned to the nearest Sunbeam Appointed Service Centre for adjustment or repair if required.
 - Do not operate any electrical appliance with a damaged cord or after the appliance has been dropped or damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
 - For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
 - Do not immerse the appliance in water or any other liquid unless recommended.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

Features of your Sunbeam Avalanche

Simple operation


No freezer-moulds needed, just add ice cubes from your freezer, lower the lid and hold for instant ice treats.


Removable ice shaving blade

Stainless steel blades shave ice cubes.

Removable snow catcher

Shaved ice drops into the catcher without any mess.

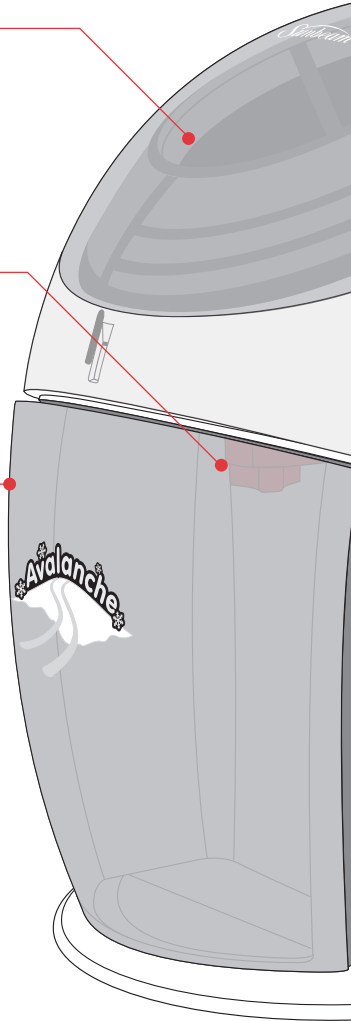

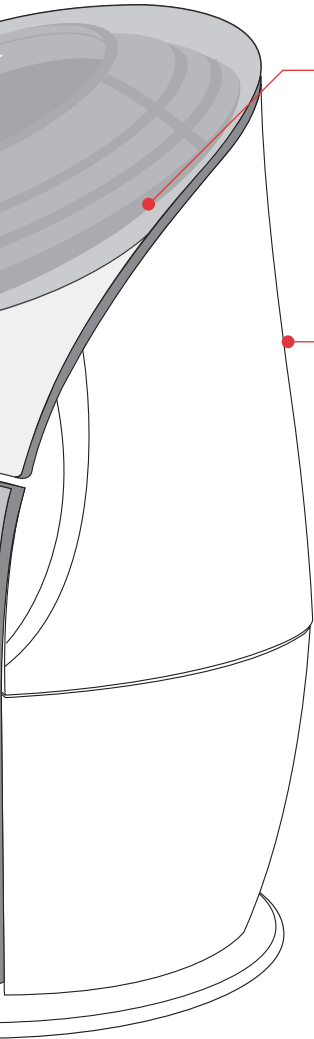

Lid with safety switch

A safety feature is built into the lid. Avalanche will only operate if the lid is firmly pressed.

Powerful motor

Swiftly shaves the ice into a blizzard of fluffy snow.

Using your Avalanche

1. Clean all components prior to first use and replace, (see Care and Cleaning).
 2. Plug the unit into a 230-240V power outlet and turn the power on.
 3. Ensure the snow catcher is correctly positioned in the Avalanche.
 4. Raise the safety lid by lifting the flap, see figure 1. The number of ice cubes will vary depending on their size. As a guide, add 6-8 ice cubes, or fill the chamber.
 5. Lower the safety lid and press down. This will activate the Avalanche and shaved ice will dispense into the snow catcher, see figure 2.
 6. Once all the ice cubes have been shaved, refrain from pressing safety lid, to turn the Avalanche off.
- Tip:** Add your favourite cordial or juice to your shaved ice to make a delicious ice treat.

Figure 1

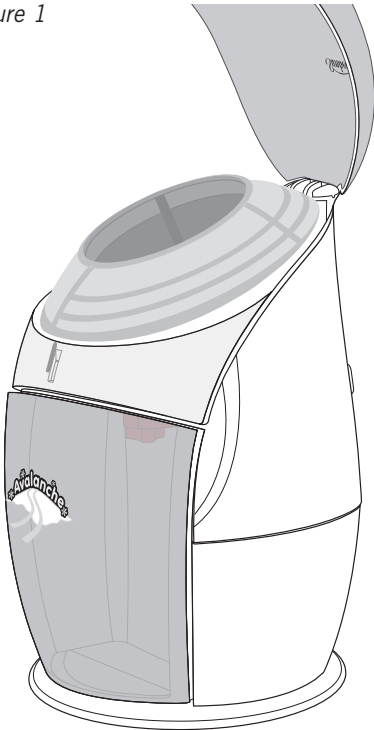 


Figure 2



Care and cleaning

Wash snow catcher in warm soapy water.
Wipe exterior of the Avalanche with a damp soft cloth.


Disassembling your Avalanche

Your Avalanche comes apart for thorough cleaning.

1. To remove snow catcher, grip sides and slide out.
2. Remove the stainless steel shaving blade by simply unscrewing the red nut clockwise, see figure 3. When you have finished cleaning, be sure to replace the shaving blade back into position and screw anti-clockwise to secure.


Note: Use caution when cleaning or removing the blade as it is extremely sharp.

Figure 3

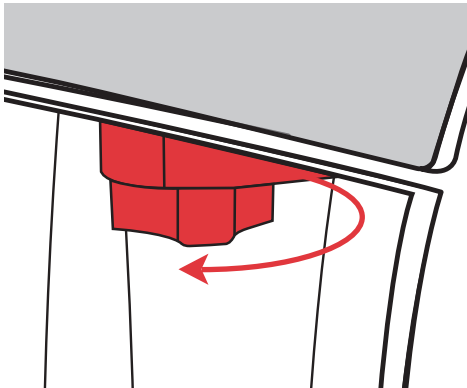

3. Raise the safety lid. With one hand press and hold button at the back of the unit whilst using the free hand to rotate the ice-cube chamber anti-clockwise, see figure 4.


Figure 4

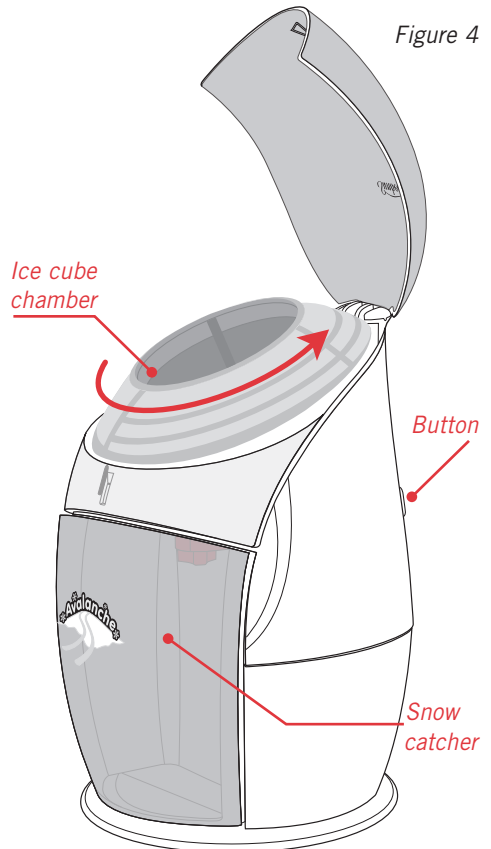

Care and cleaning continued

4. Continue to turn the ice cube chamber anti-clockwise until you can lift it out, see figure 5.
5. Wash ice cube chamber in warm soapy water.

Figure 5

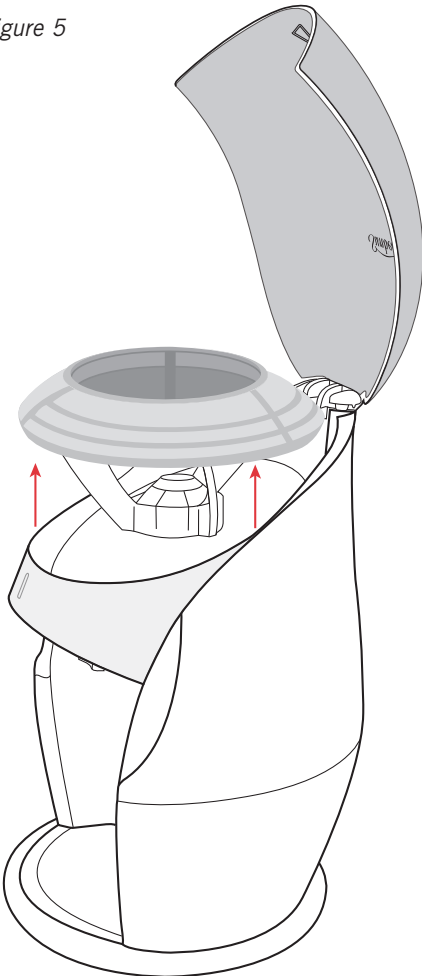

Warning: Do not immerse the motor housing in water or any other liquid.

Warning: Do not place any part of this appliance in a dishwasher.

Assembling your Avalanche

1. Place one hand on the motor base to keep the Avalanche stable. With the other hand replace the ice cube chamber into the unit and continue to turn in a clockwise direction until firmly secure.
2. Lower the lid onto the Avalanche and carefully replace shaving blade, by screwing the red screw anti-clockwise until secure.
3. Position the snow catcher onto the Avalanche.

Note: The stainless steel shaving blade should not be screwed back in place until the upper housing and ice cube chamber are secured.

Recipe ideas for kids

Fun and easy ice treats

Shave ice and pack into cups. Use your favourite cordial, juice or soft drink concentrates (such as Soda Stream) and pour over the top.

Coloured snow cones

Shave ice and pack tightly into cups. Use several of your favourite cordial or soft drink concentrates and pour over the top in rows for a colourful explosion!

Water ices

Shave ice into a cup. Add chilled cordial and stir. Add chilled water to achieve the desired consistency.

Fruity freezes

Freeze your favourite freshly squeezed juice or bottled juice into ice cube trays and freeze until well frozen. Once frozen, place into Avalanche for instant flavoured shaved ice treats.

Milky frozen treats

Pour flavoured milk into ice cube trays and freeze until well frozen. Once frozen, place into Avalanche for instant flavoured creamy shaved ice treats.

Real fruit treats

Place small pieces of fruit such as seedless grapes, seeded cherries or blueberries into ice cube trays and cover with apple juice. Place in freezer until well frozen. Once frozen, place into Avalanche for icy treats with small shavings of fruit throughout.

Cocktail recipes for adults

Note: These drinks are intended for people over the age of 18 years.

Blue Lagoon **Makes 1**

30ml gin or vodka
120ml lemonade
30ml Blue Curacao
1 cup shaved ice

Pour ingredients into a tall glass filled with shaved ice. Stir and serve with a cherry for a garnish.

Summer Heaven **Makes 1**

1 lime slice
1 cup shaved ice
60ml Cointreau

Place a lime slice into the bottom of a brandy balloon glass and crush with a wooden spoon. Spoon in shaved ice and stir to combine with the lime. Pour over Cointreau and swirl to combine.

Iceberg **Makes 1**

1-1½ cups shaved ice
30ml Cointreau
30ml gin
20ml lime juice
Sparkling wine
Blue Curacao

Place shaved ice into a large martini glass and press to shape into an iceberg. Pour over combined Cointreau, gin and lime juice. Top with a little sparkling wine and a drizzle of blue Curacao.

Margarita **Makes 1**

30ml tequila
15ml fresh lime juice
30ml triple sec or Cointreau
egg white (optional)
shaved ice

Place all ingredients except ice into a cocktail shaker and shake well. Place shaved ice into a glass with a salt rim and pour over the liquid. Garnish with a lime slice.

Spice **Makes 1**

30ml Midori
30ml Malibu
60ml pineapple juice
40ml cream
shaved ice

Place all ingredients except ice into a cocktail shaker and shake well. Place shaved ice into a glass and pour over the liquid. Garnish with a pineapple wedge.

Island Fever **Makes 1**

30ml Midori
15ml triple sec
15ml blue Curacao
120ml orange and mango juice
30ml coconut cream

Fill a large glass with shaved ice. Pour ingredients in the order listed over the ice. Garnish with a cherry.

12 Month Replacement Guarantee

We are so confident of the quality of our product, should this appliance develop any malfunction within 12 months of purchase (3 Months commercial use) due to faulty materials or manufacture, we will replace it for you absolutely free.

Should you experience any difficulties with your appliance, please phone our free call customer service line for advice on 1800 025 059 in Australia, or 0800 786 232 in New Zealand.

Alternatively, simply return the faulty appliance to your place of purchase, along with your purchase receipt.

Your Sunbeam 12 Month Replacement Guarantee naturally does not cover misuse or negligent handling, and excludes breakables such as glass or ceramic items, and normal wear and tear.

Similarly, your 12 Month Replacement Guarantee does not cover damage to household surfaces as a result of water or other substances leaking from your appliance, nor does it cover freight costs.

In Australia, this guarantee is additional to the conditions and guarantees which are mandatory as implied under the Trade Practices Act 1974 and State and Territory legislation.

Sunbeam Service Centres

Sunbeam has established a network of authorised service centres throughout Australia and New Zealand to provide quick, convenient service for our customers.

Should your appliance require repair or service, either during or after the guarantee period, contact your nearest service centre.

For a complete list of Sunbeam's authorised service centres:

Australia

www.sunbeam.com.au/service-centres
1800 025 059

New Zealand

www.sunbeam.co.nz/service-centres
0800 786 232

The Sunbeam logo is written in a white, elegant cursive font on a red rectangular background.

Consumer Hotline

In Australia

Visit www.sunbeam.com.au

Or call 1800 025 059

In New Zealand

Visit www.sunbeam.co.nz

Or call 0800 786 232



Is a registered Trademark of Sunbeam.

'Avalanche' is a trademark of Sunbeam Corporation.
Made in China. Designed and engineered in Australia.
Due to minor changes in design or otherwise,
the product may differ from the one shown in this leaflet.

© Copyright. Sunbeam Corporation Limited 2006.

(Incorporated in N.S.W.) A.C.N. 000 006 771

Sunbeam Corporation is a division of GUD Holdings Ltd.