



SL103
Snap Weather Forecast
Quick Start Guide

FRONT VIEW

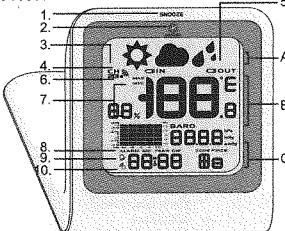

BACK VIEW

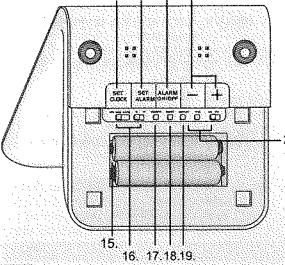

- EN**
- SNOOZE** : activate snooze alarm
 - Ice alert indicator
 - Remote sensor reception indicator and outdoor channel selected
 - Weather Forecast
 - sensor batteries low
 - main unit batteries low
 - indicates which reading is displayed (maximum / minimum)
 - Indoor / outdoor temperature / Humidity
 - ALARM** : alarm mode is displayed
 - alarm is ON
 - Clock / calendar / RCC Signal
 - SET CLOCK** : enter time setting; confirm and move to next setting
 - SET ALARM** : enter alarm setting; confirm alarm setting
 - ALARM ON / OFF** : turn alarm on / off
 - + / - : increase / decrease value of the setting; toggle setting options
 - Battery compartment
 - °C / °F
 - hPa / InHg / mmHg
 - RESET** : reset unit to default settings
 - SENSOR** : initiate search for sensor
 - DISPLAY** : hide or display clock / calendar information
 - RCC & EU / UK** : Selects the nearest signal (or WVVB for US version)

- IT**
- Temperatura / Umidità massima e minima
 - Canale
 - Ora e data
 - SNOOZE** : consente di attivare l'allarme con snooze
 - Indicatore allarme ghiaccio
 - Indicatore della ricezione del sensore remoto e canale esterno selezionato
 - Previsioni meteorologiche
 - batterie del sensore in esaurimento
 - batterie dell'unità principale in esaurimento
 - indica quale rilevazione è visualizzata (massima / minima)
 - Temperatura / Umidità interna ed esterna
 - ALARM** : è visualizzata la modalità sveglia
 - la sveglia è attiva
 - Orologio / calendario / Icona del segnale di radiocontrollo
 - SET CLOCK** : consente di accedere alla modalità impostazioni, di confermare e passare all'opzione di impostazione successiva
 - SET ALARM** : consente di accedere alle impostazioni della sveglia e di confermarla
 - ALARM ON / OFF** : consente di attivare / disattivare la sveglia
 - + / - : consente di aumentare / diminuire il valore dell'impostazione e di alternare le opzioni di impostazione
 - Vano batterie
 - °C / °F
 - hPa / InHg / mmHg
 - RESET** : consente di ripristinare i valori predefiniti dell'unità
 - SENSOR** : consente di avviare la ricerca del sensore
 - DISPLAY** : consente di visualizzare ora e data
 - RCC & EU / UK**

- FR**
- Max. / Min. température / Humidité / minimum
 - Canal
 - Horloge et calendrier
 - SNOOZE** : active le rappel d'alarme
 - Indicateur d'alerte du niveau de gel
 - Indicateur de réception de la sonde sans fil et canal extérieur sélectionné
 - Prévision météorologique
 - piles de la sonde faibles
 - piles de l'appareil principal faibles
 - indique que le relevé est affiché (maximum / minimum)
 - Température / Humidité intérieure / extérieure
 - ALARM** : le mode alarme est affiché
 - l'alarme est activée
 - l'icône du signal radio-piloté
 - SET CLOCK** : permet d'entrer dans le mode réglages, de confirmer et de passer au réglage suivant.
 - SET ALARM** : permet d'entrer dans les réglages de l'alarme et de confirmer les réglages.
 - ALARM ON / OFF** : active et désactive l'alarme
 - + / - : augmente / diminue la valeur d'un réglage, alterne entre les options de réglage
 - Compartment des piles
 - °C / °F
 - hPa / InHg / mmHg
 - RESET** : réinitialise l'appareil aux réglages par défaut
 - SENSOR** : permet d'initier une recherche de sondes externes
 - DISPLAY** : masque ou affiche les informations de l'horloge / calendrier
 - RCC & EU / UK**

- DE**
- Max. / Min. Temperatur / Luftfeuchtigkeit
 - Kanal
 - Uhr und Kalender
 - SNOOZE** : Schlummeralarm aktivieren
 - Frostwamer-Anzeige
 - Empfangsanzeige für Funksendeinheit / externer Kanal ausgewählt
 - Wettervorhersage
 - Batterien der Sendeinheit schwach
 - Batterien der Basisinheit schwach
 - gibt an, welcher Messwert angezeigt wird (Maximal- / Minimalwert)
 - Innen- / Außentemperatur / Luftfeuchtigkeit
 - ALARM** : Alarmmodus wird angezeigt
 - Alarm ist aktiviert
 - Uhrzeit / Kalender / Symbol für Funksignal
 - SET CLOCK** : Zeiteinstellung aufbringen; Einstellung bestätigen und nur nächsten übergehen
 - SET ALARM** : Alarmeinstellung aufbringen; Alarmeinstellung bestätigen
 - ALARM ON / OFF**: Alarm ein- / ausschalten
 - + / - : Einstellungswert erhöhen / verringern; zwischen Einstellungsoptionen wechseln
 - Batteriefach
 - °C / °F
 - hPa / InHg / mmHg
 - RESET** : Gerät auf Standardinstellungen zurücksetzen
 - SENSOR** : Suche nach Sendeinheit veranlassen
 - DISPLAY** : Uhr / Kalenderdaten verbergen oder anzeigen
 - RCC & EU / UK**

- ES**
- Max. / Min. Humedad
 - Canal
 - Reloj y calendario
 - SNOOZE** : Activa la repetición de alarma
 - Indicador de alerta de heladas
 - Indicador de recepción del control remoto y canal externo seleccionado
 - Previsión meteorológica
 - Pilas bajas en el sensor
 - Pilas bajas en la unidad principal
 - Indica el registro que se muestra en pantalla (máximo / mínimo)
 - Temperatura / Humedad interna / externa
 - ALARM** : La pantalla muestra el modo alarma
 - La alarma está activada
 - Reloj / Calendario / Icono de señal radiocontrolada
 - SET CLOCK** : Ajustar la hora / Confirmar y pasar al siguiente ajuste
 - SET ALARM** : Ajustar la alarma / Confirmar ajuste de la alarma
 - ALARM ON / OFF** : Activar o desactivar la alarma
 - + / - : Incrementar o disminuir los dígitos / Navegar por las opciones de configuración
 - Compartimento de las pilas
 - °C / °F
 - hPa / InHg / mmHg
 - RESET** : Reiniciar la unidad a la configuración predeterminada
 - SENSOR** : Iniciar búsqueda del sensor
 - DISPLAY** : Ocultar o mostrar la información del reloj / calendario
 - RCC & EU / UK**

EN GETTING STARTED

MAIN UNIT INSTALLATION

- Insert batteries matching the polarity (+ and -).
- Press **RESET** after each battery change.

SENSOR INSTALLATION

This product can work with up to 3 sensors at any one time to capture temperature reading in various locations.

- Slide open the battery compartment cover.
- Slide channel switch to select channel 1. Ensure you use a different channel for each sensor (2, 3).
- Insert the batteries, matching the polarities (+ and -).
- Press **RESET** after each battery change.
- Replace the battery compartment cover.
- Press **SENSOR** on the main unit to initiate a sensor search.

CLOCK

- To set the clock:
- Press **SET CLOCK** to enter clock setting.
 - Press + / - to change the settings. (Tip: Press and hold + / - to rapidly change values).
 - Press **SET CLOCK** again to confirm and exit setting. The setting order is: 12 / 24 hr format, time, year, calendar format (m / d), date.

ALARM

- To set the alarm:
- Press **SET ALARM** to enter alarm setting.
 - Press + / - to set the alarm time. (Tip: Press and hold + / - to rapidly change values).
 - Press **SET ALARM** again to confirm and exit setting. indicates alarm is on.

To activate or deactivate the alarm:

- Press **ALARM ON / OFF** to view set alarm time.
- Press **ALARM ON / OFF** to activate / deactivate alarm.

To silence the alarm:

- Press down on **SNOOZE** to silence it for 8 minutes.

TEMPERATURE AND HUMIDITY

To select temperature / humidity unit:
Slide °C / °F switch.

To toggle between each sensor's readings:
Touch **CHANNEL** region (middle display section) repeatedly

OR
Touch and hold **CHANNEL** region to initiate auto toggle of channel readings.
To end, touch **CHANNEL** region.

EN indicates which remote sensors' data is being displayed.
IN indicates indoor temperature is being displayed.

To toggle between current, minimum and maximum records for the selected sensor:
Touch Max. / Min. Region (upper display section) repeatedly.

To clear the records:
Touch and hold Max. / Min. Region

MAIN UNIT INSTALLATION

If temperature recorded falls between -2 °C to 3 °C (29°F to 37°F), LED indicator will flash and will stop flashing once the temperature is out of this range.

CLOCK

- Press **DISPLAY**, clock / calendar will flash.
- Touch **Clock / Calendar** Region (bottom display section) to hide or display.
- Press **DISPLAY** again to confirm selection.

BACKLIGHT

Press any button or display screen area to activate backlight.

SPECIFICATIONS

TYPE	DESCRIPTION
L x W x H	112 x 120 x 127 mm (4.4 x 4.7 x 5.0in)
Weight	230g (8.1oz)
Temperature / Humidity range	-5 °C to 50 °C (23 °F to 122 °F) / 20% - 95%
Signal frequency	433 MHz
Power	2 x UM-3 (AA) 1.5 V batteries


SENSOR

TYPE	DESCRIPTION
L x W x H	80 x 16 x 80 mm (3.2 x 0.6 x 3.2 in)
Weight	50g (1.8oz) without batteries
Temperature / Humidity range	-20 °C to 60 °C (-4 °F to 140 °F) / 20% - 95%
Signal frequency	40 m (131 ft) unobstructed
Power	2 x UM-4 (AAA) 1.5 V batteries



PRECAUTIONS

- Do not subject the unit to excessive force, shock, dust, temperature or humidity.
- Do not cover the ventilation holes with any items such as newspapers, curtains etc.
- Do not immerse the unit in water. If you spill liquid over it, dry it immediately with a soft, lint-free cloth.

REMOTE SENSOR (SL109H)

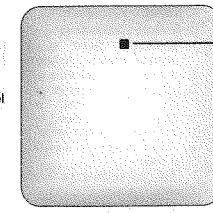

REMOTE SENSOR (SL109H) BACK VIEW

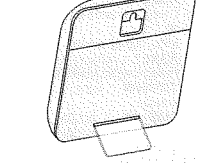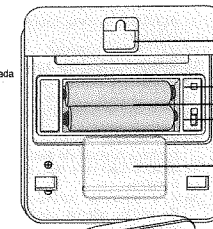

- EN**
- LED indicator
 - Wall mount hole
 - RESET** : reset to default setting
 - Battery compartment
 - Channel switch (1-3)
 - Detachable table stand
 - Indicatore LED : lampeggia quando l'unità remota trasmette una rilevazione.
 - Foro per fissaggio a parete
 - RESET** : consente di ripristinare i valori predefiniti dell'unità
 - Vano batterie
 - Supporto da tavolo rimovibile
 - Voyant LED : Clignote lorsque la sonde sans fil transmet les données
 - Trou de fixation murale
 - RESET** : réinitialise l'appareil aux réglages par défaut
 - Compartment des piles
 - Bouton de canal (1-3)
 - Support détachable
 - LED-Indikator : Blinkt bei Übertragung eines Messwerts durch die Funksendeinheit.
 - Öffnung für Wandmontage
 - RESET** : Gerät auf Standardinstellungen zurücksetzen
 - Batteriefach
 - Kanalschalter (1-3)
 - Abnehmbarer Tischständer
 - Indicador LED : La luz parpadea cuando la unidad remota transmite una lectura.
 - Orificio para colgarlo en pared
 - RESET** : Reiniciar la unidad a la configuración predeterminada
 - Compartimento de las pilas
 - Selector de canal (1-3)
 - Soporte desmontable para apoyo a mesa

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

- This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio / TV technician for help.

DECLARATION OF CONFORMITY

The following information is not to be used as contact for support or sales. Please call our customer service number (listed on our website at www.oregonscientific.com), or on the warranty card for this product) for all inquiries instead.

We	Oregon Scientific, Inc.
Name:	19861 SW 95th Ave., Tualatin,
Address:	Oregon 97062 USA
Telephone No.:	1-800-853-8883

declare that the product

Product No.:	SL103
Product Name:	Snap Weather Forecast
Manufacturer / Importer:	Oregon Scientific Global Distribution Limited
Address:	Block C, 9/F, Kaiser Estate, Phase 1, 41 Man Yue St., Hung Hom, Kowloon, Hong Kong

