



**TXM1491F**

**COLOR TELEVISION**



**ELECTRONICS**

 


**Owner's  
Instructions**

# **Warning! Important Safety Instructions**



**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

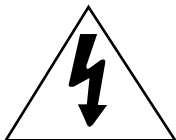

This symbol indicates high voltage is present inside. It is dangerous to make any kind of contact with any inside part of this product.



This symbol alerts you that important literature concerning operation and maintenance has been included with this product.

**Note to CATV system installer:** This reminder is provided to call CATV system installer's attention to Article 820-40 of the National Electrical Code (Section 54 of Canadian Electrical Code, Part I), that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

**Caution:** *FCC/CSA regulations state that any unauthorized changes or modifications to this equipment may void the user's authority to operate it.*

**Caution:** *To prevent electric shock, match the wide blade of plug to the wide slot, and fully insert the plug.*

**Attention:** *pour éviter les chocs électriques, introduire la lame le plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.*

**Important:** One Federal Court has held that unauthorized recording of copyrighted TV programs is an infringement of U.S. copyright laws. Certain Canadian programs may also be copyrighted and any unauthorized recording in whole or in part may be in violation of these rights.


**To prevent damage which may result in fire or electric shock hazard, do not expose this appliance to rain or moisture.**

As an ENERGY STAR Partner,  
Samsung Electronics America, Inc. has determined that this product or product model meets the ENERGY STAR guidelines for energy efficiency.

# Thank You for Choosing Samsung

Thank you for choosing Samsung! Your new Samsung TV receiver represents the latest in television technology. It has easy-to-use, on-screen menus and closed-captioning capabilities, making this TV one of the best products in its class. This product will provide convenient, dependable service and enjoyment for years to come.

## Important Safety Information

 
 To reduce the risk of fire, electrical shock, and other injuries, keep these safety precautions in mind when installing, using, and maintaining your machine.

- Read all safety and operating instructions before operating the TV receiver.
- Retain the safety and operating instructions for future reference.
- Heed all warnings on the TV receiver and in the operating instructions.
- Follow all operating instructions.
- Unplug the TV receiver from the wall outlet before cleaning. Use a damp cloth. Do not use liquid or aerosol cleaners.
- Never add any attachments and/or equipment without approval of the manufacturer. Such additions may cause risk of fire, electric shock, or other personal injury.
- Do not use the TV receiver where contact with or immersion in water is a possibility, such as near bath tubs, sinks, washing machines, swimming pools, etc.
- Do not place the TV receiver on an unstable cart, stand, tripod, bracket, or table. The TV receiver may fall, causing injury to people and/or damage to the TV. Use only with a cart, stand, tripod, bracket, or table not recommended by the manufacturer or sold with the TV receiver.
- Follow the manufacturer's instructions when mounting the unit, and use a mounting accessory recommended by the manufacturer. Move the TV receiver and its cart with care. Quick stops, excessive force, and uneven surfaces may cause the unit and cart to overturn.
- Provide ventilation for the TV receiver. The unit is designed with slots in the cabinet for ventilation to protect it from overheating. Do not block these openings with any object, and do not place the TV receiver on a bed, sofa, rug, or other similar surface. Do not place it near a radiator or heat register. If you place the TV receiver on a rack or bookcase, ensure that there is adequate ventilation and that you've followed the manufacturer's instructions for mounting.
- Operate your TV receiver only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your appliance dealer or local power company.
- Use only a grounded or polarized outlet. For your safety, this TV is equipped with a polarized alternating-current line plug having one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still does not fit, contact your electrician to replace your outlet.



- Protect the power cord. Power supply cords should be routed so that they will not be walked on or pinched by items placed on or against them. Pay particular attention to cord placement at plugs, convenience receptacles, and at the point where they exit from the unit.
- Unplug the TV receiver from the wall outlet and disconnect the antenna or cable system during a lightning storm or when left unattended and unused for long periods of time. This will prevent damage to the unit due to lightning and power-line surges.
- An outside antenna system should not be placed in the vicinity of overhead power lines or other electric light or power circuits or where it can fall into such power lines or circuits. Avoid overhead power lines: When installing an outside antenna system, be extremely careful to keep from touching the power lines or circuits. Contact with such lines might be fatal.
- Do not overload the wall outlet or extension cords. Overloading can result in fire or electric shock.
- Do not insert foreign objects through openings in the unit, as they may touch dangerous voltages or cause damage. Never spill liquid of any kind on the TV receiver.

- Ground outdoor antennas. If an outside antenna or cable system is connected to the TV receiver, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Read information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

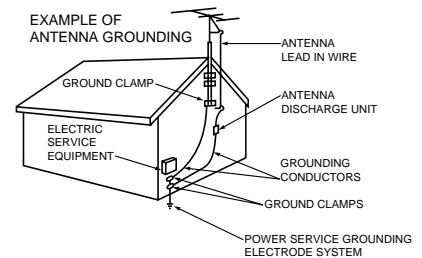

- Do not attempt to service the TV receiver yourself. Refer all servicing to qualified service personnel. Unplug the unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - When the power-supply cord or plug is damaged
  - If liquid has been spilled on the unit or if objects have fallen into the TV
  - If the TV receiver has been exposed to rain or water
  - If the TV receiver does not operate normally by following the operating instructions
  - If the TV receiver has been dropped or the cabinet has been damaged
  - When the TV receiver exhibits a distinct degradation in performance
- If you make adjustments yourself, adjust only those controls that are covered by the operating instructions. Adjusting other controls may result in damage and will often require extensive work by a qualified technician to restore the TV receiver to normal.
- When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in additional damage to the unit.
- Upon completion of any service or repairs to this TV receiver, ask the service technician to perform safety checks to determine that the TV receiver is in a safe operating condition.

**This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:**

- (1) This device may not cause harmful interference, and**
- (2) This device must accept any interference that may cause undesired operation.**

**This television receiver provides display of television closed captioning in accordance with §15.119 of the FCC rules.**

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a used, caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



DOUBLE INSULATED - When servicing use only identical replacement parts.

<b>Chapter 1: Your New TV</b> . . . . .	<b>1.1</b>
List of Features . . . . .	1.1
Familiarizing Yourself with The TV. . . . .	1.2
Front Panel Buttons . . . . .	1.2
Front Panel Jacks . . . . .	1.2
Rear Panel Jacks . . . . .	1.3
Remote Control . . . . .	1.4
<b>Chapter 2: Installation</b> . . . . .	<b>2.1</b>
Connecting VHF and UHF Antennas . . . . .	2.1
Antennas with 300-ohm Flat Twin Leads . . . . .	2.1
Antennas with 75-ohm Round Leads . . . . .	2.2
Separate VHF and UHF Antennas. . . . .	2.2
Connecting Cable TV . . . . .	2.2
Cable without a Cable Box . . . . .	2.2
Connecting to a Cable Box that Descrambles All Channels. . . . .	2.3
Connecting to a Cable Box that Descrambles some Channels. . . . .	2.3
Connecting a VCR . . . . .	2.5
Connecting a Camcorder . . . . .	2.6
Installing Batteries in the Remote Control. . . . .	2.7
<b>Chapter 3: Operation</b> . . . . .	<b>3.1</b>
Turning the TV On and Off. . . . .	3.1
Viewing the Menus and On-Screen Displays. . . . .	3.1
Viewing the Menus. . . . .	3.1
Viewing the Display . . . . .	3.1
Selecting a Menu Language. . . . .	3.2
Memorizing the Channels. . . . .	3.3
Selecting the Video Signal-source . . . . .	3.3
Storing Channels in Memory (Automatic Method) . . . . .	3.4
Adding and Erasing Channels (Manual Method) . . . . .	3.5
Changing Channels . . . . .	3.6
Using the Channel Buttons. . . . .	3.6
Directly Accessing Channels. . . . .	3.6
Using the PRE-CH Button to select the Previous Channel. . . . .	3.6
Adjusting the Volume . . . . .	3.6
Using Mute. . . . .	3.6
Setting the Clock . . . . .	3.7
Customizing the Picture . . . . .	3.8
Using Automatic Picture Settings . . . . .	3.9
Using Automatic Sound Settings. . . . .	3.10
Viewing a VCR or Camcorder Tape. . . . .	3.11

<b>Chapter 4: Special Features</b> . . . . .	<b>4.1</b>
Fine Tuning Channels. . . . .	4.1
Changing the Screen Size . . . . .	4.2
Using the Surf Feature. . . . .	4.3
Setting the On/Off Timer . . . . .	4.4
Setting the Sleep Timer. . . . .	4.5
Sound Features. . . . .	4.6
Choosing a Multi-Channel Sound (MTS) Soundtrack. . . . .	4.6
Extra sound settings (Turbo Sound, or Surround) . . . . .	4.7
Viewing Closed Captions . . . . .	4.8
Using the V-Chip . . . . .	4.9
Setting Up Your Personal ID Number (PIN) . . . . .	4.9
How to Enable/Disable the V-Chip. . . . .	4.10
How to Set up Restrictions Using the “TV guidelines” . . . . .	4.10
How to Set up Restrictions using the MPAA Ratings: G, PG, PG-13, R, NC-17, X . . . . .	4.12
How to Reset the TV after the V-Chip Blocks a Channel (“Emergency Escape”). . . . .	4.13
 <b>Chapter 5: Troubleshooting</b> . . . . .	 <b>5.1</b>
Identifying Problems . . . . .	5.1
 <b>Spanish Quick Reference</b> . . . . .	 <b>6.1</b>
 <b>Appendix</b> . . . . .	 <b>A.1</b>
Cleaning and Maintaining Your TV. . . . .	A.1
Using Your TV in Another Country . . . . .	A.1
Specifications . . . . .	A.1

# Chapter One

## YOUR NEW TV

### List of Features

Your Samsung TV was designed with the latest technology. This TV is a high-performance unit that includes the following special features:

 
- Easy-to-use remote control
- Easy-to-use on-screen menu system
- Automatic timer to turn the TV on and off
- Adjustable picture settings that can be stored in the TV's memory
- Automatic channel tuning for up to 181 channels
- Fine tuning control for the sharpest picture possible
- Built-in, dual channel speakers
- A special sleep timer



## Familiarizing Yourself with The TV

### Front Panel Buttons


The buttons on the front panel control your TV's basic features, including the on-screen menu. To use the more advanced features, you must use the remote control.

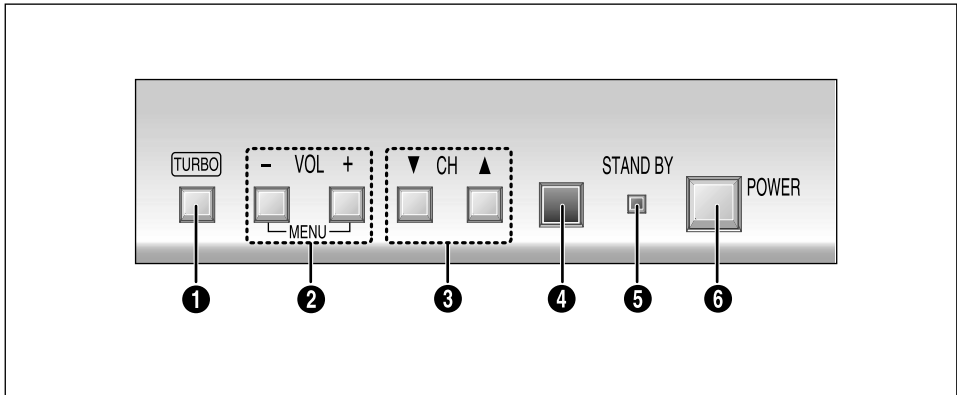

- |                                                                                                                                                                                                                                                                                                                                                                    |                                                                                                                                                                                                                                                                                                                           |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>1 TURBO</b><br/>Press to feel the middle and low sound effects when watching a music program.</p> <p><b>2 - VOL and VOL +</b><br/>Press to change the volume or to change features on the menu.</p> <p><b>MENU</b><br/>Press the VOL+/- buttons simultaneously to see the menu of TV function. (Same function as the MENU button on the remote control.)</p> | <p><b>3 CH ▼ and CH ▲</b><br/>Press to change channels or to select features on the menu.</p> <p><b>4 Remote Control Sensor</b><br/>Aim the remote control towards this spot on the TV.</p> <p><b>5 STAND BY</b><br/>Lights up when you turn the power off.</p> <p><b>6 POWER</b><br/>Press to turn the TV on or off.</p> |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### Front Panel Jacks

 You can use the front panel jacks to connect an A/V component that is used only occasionally, such as a camcorder or video game. (For information on connecting equipment, see pages 2.1 – 2.6.)

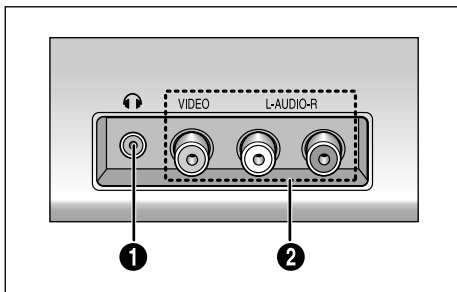


- |                                                                                                                                                                                                                 |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>1 EARPHONE jack</b><br/>Connect a set of external earphones to this jack for private listening.</p> <p><b>2 VIDEO and AUDIO input jacks</b><br/>Use these jacks to connect a camcorder or video game.</p> |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### Rear Panel Jacks

 Use the rear panel jacks to connect an A/V component that will be connected continuously, such as a VCR.

For more information on connecting equipment, see pages 2.1 – 2.6.

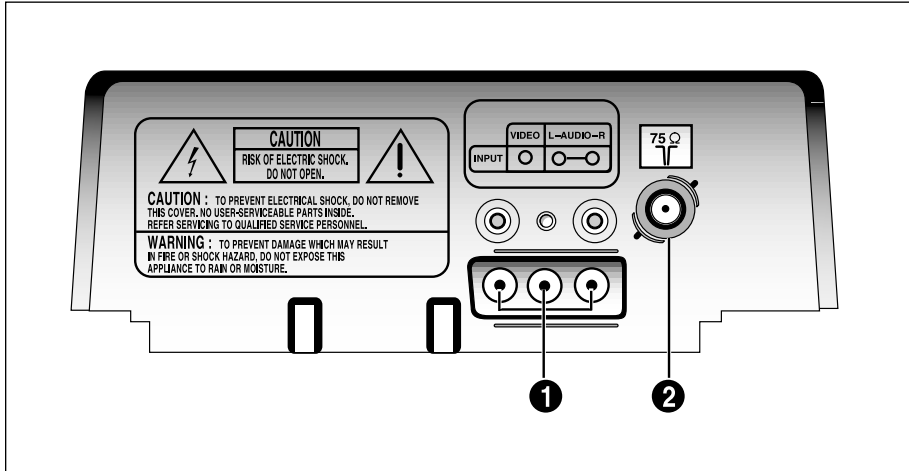


**1 VIDEO and AUDIO input jacks**  
Use these jacks to connect a VCR or other video equipment.

**2 VHF/UHF Antenna terminal**  
Use this terminal to connect an outdoor antenna or cable system.

### Remote Control

 You can use the remote control up to about 23 feet from the TV. When using the remote, always point it directly at the TV.

- 1 POWER**  
Press to turn the TV on and off.
- 2 TV/VIDEO**  
Press to watch TV picture and a picture from a connected component (VCR, LDP etc.).
- 3 Number buttons**  
Press to directly select channels on the TV.
- 4 +100**  
Press to directly select channels over 100. For example, to select channel 121, press +100, then press 2 and 1.
- 5 CH ▲ and CH ▼ (Channel)**  
Press CH ▲ or CH ▼ to change channels. Also use with the on-screen menu system.
- 6 DISPLAY**  
Press to see the time, channel, etc., on-screen. Also press to exit (quit) the menu system.
- 7 SURF**  
Press when viewing a channel to automatically return to that channel after an amount of time that you set.
- 8 P-STD**  
Press to adjust the TV picture by selecting one of the special factory settings or your own custom setting.
- 9 MUTE**  
Press to mute (silence) the volume.

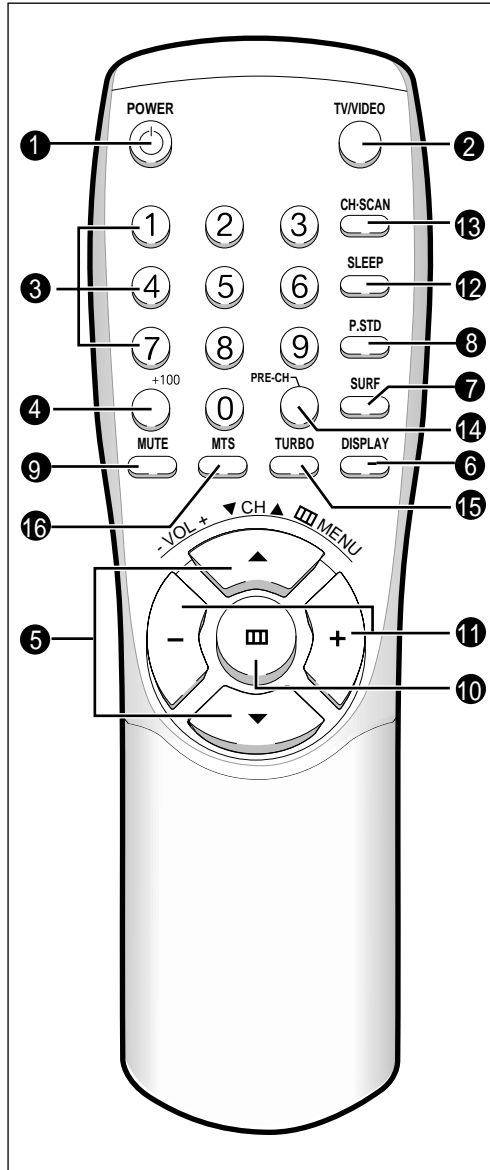


- 10 MENU**  
Press this button to see the easy-to-use menu system.
- 11 VOL - and VOL + (Volume)**  
Press VOL - to lower the volume; press VOL + to raise the volume. Also use with the menu system.
- 12 SLEEP**  
Press for the TV to automatically turn off after an amount of time that you set.
- 13 CH.SCAN (Channel Scan)**  
Press to have the TV automatically scan all of the channels it has memorized.
- 14 PRE-CH (Previous Channel)**  
Press to see the last channel you were watching.
- 15 TURBO**  
Press to feel the middle and low sound effects when watching a music program.
- 16 MTS**  
Press to select stereo, mono, or secondary audio program (SAP).

# Chapter Two
 
## INSTALLATION

### Connecting VHF and UHF Antennas

If your antenna has a set of leads that look like this, see “Antennas with 300-ohm Flat Twin Leads,” below.



If your antenna has one lead that looks like this, see “Antennas with 75-ohm Round Leads,” on page 2.2.




If you have two antennas, see “Separate VHF and UHF Antennas,” on page 2.2.

#### Antennas with 300-ohm Flat Twin Leads

 If you are using an off-air antenna (such as a roof antenna or “rabbit ears”) that has 300-ohm twin flat leads, follow the directions below.


**1**

Place the wires from the twin leads under the screws on the 300-75 ohm adaptor (not supplied). Use a screwdriver to tighten the screws.

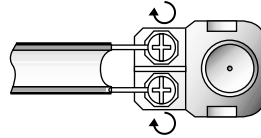

**2**

 Plug the adaptor into the VHF/UHF terminal on the bottom of the back panel.

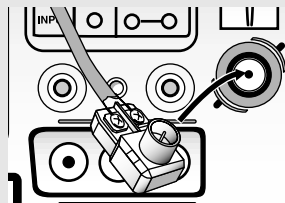

## INSTALLATION

### Antennas with 75-ohm Round Leads

**1**

Plug the antenna lead into the VHF/UHF terminal on the bottom of the back panel.

 


### Separate VHF and UHF Antennas

If you have two separate antennas for your TV (one VHF and one UHF), you must combine the two antenna signals before connecting the antennas to the TV. This procedure requires a an optional combiner-adaptor (available at most electronics shops).


**1**

Connect both antenna leads to the combiner.

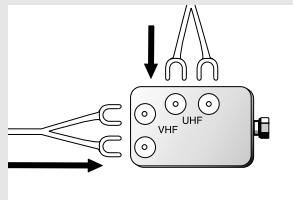

**2**

 Plug the combiner into the VHF/UHF terminal on the bottom of the rear panel.

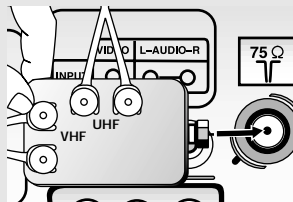


### Connecting Cable TV

To connect to a cable TV system, follow the instructions below.

#### Cable without a Cable Box

**1**

 Plug the incoming cable into the VHF/UHF antenna terminal on back of the TV.

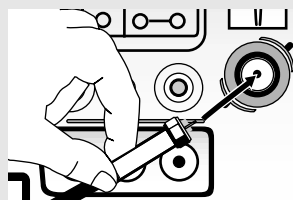


◀ Because this TV is cable-ready, you do not need a cable box to view unscrambled cable channels.

# INSTALLATION

 
## Connecting to a Cable Box that Descrambles **All** Channels

**1**  
Find the cable that is connected to the ANTENNA OUT terminal on your cable box.

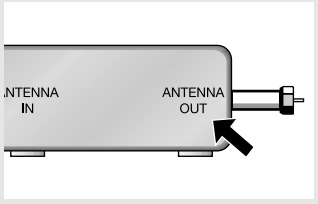

◀ This terminal might be labeled “ANT OUT,” “VHF OUT,” or simply, “OUT.”

 
**2**  
Connect the other end of this cable to the VHF/UHF antenna terminal on the back of the TV.

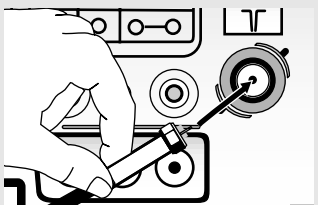

## Connecting to a Cable Box that Descrambles Some Channels


If your cable box descrambles only some channels (such as premium channels), follow the instructions below. You will need a two-way splitter, an RF (A/B) switch, and four lengths of coaxial cable. (These items are available at most electronics stores.)

 **1**  
Find and disconnect the cable that is connected to the ANTENNA IN terminal on your cable box.

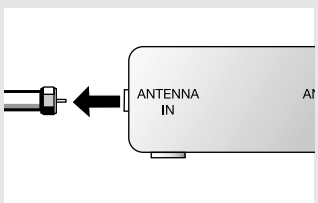


◀ This terminal might be labeled “ANT IN,” “VHF IN,” or simply, “IN.”

 **2**  
Connect this cable to a two-way splitter.

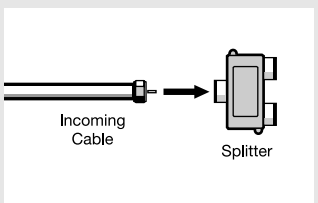

 
**3**  
Connect a coaxial cable between an OUTPUT terminal on the splitter and the IN terminal on the cable box.

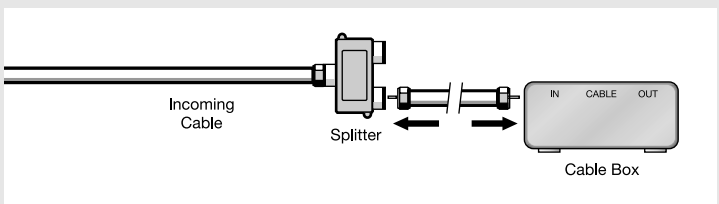

## INSTALLATION


**4**

 Connect a coaxial cable between the ANTENNA OUT terminal on the cable box and the B-IN terminal on the A/B switch.

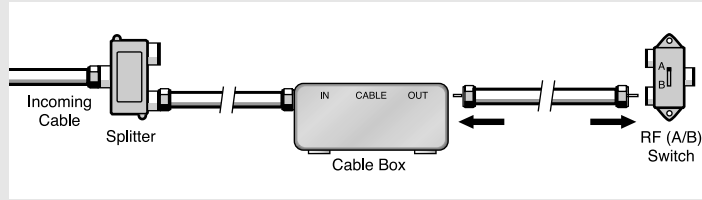


**5**

 Connect another cable between the other OUT terminal on the splitter and the A-IN terminal on the RF (A/B) switch.

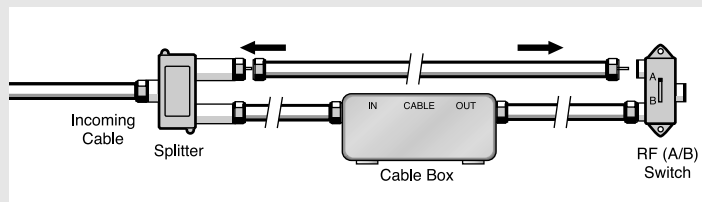

**6**

 Connect the last coaxial cable between the OUT terminal on the RF (A/B) switch and the VHF/UHF terminal on the rear of the TV.

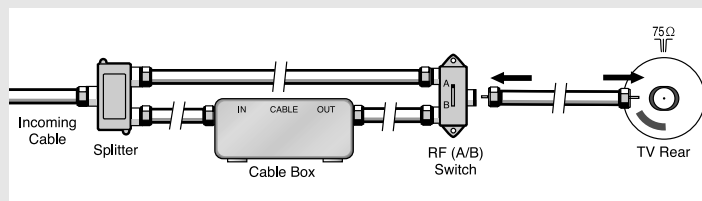


After you've made this connection, set the A/B switch to the "A" position for normal viewing. Set the A/B switch to the "B" position to view scrambled channels. (When you set the A/B switch to "B," you will need to tune your TV to the cable box's output channel, which is usually channel 3 or 4.)

## INSTALLATION

 
### Connecting a VCR

These instructions assume that you have already connected your TV to an antenna or a cable TV system (according to the instructions on pages 2.1-2.4). Skip step **1** if you have not yet connected to an antenna or a cable system.


- 1**  
Unplug the cable or antenna from the back of the TV.

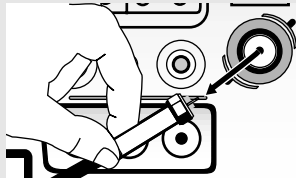

 - 2**  
Connect the cable or antenna to the ANTENNA IN terminal on the back of the VCR.

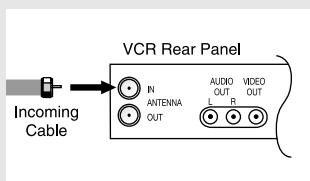


 - 3**  
Connect a coaxial cable between the ANTENNA OUT terminal on the VCR and the antenna terminal on the TV.

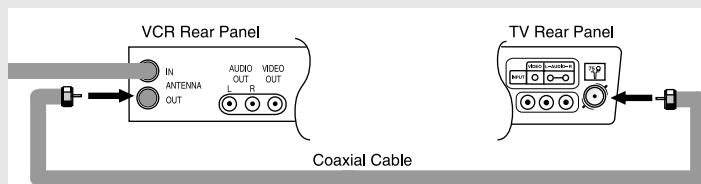


A coaxial cable is usually included with a VCR. (If not, check your local electronics store).

 - 4**  
Connect a set of audio cables between the AUDIO OUT jacks on the VCR and the AUDIO jacks on the TV.

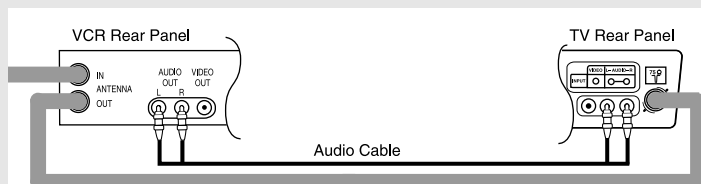

 - 5**  
Connect a video cable between the VIDEO OUT jack on the VCR and the VIDEO jack on the TV.

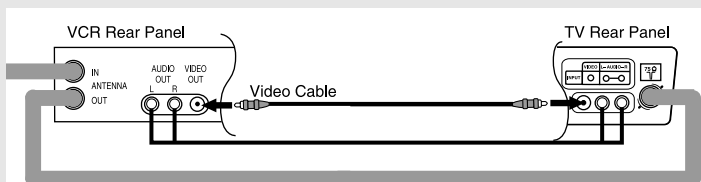

Follow the instructions in "Viewing a VCR or Camcorder Tape" to view your VCR tape.




## INSTALLATION
 
### Connecting a Camcorder

The front panel jacks on your TV make it easy to connect a camcorder to your TV. They allow you to view the camcorder tapes without using a VCR. (Also see “Viewing a VCR or Camcorder Tape” on page 3.11)


**1**

Locate the A/V output jacks on the camcorder. They are usually found on the side or back of the camcorder.

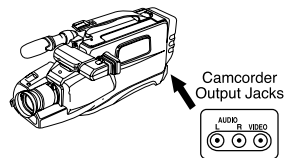


**2**

 Connect an audio cable between the AUDIO OUTPUT jack on the camcorder and the AUDIO terminals on the front of the TV.

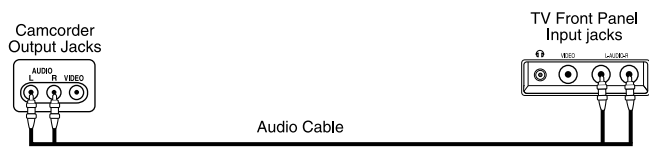

**3**

 Connect a video cable between the VIDEO OUTPUT jack on the camcorder and the VIDEO terminal on the front of the TV.

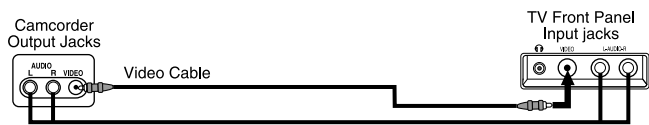


The audio-video cables shown here are usually included with a Camcorder. (If not, check your local electronics store.)

## INSTALLATION
 
### Installing Batteries in the Remote Control


**1**

Slide the cover out completely.

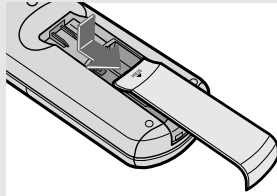

**2**

 
Install two AA size batteries.

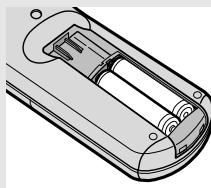

◀ Make sure to match the “+” and “-” ends of the batteries with the diagram inside the compartment.

**3**

 Replace the cover.

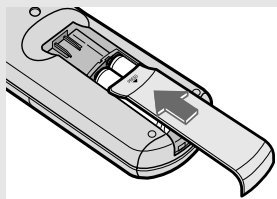

◀ Remove the batteries and store them in a cool, dry place if you won't be using the remote control for a long time.

The remote control can be used up to about 23 feet from the TV.

(Assuming typical TV usage, the Batteries last for about one year.)

# Chapter Three

## OPERATION

### Turning the TV On and Off

Press the **POWER** button on the remote control.  
You can also use the **POWER** button on the front panel.

 
### Viewing the Menus and On-Screen Displays

#### Viewing the Menus

**1**

With the power on, press the **MENU** button.

The main menu appears on the screen. Its left side has four icons: Picture, Sound, Channel, and Function.

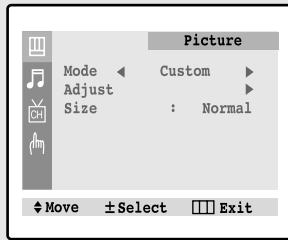

◀ The on-screen menu disappears from the screen after about thirty seconds.

**2**

Use the **CH▲** and **CH▼** buttons to highlight one of the 4 icons. Then press the **VOL+** button to access the icon's sub-menu. Press the **MENU** button to exit.

 
◀ You can also use the **MENU**, **CHANNEL**, and **VOLUME** buttons on the control panel of the TV to make selections.

#### Viewing the Display

**1**

Press the **DISPLAY** button on the remote control.

The on-screen display shows any or all of the following: Active channel, Audio source and the time.

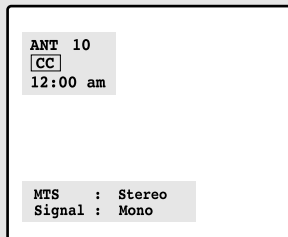

◀ The on-screen displays disappear after about twelve seconds.


When Closed Caption has been set, the icon (CC) will appear by pressing the Display button.

## Selecting a Menu Language
 
### 1


Press **MENU** to display the menu.

Press **CH ▼** three times to select "Function", then press the **VOL +** button.

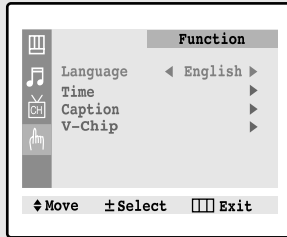


### 2

 Press **VOL +** to select the appropriate language: English, Spanish, or French.

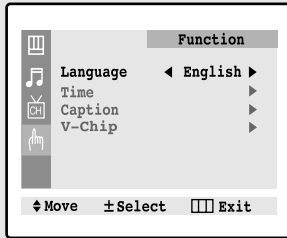

### 3

 Press **MENU** twice to exit.

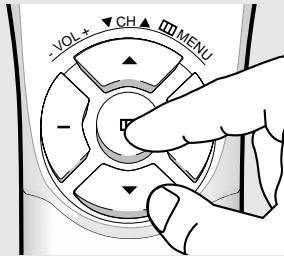

## Memorizing the Channels

Your TV can memorize and store all of the available channels for both “off-air” (antenna) and cable channels. After the available channels are memorized, use the CH ▲ and CH ▼ buttons to scan through the channels. This eliminates the need to change channels by entering the channel digits. There are three steps for memorizing channels: selecting a broadcast source, memorizing the channels (automatic) and adding and deleting channels (manual).

 
### Selecting the Video Signal-source

Before your television can begin memorizing the available channels, you must specify the type of signal source that is connected to the TV (i.e., an antenna or a cable system).

#### 1

Press **MENU** to display the menu.


Press **CH ▼** two times to select “Channel”, then press the **VOL +** button.

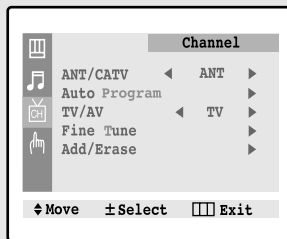

#### 2

Repeatedly press **VOL +** to cycle through these choices:

 ANT (antenna)  
STD, HRC or IRC (all cable TV).

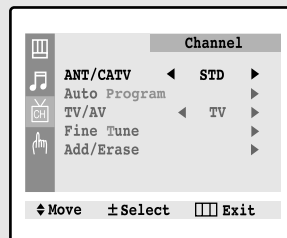


Note: STD, HRC and IRC identify various types of cable TV systems. Contact your local cable company to identify the type of cable system that exists in your particular area.

At this point the signal source has been selected. Proceed to “Storing Channels in Memory” (next page).

#### 3

 Press **MENU** twice to exit.

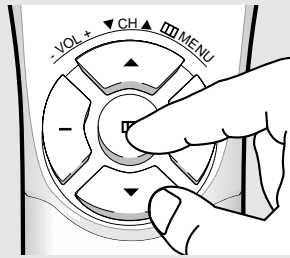


### Storing Channels in Memory (Automatic Method)

**1**


First, select the correct signal source (ANT, STD, HRC, IRC). See steps 1-3 on previous page.

 Press the **MENU** button, then press the **CH ▼** button twice to select "Channel," then press the **VOL +** button.

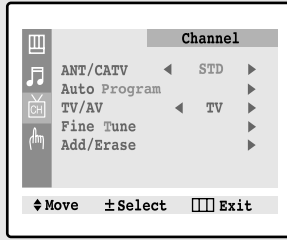


**2**

 Press the **CH ▼** button to select "Auto program".

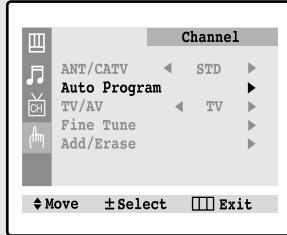

**3**

 
Press the **VOL +** button. The TV will begin memorizing all of the available channels.

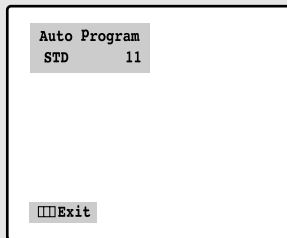

◀ The TV automatically cycles through all of the available channels and stores them in memory. This takes about one to two minutes. Press the **MENU** button at any time to interrupt the memorization process and return to the Channel menu.

**4**

 
After all the available channels are stored, the Auto program menu reappears. Press the **MENU** button twice to exit.

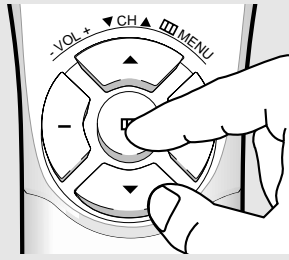

**Adding and Erasing Channels (Manual Method)**


**1**

 Press the **MENU** button.  
Press the **CH ▼** button twice to select "Channel", then press the **VOL+** button.

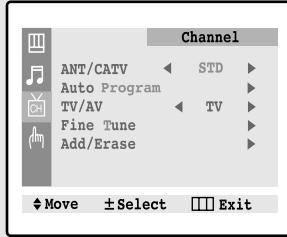


**2**

 Press the **CH ▲** or **CH ▼** button to select "Add/Erase".  
Press the **VOL+** button.

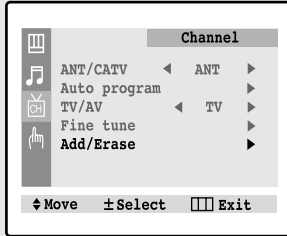

**3**

 Press the **VOL-/+** or number buttons to select the channel you want to add or erase.

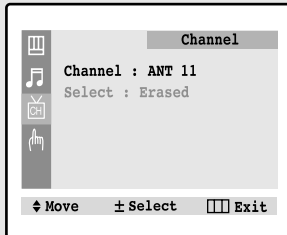


**4**

Press the **CH ▲** or **CH ▼** button to select "Select".

Press the **VOL+** or **VOL-** button to select "Added" or "Erased".

 Press the **MENU** button three times to exit.

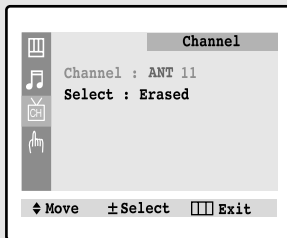

## Changing Channels

### Using the Channel Buttons

#### 1

Press the **CH ▲** or **CH ▼** button to change channels.

When you press **CH ▲** or **CH ▼**, the TV changes channels in sequence. You will see all the channels that the TV has memorized. (The TV must have memorized at least three channels.) You will not see channels that were either erased or not memorized.

### Directly Accessing Channels

Use the number buttons to quickly tune to any channel.

#### 1

Press the number buttons to go directly to a channel. For example, to select channel 27, press “2,” then “7.” The TV will change channels when you press the second number.

When you use the number buttons, you can directly select channels that were either erased or not memorized.

To select a channel over 100, press the **+100** button. (For channel 122, press “+100,” then “2,” then “2.”)

To change to single-digit channels (0–9) faster, press “0” before the single digit. (For channel “4,” press “0,” then “4.”)

### Using the PRE-CH Button to select the Previous Channel

#### 1

Press the **PRE-CH** button. The TV will switch to the last channel viewed.

◀ To quickly switch between two channels that are far apart, tune to one channel, then use the number button to select the second channel. Then, use the **PRE-CH** button to quickly alternate between them.

## Adjusting the Volume

Press the **VOL +** or **VOL–** button to increase or decrease the volume.

### Using Mute

At any time, you can temporarily cut off the sound using the Mute button.

#### 1

Press the **MUTE** button and the sound cuts off. The word “Mute” will appear in the lower-left corner of the screen.

#### 2

To turn mute off, press the **MUTE** button again, or simply press either the **VOL –** or **VOL +** button.

 


## Setting the Clock

### 1

Press the **MENU** button to display the on-screen menu.


Press the **CH ▼** button three times to select "Function".  
Press the **VOL +** button.

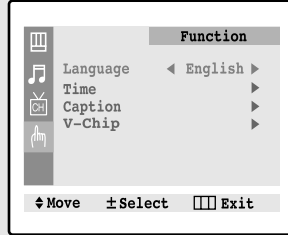

### 2

Press the **CH ▼** button to select the "Time" menu.

 
Press the **VOL +** button:  
The Time menu will appear on the screen, and "Clock" will be selected.

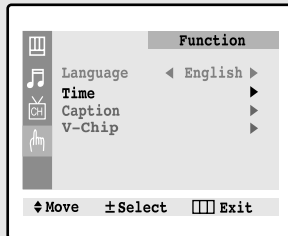

### 3

Press the **VOL +** button again (the hours digits will be selected). Press the **CH ▲** or **CH ▼** button repeatedly until the correct hour appears.

 After the hour is entered, press the **VOL +** button.  
(at this point the minutes digits will be selected).

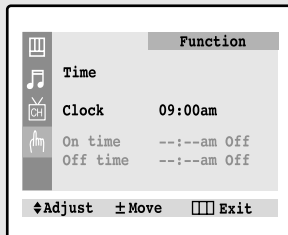

◀ When selecting the hours, be sure to select the proper time of day (AM or PM).


You can change the hours by pressing **CH ▲** or **CH ▼** repeatedly (or by holding down either of these buttons).

### 4

 Press the **CH ▲** or **CH ▼** button to select the correct minutes.

After selecting the correct minutes, press the **VOL +** button.

Press the **MENU** button three times to exit.

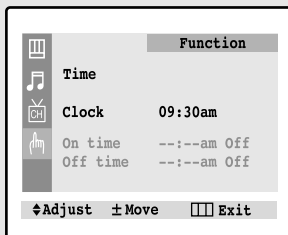


◀ The time will appear every time you press DISPLAY.

## Customizing the Picture

 You can use the on-screen menus to change the contrast, brightness, tint, color, and sharpness according to personal preference. (Alternatively, you can use one of the “automatic” settings. See next page.)


### 1

Press the **MENU** button to display the menu.

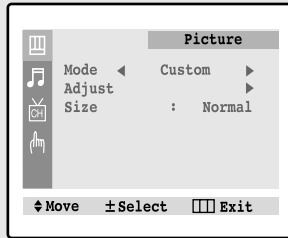


### 2

 Press the **VOL -** or **VOL +** button repeatedly, until the word “Custom” is selected. (When Custom is highlighted, the word “Adjust” will appear on the screen.)

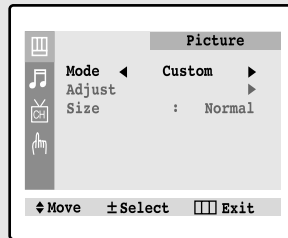

### 3

 
Press the **CH ▼** button to select “Adjust”, then press the **VOL+** button. (The words Color Tone, Contrast, Brightness, Sharpness, Color, and Tint will appear on the screen.) Press the **CH ▲** or **CH ▼** button to select a particular item.

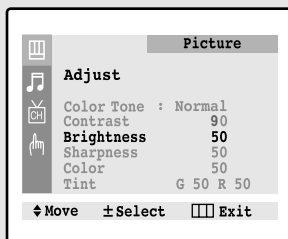

### 4

Press the **VOL -** or **VOL +** button to increase or decrease the value of a particular item.

 Press the **MENU** button four times to exit.

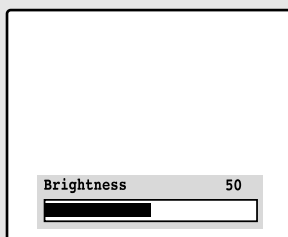


◀ After adjusting an item, the gauge will automatically disappear (after about 5 seconds).

## Using Automatic Picture Settings

 Your TV has three automatic picture settings (“Standard”, “Natural”, and “Mild”) that are preset at the factory. You can activate either Standard, Natural or Mild by making a selection from the menu. Or, you can select “Custom” which automatically recalls your personalized picture settings.


### 1

Press the **MENU** button to display the menu.

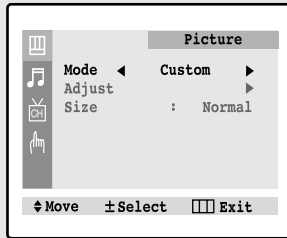

### 2

 Press the **VOL -** or **VOL +** button to select the “Standard,” “Natural,” “Mild,” or “Custom” picture setting.

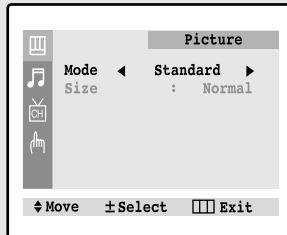

- Choose *Standard* for the standard factory settings.
- *Natural*: Optimal indoor screen condition.
- Choose *Mild* (“Mild Contrast”) when viewing the TV in low light, or when playing video games.
- Choose *Custom* if you want to adjust the settings according to personal preference (see “Customizing the Picture, page 3.8).


## Using Automatic Sound Settings

 Your TV has four automatic sound settings (“Standard,” “Music,” “Movie,” and “Speech”) that are preset at the factory. You can activate any of them by making a selection from the on-screen menu.

### 1


Press the **MENU** button to display the menu.

Press the **CH▼** button to select the “Sound” menu.

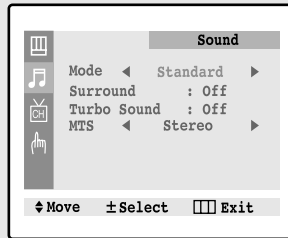

### 2

 Press the **VOL -** or **VOL +** button repeatedly to select the “Standard,” “Music,” “Movie,” “Speech” or “Custom” sound settings.

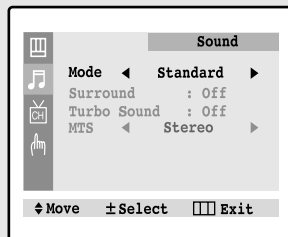

- Choose *Standard* for the standard factory settings.
- Choose *Music* when watching music videos or concerts.
- Choose *Movies* when watching movies.
- Choose *Speech* when watching a show that is mostly dialogue (i.e., news).


## Viewing a VCR or Camcorder Tape

 You must select the appropriate mode in order to view the VCR or Camcorder signal on the TV.

**1**

Press the **MENU** button to display the menu.


Press the **CH ▼** button twice to select "Channel", then press the **VOL+** button.

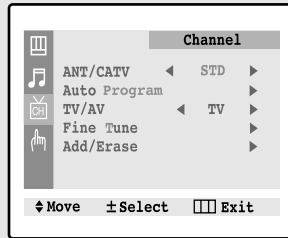

◀ Quick way to view the external signal: Simply press the TV/VIDEO button on the remote control.


**2**

 Press the **CH ▼** button twice to select "TV/AV".

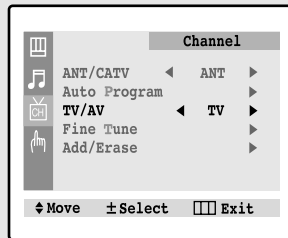


**3**

 Press the **VOL+** or **VOL-** button. You will switch between viewing the signals coming from equipment connected to the TV's A/V jacks, and the TV signal.

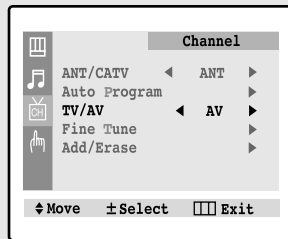

**4**

 Press the **MENU** button twice to exit.

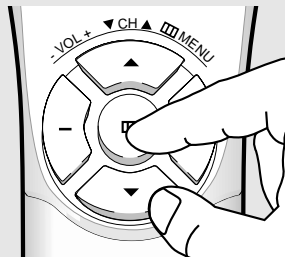

# Chapter Four

## SPECIAL FEATURES

 
### Fine Tuning Channels

Use fine tuning to manually adjust a particular channel for optimal reception.

**1**


Select the appropriate channel.

Press the **MENU** button to display the menu.  
Press the **CH ▼** button twice to select the "Channel" menu, then press the **VOL+** button.

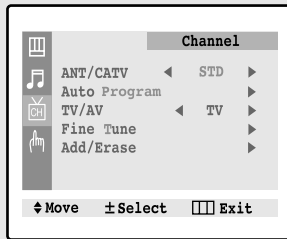


**2**

 Press the **CH ▼** button three times to select "Fine tune", then press the **VOL+** button.

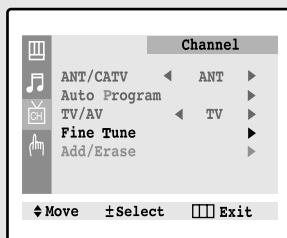

**3**

 
Press the **VOL+** and **VOL-** buttons to adjust the fine tuning.

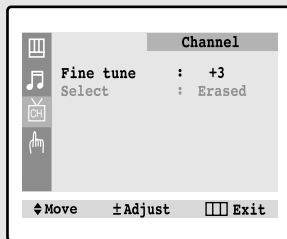

**4**

To store the fine tuning setting in the TV's memory, press the **CH ▼** button to select "Select". Press the **VOL+** or **VOL-** button to select "Added".

 To reset the fine tuning to "00", press the **VOL+** or **VOL-** button to select "Erased".

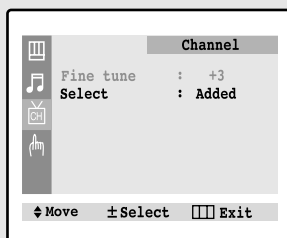


◀ Press the **MENU** button to resume normal viewing.

## Changing the Screen Size

 **1**


Press the **MENU** button to display the menu.

Press the **VOL +** button to select the "Picture" menu.

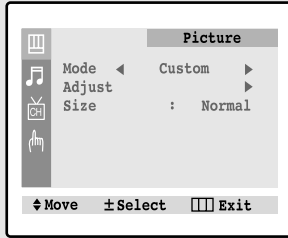

**2**

 
Press the **CH ▼** button twice to select "Size."

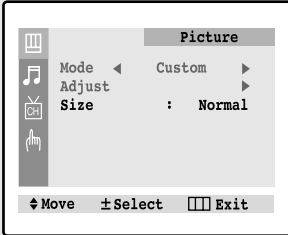

**3**

Press the **VOL +** or **VOL -** button repeatedly to select "Normal" or "Zoom".

 Press the **MENU** button twice to exit.

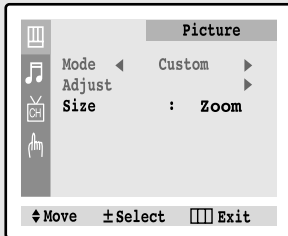


- **Normal** : Sets the picture to 4:3 normal mode. This is a standard TV screen size.
- **Zoom** : Magnifies the size of the picture on-screen.

## Using the Surf Feature

 This feature allows you to set the TV to return to a particular channel after a certain amount of time. For example, you may be watching a channel when commercials start. You can set the Surf to “5 minutes”, then switch channels. After 5 minutes, the TV will return to the original channel. To use the Surf feature:

### 1

While you are watching the channel to which you want to return, press the **SURF** button. The on-screen display will read “Surf off”.

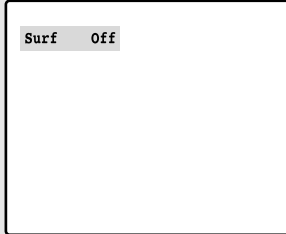

### 2

Press the **SURF** button again to set the timer in thirty second intervals, up to five minutes.



### 3

The time you set will begin counting down on the screen. When the time runs out, the TV will return to the channel you were watching when you set the timer.

 


## Setting the On/Off Timer

### 1

Press the **MENU** button to display the menu.


Press the **CH ▼** button three times to select "Function" menu, then press the **VOL+** button.

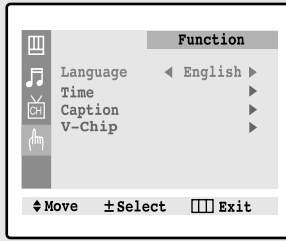

◀ Before using the timer, you must set the TV's clock. (See "Setting the Clock" on page 3.7).

### 2

 Press the **CH ▼** button to select "Time", then press the **VOL+** button.

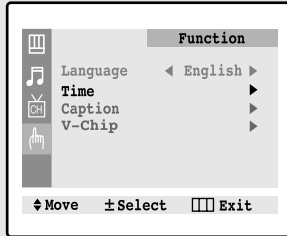


### 3

Press the **CH ▼** button to select "On time".

Press the **VOL+** button to select the "On time" hours. (The hours digits will be highlighted.)

 Press the **CH ▲** or **CH ▼** button repeatedly to select the appropriate hours (i.e., the hour when the TV will turn on.)

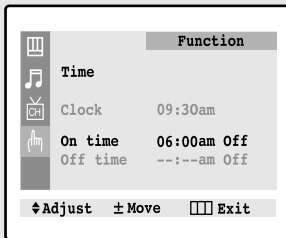


◀ When you set the hours, make sure the correct time of day (AM or PM) appears to the right of the hour.

### 4

 Press **VOL+** to select the "On time" minutes. (The minutes digits will be highlighted.)

Press **CH ▲** or **CH ▼** to select the appropriate minutes.

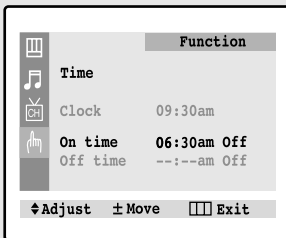

**5**

Press the **VOL +** button to select “On/Off.”

Press the **CH ▲** (or **CH ▼**) button to turn the on-timer “On.” (Repeatedly pressing the **CH ▲** or **CH ▼** button will alternate between on and off.)

	Function
<b>Time</b>	
Clock	09:30am
On time	06:30am On
Off time	--:--am Off
↕ Adjust   ± Move   □□ Exit	

◀ To deactivate the “On time,” select “Off” during this step.

**6**

When finished, press the **VOL +** button.

**7**

To set the Off time, press the **CH ▼** button to select “Off time.”

Press the **VOL +** button and set the hours and minutes. (Follow the same procedure as in steps 1–6 above.)

	Function
<b>Time</b>	
Clock	09:00am
On Time	06:30am On
Off Time	12:00am Off
↕ Adjust   ± Move   □□ Exit	

**8**

When finished setting the timer, press the **MENU** button three times to exit.

## Setting the Sleep Timer

The sleep timer automatically shuts off the TV after a preset time (from 10 to 180 minutes).

**1**

Press the **SLEEP** button on the remote control.

**2**

Press the **SLEEP** button repeatedly until the appropriate time interval appears (any of the preset values from “Off” to “180”).

◀ After about 5 seconds, the sleep display will disappear from the screen, and the time interval will be set.

## Sound Features

 
### Choosing a Multi-Channel Sound (MTS) Soundtrack

Depending on the particular program being broadcast, you can listen to Stereo, Mono or a Separate Audio Program. (SAP audio is usually a foreign-language translation. Sometimes SAP has unrelated information like news or weather.)

**1**


Press the **MENU** button to display the menu.

Press the **CH▼** button to select the "Sound" menu, then press the **VOL+** button.

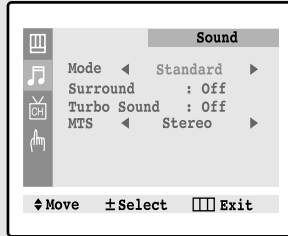

**2**

 
Press the **CH▼** button four times to select "MTS".

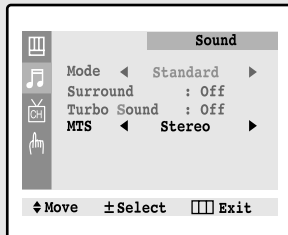

**3**

Press the **VOL +** or **VOL -** button to select "Mono," "SAP," or "Stereo."

 Press the **MENU** button twice to exit

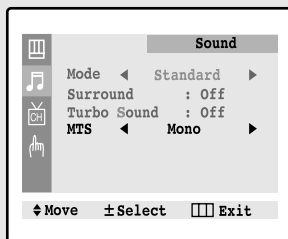

◀ The text at the bottom of the menu tells you if the incoming audio is stereo, SAP, or mono.

- Choose *Stereo* for channels that are broadcasting in stereo.
- Choose *Mono* for channels that are broadcasting in mono, or if you are having difficulty receiving a stereo signal.
- Choose *SAP* to listen to the Separate Audio Program, which is usually a foreign-language translation.

You can also change the MTS setting by pressing the "MTS" button on the remote control. (When you change channels, MTS is set to "Stereo" automatically. To listen in 'SAP' or 'Mono,' change the MTS setting.)

**Extra sound settings (Turbo Sound, or Surround)****• Turbo Sound**

Turbo sound emphasizes the bass and treble frequencies to add fullness to the sound.

**• Surround**

 
Your Samsung TV creates a "Surround" effect such that the sound seems to come from all directions. Once the "Surround" is set to "On" or "Off", the setting applies to the sound effects such as Standard, Music, Movie and Speech.

Note: To listen a "Surround" effects, it is necessary that channels are broadcasting in stereo. and setting the MTS to stereo mode.


**1**

Press the **MENU** button to display the menu.

Press the **CH▼** button to select the "Sound" menu, then press the **VOL +** button.

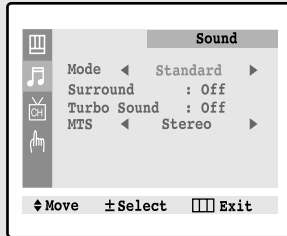
**2**

 Press the **CH▼** button three times to select "Turbo sound".

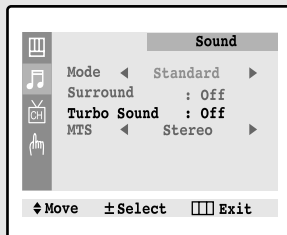**3**

Press the **VOL +** button to select "On".

 Press the **MENU** button twice to exit

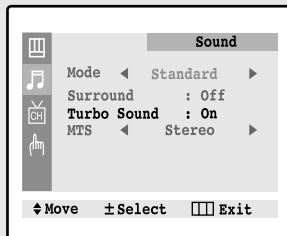

You can set Surround as the same way of setting Turbo sound.

## Viewing Closed Captions

 
Your TV decodes and displays the closed captions that are broadcast with certain TV shows. These captions are usually subtitles for the hearing impaired or foreign-language translations. All VCRs record the closed caption signal from television programs, so home-recorded video tapes also provide closed captions. Most pre-recorded commercial video tapes provide closed captions as well. Check for the closed caption symbol in your television schedule and on the tape's packaging:

### 1

Press the **MENU** button to display the menu.


Press the **CH ▼** button three times to select the "Function" menu.

Press the **VOL+** button.

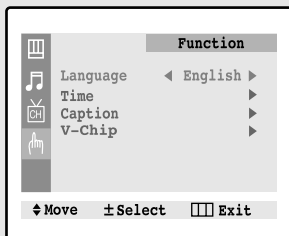


### 2

 Press the **CH ▼** button twice to select the "Caption" menu, then press the **VOL+** button.

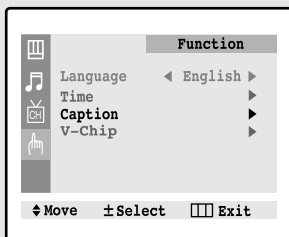

### 3

 
Press the **VOL+** or **VOL -** button to turn closed captioning on/off.

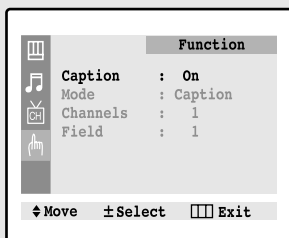

### 4

Press the **CH ▼** button to select "Mode."

 Press the **VOL -** or **VOL +** button to select "Caption" or "Text."

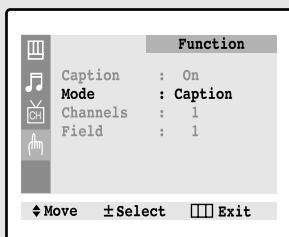

### 5

Depending on the particular broadcast, it might be necessary to make changes to "Channels" and "Field":

Use the **CH ▲**, **CH ▼**, **VOL +** and **VOL -** buttons to make the changes. (Follow the same procedure as in steps 3-4 above.)

Press the **MENU** button three times to exit.

◀ Misspellings and unusual characters sometimes occur during closed caption transmissions, especially those of live events. There may be a small delay before captions appear when you change channels. These are not malfunctions of the TV.

◀ In **caption mode**, captions appear at the bottom of the screen, and they usually cover only a small portion of the picture.

In **text mode**, information unrelated to the program, such as news or weather, is displayed. Text often covers a large portion of the screen.

◀ Different channels and fields display different information: Field 2 carries additional information that supplements the information in Field 1. (For example, Channel 1 may have subtitles in English, while Channel 2 has subtitles in Spanish.)

## Using the V-Chip

The V-Chip feature automatically locks out programming that is deemed inappropriate for children. The user must first enter a PIN (personal ID number) before any of the V-Chip restrictions can be set up or changed.

Note : When the V-chip feature is active, channel-auto program features do not function.

 
### Setting Up Your Personal ID Number (PIN)

**1**

Press the **MENU** button to display the menu.

Press the **CH ▼** button three times to select the "Function" menu.

Press the **VOL+** button.

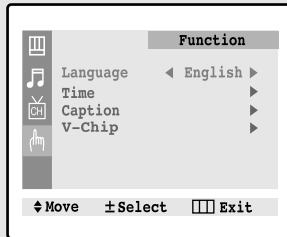


**2**

Press the **CH ▼** button three times to select the "V-chip" menu.

Press the **VOL+** button.

 
The "Enter pin" screen will appear. Enter your 4-digit PIN number. Note: The default PIN number for a new TV set is "0-0-0-0."

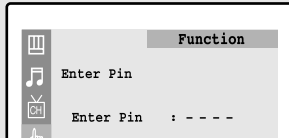

**3**


After entering a valid PIN number, the "V-chip" screen will appear.

 Press the **CH ▼** button three times and highlight "Change pin."

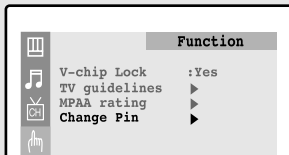

**4**

 While the "Change pin" field is selected, press the **VOL +** button. The Change pin screen will appear. Choose any 4-digits for your PIN and enter them.

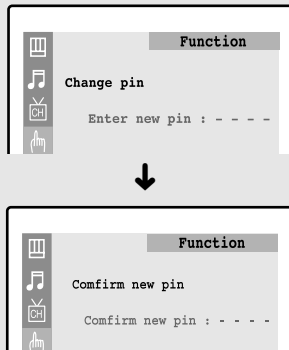

As soon as the 4 digits are entered, the "Confirm new pin" screen appears. Re-enter the same 4 digits. When the Confirm screen disappears, your PIN has been memorized. Press the **MENU** button three times to exit.

◀ Note: If you forget the PIN, press the remote-control keys in the following sequence, which resets the pin to 0-0-0-0:

POWER OFF → MUTE → 8 → 2 → 4 → POWER ON.


### How to Enable/Disable the V-Chip

 **1**

Press the **MENU** button to display the menu.

Press the **CH ▼** button three times to select the “Function” menu.

Press the **VOL+** button.

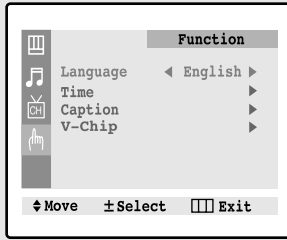


**2**

Press the **CH ▼** button three times to select the “V-chip” menu.

Press the **VOL+** button.

 
The “Enter pin” screen will appear. Enter your 4-digit PIN number.

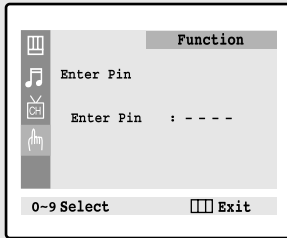

**3**

The “V-Chip” screen will appear, and “V-Chip lock” will be selected (turns blue color).

 To enable the V-Chip feature, press the **VOL +** button so that the “V-Chip lock” field is Yes. (Pressing **VOL +** will alternate between Yes and No.)

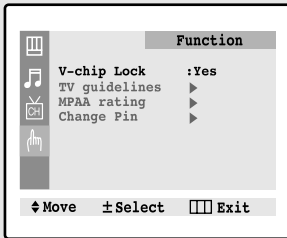

### How to Set up Restrictions Using the “TV guidelines”

 
First, set up a personal identification number (PIN), and enable the V-Chip. (See previous section.) Parental restrictions can be set up using either of two methods: The TV guidelines or the MPAA rating.

**1**

Press the **MENU** button to display the menu.

Press the **CH ▼** button three times to select the “Function” menu.

Press the **VOL+** button.

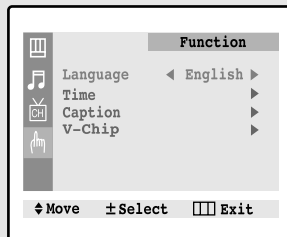


**2**

Press the **CH ▼** button three times to select the “V-chip” menu.


Press the **VOL+** button.

 The “Enter pin” screen will appear. Enter your 4-digit PIN number.

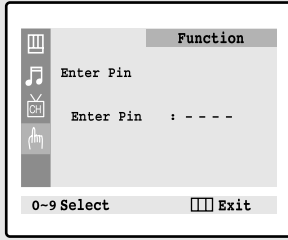


**3**

 The “V-chip” screen will appear. Press the **CH ▼** button, and highlight the field for “TV guidelines.”

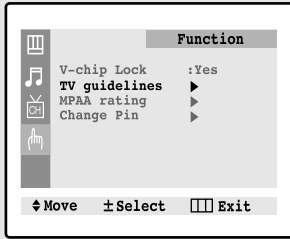

**4**

 Press the **VOL +** button. The “TV guidelines” screen will appear. Press the **CH ▲**, **CH ▼** buttons to highlight one of the six age-based categories:

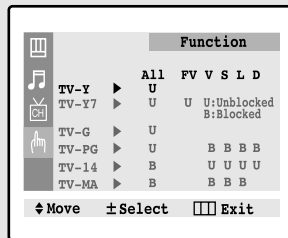

TV-Y Young children  
TV-Y7 Children 7 and over

TV-G General audience  
TV-PG Parental guidance  
TV-14 Viewers 14 and over  
TV-MA Mature audience

◀ Note: These categories consist of two separate groups: TV-Y and TV-Y7 (young children through age 7), and TV-G through TV-MA (everybody else).

The restrictions for these two groups work independently: If a household includes very young children as well as young adults, the TV guidelines must be set up separately for each age group. (See next step.)

**5**

At this point, one of the TV-Ratings is highlighted (blue color).

Press the **VOL +** button: Depending on your existing setup, a letter “U” or “B” will start blinking. (U= Unblocked, B= Blocked)

While the “U” or “B” is red, press the **CH ▲** or **CH ▼** button to block or unblock the category.

Press the **MENU** button once to save the TV guidelines. A TV-Rating will be highlighted, and no letters will blink. To exit this screen, press **MENU** again. To select a different TV-Rating, press the **CH ▲** or **CH ▼** button and then repeat the process.

Note 1: The TV-Y7, TV-PG, TV-14 and TV-MA have additional options. See the next step to change any of the following sub-ratings:

FV: Fantasy violence  
D: Dialog  
L: Offensive language  
S: Sexual situation  
V: Violence

Note 2: The V-Chip will automatically block certain categories that are “more restrictive.” For example, if you block “TV-Y” category, then TV-Y7 will automatically be blocked. Similarly, if you block the TV-G category, then all the categories in the “young adult” group will be blocked (TV-G, TV-PG, TV-14 and TV-MA). The sub-ratings (D, L, S, V) work together similarly. (See next section.)



**6**

How to set the FV, D, L, S and V sub-ratings:

First, highlight one of these TV-Ratings: TV-Y7, TV-PG, TV-14 or TV-MA (See Step 4, on previous page).

Next, while the TV-Rating is highlighted (BLUE), repeatedly press the **VOL +** button. This will cycle through the available sub-ratings (FV, L, S, D or V).

A blinking letter ("U" or "B") will be displayed for each sub-rating. While the "U" or "B" is blinking, press the **CH ▲** or **CH ▼** button to change the sub-rating.

Press **MENU** once to save the TV guidelines. A TV-Rating will be highlighted (BLUE), and no letters will blink. To exit this screen, press **MENU** again. To select a different TV-Rating, press the **CH ▲** or **CH ▼** button and then repeat the process.

Note: The V-chip will automatically block certain categories that are "More restrictive". For example, if you block "L" sub-rating in TV-PG, then the "L" sub-ratings in TV-14 and TV-MA will automatically be blocked.

**7**

Press the **MENU** button three times to clear all the screens. (Or proceed to the next section, and set up additional restrictions based on the MPA A codes).

### How to Set up Restrictions using the MPA A Ratings: G, PG, PG-13, R, NC-17, X

 
The MPA A rating system uses the Motion Picture Association of America (MPA A) system, and its main application is for movies. (Eventually, movie videocassettes will be encoded with MPA A ratings.) When the V-Chip lock is on, the TV will automatically block any programs that are coded with objectionable ratings (either MPA A or TV-Ratings).

**1**

Press the **MENU** button to display the menu.

Press the **CH ▼** button three times to select the "Function" menu.


Press the **VOL+** button.

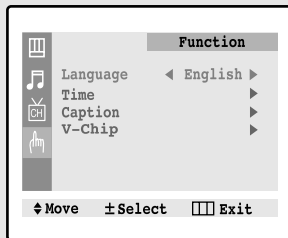**2**

Press the **CH ▼** button three times to select the "V-chip" menu.


Press the **VOL+** button.

 The "Enter pin" screen will appear. Enter your 4-digit PIN number.

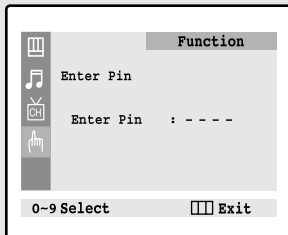


**3**

 The “V-chip” screen will appear. Press the **CH ▼** button twice, and select “MPAA rating.”

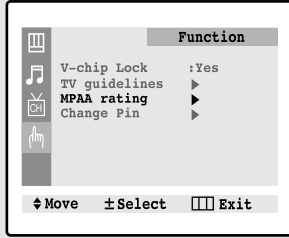


**4**

 While “MPAA rating” is selected, press the **VOL +** button. The “MPAA rating” screen will appear.

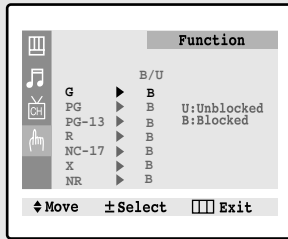

**5**

 Repeatedly press the **CH ▼** button to select a particular MPAA category. Pressing the **CH ▼** button will cycle through the MPAA categories:

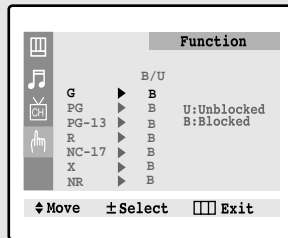

- G** General audience (no restrictions).
- PG** Parental guidance suggested.
- PG-13** PG-13 (Parents strongly cautioned).
- R** R (Restricted. Children under 17 should be accompanied by an adult).
- NC-17** No children under age 17.
- X** X (Adults only).
- NR** Not rated.

While a particular category is selected, press **VOL +** to activate it. A letter (“U” or “B”) will be displayed. Press **CH ▲** or **CH ▼** to select “U” or “B”.

Press **MENU** four times to save the settings and to clear all screens.

Note: The V-Chip will automatically block any category that is “more restrictive.” For example, if you block the “PG-13” category, then “R,” “NC-17,” and “X” will automatically be blocked also.

**How to Reset the TV after the V-Chip Blocks a Channel (“Emergency Escape”)**

If the TV is tuned to a restricted channel, the V-Chip will block it. The screen will go blank and the following message will appear: “Excessive rating.”

To resume normal viewing, tune to a different channel using the number buttons. Under certain conditions (depending on the rating of the local TV programs) the V-Chip might lock out all the channels. In this case, use the V-Chip function for an “emergency escape”:

Press the **MENU** button to display the menu. Press the **CH ▼** button three times to select the “Function” menu and press the **VOL +** button.

Press the **CH ▼** button three times to highlight the “V-chip” menu and press the **VOL +** button.

Enter your PIN number, and press the **VOL +** button to temporarily disable the V-Chip Lock.

# Chapter Five

## TROUBLESHOOTING

If the TV seems to have a problem, first try this list of possible problems and solutions. If none of these troubleshooting tips apply, then call your nearest Samsung authorized service center.

### Identifying Problems

<b>Problem</b>	<b>Possible Solution</b>
Poor picture	Try another channel. Adjust the antenna. Check all wire connections.
Poor sound quality.	Try another channel. Adjust the antenna.
No picture or sound.	Try another channel. Press the TV/VIDEO button. Make sure the TV is plugged in. Check the antenna connections.
No color, wrong colors or tints.	Make sure the program is broadcast in color. Adjust the picture settings. If the set is moved or turned in a different direction, the power should be OFF for at least 30 minutes.
Picture rolls vertically.	Adjust the antenna. Check all wire connections.
The TV operates erratically	Unplug the TV for 30 seconds, then try operating it again.
The TV won't turn on.	Make sure the wall outlet is working.

## Familiarizándose con su nueva TV

### Control Remoto (Consulte la página 1.4)

Usted puede usar el control remoto a una distancia de alrededor de 23 pies desde su TV. Al usar el control remoto, siempre apúntelo directamente hacia la TV.

**1 POWER**

Oprima para encender o apagar la TV.

**2 TV/VIDEO**

Oprima una vez para mirar programas de TV. Oprima de nuevo para ver la imagen desde su reproductor de video.

**3 Botones con números**

Oprima para seleccionar el canal específico en la TV.

**4 +100**

Oprima para seleccionar directamente los canales mayores que 100. Por ejemplo, para seleccionar el canal 121, oprima "+100", luego oprima "2" y "1".

**5 CH ▲ CH ▼**

Oprima ▲ o ▼ para cambiar canales en la TV.

**6 DISPLAY**

 
Oprima para mostrar en pantalla el canal actual, el origen de la señal, la programación de encendido, etc.

**7 SURF**

Oprima cuando esté mirando un canal para regresar automáticamente a dicho canal después de un período de tiempo especificado por usted.

**8 P-STD (Imagen-estándar)**

Oprima para seleccionar configuraciones de imágenes en memoria o estándar.

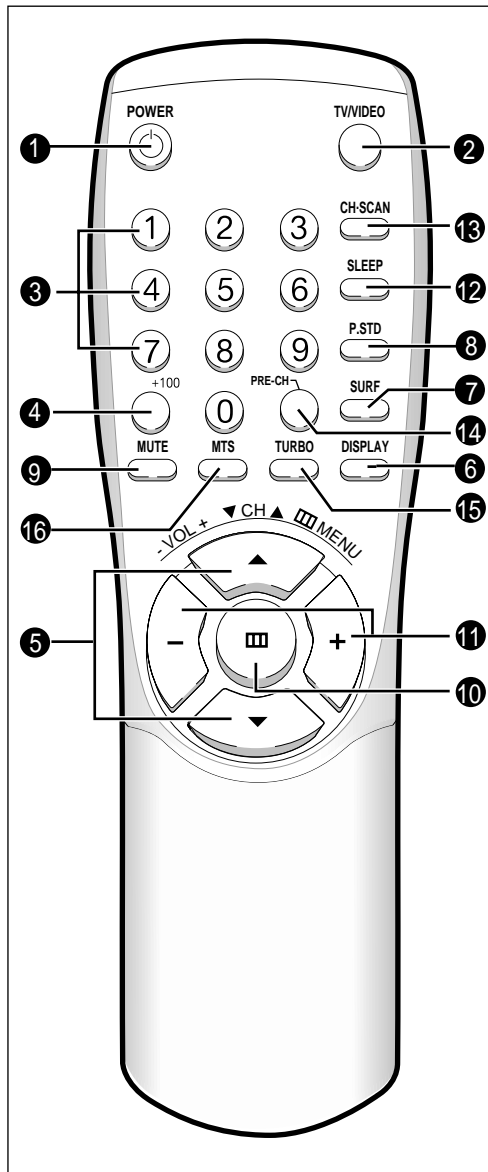

**9 MUTE**

Oprima para silenciar (enmudecer) el volumen.

**10 MENU**

Oprima para hacer visualizar el menú principal.

**11 -VOL +**

Oprima -VOL para disminuir o VOL+ para aumentar el volumen de la TV.

**12 SLEEP**

Oprima para seleccionar el tiempo para el apagado Automático.

**13 CH. SCAN (Cambiar canales)**

Oprima para que la TV cambie de canal automáticamente uno por uno.

**14 PRE-CH (Canal anterior)**

Oprima para volver rápidamente al último canal de TV que miraba.

**15 TURBO**

Pulse para percibir los efectos de sonidos medios y graves mientras ve un programa de música.

**16 MTS**

Para seleccionar Estéreo, Mono o programa secundario de audio (SAP).

**Encendido y apagando la TV** *(Consulte la página 3.1)*

Para encender o apagar la TV:

- ❶ Oprima **POWER**.

**Visualización de los menús** *(Consulte la página 3.1)*

Su TV Samsung tiene un sistema de menús simple y fácil de usar que aparece en la pantalla de TV.

- ❶ Con la TV encendida, oprima **MENU**.
- ❷ Con el menú principal en pantalla, oprima **MENU** repetidas veces.

**Seleccionando el Idioma del Menú** *(Consulte la página 3.2)*

Usted puede elegir que los menús de su televisor se desplieguen en Inglés, Español, o Francés.

- ❶ Oprima **MENU** varias veces hasta que vea el menú Setup.
- ❷ Oprima **CH ▼** hasta hacer resaltar "language".
- ❸ Oprima **-VOL** o **VOL+** para seleccionar uno de los tres lenguajes: inglés, español o francés.
- ❹ Oprima **DISPLAY** para salir de los menús.

**Almacenamiento de Canales** *(Consulte la página 3.3)***Almacenando Canales en Memoria**

- ❶ Oprima **MENU** repetidas veces hasta hacer visualizar el menú de Setup.
- ❷ Oprima **VOL+**. Vera una pantalla para seleccionar el tipo de antena o sistema de cable al que está conectado. Si conectó una antena, deje realzado "Antena". Si conectó cable, oprima **CH ▼** para realzar el tipo de cable que tenga "STD", "HRC", o "IRC".
- ❸ Oprima **VOL+**. El televisor empezará a memorizar todas las estaciones que puede recibir.  
*Esto toma aproximadamente de uno a dos minutos. Cuando el televisor ha terminado, desplegará la pantalla de "Memorizar canales".*
- ❹ Presione la opción **MENU** tres veces para limpiar la pantalla.

**Añadiendo y Borrando Canales** *(Consulte la página 3.5)*

Usted puede añadir manualmente un canal a la memoria o borrar manualmente uno de la memoria.

- ❶ Oprima **MENU** varias veces hasta que vea el menú Setup. Oprima **CH ▼** para realizar "Add/Erase".
- ❷ Oprima **VOL+**. Usted verá la pantalla de menú Add/Erase.
- ❸ Oprima **CH ▲** y **CH ▼** para seleccionar un canal. Oprima **VOL+** para añadir el canal o **-VOL** para borrar el canal.
- ❹ Cuando termine de agregar o borrar, oprima el botón **MENU** tres veces para seguir mirando la televisión.

## Cambiando Canales *(Consulte la página 3.6)*

### Utilizando los Botones de Canal

- ❶ Oprima los botones **CH ▲** o **CH ▼** para cambiar los canales.

### Cambiando Canales Directamente

- ❶ Oprima los botones de números para ir directamente a un canal. Por ejemplo, para seleccionar el canal 27, oprima "2", y después "7". El televisor cambiará los canales cuando oprima el segundo número.
- ❷ Si desea seleccionar un canal mayor de 100, oprima el botón **+100**. Por ejemplo, para ver el canal 122 oprima "+100", después "2", y después "2".

### Cambiando Canales

Usted puede cambiar automáticamente todos los canales en la memoria con solo tocar un botón.

- ❶ Oprima **CH.SCAN**

✓ Para detener el cambio de canales, oprima cualquier botón.

### Seleccionando el Canal Anterior

- ❶ Oprima **PRE-CH**

*La TV cambiará al último canal que usted estaba mirando.*

## Programación del Reloj *(Consulte la página 3.7)*

- ❶ Oprima **MENU** repetidas veces hasta ver el menú de time.
- ❷ Oprima **VOL +**.
- ❸ Oprima los botones de **CH ▲** o **CH ▼** para seleccionar la hora correcta. Oprima **VOL+**. Los minutos empezarán a parpadear.
- ❹ Oprima los botones de **CH ▲** o **CH ▼** para seleccionar los minutos correctos. Cuando haya seleccionado los minutos correctos, oprima **DISPLAY** para sacar los menus.  
*Ahora el reloj aparecerá cada vez que oprima **DISPLAY**.*

## Adaptando la Imagen *(Consulte la página 3.8)*

Usted puede usar los menús en pantalla para cambiar manualmente el contraste, el brillo, la nitidez, el color, y el tinte de su TV. Para adaptar la imagen:

- ❶ Oprima **MENU**. Usted verá el menú Video.
- ❷ Oprima **-VOL** o **VOL+** hasta que aparezca la palabra "Custom".
- ❸ Oprima **CH ▼** para seleccionar el artículo que desea cambiar.
- ❹ Oprima **-VOL** o **VOL+** para elevar o disminuir el valor del artículo. Por ejemplo, cuando usted selecciona "Bright", **VOL+** aumenta el brillo; **-VOL** disminuye el brillo.

**Utilizando Imagen Automática** *(Consulte la página 3.9)*

Esta es una característica Samsung especial que ajusta automáticamente su imagen para usted

- ❶ Con el televisor encendido, oprima **P-STD** para seleccionar un ajuste automático de imagen.
- Seleccione *Standard* para ajustar el televisor para que opere a un rendimiento máximo, de conformidad a las especificaciones de su televisor.
- Seleccione *Sports* para ver el televisor durante el día, o cuando hay luz brillante en la habitación.
- Seleccione *Movies* cuando vea películas o cintas de reproductora de videos.
- Seleccione *Mild* cuando esté viendo el televisor con las luces bajas, o cuando esté jugando juegos de video.
- Seleccione *Custom* si desea hacer los ajustes usted mismo.

**Mirando una Cinta o Cámara de vídeo** *(Consulte la página 3.11)*

- ❶ Oprima **TV/VIDEO** cuando desee visualizar una cinta de video, un juego en video o cualquier señal del equipo conectado a los jacks A/V de la TV.

✓ Si usted no tiene ningún equipo conectado a los jacks A/V, la TV visualizará el mensaje, "Connect the A/V jacks".

- ❷ Para volver a mirar la TV normal, oprima **TV/VIDEO** otra vez.

**Sintonía Fina de Canales** *(Consulte la página 4.1)*

Usted puede sintonizar finamente un canal para que se vea más bien o para reducir las rayas o interferencia en la imagen.

- ❶ Oprima **CH ▲**, **CH ▼**, o los botones de número para seleccionar el canal que desea sintonizar finamente.
- ❷ Oprima **MENU** repetidas veces hasta ver el menú de Setup. Oprima **CH ▼** hasta seleccionar "Fine tune".
- ❸ Oprima **-VOL** y **VOL+** hasta que el canal esté tan claro como sea posible.
- ❹ Oprima **DISPLAY** para quitar los menús de la pantalla.

**Cómo usar el Cronómetro de SURF** *(Consulte la página 4.3)*

Puede ser que usted esté mirando un canal que comience a mostrar comerciales. Usted puede fijar el Cronómetro de **SURF** en "2 minutos", luego cambiar canales. Después de 2 minutos, la TV regresará al canal original. Para usar el cronómetro de **SURF**:

- ❶ Mientras esté mirando el canal al cual desea regresar, oprima **SURF**.  
*La visualización en pantalla mostrará "Skip off".*
- ❷ Oprima **SURF** de nuevo para programar el cronómetro en intervalos de 30 segundos, hasta cinco minutos.

### Configuración del Cronómetro de Encendido/Apagado *(Consulte la página 4.4)*

Usted puede programar la TV para que se encienda o apague a una hora específica. Para fijar el cronómetro:

- ❶ Oprima **MENU** repetidas veces hasta ver el menú Time. Oprima **CH ▼** para seleccionar "Timer".
  - ✓ Antes de usar el cronómetro, usted debe poner en hora el reloj de la TV.
- ❷ Oprima **VOL+** para cambiar el temporiz a "On".
  - ✓ Si más tarde usted desea apagar el cronómetro, oprima -VOL para cambiar el temporizador a "Off".
- ❸ Oprima **CH ▼** para hacer resaltar "On time". Oprima **VOL+**.
- ❹ Oprima **CH ▲** o **CH ▼** para seleccionar la hora en que desea que la TV se encienda.
- ❺ Oprima **VOL +**. Los minutos parpadearán.
  - Oprima **CH ▲** o **CH ▼** para seleccionar los minutos en que desea que se encienda la TV.
- ❻ Cuando termine, oprima **VOL +**.
- ❼ Si desea programar el Fin, oprima **CH ▼** para hacer resaltar "Off time". Programe el "Off time" de la misma manera que el "On time".
- ❽ Cuando termine de configurar el cronómetro, oprima **DISPLAY**.

### Configuración del Cronómetro de Apagado *(Consulte la página 4.5)*

- ❶ Oprima repetidas veces **SLEEP** para fijar el tiempo que desea que la TV permanezca encendida.
  - Usted puede fijar el cronómetro en uno de los siguientes periodos de tiempo: 10, 20, 30, 60, 90, 120, 150, 180, 210, 240, 270, 300, 330 o 360 minutos.*
- ❷ Para cancelar el cronómetro de apagado, oprima **SLEEP** hasta que la lectura de la pantalla muestre "Off". Usted también puede cancelar el cronómetro apagando y luego encendiendo de nuevo la TV.

### Ajustes MTS: Selección del canal de sonido *(Consulte la página 4.6)*

Cuando usted está viendo un programa emitido en estéreo, puede ajustar su televisor para que reproduzca la banda sonora en estéreo o en mono. Adicionalmente, algunas emisoras transmiten un Programa Separado de Audio o SAP. Los programas SAP son normalmente versiones del programa en otra lengua, o transmiten información adicional, como noticias o el tiempo.

- ❶ Presione **MTS** para cambiar el modo MTS. Usted puede elegir entre "Estéreo", "SAP" y "Mono".
  - Seleccione Mono si este canal está transmitiendo en mono, o si está teniendo dificultades para recibir una señal estéreo.
  - Seleccione Estéreo para visualizar normalmente de los canales que transmiten en estéreo.
  - Seleccione SAP cuando usted desee escuchar Programa de Audio Secundario que es usualmente Banda Sonora (Soundtrack) en otro idioma.

### Uso del TURBO *(Consulte la página 4.7)*

Cuando esté viendo un programa de música, active el botón **TURBO** para sentir los efectos de sonidos medios y graves.

- ❶ Pulse el botón **TURBO** del mando a distancia y se selecciona "Turbo si" o "Turbo no".



**Visualización de Subtítulos** *(Consulte la página 4.8)*

Su TV decodifica y visualiza los subtítulos que son transmitidos en algunos programas de televisión. Estos subtítulos generalmente son subtítulos para las personas con problema de audición o traducciones hacia otro idioma. Observe que el símbolo de subtítulos aparezca en su programa de televisión y en la envoltura de la cinta: [CC].

- ❶ Oprima **MENU** repetidas veces hasta ver el menú Setup. Oprima **CH ▼** para seleccionar "Caption".
- ❷ Oprima **VOL+** para abrir el menú de Caption.
- ❸ Oprima **VOL +** para encender los subtítulos.
- ❹ Oprima **CH ▼** para hacer resaltar "Mode". Oprima **-VOL** o **VOL +** para elegir "Capt." (subtítulos) o "Text". En el modo de subtítulo, aparecen subtítulos en la parte inferior de la pantalla, y generalmente cubren únicamente una pequeña parte de la imagen. En el modo de texto, se visualiza la información no relacionada con el programa, como las noticias o el informe del tiempo. El texto a menudo cubre una parte amplia de la pantalla.
- ❺ Si usted desea, use **CH ▲**, **CH ▼**, o **VOL +** para cambiar el canal o campo de subtítulos. Luego, oprima **DISPLAY** para regresar a la imagen normal.

**Usar el V-chip** *(Consulte la página 4.9-4.13)*

La función de V-chip bloquea automáticamente las programaciones que son no aptos para los menores de edad. El usuario debe introducir primero un PIN (Número de Identificación Personal) antes de cualquier ajuste o cambios se realice en las restricciones de V-Chip.

**Ajuste su Número de Identificación Personal (PIN)**

- ❶ Pulse repetidamente **MENU** hasta que vea el menú Vchip.
- ❷ Pulse **VOL +**. La pantalla de "Ingr código" aparecerá. Introduzca los 4 dígitos de su PIN. Nota : El número PIN de omisión para un TV nuevo es **0-0-0-0**.
- ❸ Después de introducir el número PIN válido, aparecerá la pantalla de "Modo de V-chip". Pulse **CH ▼** y destaca "Cambiar código".
- ❹ Mientras que el campo de "Cambiar código" seleccionado, pulse **VOL +**. La pantalla de Cambiar PIN aparecerá. Escoger 4 dígitos para su número PIN e introdúzcalos.

Tan pronto que los 4 dígitos son introducidos, la pantalla de "Confirmar código" aparecerá. Reintroduzca los mismos 4 dígitos. Cuando desaparezca la pantalla de confirmación, su PIN ha sido memorizado.

Nota : Si usted olvida el PIN, pulse las teclas de su mando a distancia en la siguiente secuencia, el cual reajusta el PIN a 0-0-0-0.

POWER OFF → MUTE → 8 → 2 → 4 → POWER ON.

**Cómo Habilitar/Deshabilitar el V-chip**

- ❶ Pulse repetidamente **MENU** hasta que vea el menú Vchip.
- ❷ Pulse **VOL +**. La pantalla de "Ingr código" aparecerá. Introduzca los 4 dígitos de su PIN.
- ❸ Aparecerá la pantalla "modo de V-chip" y "Bloqueo V-chip" será destacada. Para habilitar la función de V-chip, pulse **VOL +** entonces, el campo de V-chip es Si. (Pulsar **VOL +** alternará entre Si y No).

**Usar el V-chip, continuación****Cómo ajustar las restricciones usando las “Guías del TV”**

Primero, ajustar el número de identificación personal (PIN), y habilitar el V-chip. ( Ver la sección anterior.) Las restricciones originales pueden ser cambiados usando cualquiera de los dos métodos : La Guía del TV o la clasificación de MPAA.

- ❶ Pulse repetidamente **MENU** hasta que vea el menú Vchip.
- ❷ Pulse **VOL +**. La pantalla de “Ingr código” aparecerá. Introduzca los 4 dígitos de su PIN.
- ❸ Aparecerá la pantalla de “Modo V-chip”. Pulse el botón **CH ▼**, y marcar el campo para “Guía de programas”.
- ❹ Pulse **VOL +**. Aparecerá la pantalla de “Guía de programas”. Pulse los botones **CH ▲** o **CH ▼** para marcar una de las 6 categorías basadas en edades (Age-based).

TV-Y Niños pequeños

TV-Y7 Niños mayores de 7 años

TV-G Audiencia general

-----

TV-PG Guía de los padres

TV-14 Apto para mayores de 14 años

TV-MA Audiencia Adulta

Nota : Estas categorías consiste de dos grupos separados : TV-Y y TV-Y7 (Los niños de 7 años ), y TV-G a TV-MA ( todos los demás).

Las restricciones para estos dos grupos trabajan independientemente: Si una familia incluye niños muy pequeños tanto como los adultos jóvenes, las guías de TV deben ser ajustado separadamente para cada grupo de edades. (Ver el paso siguiente.)

- ❺ En este punto, uno de las clasificaciones de TV es destacada. Pulse el botón **VOL +**; dependiendo de los ajustes ya existentes, una letra “D” o “B” comenzará a parpadear. (“D” = Desbloqueada, “B” = Bloqueado) Mientras que el “D” o “B” está parpadeando, pulse el botón **CH ▲** o **CH ▼** para bloquear o desbloquear la categoría. Pulse **MENU** una vez para grabar las guías de TV. Una clasificación de TV marcará y ninguna letra parpadeará. Para salir de esta pantalla, pulse **MENU** nuevamente. Para seleccionar una clasificación diferente, pulse **CH ▲** o **CH ▼** y luego repita el proceso.

Nota 1 : La TV-Y7, TV-PG, TV-14 y TV-MA tiene opciones adicionales. Ver el siguiente paso para cambiar alguno de las siguientes sub-clasificaciones :

FV :Violencia en fantasía

D : Diálogo

S : Situaciones sexuales

V : Violento

Nota 2 : El V-chip bloqueará automáticamente ciertas categorías que son “más restrictivas”. Por ejemplo, si usted bloquea la categoría TV-Y, entonces la categoría TV-Y7 será bloqueada automáticamente. Similarmente, si usted bloquea la categoría TV-G, entonces todas las categorías en el grupo de “Adultos Jóvenes” serán bloqueados (TV-G, TV-PG, TV-14 y TV-MA). Las sub-clasificaciones (D, L, S, V) funcionarán juntas de forma similar. (ver la sección siguiente.)

- ❻ Cómo ajustar las sub-clasificaciones FV, D, L, S y V. Primero, marcar una de esas clasificaciones de TV : TV-Y7, TV-PG, TV-14 o TV-MA (Ver el paso 4, en la página anterior.) Después, mientras que la clasificación de TV está destacada, pulse repetidamente el botón **VOL +**. Esto pondrá en ciclo a través de las sub-clasificaciones disponibles (FV, L, S, D o V). Una letra parpadeante (“D” o “B”) será mostrado en cada sub-clasificaciones. Mientras que el “D” o “B” está parpadeando pulse **CH ▲** o **CH ▼** para cambiar la sub-clasificación. Pulse **MENU** una vez para grabar la guía de TV. Una clasificación de TV será destacada, y ninguna letra parpadeará, pulse **MENU** nuevamente. Para seleccionar una clasificación de TV diferente, pulse **CH ▲** o **CH ▼** y repita este procedimiento. Nota : El V-chip bloqueará automáticamente ciertas categorías que son “más restrictivas”. Por ejemplo, si usted bloquea la sub-clasificación “L” en TV-PG, las sub-clasificaciones “L” en TV-14 y TV-MA será automáticamente bloqueadas.
- ❼ Pulse dos veces el botón **MENU** para borrar las pantallas. (O proceda a la siguiente sección, y ajustar las restricciones adicionales basadas en los códigos MPAA).

**Usar el V-chip, continuación****Cómo ajustar las Restricciones usando las clasificaciones de MPAA : G, PG, PG-13, R, NC-17, X**

El sistema de clasificación de MPAA utiliza el sistema de Motion Picture Association of America (MPAA) y su principal aplicación es para las películas. (Eventualmente, las cintas de video de películas serán codificadas con las clasificaciones MPAA.) Cuando está operando el bloqueo de V-chip, el TV bloqueará automáticamente cualquier programa que son codificado con las clasificaciones objetable. (tanto MPAA como Clasificación de TV.)

- ❶ Pulse repetidamente **MENU** hasta que vea el menú Vchip.
- ❷ Pulse **VOL +**. Aparecerá la pantalla de "Ingr codigo". Introduzca los 4 dígitos de su número PIN.
- ❸ Aparecerá la pantalla de "Modo V-chip". Pulse el botón **CH ▼** dos veces, y marcará la "MPAA clasif".
- ❹ Mientras la "MPAA clasif" está destacada, pulse el botón **VOL +**. Aparecerá la pantalla de la "MPAA clasif".
- ❺ Pulse repetidamente el botón **CH ▼** para marcar una categoría MPAA en particular. Pulsando el botón **CH ▼** pondrá en ciclo a través de las categorías MPAA.

<b>G</b>	Audiencia general (Sin restricciones)
<b>PG</b>	Guías paternas sugeridas
<b>PG-13</b>	PG-13 (Padres fuertemente advertidos)
<b>R</b>	R (Restringido. Los niños menores de 17 años deben estar acompañados por sus padres)
<b>NC-17</b>	No niños menores de 17 años
<b>X</b>	X (Sólo adultos)
<b>NR</b>	No clasificado

A continuación, pulse el botón **VOL +** para activar la categoría.

Mientras que una categoría en particular es destacada, pulse **VOL +** para activarla. Una letra parpadeante ("D" o "B") será mostrada.

Pulse **MENU** dos veces para salir del menú Vchip.

Nota : El V-chip bloqueará automáticamente ciertas categorías que son "más restrictivas". Por ejemplo, si usted bloquea la categoría PG-13, luego "R", "NC-17" y "X" serán automáticamente bloqueadas también.

**Cómo reinicializar el TV después de que el V-chip bloquee un canal ("Escape de Emergencia")**

Si el TV está encendida en un canal restringida, el V-chip lo bloqueará. La pantalla se volverá blanca y aparecerá el siguiente mensaje : "Clasificación Excesiva".

Para regresar a la visualización normal, pasarlo a un canal diferente usando los botones numéricos. Bajo ciertas condiciones (dependiendo de la clasificación de la programación local de TV) el V-chip podrá bloquear todos los canales. En este caso, utilizar el botón de V-chip para un "Escape de Emergencia".

Pulse repetidamente **MENU** hasta que vea el menú Vchip.

Pulse **VOL +**. La pantalla de "Ingr codigo" aparecerá. Introduzca los 4 dígitos de su PIN.

Después de introducir un número PIN válido, aparecerá la pantalla "modo V-chip" y se iluminará "Bloqueo V-chip".

Pulse **VOL+** para salir de V-chip. (Cada vez que pulse **VOL+** pasará de Sí a No y viceversa.)

## Cleaning and Maintaining Your TV

With proper care, your TV unit will give you many years of service. Please follow these guidelines to get the maximum performance from your TV.

### Placement

- Do not place the TV near extremely hot, cold, humid or dusty places.
- Do not place the TV near appliances with electric motors that create magnetic fields, such as vacuum cleaners.
- Keep the ventilation openings clear; do not place the TV on a soft surface, such as cloth or paper.
- Place the TV in a vertical position only.

### Liquids

- Do not handle liquids near or on the TV. Liquids that spill into it can cause serious damage.

### Cabinet

- Never open the cabinet or touch the parts inside.
- Wipe your TV with a clean, dry cloth. Never use water, cleaning fluids, wax, or chemicals.
- Do not put heavy objects on top of the cabinet.

### Temperature

- If your TV is suddenly moved from a cold to a warm place, unplug the power cord, and allow at least two hours for moisture that may have formed inside the unit to dry completely.

## Using Your TV in Another Country

If you plan to take your TV with you to a foreign country, please be aware of the different television systems that are in use around the world. A TV designed for one system may not work properly with another system due to differences in the TV channel frequencies.

## Specifications

Model	TXM1491F
Voltage	AC 120V
Frequency of Operation	60Hz
Power Consumption	60 W