

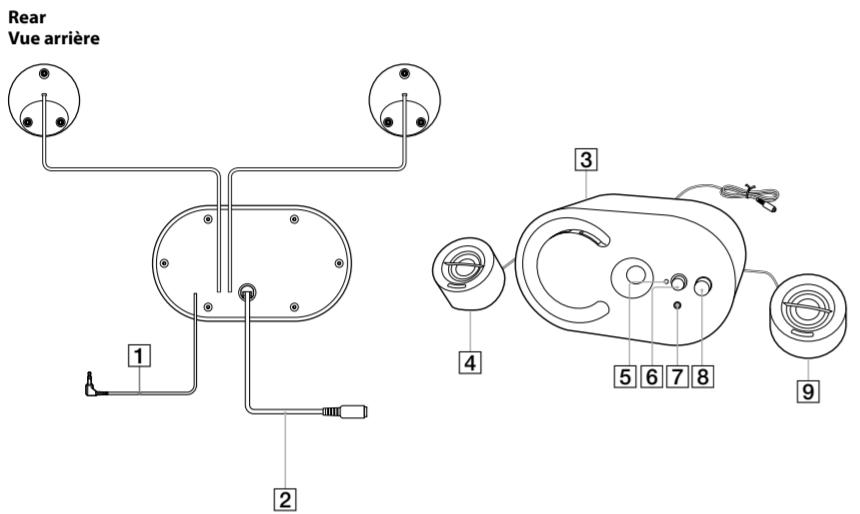
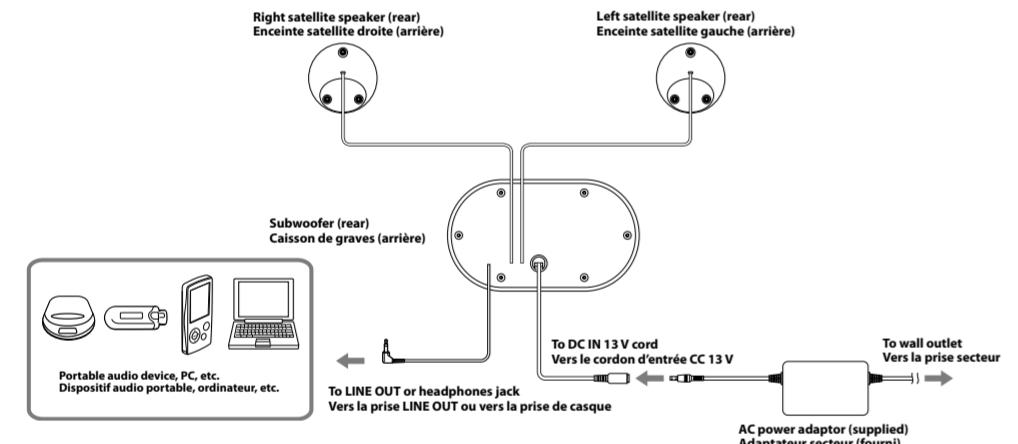
Active Speaker System

Operating Instructions
Mode d'emploi
Manual de instrucciones
Instruções de Operação

SRS-D25

©2008 Sony Corporation Printed in China

http://www.sony.net/

A**B**

English

Before operating the system, please read this manual thoroughly and retain it for future reference.

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of electrical shock, do not open the cabinet. Refer servicing to qualified personnel only. To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc. Do not place the naked flame sources such as lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

As the main plug is used to disconnect the system from the mains, connect the system to an easily accessible AC outlet. Should you notice an abnormality in the system, disconnect the main plug from the AC outlet immediately.

The system is not disconnected from the mains as long as it is connected to the AC outlet, even if the system itself has been turned off.

Excessive sound pressure from earphones and headphones can cause hearing loss.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Precautions

On safety

The nameplate is located on the bottom exterior of the system.

- Before operating the system, be sure that the operating voltage of the system is identical with that of your local power supply.

Where purchased Operating voltage

All countries/regions	100V-240V AC, 50/60 Hz
-----------------------	------------------------

- Use only the supplied AC power adaptor and AC cord.

On operation

- Should any solid object or liquid fall into the system, have the system checked by qualified personnel before operating it any further.
- Although this system is magnetically shielded, do not leave recorded tapes, watches, personal credit cards, or floppy disks with magnetic coding in front of the system for an extended period of time.

On placement

- Do not set the system in an inclined position.
- Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.

On cleaning

Do not use alcohol, benzine, or thinner to clean the cabinet.

If the TV picture or monitor display is magnetically distorted

Although this system is magnetically shielded, there may be cases where the picture on some TV sets/personal computer sets may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer set once, and after 15 to 30 minutes turn it on again. For the personal computer set, take the appropriate measures such as data storage before turning it off. When there seems to be no improvement, locate the system further away from the TV set/personal computer set. Furthermore, be sure not to place objects in which magnets are attached or used near the TV set/personal computer set, such as audio racks, TV stands, toys etc. These may cause magnetic distortion to the picture due to their interaction with the system.

Others

- If you have any questions or problems concerning this system that are not covered in this manual, please consult your nearest Sony dealer.
- Should any problem persist, consult your nearest Sony dealer.

Identifying parts (See fig. A)

- Input cord**
Connecting cord with stereo-mini plug
- DC IN 13 V cord**
- Subwoofer**
- Satellite speaker (L)**
- Power indicator**
- POWER button**
- ⟨ (headphones) jack**
- VOLUME control**
- Satellite speaker (R)**

Power Sources

Connect the AC power adaptor to the system.

Note on the AC power adaptor

- Use only the supplied AC power adaptor. Do not use any other AC power adaptor to avoid damaging the speakers.



- Plug the AC power adaptor into a nearby AC output. In the case of a problem, unplug from the AC outlet immediately.
- Do not place the AC power adaptor on a bookshelf or in a confined place such as a cabinet.
- Do not use the AC power adaptor in a place subject to liquid or moisture to avoid fire or electric shock. Furthermore, do not place liquid-filled vessels, such as a vase, etc., on the AC power adaptor.

Hooking up the speakers

(See fig. B)

Connect the speaker to a source device.

When the system is connected to the monaural jack of the source device

The sound may not come through the right speaker.

Listening to the sound

First, turn down the volume on this system. When connecting the system to the headphones output, turn down the volume of the source device.

- Press the POWER button (□ on).**
The Power indicator lights up.

- Start playing on the source device.**

- Adjust the volume.**
Set the volume of the source device to moderate level, and turn the VOLUME control on this system.

- Press the POWER button (□ off) after using.**
The Power indicator goes off.

To use the headphones/earphones

Connect them to the ⟨ (headphones) jack.

Notes

- If the source device has a bass boost function or equalizer function, set them to off. If these functions are on, sound may be distorted.
- If the source device's headphones output has a line switch, better sound will be heard if it is set to on. See the operating instructions of the source device.

Troubleshooting

Should you have a problem with your speaker system, check the following list and take the suggested measures. If the problem persists, consult your nearest Sony dealer.

No sound

- Check that both this system and the source device are turned on.
- Turn up the volume of the system.
- Turn up the volume of the source device as high as possible to the extent that sound is not distorted. For details on volume adjustment, refer to the operating instructions supplied with the device.
- Make sure all the connections have been correctly made.

Low sound level

- Turn up the volume of the source device as high as possible to the extent that sound is not distorted. For details on volume adjustment, refer to the operating instructions supplied with the device.
- Turn up the volume of the system.

Distorted sound

- Turn down the volume of the source device to the point where the sound is no longer distorted. For details on volume adjustment, refer to the operating instructions supplied with the device.
- If the source device has a bass boost function, set it to off.
- Turn down the volume of the system.

There is hum or noise in the speaker output.

- Make sure all the connections have been correctly made.
- Make sure none of the audio devices are positioned too close to the TV set.

The brightness of the POWER indicator is unstable.

- The brightness of the Power indicator may become unstable when the volume is turned up. This is not malfunction.

Specifications

Speaker section

Satellite speaker

Speaker system

38 mm, Full range, magnetically shielded
Bass reflex
4 Ω
1 m

Subwoofer

Speaker system

67 mm, Woofer
Bass reflex
4 Ω

Amplifier section

Rated output

5 W + 5 W
(10% T.H.D., 1 kHz, 4 Ω)
(Satellite speaker)

15 W
(10% T.H.D., 100 Hz, 4 Ω)
(Subwoofer)

Connecting cord with stereo mini plug (1 m, 39 1/8 in.) × 1
7 kΩ (at 1 kHz)
Stereo mini jack × 1
(PHONES)

General

Power

DC 13V
(Supplied AC power adaptor)

Approx. 65 × 65 × 67.5 mm
(2 5/8 × 2 5/8 × 2 5/8 in.)

(Satellite speaker)
Approx. 208 × 118 × 130 mm
(8 1/4 × 4 1/4 × 5 1/8 in.)

(Subwoofer)
Approx. 90 g (3 oz.)

(Satellite speaker),
Approx. 1.2 kg (2 lb. 10 oz.)
(Subwoofer)

Cord length
1.8 m (Power cord)

Supplied accessories

- AC power adaptor (1)
- AC power cord (1)
- Operating Instructions (1)

Design and specifications are subject to change without notice.

Français

Avant d'utiliser l'appareil, lisez attentivement ce mode d'emploi et conservez-le afin de pouvoir le consulter ultérieurement.

AVERTISSEMENT

Pour éviter les risques d'incendie ou d'électrocution, n'exposez pas cet appareil à la pluie ou à l'humidité.

Pour éviter les risques d'électrocution, nouvez le coffret sous aucun prétexte. Confiez l'entretien ou les réparations à un technicien qualifié. Pour éviter tout risque d'incendie, n'obstruez pas les orifices de ventilation de l'appareil avec des journaux, des nappes, des rideaux, etc. Ne placez aucune flamme incandescente (bougies) sur l'appareil. Pour éviter tout risque d'incendie ou d'électrocution, n'exposez pas cet appareil aux éclaboussures et évitez de placer dessus des objets remplis de liquide, tels que des vases.

N'installez pas l'appareil dans un espace confiné, notamment dans une bibliothèque ou un meuble encastré.

Étant donné que la prise principale permet de déconnecter le système de la prise secteur, connectez le système à une prise secteur facilement accessible.

Si vous observez une quelconque anomalie dans le système, déconnectez immédiatement la prise principale de la prise secteur.

Le système n'est pas déconnecté du secteur tant qu'il reste branché sur la prise secteur, même s'il a été mis hors tension. Une pression sonore excessive provenant des écouteurs ou du casque peut entraîner une perte d'audition.

ATTENTION

Toute modification non expressément autorisée par le fabricant peut annuler le droit de l'utilisateur à utiliser cet équipement.

Précautions

Sécurité

La plaque signalétique se trouve à l'arrière du système.

- Avant d'utiliser le système, assurez-vous que la tension de fonctionnement du système est identique à celle de votre alimentation secteur.

Lieu d'achat	Tension de fonctionnement
Tous les pays/toutes les régions	100 V - 240 V CA, 50/60 Hz

Utilisez uniquement l'adaptateur secteur et le cordon d'alimentation fournis.

Fonctionnement

- Si du liquide ou un objet pénètre à l'intérieur du système, faites réviser le système par un technicien qualifié avant de le remettre en marche.
- Bien que ce système soit doté d'un blindage magnétique, ne laissez aucune cassette enregistrée, montre, carte de crédit ou disquette, ou tout autre objet utilisant un dispositif d'enregistrement à proximité du système pendant une période prolongée.

Installation

- N'installez pas le système sur une surface inclinée.
- N'installez pas votre système à proximité de sources de chaleur ou dans un endroit exposé aux rayons du soleil, à une poussière excessive, à l'humidité, à la pluie ou à des chocs mécaniques.

Entretien

N'utilisez pas d'alcool, de benzine ou de diluant pour nettoyer le coffret.

Si l'image affichée sur le téléviseur ou sur le moniteur présente des distorsions magnétiques

Bien que ce système soit muni d'un blindage magnétique, il est possible que l'image de certains téléviseurs ou écrans d'ordinateur présente des distorsions magnétiques. Le cas échéant, mettez le téléviseur ou l'ordinateur hors tension, puis remettez-le sous tension au bout de 15 ou 30 minutes. Pour l'ordinateur, veillez à sauvegarder vos données personnelles avant la mise hors tension. Si vous ne constatez aucune amélioration, éloignez le système du téléviseur ou de l'ordinateur. Veillez en outre à ne pas utiliser ni poser des objets munis d'aimants, tels que meubles audio, meubles TV, certains jouets, etc. Ils peuvent interférer avec le système et entraîner des distorsions magnétiques.

Autres

- Si vous avez des questions sur votre système ou ne parvenez pas à résoudre un problème non décrit dans ce manuel, consultez votre rev

