

preprogrammed
UNIVERSAL
Remote control



TOTAL CONTROL

URC - 4160

INSTRUCTION MANUAL

Table of contents

Picture of the TOTAL CONTROL	3
Installing the batteries.....	4
Features and Functions.....	4
Set Up:	
Setting up your devices	6
The Light Key.....	7
The Search Method	7
Blink out the Current Code.....	8
Quick Code Reference.....	8
Changing a Device Key.....	9
Resetting a Device key.....	9
Colour & Brightness	9
Volume Punch Through	10
Auto Scan	10
Device Sleptimer	11
TOTAL CONTROL Sleptimer	11
The Learning Feature.....	12
Trouble-Shooting.....	14
Customer Service.....	14
Set Up Codes:	
Televisions	15
Video Recorders	21
Satellite Receivers	23
Cable Converters	27
CD/Mini Disc Players	27
Miscellaneous Audio	27
Amplifiers	28
Amp/Tuners	28
Cassette Players	28
Laser Disc (LD) Players	29
Digital Audio Tape (DAT) Players	29
DVD Players	29

About your TOTAL CONTROL


By choosing the TOTAL CONTROL Universal Remote Control you have opted for easy use. Made of the strictest quality, it will provide long-term satisfaction. Please read these enclosed instructions carefully before putting your TOTAL CONTROL to use.

Your TOTAL CONTROL manual is divided into two parts: Set Up Instructions and Device Codes. You will need your manual to set up your new TOTAL CONTROL so please be sure to keep it.

Your TOTAL CONTROL is designed to let you use one remote to operate your Video and Audio equipment; any device designed to be operated by an infrared signal. You can choose any combination of six devices you would like to operate.

The key benefit of this product is that it's equipped with the "learning feature", which means that you can copy almost any function from your original (working) remote control onto your new TOTAL CONTROL.

Your TOTAL CONTROL needs 4 new AAA/LR3 batteries.

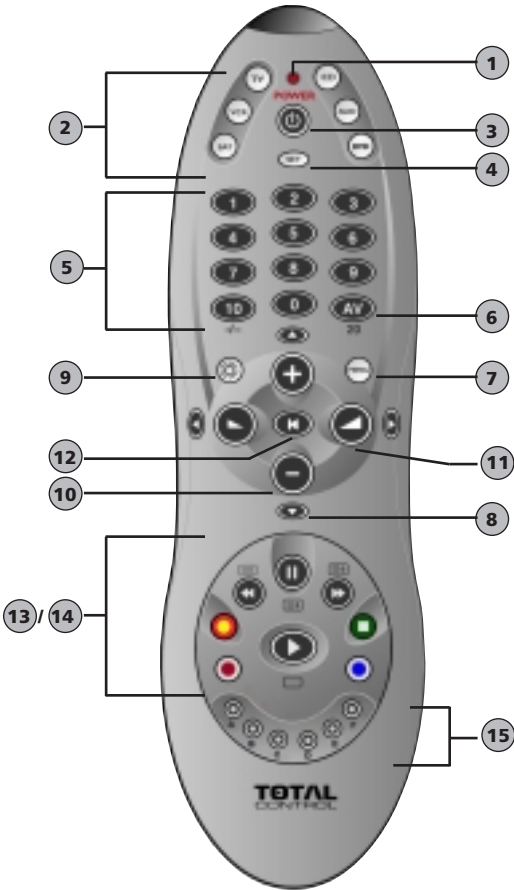

Installing the Batteries

Your TOTAL CONTROL needs four new AAA/LR3 alkaline batteries.

- 1 Remove the battery cover from the back of your TOTAL CONTROL.
- 2 Match the batteries to the (+) and (-) marks inside the battery case, then insert the batteries.
- 3 Press the battery cover back into place.

Features and Functions

Picture of the TOTAL CONTROL on page 3.

- 1 **LED**
The LED (Light Emitting Diode) flashes red to show the remote is working.
- 2 **Device keys**
The TV, VCR, SAT, CD, AUD and DVD keys select the device to be controlled. For example pressing the TV key allows the remote to control the functions of you Television, after pressing VCR you can operate you Video Recorder, the SAT key operates your Satellite Receiver or Cable Converter etc.
- 3 **Power key**
The Power key controls the same function as on your original remote.
- 4 **SET key**
The SET key is used to set up your TOTAL CONTROL and to access special functions.
- 5 **Number keys**
The number keys (0-9, 10, 20 (AV)) provide functions just like your original remote. If your original remote uses one/two digit input switching (-/-- symbol), this function can be obtained by pressing the -/-- key. If your original remote has a 20 key, this function can be found under the AV key.
- 6 **AV key**
The AV key operates the same function as it did on your original remote control. Also, if your original remote required that you press an "EXIT" key during Menu operation, the AV key can be used for this function. In VCR mode it obtains the TV/VCR function.
- 7 **Menu Key**
The Menu key controls the same function as it did on your original remote. If available on your original remote control, this key will also allow you to access the Surround Sound mode of your device.
- 8 **Directional Keys**
If available on your original remote, these keys will allow you to navigate through the menu and the Surround Sound mode of your device.

Onkyo	0158
Panasonic	0252
Philips	0052 0252
Pioneer	0050 0122
Revox	0052
Sansui	0052
Sony	0266
Technics	0252
Thorens	0052
Universum	0052
Victor	0296

Laser Disc

Denon	0082
Grundig	0082
Mitsubishi	0082
NAD	0082
Pioneer	0082
Telefunken	0082

Digital Audio Tape

Grundig	0181
Harman/ Kardon	0181
Marantz	0181
Philips	0181
Technics	0181

DVD

3DLAB	0562
Denon	0513
Grundig	0562
Hitachi	0596
JVC	0581
Kenwood	0557 0513
Magnavox	0526
Marantz	0562
Micromedia	0526
Micromega	0562
Mitsubishi	0544
Onkyo	0526
Optimus	0548
Panasonic	0513
Philips	0562 0526
Pioneer	0548 0594
Proscan	0545
RCA	0545
REC	0513
Samsung	0596
Sony	0556
Technics	0513
Thomson	0574
Toshiba	0526
Yamaha	0513
Zenith	0526

- 9 **Light Key**
The Light key allows you to illuminate the entire TOTAL CONTROL keypad. See page 7 for more details.
- 10 **Programme (+/-) keys**
The Programme (+/-) keys operate just as those on your original remote.
- 11 **Volume (+/-) keys**
The Volume (+/-) keys operate just as those on your original remote.
- 12 **Mute key**
The Mute key operates the same function as it did on your original remote. Also, if your original remote control required that you press an "OK" or "ENTER" key during Menu operation, the Mute key can be used for this function.
- 13 **Video Recorder Keys**
After pressing the VCR key, the Video Recorder keys operate the functions of your Video Recorder. To prevent accidental recording, the Record key must be pressed **twice** to start recording.
- 14 **Teletext Keys**
After pressing the TV key, these keys are used to operate the main Teletext functions. Of course, your Television must have Teletext capability.
When accessing the text mode, the colour keys marked red, green, yellow and blue, allow you to access the Fastext functions of your Television. If on your original remote control these keys are used for Menu navigation, the TOTAL CONTROL Fastext keys may operate the same.
For a more detailed explanation of Teletext and Fastext, please refer to the manual of your Television. Remember, different televisions control Teletext and Fastext functions in different ways. Not all of the Teletext functions may be available on your particular model.

TEXT ON: Puts the television in the Teletext mode.

TEXT OFF: Switches the television back to regular viewing mode. On some televisions, this may be done by pressing the TEXT ON key several times.





HOLD/STOP: Stops changing pages.

EXPAND: Shows the top half of the Teletext page in larger letters. By pressing again, you can see the bottom half of the Teletext page enlarged. To return to regular Teletext viewing, press the EXPAND key again, or press the TEXT ON key, depending on your television.

- 15 **Custom keys (A – F)**
The custom keys are spare keys which give you the possibility to customize the TOTAL CONTROL 6 according to your original remote control using the "Learning feature" (see page 12).


Setting up your devices

Example: to set up the TOTAL CONTROL for your Television:

- 1 Find your device code in the code section (page 15 – 29). Codes are listed by brand name. The most popular code is listed first. Make sure your television is switched on (not on standby).
- 2 Press and release the **TV** key on your TOTAL CONTROL. 
- 3 **Press and hold down the SET** key until the red light blinks twice (the red light will blink once and then twice). 
- 4 Enter your **four-digit code** using the number keys. The red light will blink twice. 
- 5 Now, aim your TOTAL CONTROL at your television and press **POWER**. If your television switches off, your TOTAL-CONTROL should be ready to control your television. 

- If your device does not respond, follow steps 1 through 5 with each code listed for your brand. If none of the codes listed for your brand operate your device, then try the Search Method described on page 7, even if your brand is not listed at all.
- Some codes are quite similar. If your device does not respond or is not functioning properly with one of the codes, try another code listed under your brand.
- If the original remote control from your Video Recorder did not have a Power key, press PLAY instead of POWER during step 5.
- To set up your other devices, follow the same instructions above, only press the appropriate device key during step 2.
- Remember to press the correct device key before operating your device. Only one device (CD, amplifier, cassette etc.) can be assigned to a device key. If your original remote operates more than one device (for example; a receiver, CD player and cassette player in one remote), you need to set up each device separately.
- Write your code in the boxes provided in the battery compartment and on page 8, for quick, easy reference.

Devices can be found under the following keys:

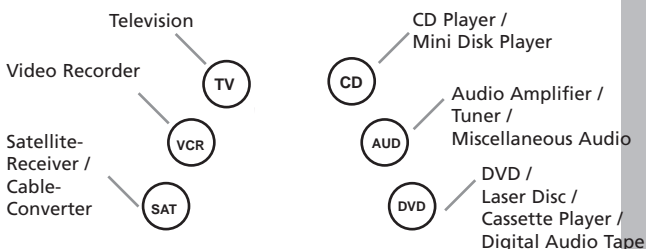

To set up a second TV, VCR, SAT, CD, AUD or DVD see page 9.

The Light key

The TOTAL CONTROL allows you to illuminate the entire keypad with the press of a key. This backlit feature can be switched on or off with the Light key on your TOTAL CONTROL keypad.

If the backlit feature is switched on, every time a key is pressed, the keypad will automatically light up for about 10 seconds.









To preserve battery life, turn off the Light feature when not needed.

The Search Method

If your device does not respond to the TOTAL CONTROL after you have tried all the codes listed for your brand, try the Search Method.

The Search Method may also work if your brand is not listed at all.

Example: to search for your Television Code:

- 1 Switch your Television on (not on standby).
- 2 Press the **TV** key on your TOTAL CONTROL. 
- 3 Aim the TOTAL CONTROL at your Television. **Press and hold down the SET** key until the red light on the TOTAL CONTROL blinks twice. 
- 4 Press **9 9 1**, the red light will blink twice.   
- 5 Now alternate between the **TV** and **POWER** key, over and over, until your Television turns off. You may have to press these keys many times (up to 150 times) so please be patient. Remember to keep pointing the TOTAL CONTROL at your Television when pressing these keys.  
- 6 When your Television switches off, press the **SET** key to store the Code. Now your TOTAL CONTROL should be ready to control your television. 

-
- If you cannot control your Television properly, please continue the Search Method, you may be using the wrong Code.
 - To search for your other devices, follow the same instructions above, only press the appropriate device key during step 2 and 5.
 - If your Video's original remote control does not have a POWER key, press PLAY instead of POWER when searching for your Code.
-

Blink out the Current Code

If you have set up your TOTAL CONTROL via the Search Method, you can blink back your code for future reference.

Example: To blink out your television code:

1 Press the **TV** key on your TOTAL CONTROL.



2 **Press and hold down the SET** key until the red light blinks twice.



3 Press **9 9 0**, the red light will blink twice.



4 For the first digit of your four-digit code, press **1** and count the all red blinks. If there are no blinks, the digit is "0".



5 For the second digit, press **2** and count all the red blinks.



6 For the third digit, press **3** and count all the red blinks.



7 For the fourth digit, press **4** and count all the red blinks.



- To blink back the code for your other devices follow the instructions above, only press the appropriate device key during step 1.

Quick Code Reference

Write down the codes for your devices in the boxes below and in the battery compartment for quick and easy reference.

Device type

Code

1.

--	--	--	--

2.

--	--	--	--

3.

--	--	--	--

4.

--	--	--	--

5.

--	--	--	--

6.

--	--	--	--

Changing a Device key

It is possible to change any device key.


Example 1:

To program a second television on the DVD key (for example), you need to change the DVD key into a TV key, so press:

1  **SET** (*) → **9** **9** **2** → **TV** → **DVD** (**)

The DVD key has now become a second TV key.

 2 Now enter the Set Up code for your second TV by pressing:

 **DVD** → **SET** (*) → (TV code) (**)


Example 2:

To program a **second Video recorder** on the CD key (for example), you need to change the CD key into a VCR key, so press:

1  **SET** (*) → **9** **9** **2** → **VCR** → **CD** (**)

The CD key has now become a second VCR key.

 2 Now enter the Set Up code for your **second VCR** by pressing:

 **CD** → **SET** (*) → (VCR code)(**)

(*) **Hold down the SET key until the red light blinks twice (the red light will blink once then twice).**

(**) **The red light blinks twice.**

Resetting a Device Key

Example: To reset the DVD key press:

 **SET** (*) → **9** **9** **2** → **DVD** → **DVD** (**)

(*) **Hold down the SET key until the red light blinks twice (the red light will blink once then twice).**

(**) **The red light blinks twice.**

Colour & Brightness

Depending on the functions of your original remote control, the TOTAL CONTROL can operate the colour and brightness settings of your Television.

To adjust the colour:

Press the **SET** key followed by **Volume +** (for colour +) or **Volume -** (for colour -).

To adjust the brightness:

Press the **SET** key followed by **Channel +** (for brightness +) or **Channel -** (for brightness -).

Volume Punch Through

This feature allows you to adjust the volume in a certain mode (e.g. TV mode) while being in a different mode (e.g. VCR).

Last key pressed: **You can control:**

VCR	TV volume up and down, mute
SAT	TV volume up and down, mute
DVD	TV volume up and down, mute

To punch through to TV volume while in VCR, SAT or DVD mode press: **SET(*) 9 9 3 TV key.**

To punch through to AMP/TUN volume while in CD mode press: **SET(*) 9 9 3 AUD key.**

To cancel the "Volume Punch Through"
press: **SET(*) 9 9 3 Volume(+)** (the red light will blink four times).

(*) Hold down the SET key until the red light blinks twice (the red light will blink once then twice).

Auto Scan

Your TOTAL CONTROL comes with a special Auto Scan function which lets you "scan" through every programme available on your device. For example, to scan the programmes on your TV:

- 1 Aim the TOTAL CONTROL at your TV. Press the **TV** key. Press and release **SET** then press the **MUTE** key.

The TOTAL CONTROL will send the command to advance through all the programmes available on your Television stopping at each programme for about three seconds. Remember, you must aim the TOTAL CONTROL at your device the entire time you are using Auto Scan.

- 2 When you find a programme you would like to watch, simply press **any key** on the TOTAL CONTROL key pad to stop the Auto Scan feature.

- Auto Scan may not work with devices that did not have programme (+/-) keys on the original remote control.

Device Sleptimer

If your TV or Satellite has a "Sleptimer" function built in, you can access this function with your TOTAL CONTROL remote. To do so:

- 1 Make sure your TV (or Satellite) is switched on.
- 2 Press the device key (**TV** or **SAT**).
- 3 Point the TOTAL CONTROL at your TV (or Satellite) and press and release the **SET** key then press **POWER**. You should see the Sleptimer activate on your TV screen. To increase the timer, simply press **POWER** again (within 5 seconds) until the timer gets to the desired time.

- To deactivate the Sleptimer, repeat steps 1-3 above. During step 3, continue pressing Power (within 5 seconds) until the timer indicates zero minutes.
- Depending on how you used sleptimer on the original remote, you might need to access sleptimer in a different way (through menu for example).

TOTAL CONTROL Sleptimer

If your device does not have a sleptimer function built in, you can install the TOTAL CONTROL Sleptimer function. To do so:

 
- 1 Press the device key (**TV, SAT, CD** or **AUD**).
- 2 Then, press and hold the **SET** key until the red light blinks twice.
- 3 Press **9 7 0**. The red light will blink twice again.

- It is only necessary to follow steps 1, 2 and 3 once. For subsequent use of the "TOTAL CONTROL sleptimer", simply follow steps 4, 5, 6 and 7.
- To switch the TOTAL CONTROL back to "Device Sleptimer", repeat steps 1, 2 and 3. The red light will blink 4 times.

Setting the TOTAL CONTROL Sleptimer:

It is possible to set the timer for 15, 30, 45 or 60 minutes.

- 4 Make sure that your device is switched on.
- 5 Press the device key (**TV, SAT, CD** or **AUD**).
- 6 Now, press and release the **SET** key, then press **POWER**. The red light will blink once, which indicates the timer is set for 15 minutes. To increase the timer, simply press **POWER** again (this must be done within 5 seconds). The red light will blink twice indicating the timer is set for 30 minutes (2 x 15). You can press **POWER** to a maximum of four times which will set the timer to 60 minutes.
- 7 Once you have set the timer to the desired time, set your TOTAL CONTROL down, pointing it at your device. When the programmed amount of time has elapsed, the TOTAL CONTROL will send the command for POWER, hence turning off your device.



- The red light will blink every 15 seconds indicating that the remote is in sleptimer mode.
- To deactivate the Sleptimer, simply press any key on the TOTAL CONTROL.
- Remember, when using the "TOTAL CONTROL Sleptimer", you must set the remote so it is pointing at your device.
- The sleptimer can only be set for only one device at a time.

The Learning Feature

After you have set up the TOTAL CONTROL for your device, you may find that there are one or more keys that you had on the original remote control, which do not have a place on the TOTAL CONTROL keypad.

The custom keys have been especially provided for this feature. By using these keys, you will not have to sacrifice an existing function on the TOTAL CONTROL keypad. If you need to learn more than six functions per mode (max. approximately 25 functions), you need to place the learned function on another key (see "Shifted Learning" on the next page).

Before you start:

- Make sure your original remote is working correctly.
- Make sure neither your TOTAL CONTROL, nor your original remote control is pointing at your device.

Example: To copy the "mono/stereo" function from your original TV remote control onto the A-key of your TOTAL CONTROL.

- 1 Place the TOTAL CONTROL and your original remote control on a flat surface. Make sure the ends which you normally point at your device are facing each other. Keep the remotes at a distance of 2 to 5 cm.**
- 2 Press and hold the SET key** until the red light blinks twice. The red light will blink once then twice.
- 3 Press 9 7 5** (the red light blinks twice).
- 4 Press the device key on the TOTAL CONTROL remote** to select the mode to which you want to copy the learned function (**Example: TV key**).
- 5 Press the key on the TOTAL CONTROL remote** where you want to place the learned function (**Example: A key**). The red light will flash rapidly.
- 6 Press and hold the key (on your original remote control)** that you want to copy until the red light blinks twice (**Example: mono/stereo key**).
- 7** If you want to copy other functions within the same mode, simply repeat steps 5 and 6 pressing the next key you want to copy by learning.
- 8** To exit the learning mode, **press and hold the SET key** until the red light blinks twice.

- Learning is mode specific. To access your learned function, press the appropriate device key first.



Shifted Learning:

To install a Shifted learning function, simply follow steps 1 – 8 on the previous page, only press the SET key before step 5.

To access the shifted function, press the SET key and then the key you have learned on.

To delete a learned function:

- 1 Press and hold the **SET** key until the red light blinks twice. The red light will blink once then twice.
- 2 Press **9 7 6** (the red light blinks twice).
- 3 Press the **device key** in which the function will be deleted.
- 4 Press **twice on the learned key** which will be deleted. (*)
- 5 If there is another key that you want to delete, repeat steps 1 – 4.
- 6 The original functions of the TOTAL CONTROL will now be present.

(*) To delete a Shifted Learned function, press the SET key once before you press the learned key to be deleted.

To delete all learned functions across all modes:

- 1 Press and hold the **SET** key until the red light blinks twice. The red light will blink once then twice.
- 2 Press **9 8 0** (the red light will blink four times).

-
- During steps 2 – 7 (page 12), you have approximately 10 seconds to conduct each step. If there is a gap of more than 10 seconds between two steps, you will have to start again from step number 2.
 - If you learn a function on another key besides the "A - F keys", the original TOTAL CONTROL feature automatically becomes shifted. Press the SET key then the key to access it (this excludes the POWER, Mute, Channel and Volume keys).
 - The learning feature is mode specific. Therefore you can place one learned function per mode on the same key.
 - If a Shifted Learned function is placed on the Mute, Channel and Volume keys then the "Auto Scan" and "Colour & Brightness" features will be sacrificed.
 - The TOTAL CONTROL can learn approximately 25 functions.
 - You can replace a learned function by placing another learned function on top.
 - Learning should not be done in direct sunlight or under incandescent lights.
 - Make sure you are using new batteries before following the instructions above.
 - Upon changing the batteries, your learned functions will be retained.
-

Trouble-Shooting

Problem:	Solution:
<i>Your brand is not listed in the TOTAL CONTROL code section ?</i>	Try the Search Method on page 7.
<i>The TOTAL CONTROL does not operate your device(s) ?</i>	A) Try all the codes listed for your brand. B) Try the Search Method on page 7.
<i>The TOTAL CONTROL is not performing commands properly ?</i>	You may be using the wrong code. Start the Search method over again to locate the proper code.
<i>Problems changing channels ?</i>	Enter the programme number exactly as you would on your original remote.
<i>Video not recording ?</i>	As a safety feature on your TOTAL CONTROL, you must press the Record key twice.
<i>The TOTAL CONTROL does not respond after pressing a key ?</i>	Make sure you are using new batteries and are aiming the TOTAL CONTROL at your device.
<i>The red light does not blink when you press a key ?</i>	Replace batteries with 4 fresh, new AAA/LR3 alkaline batteries.

Customer Service

If you have any questions about the operation of your new TOTAL CONTROL Universal Remote Control, you may call our Customer Service for assistance. Before calling please read this manual carefully to find an answer to your question. If you cannot find a solution in this manual, please complete the information below on all your equipment before calling.

Your TOTAL CONTROL model: URC 4160

Date of purchase: / /

 Day / Month / Year

A list of your equipment/models: (see example below)

<u>Type</u>	<u>Brand</u>	<u>Model No.</u>	<u>Remote Model No.</u>	<u>TOTALCONTROL Code</u>
TV	Saba	TCW 301	MB 100	0648 (ex)

Type/model numbers can often found in your equipment owner's manual or on the factory plate behind the device.

In Australia: 1800 812 261

Opening hours: 8.00 am - 5.00 pm (Mon.-Fri.)

Televisions

A.R.	
Systems	0060 0375
Accent	0060
Acec	0035
Admiral	0110 0116 0441 0328 0287
Adyson	0240 0239
Agashi	0239 0287
AGB	0539
Agef	0110
Aiko	0239 0032 0060 0394 0058 0095 0384 0287 0240
Aim	0060
Akai	0384 0231 0456 0394 0060 0058 0032 0095 0241 0186 0539 0625 0579 0571 0503 0240 0654 0239 0287 0400 0629
Akiba	0241 0305 0478 0060
Akito	0295 0060
Akura	0241 0382 0305 0032 0435 0287 0060 0691
Alaron	0202 0239
Alba	0241 0258 0032 0441 0393 0378 0394 0060 0239 0270 0186 0510 0059 0691 0602
Alcyon	0099
Allorgan	0229 0317 0240
Allstar	0060
Amplivision	0240 0423 0343 0393
Amstrad	0200 0032 0539 0287 0377 0241 0394 0385 0435 0060
Anam	0060 0032
Anam National	0060
Anglo	0032 0287
Anitech	0032 0099 0287 0060
Ansonic	0393 0315 0125 0032 0060 0397 0186 0434 0282 0270 0035
Apollo	0496
Arc en Ciel	0422 0132 0591 0356
Arcam	0239 0422 0240
Ardem	0509
Aristona	0060 0579 0035
Arthur Martin	0186 0423
ASA	0128 0369 0093 0127 0110
Asberg	0060 0099
Asora	0032
Asuka	0241 0287 0239 0305 0240
Atlantic	0060 0239 0229 0282 0343
Atori	0032
Auchan	0186 0423
Audiosonic	0060 0132 0240 0393 0360 0287 0241 0509
Audioton	0240 0509 0393 0287
Ausind	0099
Autovox	0110 0229 0260 0099 0372 0240 0270
AWA	0034 0721 0059 0032 0180 0397 0435 0060 0239 0629
Ayomi	0261
Baird	0132 0216 0366 0213 0215 0095 0096 0240 0231
Bang & Olufsen	0588 0110
Barco	0403 0186
Basic Line	0241 0032 0397 0060 0590 0186 0305
Bastide	0240
Baur	0326 0218 0535 0060 0577 0384 0372 0528 0033
Bazin	0240
Beko	0393 0509 0060 0629
Beon	0060 0441
Best	0360 0393
Bestar	0060 0393 0397
Binatone	0240
Black Star	0270
Blacktron	0305
Blackway	0305
Blaupunkt	0577 0218 0223 0350 0351
Blue Sky	0241 0305 0478 0060 0510 0691
Blue Star	0305
Bondstec	0270
Boots	0295 0240
BPL	0305 0060
Brandt	0132 0422 0260 0356 0310 0358 0591 0648
Brinkmann	0441 0060 0542
Briovega	0060 0110 0385
Britannia	0239 0240
Brother	0287
Bruns	0110
BSR	0186 0317
BTC	0241
Bush	0691 0241 0258 0186 0372 0032 0059 0305 0060 0295 0378 0394 0397 0542 0287 0384 0510 0231 0317 0240 0287
Capsonic	0287
Carad	0633 0060
Carena	0478 0060
Carrefour	0059 0093
Carver	0193
Cascade	0032 0060
Casio	0060
Cathay	0060
CCE	0060 0240
Centurion	0060
Century	0110 0270 0261
CGE	0097 0107 0099 0270 0186 0441 0393
Cimline	0032 0258 0241
City	0032
Clarivox	0441 0093
Clatronic	0241 0287 0393 0394 0240 0099 0270 0060 0032 0125 0343 0602
CMS	
hightec	0240
Concorde	0032
Condor	0239 0270 0305 0343 0060 0393 0032 0125 0434 0441
Contec	0239 0032 0180 0034 0059

Continental	
Edison	0132 0260 0422 0356 0310 0510 0591
Cosmel	0032 0360
Crosley	0110 0270 0097 0107 0099 0186
Crown	0032 0393 0509 0099 0060 0382 0602 0441 0231 0510 0076
CS	
Electronics	0270 0239 0241
CTC	0270
Curtis	
Mathes	0116 0168
Cybertron	0241
Daenyk	0202
Daewoo	0032 0060 0239 0397 0241 0240 0522
Dainichi	0241 0239
Dansai	0060 0287 0058 0239 0032
Dansette	0435
Dantax	0393 0509
Datsura	0231
Dawa	0060
Daytron	0032 0397 0060
de Graaf	0231 0067 0250 0186 0571
Decca	0095 0539 0060 0295 0240
Deitron	0060
Denko	0287
Denon	0168
DER	0216 0213
Derwent	0224
Desmet	0343 0060
Diamant	0060
Digiline	0060
Dixi	0032 0060 0270 0240
Domland	0417
Doric	0224
Drean	0060
DTS	0032
Dual	0372 0240 0366 0282 0542 0060 0375 0417 0422 0326 0186
Dumont	0110 0127 0125 0240 0093 0095
Dux	0060 0035
Dynatron	0060
Elbe	0458 0261 0282 0385 0315 0393 0186 0060 0241 0434 0633
Elcit	0110 0270 0539 0125 0186
Elekta	0287 0305
ELG	0060
Elin	0239 0060 0128 0127 0571 0384 0328 0372 0186 0032
Elite	0241 0060
Elman	0125
Elta	0032 0287 0239
Emerson	0200 0110 0270 0060 0202 0394 0093 0305 0343
Emperor	0305
Erres	0060 0035
ESC	0060
Etron	0060 0032 0186
Eurofeel	0287
Euroman	0239 0287 0060 0240 0393
Europa	0060
Europhon	0060 0539 0125 0240 0270 0186
Expert	0229 0423 0282 0186 0328
Exquisit	0060 0270
Family Life	0060
Fenner	0397 0032
Ferguson	0096 0310 0215 0213 0358 0261 0216 0132 0648
Fidelity	0216 0239 0394 0186 0287 0060
Filsai	0240
Finlandia	0231 0369 0382 0571 0384
Finlux	0128 0127 0060 0369 0240 0095 0186 0099 0539 0093 0110 0202 0125 0434 0654 0515 0503
Firstline	0317 0344 0239 0060 0397 0270 0032 0186 0125 0240 0434 0372 0261 0095 0258 0691 0231
Fisher	0127 0240 0059 0231 0393 0068 0110 0180 0384 0186 0326 0372 0095
Flint	0060 0478 0095 0241
FNR	0125
Forgestone	0216
Formenti	0110 0239 0343 0186 0099
Fortress	0116 0110
Fraba	0393 0060
Friac	0032 0060 0125
Frontech	0270 0287 0372 0240 0032
Fujitsu	0202 0229 0095 0125 0240 0186 0032 0375
Fujitsu	
General	0032 0240
Funai	0287 0202 0317
Galaxi	0125 0060
Galaxis	0393 0441 0060 0125
GBC	0186 0032 0397 0241
GE	0132 0305 0310 0358 0366
Geant	
Casino	0186 0423
GEC	0066 0095 0186 0384 0539 0060 0240 0372
Geloso	0270 0032 0186 0397
General	0613 0132 0310 0494
General	
Technic	0032
Genexxa	0241 0060 0435
Goldhand	0239
Goldline	0360
GoldStar	0060 0393 0032 0400 0240 0270 0239 0186 0384 0067
Goodmans	0059 0095 0060 0032 0287 0539 0202 0397 0510 0394 0522 0579 0366 0258 0058 0503 0240 0358
Gorenje	0393
GPM	0241
Gradiente	0060 0076 0193
Graetz	0060 0384 0394

Granada	0060 0423 0249 0379	Internal	0060
	0382 0035 0068 0095	Intervision	0305 0240 0478 0060
	0131 0231 0240 0099		0394 0400 0542 0509
	0059 0539 0224 0496		0393 0417 0510 0241
	0358	Irradio	0125 0186 0287 0270
Grandin	0305 0241 0423 0060		0032 0060 0241 0270
	0032 0343 0186 0478		0099
	0602 0633	Isukai	0241 0060 0305
Gronic	0125 0240	ITC	0240
Grundig	0218 0577 0510 0093	ITS	0060 0394 0241 0305
	0099 0260 0060 0579		0287 0239
Halifax	0287 0239 0240	ITT	0186 0503 0372 0384
Hampton	0239 0240		0496 0571 0590 0216
Hanimex	0317		0369 0231 0202
Hanseatic	0060 0315 0305 0372	ITT Nokia	0384 0571 0186 0496
	0186 0384 0417 0343		0503 0372 0369 0231
	0393 0032 0317 0240		0202 0590 0629 0633
	0542 0110		0654
Hantarex	0032 0060 0125	ITV	0287 0060 0270
Hantor	0060	Jean	0059
Harley		JEC	0058
Davidson	0202	JVC	0676 0076 0117 0213
Harwood	0032 0435 0060		0059 0215 0216 0394
Hauppauge	0060		0241 0629
HCM	0287 0032 0305 0435	Kaisui	0241 0305 0060 0239
	0240 0241 0441 0060		0478 0240 0032
Hema	0240 0032	Kamp	0239
Hemmer-		Kapsch	0229 0186 0384 0282
mann	0372		0127
Hifivox	0132 0422 0591	Karcher	0060 0393 0305 0125
Highline	0287 0060		0633 0287
Hikona	0241	Kawasho	0239
Hinari	0231 0202 0059 0060	KB	
	0241 0032 0186 0378	Aristocrat	0186
	0466 0510 0258 0317	Kendo	0385 0258 0270 0125
Hisawa	0305 0241 0423 0478		0060 0393 0434 0633
Hit	0110		0400 0542
Hitachi	0248 0059 0372 0379	Kennedy	0229 0186 0458
	0067 0066 0496 0186	Kingsley	0239
	0366 0601 0240 0250	Kneissel	0458 0282 0315 0393
	0217 0539 0095 0504		0261 0060 0434 0633
	0522 0060 0586 0168	Kolster	0060 0125 0372
	0128 0579 0571	Konka	0241 0394 0060
Hitachi		Kontakt	0510
Fujian	0131	Korpel	0060
Hitsu	0032 0478 0241	Korting	0110 0393 0343
Hornyphone	0060 0035	Kosmos	0060
Hoshai	0241 0478	Kotron	0435 0287
Huanyu	0397 0239	Kraking	0261
Hygashi	0240 0239	KTV	0240
Hyper	0032 0239 0240 0270	Kyoshu	0287 0435 0441
Hypersonic	0384	Kyoto	0186
Hypson	0060 0287 0240 0305	Lecson	0060
	0478 0423 0261	Lemair	0434
Iberia	0060	Lenco	0032 0397 0127 0186
ICE	0287 0240 0060 0394		0060
	0241 0239 0032	Lenoir	0032
Ices	0241 0239	Lesa	0270
Imperial	0060 0270 0393 0441	Leyco	0287 0095 0060 0317
	0186 0097 0107 0099		0602
	0372	LG	0060 0393 0032 0400
Indesit	0260		0240 0270 0239 0186
Indiana	0060		0384
Ingelen	0510 0633	Liesenkotter	0060 0350 0351 0035
Ingersoll	0032	Lifetec	0032 0287 0542 0060
Inno Hit	0032 0095 0060 0241		0397 0241 0691 0535
	0240 0099 0539 0270	Lloyd's	0032
Innovation	0542	Loewe	0535 0060 0110 0315
Interactive	0434		0393
Interbuy	0032 0287 0270	Logik	0034 0216 0394
Interfunk	0060 0035 0110 0535	Logix	0691
	0298 0350 0186 0384	Luma	0229 0328 0060 0385
	0393 0132 0591		0186 0282 0434 0397
			0032

Lumatron	0229 0328 0060 0385
	0186 0282 0384 0240
	0287 0096
Lux May	0060 0032
Luxor	0217 0260 0503 0515
	0372 0384 0231 0379
	0571 0186 0369 0496
	0202
Madison	0060
Magnadyne	0110 0270 0539 0125
	0186
Magnafon	0539 0099 0125 0239
Magnavox	0059 0202 0060
Mandor	0287
Manesth	0060 0258 0240 0287
	0343 0058 0317
Manhattan	0060 0691
Marantz	0060
Marelli	0110
Mark	0060 0240 0239 0397
	0032
Masuda	0241 0032 0394
Matsui	0258 0200 0032 0378
	0034 0095 0059 0060
	0579 0510 0240 0377
	0317 0394 0466 0602
	0478 0295 0372 0539
	0058 0186 0231 0068
	0218 0358
McMichael	0066
Mediator	0060 0579 0035
Medion	0060 0691 0542
Megas	0633
Megatron	0168
Melectronic	0369 0060 0535 0132
	0366 0270 0128 0127
	0397 0032 0240 0503
	0515 0239 0434 0372
Melvox	0423
Memorex	0032 0273
Memphis	0360 0095 0032
Mercury	0060 0032
Metz	0110 0218 0470 0262
	0577 0298 0390 0411
	0610
Micromaxx	0060 0691
Minerva	0510 0218 0093 0099
	0577 0260
Minoka	0435 0060 0382
Mitsubishi	0131 0535 0060 0116
	0377 0110 0059 0224
	0260 0216
Mivar	0315 0393 0099 0239
	0632
Monaco	0032
Morgan's	0060
Motion	0099
Motorola	0116
MTC	0393 0372 0535 0239
MTEC	0295
Multi-	
broadcast	0216
Multi-	
standard	0125
Multitec	0060 0691
Multitech	0240 0372 0032 0239
	0270 0125 0509 0393
	0060
Murphy	0127 0239 0095 0186
Musikland	0241
NAD	0384
Naiko	0060
Nakimura	0397 0060
NAT	0237 0249
National	0260 0237 0249
NEC	0193 0059 0343 0478
	0032 0397 0240 0060
	0034
Neckermann	0060 0393 0528 0033
	0223 0577 0579 0186
	0350 0441 0372 0110
	0270 0240 0434
NEI	0060 0360 0394
Nesco	0270 0202
Netsat	0060
Network	0360
Neufunk	0060 0032 0579 0633
New Tech	0060 0032 0579 0366
	0240
New World	0241
Nicamagic	0239
Nikkai	0095 0241 0060 0240
	0287 0058 0360 0239
	0032 0059
Noblex	0060 0287
Nobliko	0125 0099 0093 0239
Nogamatic	0422 0132 0591
Nokia	0384 0186 0503 0372
	0571 0515 0382 0496
	0231 0397 0654 0629
	0369
Nordmende	0132 0310 0422 0366
	0591 0218 0060 0358
Novatronic	0060 0128 0397
Oceanic	0590 0186 0423 0384
	0317 0231 0586
Odeon	0287
Okano	0393 0060 0287 0095
Omega	0287
Onwa	0394 0625 0241
Opera	0060
Optimus	0273
Optonica	0116
Orbit	0060
Orion	0202 0258 0317 0200
	0343 0378 0034 0060
	0032 0344 0125 0466
	0579 0287 0435
Orline	0060 0241
Ormond	0691
Osaki	0095 0241 0240 0287
	0060 0435 0295 0397
Osio	0060
Oso	0241
Osume	0180 0095 0059 0241
Otto	
Versand	0033 0528 0059 0116
	0535 0060 0579 0218
	0372 0577 0384 0258
	0132 0317 0249 0270
	0326 0343 0240
Pael	0239
Palladium	0393 0060 0528 0033
	0223 0441 0577 0579
	0270 0350 0372 0110
	0186 0240 0434 0542
Palsonic	0287 0435 0060 0240
	0400
Panama	0032 0240 0287 0239
	0060 0270
Panasonic	0249 0673 0273 0149
	0237 0384 0260 0390
	0539 0060 0186 0571
Panavision	0060 0434
Pathe	
Cinema	0186 0261 0239 0423
	0343 0315 0372

Pathe					Rediffusion	0224 0384 0571 0059
Marconi	0132 0356 0422 0260				Redstar	0060
	0591				Reflex	0060
Pausa	0032				Revox	0060 0393
Perdio	0095 0343 0186 0060				Rex	0328 0229 0434 0270
Perfekt	0060					0186 0282
Pershin	0423				RFT	0110 0315 0393 0095
Philco	0110 0107 0097 0441					0287
	0099 0270 0186 0393				Rhapsody	0239
	0060 0168				Roadstar	0032 0287 0241 0441
Philharmonic	0240					0060
Philips	0060 0579 0035 0036				Robotron	0110
	0577 0593 0066 0110				Rodex	0060
	0216 0446 0366 0397				Royal Lux	0393 0435
Phoenix	0060 0110 0343 0509				Saba	0648 0310 0110 0422
	0393 0239 0186 0095					0186 0132 0539 0366
Phonola	0060 0579 0035 0110					0384 0358 0591 0571
	0216 0239				Sagem	0478 0633 0305
Pilot	0060 0579				Saisho	0258 0539 0200 0032
Pioneer	0060 0446 0393 0366					0034 0240 0186 0287
	0384 0132					0377
Pionier	0393 0509				Salora	0217 0372 0186 0379
Plantron	0060 0287 0032					0382 0384 0539 0571
Playsonic	0240				Sambers	0539 0099 0125
Policom	0591				Samsung	0060 0579 0610 0667
Poppy	0032					0032 0240 0393 0287
Portland	0397					0239 0095 0231
Powerpoint	0510				Sandra	0239 0240
Prandoni-					Sanela	0261
Prince	0270 0539 0384 0099				Sansui	0060 0394
Precision	0240				Santon	0032
Prima	0032 0287				Sanyo	0231 0180 0169 0315
Prinz	0095 0372 0217					0059 0034 0393 0095
Profex	0032 0186					0239 0240 0127 0068
Profitronic	0060 0125					0032 0186 0060
Proline	0344 0095 0060 0035				Save	0060
	0648				SBR	0060 0579 0035
Prosonic	0060 0237 0239 0393				Schaub	
	0397 0602 0394 0691				Lorenz	0372 0571 0629
Protech	0060 0240 0032 0270				Schneider	0060 0579 0035 0326
	0372 0125 0287 0441					0372 0542 0417 0375
	0360 0691					0282 0366 0240 0270
Provision	0522 0060					0394 0241 0384 0186
Pye	0060 0397 0579 0035					0691
	0110				Scott	0202
Pymi	0032				Sears	0202
Quadra					SEG	0240 0287 0032 0270
Vision	0423					0059 0125 0385 0186
Quasar	0270 0273					0060 0239 0691 0510
Quelle	0060 0033 0034 0132				SEI	0110 0125 0033 0186
	0535 0372 0577 0384					0539 0372 0317 0229
	0059 0240 0270 0097					0060
	0107 0350 0093 0127				Seleco	0328 0229 0282 0385
	0128 0180 0218 0223					0186 0434
	0287 0691				Sencora	0032
Questa	0059				Sentra	0058 0241 0032
R-Line	0060				Serino	0478 0633
Radialva	0132 0241 0186 0060				Sharp	0116 0279 0180 0059
Radiola	0060 0579 0035					0317 0676 0076 0117
Radiomarelli	0110 0224 0539 0270					0216
	0060				Shorai	0317 0202
RadioShack	0060				Siam	0060
Radiotone	0032 0060 0393 0602				Siarem	0186 0110 0125
	0441 0287 0435				Siemens	0577 0223 0218 0350
Rank	0093					0351 0180 0060
RCA	0648 0358 0116				Siera	0060 0579 0035
Recor	0060				Siesta	0393
Rectiligne	0060				Silva	0239 0060

Silver	0059 0060 0384 0202	Telefunken	0132 0494 0422 0310
Singer	0110 0125 0270 0423		0097 0107 0124 0358
	0458 0032 0060		0285 0096 0366 0060
Sinudyne	0200 0110 0258 0125		0509 0591 0648
	0317 0186 0384 0539	Telefusion	0060
	0372 0033 0229 0060	Telegazi	0060 0186 0282 0241
Skantic	0379		0287
Sky	0060	Telemeister	0343 0060
Sogera	0343	Telesonic	0060
Solavox	0384 0095 0186 0571	Telestar	0060
Sonawa	0241	Teletech	0032 0270 0360 0060
Sonitron	0231 0393 0240		0691
Sonneclair	0060	Teleton	0240 0298 0229 0186
Sonoko	0060 0032 0287 0305		0372 0282 0059
	0240	Televideon	0343 0186 0239
Sonorol	0231 0590 0186 0423	Televiso	0423
	0528 0033 0571 0384	Temco	0317
Sontec	0060 0393 0317	Tempest	0032 0060
Sony	0528 0033 0034 0059	Tennessee	0060
	0125 0097	Tensai	0127 0241 0060 0240
Sound &			0317 0343 0032 0128
Vision	0125 0241 0397		0397 0394 0400 0270
Soundesign	0202	Tenson	0343 0032
Soundwave	0060 0343 0441	Tevion	0542 0060 0691
Spectra	0032	Texet	0240 0397 0032
Ssangyong	0032	Thomson	0310 0422 0132 0356
Standard	0241 0032 0240 0343		0494 0358 0260 0366
	0060 0397		0060 0591 0648
Starlite	0032 0186 0060 0287	Thorn	0216 0096 0213 0261
Stenway	0305 0241		0215 0097 0107 0522
Stern	0328 0229 0282 0186		0060 0127 0358 0535
Strato	0060 0287 0032		0382 0295 0397 0058
Sunkai	0317 0378 0344 0478	Tokai	0095 0060 0360 0186
	0241 0258 0060 0510		0240 0397 0032
Sunstar	0394 0060 0032 0602	Tokyo	0239 0058
Sunwood	0060 0032	Tomashi	0305 0241
Superla	0539 0239	Toshiba	0058 0531 0266 0059
SuperTech	0032 0060 0239 0579		0093 0125 0240
	0241	Towada	0372 0125 0240
Supra	0397 0032	Toyoda	0032
Susumu	0358	Trakton	0287
Sutron	0032	Trans	
Swissline	0270	Continens	0240 0060
Sydney	0239 0240	Tranasonic	0060 0478 0610 0535
Sytong	0239	Transtec	0239
Tactus	0295	Trident	0539 0240
Tandberg	0390 0434 0132 0360	Tristar	0241 0216
	0385 0384	Triumph	0200 0539 0369 0579
Tandy	0241 0095 0240 0270		0060 0266
	0116	Uher	0099 0060 0229 0343
Tashiko	0059 0066 0240 0193		0326 0397 0441 0509
	0239 0382 0186		0393 0282
Tatung	0095 0539 0240 0295	Ultra	0215
	0060 0034	Ultravox	0110 0125 0397 0270
Teac	0060 0721 0535 0478		0239 0186 0060
	0287 0032 0435 0372	Unic Line	0060 0496
	0194	United	0060
TEC	0240 0032 0270 0494	Universum	0369 0128 0218 0496
	0358 0360 0282		0384 0270 0515 0503
Tech Line	0060 0691		0393 0223 0441 0034
Techica	0241		0535 0317 0059 0180
Technema	0343		0093 0186 0287 0127
Technics	0273		0060 0434 0097 0350
Tedalex	0240		0351 0033 0528 0099
Teiron	0032		0372 0240 0132 0385
Teknika	0202		0360 0200 0654 0691
Teleavia	0132 0310 0422 0356	Univox	0360 0110 0060 0186
	0591		0261
Telecor	0060 0186 0241 0240	Vestel	0060 0186 0240
	0282 0417	Vexa	0032 0060

Victor 0076
 Videologique 0239 0241 0240
 VideoSystem 0060
 Videotechnic 0239 0343 0240 0397
 Videoton 0379 0186
 Vidikron 0125
 Vidtech 0059
 Viper 0360
 Visiola 0239
 Vision 0060 0343
 Vistar 0229 0384
 Vortec 0060
 Voxson 0110 0099 0060 0441
 Waltham 0240 0379 0441 0310
 0060
 Watson 0060 0343 0186 0241
 0328 0602 0542 0417
 0032 0691
 Watt Radio 0125 0372 0186 0239
 Wega 0059 0110 0060
 Wegavox 0032
 Weltblick 0060 0343
 Wharfedale 0060 0542
 White Westing-
 house 0343 0239 0060 0360
 Winco 0435
 Windstar 0305
 Xrypton 060
 Yamishi 0305 0478 0241 0060
 0240
 Yokan 0060
 Yoko 0240 0060 0241 0287
 0032 0393 0328 0239
 0270
 Yorx 0241
 Zanussi 0229 0328 0240

Video Recorders

Adelsound 0027
 Adyson 0095
 Aiwa 0330 0023 0064 0371
 0375 0060
 Akai 0338 0129 0064 0043
 0375 0263 0076
 Akiba 0095
 Akura 0095 0064
 Alba 0301 0095 0356 0357
 0375 0043 0023 0338
 0371
 Allorgan 0263
 Allstar 0104
 Ambassador 0043
 Amstrad 0023 0301 0095
 Anitech 0095
 Ansonic 0027
 Aristona 0104
 ASA 0060 0104
 Asuka 0095 0060 0104 0023
 0061
 Audiosonic 0301
 Audioton 0043 0098
 AWA 0060 0301 0066
 Baird 0301 0127 0130 0064
 0023
 Bang &
 Olufsen 0522
 Basic Line 0301 0043 0095

Bestar 0301 0043
 Black
 Panther 0301
 Blaupunkt 0104 0177 0185 0029
 0218 0057
 Blue Sky 0060 0371 0095 0375
 Bondstec 0043 0095
 Bosch 0177
 Brandt 0064 0343 0516
 Brinkmann 0371
 Bush 0095 0301 0338 0356
 0357 0375 0316 0023
 0371
 Carena 0104
 Carrefour 0068
 Casio 0023
 Cathay 0301
 Catron 0043
 CGE 0064 0023
 Cimline 0095
 Clatronic 0043 0095
 Combitech 0375
 Condor 0043 0301
 Crown 0301 0095 0043
 Daewoo 0301 0043 0068 0375
 Dansai 0095 0301
 Daytron 0301
 de Graaf 0065 0104 0127 0071
 Decca 0023 0064 0104 0090
 0371
 Deitron 0301
 Denko 0095
 Diamant 0060
 Dual 0064 0104 0301 0023
 Dumont 0023 0104 0127
 Elbe 0301 0061
 Elcotech 0095
 Elin 0263
 Elsay 0095
 Elta 0095 0301
 Emerson 0095 0068
 ESC 0301 0263 0043
 Etzuko 0095
 Europhon 0043
 Fenner 0043
 Ferguson 0130 0064 0343 0516
 0023 0301
 Fidelity 0023 0095 0263
 Finlandia 0127 0104 0065 0023
 0071
 Finlux 0023 0104 0127 0065
 Firstline 0095 0371 0066 0060
 0068 0065 0316 0301
 Fisher 0070 0127 0061 0043
 Frontech 0043
 Fujitsu 0023 0075
 Funai 0023
 Galaxi 0023
 GBC 0043
 GEC 0104
 General 0043
 General
 Technic 0371
 Genexxa 0127
 Goldhand 0095
 GoldStar 0060 0023
 Goodmans 0023 0095 0263 0301
 0060 0043 0104 0371
 0316
 Graetz 0064 0127 0263

Granada	0127 0071 0104 0029 0263 0060 0065 0023
Grandin	0095 0060 0043 0023 0301
Grundig	0218 0104 0370 0029 0343 0371
Hanimex	0375
Hanseatic	0060 0301 0104
Hantor	0043
Harwood	0095
HCM	0095
Hinari	0027 0095 0316 0375 0064 0301
Hisawa	0375
Hitachi	0065 0064 0023 0263 0104 0027 0127
Hornophone	0104
Hypson	0095 0301 0375
Impego	0043
Imperial	0023 0263
Ingersoll	0027 0263
Inno Hit	0043 0263 0301 0095
Interbuy	0060 0095
Interfunk	0104 0127
Internal	0301
International	0301
Intervision	0023 0301 0060 0371
Irradio	0095 0060 0104
ITT	0064 0127 0263
ITT Nokia	0071
ITV	0301 0060 0043
JVC	0064 0090
Kaisui	0095
Karcher	0301
Kendo	0338 0371 0095 0060
Kenwood	0064 0061
Kimari	0070
Kneissel	0375 0371 0060
Korpel	0095
Kuba	0070
Kyoto	0095
Leyco	0095
LG	0060 0023 0301
Lifetec	0371
Loewe	0104 0029 0060 0027 1185 0185 0477
Logik	0027 0263 0095
Lumatron	0301
Luxor	0066 0095 0127 0070 0071
Magnavox	0104
Manesth	0095 0068 0104
Marantz	0104 0061 0029
Mark	0301 0043
Matsui	0027 0371 0060 0263 0375 0023
Mediator	0104
Medion	0371 0375
Melectronic	0023 0060 0061
Memorex	0127 0023 0060 0071 0070
Memphis	0095
Metz	0218 0370 0104 1185 0185 0477 0029
Micormay	0371
Migros	0023
Minerva	0218
Mitsubishi	0066 0090 0104 0098
Multitech	0023 0095 0043 0127
Murphy	0023
NAD	0127
National	0185
NEC	0064 0061 0090 0127 0060
Neckermann	0064 0029 0104
Nesco	0095 0023 0375
Nikkai	0043 0095 0301
Nokia	0127 0338 0064 0301 0263 0071 0065 0104
Nordmende	0064 0343 0517 0551 0090 0516
Oceanic	0023 0071 0104 0127 0064
Okano	0338 0371 0095 0301
Orion	0027 0375 0371 0356 0357
Orson	0023
Osaki	0023 0060 0095
Osume	0316
Otake	0356 0357
Otto	
Versand	0104
Palladium	0095 0338 0060 0064 0029 0027 0263
Palsonic	0095 0023
Panasonic	1185 0249 0185 0477
Pathe	
Cinema	0027 0066
Pathe	
Marconi	0064
Perdio	0023
Philco	0061 0095
Philips	0104 0029
Phonola	0104
Pioneer	0090 0104 0065
Portland	0043 0301
Prinz	0023
Profitronic	0104 0263
Proline	0023 0316 0343
Proscoc	0301
Prosonic	0301 0023
Protech	0104
Provision	0301
Pye	0104
Quelle	0029 0104
Radialva	0060 0095 0104 0071
Radiola	0104
Rank	0064
Rex	0064
RFT	0043 0095
Roadstar	0263 0095 0060 0301
Royal	0095
Saba	0064 0343 0517 0603 0301
Saisho	0027 0371
Salora	0066 0127
Samsung	0263 0455
Samurai	0043
Sansui	0064 0090 0095 0371
Sanwa	0027
Sanyo	0127 0070 0071 0090 0069
Saville	0375 0301 0263
SBR	0104
Scan Sonic	0263
Schaub	
Lorenz	0064 0127 0023 0338
Schneider	0095 0023 0060 0104 0301 0263
Seaway	0301

SEG 0095 0263 0301
 Sei-
 Sinudyne 0027 0104
 Seleco 0064 0043 0060
 Semivox 0068
 Sentra 0095 0043 0316
 Setron 0095
 Sharp 0071 0060 0085
 Shintom 0095 0127
 Shivaki 0060
 Shorai 0027
 Siemens 0218 0029 0060 0127
 0104
 Siera 0104
 Silva 0060
 Silver 0301
 Sinudyne 0027 0104
 Solavox 0043
 Sonitron 0070
 Sonneclair 0095
 Sonoko 0301
 Sonolor 0071
 Sontec 0060
 Sony 0056 0057 0055
 Soundwave 0060
 Ssangyong 0095
 Standard 0301
 Starlite 0060 0127
 Stern 0301
 Sunkai 0371 0301
 Sunstar 0023
 Suntronic 0023
 Sunwood 0095
 Supra 0060 0263
 Symphonic 0023 0095
 Taisho 0027
 Tandberg 0301
 Tashiko 0023 0071 0263 0104
 0060
 Tatung 0023 0064 0104 0071
 0066 0371 0375
 Teac 0064 0023 0301 0060
 0104 0330
 TEC 0043 0301 0095
 TechniSat 0371
 Teleavia 0064
 Telefunken 0064 0343 0516 0517
 0552 0553 0301
 Teletech 0095 0301 0023
 Tempest 0043
 Tenosal 0095
 Tensai 0023 0060 0095 0027
 Tevion 0371
 Thomson 0064 0343 0516 0517
 0551
 Thorn 0064 0127 0060
 Tokai 0095 0060 0064 0127
 Tokiwa 0095
 Topline 0371
 Toshiba 0068 0064 0066 0104
 Towada 0095
 Trakton 0043
 TVA 0043
 Uher 0060 0263
 Ultravox 0301
 Unitech 0263
 United
 Quick Star 0301
 Universum 0023 0104 0263 0060
 0371 0218 0029

Victor 0090
 Watson 0104 0375
 Weltblick 0060
 Yamishi 0095 0301
 Yokan 0095
 Yoko 0060 0095 0043 0263

Satellite Receivers

ABSat 0855
 Aegir 0543
 Akai 0538 0223
 Alba 0444 0538 0478 0385
 0636 0736 0757
 Aldes 0311 0385 0543 0757
 Allantide 0356
 Allsat 0090 0223 0387 0206
 0757
 Allsonic 0311 0392
 Alltech 0667 0609 0736
 Alpha 0223
 Altai 0419
 Amitronica 0736
 Ampere 0419 0852 0155
 Amstrad 0368 0870 0484 0275
 0266 0712 0698 0736
 0765 0419 0155 0905
 0908 0886
 Anglo 0736
 Ankara 0311 0240 0392 0243
 0736
 Anttron 0444 0206 0636
 Apollo 0444
 Arcon 0240 0396 0715
 Armstrong 0266 0223
 ASA 0420
 Asat 0396 0223
 ASLF 0736
 AST 0374 0344
 Astacom 0733
 Astra 0131 0396 0553 0536
 0266 0630 0369
 Astro 0196 0381 0543 0636
 0392 0524 0681
 Atlantide 0356
 Audioton 0387 0636
 Austar 0886 0665 0520
 Avalon 0419
 Axis 0553 0392 0389 0857
 Barcom 0240 0131
 Beko 0478
 Best 0240 0392
 Blaupunkt 0196
 Blue Sky 0736 0908
 Boca 0266 0612 0536 0706
 0817 0852 0155
 Brain Wave 0355 0715
 Broadcast 0369
 Broco 0553 0736
 BskyB 0870
 BT 0538 0733
 Bubu Sat 0736
 Bush 0090 0206 0385
 BVV 0715
 Cambridge 0538 0706 0524
 Canal
 Satellite 0876 0315
 Canary 0667

Carat.Som	0389	Finlandia	0478 0131
Channel		Finlux	0478 0131 0437 0596
Master	0385	Flair Mate	0736
Chess	0628	Foxtel	0902 0520
CityCom	0417 0821 0841 0630	Fracarro	0444 0894 0616
Clark	0636	Freecom	0358 0444 0757
Clatronic	0355	Freesat	0667
Clemens		FTE	0354 0706 0612 0392
Kamphus	0525 0356 0857		0736 0616
CNT	0543	Fuba	0240 0392 0419 0444
Commander	0243		0196 0437 0596 0417
CommLink	0311		0131
Communicado		G-Sat	0206 0356
	0389	Galaxi	0240
Comtec	0311 0389	Galaxis	0389 0311 0387 0553
Condor	0392 0630		0615 0392 0715 0857
Connexions	0419 0392		0856 0886 0876
Conrad	0630 0612 0596 0392	Galaxisat	0344
	0524	Gardiner	0841
Contec	0417 0612 0389	GMI	0266
Cosat	0615 0387	Goldbox	0315 0876
Crown	0266	GoldStar	0358
Cryptovision	0478	Goodmans	0478
D-box	0896	Granada	0131
Daewoo	0396 0736 0444	Grandin	0107
Dansat	0090 0206	Grundig	0196 0870 0594 0162
Daumling	0817		0773 0828 0368 0908
DDC	0385	Hanseatic	0628
Delfa	0886	Hantor	0444 0355
Dew	0389 0396	Hanuri	0543
Diamond	0609	Harting und	
Discoverer	0628	Helling	0356 0525
Diseqc	0733	Hase & Igel	0715
Disk		Heliocom	0630
Express	0240	Hinari	0385 0206 0444
Distratel	0107 0908	Hirschmann	0310 0356 0420 0421
Distrisat	0223 0615		0196 0596 0616 0518
DNR	0715		0465 0525 0821 0524
DNT	0223 0419		0419 0733
DST	0444	Hisawa	0355
Dual	0396	Hitachi	0478
Dune	0392	HNE	0765
Dynasat	0616	Houston	0615 0243 0484
Echostar	0419 0736 0894 0876	Humax	0886
EIF	0697	Huth	0369 0630 0355 0387
Einhell	0356 0540 0266 0444		0389 0311 0540 0243
	0311 0275 0536 0736		0612 0525 0266 0817
	0524 0817 0155		0155
Elekt	0543	Imex	0107
Elsat	0712	International	0155
Elta	0387 0444 0223 0392	Intertronic	0266
Emanon	0444	Intervision	0615 0651 0630 0387
Emme Esse	0392 0525 0894	Invideo	0894
Engel	0736	Italtel	0894
EP Sat	0478	ITT Nokia	0131 0596 0478 0420
Eurieult	0107 0908		0896
Eurocrypt	0478 0131	Johansson	0355 0387
Europa	0243 0612 0524 0223	JOK	0713 0733
	0886 0630	JVC	0538 0594
European	0817	K-SAT	0736
Eurosat	0266 0609	Kamm	0903 0736
Eurosky	0266 0392 0630 0310	Kathrein	0354 0381 0196 0417
	0155		0465 0527 0503 0616
Eurostar	0630 0903		0223 0645 0115 0356
Eutra	0667 0821		0681 0736 0636 0841
Exator	0444 0538 0636		0921
Fagor	0615 0387	Key West	0817
Ferguson	0090 0206 0478 0359	Kolon	0444
	0637 0734	Konig	0630
Fidelity	0275 0484 0698 0524	Koscom	0857

Kosmos 0354 0465 0358 0525
 KR 0636 0667 0821 0615
 Kreiselmeier 0196
 Kyostar 0444 0636
 L&S
 Electronic 0392
 Lasat 0536 0543 0392 0630
 0389 0266 0706 0155
 Lemon 0715
 Lenco 0358 0243 0396 0444
 0736 0715 0553 0521
 0392 0630
 Lennox 0615
 Lenson 0524
 Lexus 0223
 Leyco 0538
 LG 0358
 Lifesat 0628 0392
 Lion 0356
 Loewe 0266
 Lorenzen 0243 0715 0817 0630
 0765 0155
 Lorraine 0358
 Lupus 0392
 Luxor 0131 0368 0596 0896
 0524
 M&B1 0628
 Macab 0609
 Manata 0733 0736
 Manhattan 0478 0615 0543 0387
 0521 0733 0857
 Marantz 0223
 Mascom 0465
 Maspro 0115 0359 0518 0667
 0773 0736 0196 0594
 0715
 Master's 0417
 Matsui 0594 0733 0385 0196
 Max 0630
 MB 0628
 Mediabox 0315 0876
 Mediamarkt 0266
 MediaSat 0553 0524 0315 0876
 Medion 0736 0392
 Medison 0736
 Mega 0223
 Melectronic 0841
 Metronic 0444 0266 0636 0311
 0543 0107 0841 0908
 Metz 0196
 Micro 0630 0636
 Micro
 electronic 0736
 Micro
 Technology 0356 0736 0553
 Microtec 0736
 Minerva 0594
 Mitsubishi 0478
 Mitsumi 0536
 Morgan's 0266 0223 0536 0706
 0817 0736 0387 0612
 0852 0155
 Multistar 0354
 Muratto 0358 0344
 Mysat 0736
 Navex 0355
 NEC 0201
 Network 0206
 Neuhaus 0553 0524 0243 0612
 0715 0615 0736 0857
 0630

Neusat 0715 0736 0857
 Nikko 0266 0736 0757
 Nokia 0131 0596 0896 0478
 0420 0876
 Nomex 0521
 Norco 0521
 Nordmende 0385 0478 0543 0444
 0637
 Novis 0355
 NTC 0525 0821
 Oceanic 0609 0356
 Octagon 0396 0444 0243 0389
 0636
 Okano 0266 0525 0354
 OnDigital 0156 0157 0264
 Optex 0417 0615 0387 0854
 0616
 Optima 0525
 Orbit 0374 0396 0356
 Orbitech 0524 0612 0564 0444
 0571 0285
 Origo 0521
 OSAT 0368
 Oxford 0538
 Pace 0520 0743 0478 0870
 0090 0206 0359 0814
 0818 0264
 Pacific 0609
 Packsat 0733
 Palcom 0385
 Palladium 0266 0594 0444 0524
 Palsat 0524
 Panasonic 0478 0870
 Panda 0478 0090 0131 0630
 0196 0857
 Patriot 0538
 Philips 0223 0315 0243 0206
 0478 0690 0773 0733
 0636 0828 0612 0240
 0876 0594 0196 0156
 0157 0841 0921
 Phoenix 0389 0206
 Phonotrend 0311 0615 0387 0525
 0886
 Pioneer 0876 0315
 PK Sat 0356
 Planet 0894
 Polytron 0417 0419
 Predki 0355 0444
 Preisner 0266 0536 0612 0155
 0419 0706 0817
 Premier 0615 0525
 Premiere 0315 0876 0896
 Pro Visat 0757
 Prosat 0311 0385 0651
 Prosonic 0765
 Protek 0609 0356
 Proton 0356
 Provision 0543
 Pye 0594
 Pyxis 0854 0857
 Quadral 0385 0311 0392 0612
 0651 0733
 Quelle 0275 0630 0765
 Radiola 0223
 Radix 0419 0667 0905
 Rainbow 0636 0667
 Red Star 0392
 Redpoint 0553
 RFT 0564 0311 0243 0223

Roadstar	0736	Teledirekt	0206
Rover	0651 0736	Telefunken	0444 0733
Saba	0206 0543 0359 0637 0713 0757 0733 0715 0908 0630	Teleka	0266 0465 0636 0419 0821 0773 0715 0524 0285 0630 0857
Sabre	0478	Telemaster	0543
Sagem	0843	Telesat	0628 0630
Sakura	0389	Telestar	0524
Salora	0131	Teletech	0903
Samsung	0310 0444 0876	Teledes	0478 0524
SAT	0374 0344 0484 0524 0385 0698	Telewire	0615 0387
Sat Partner	0355 0525 0444 0358 0543 0636 0757	Tensai	0396 0355
Sat Team	0736	Thomson	0478 0637 0736 0315 0876 0630 0843 0733
Satcom	0369 0628 0630	Thorens	0609
Satec	0206 0736	Thorn	0478
Satelco	0392	Tioko	0417 0266
Satford	0369	Tokai	0223
Satline	0651	Tonna	0369 0478 0615 0387 0524 0736 0857
Satmaster	0369	Toshiba	0478
Schäcke	0636	TPS	0843
Schneider	0690 0828 0921 0733	Trendline	0536
Schwaiger	0417 0206 0628 0527 0612 0630 0908 0715	Trendplain	0536
Sedea		Triad	0374 0358 0344 0356
Electronique	0444	Triasat	0437 0524
Seemann	0419 0266 0553 0538	Triax	0437 0524 0223 0419 0736 0876
SEG	0444 0392 0355 0628 0765	Tristar	0396
Seleco	0615 0387 0894	Uniden	0854 0698
Servi Sat	0615	Unisat	0389 0266 0223
Siemens	0196 0706	Unitor	0240 0355
Silva	0358	Universum	0196 0594 0420 0630 0698 0484 0765
Skantin	0736	Variosat	0196
Skardin	0553	Vector	0356
Skinsat	0524	Ventana	0223
SKR	0736	Vestel	0765
Sky	0870	Videocrypt	0734
Skymaster	0311 0628 0651 0736 0903	Viper	0389
Skymax	0223 0356	Visiosat	0374 0713 0736
SkySat	0628	Viva	0243
Skyvision	0387	Vortec	0310 0444
SL	0715 0155 0765 0266	VTech	0374 0344 0713 0841
Smart	0155	Wela	0612 0736 0817 0155
Sony	0870 0478 0876	Wetekom	0852 0628 0524
SR	0536	Wewa	0356 0478
Starland	0736	Wibo	0266
Starring	0355	Winersat	0355
Strong	0444 0636 0392 0616 0543 0396 0876	Wintergarten	0311
STVI	0667	Wisi	0196 0344 0713 0419 0612 0478 0374 0524 0857 0630
Sumida	0266	Woorisat	0543
Sunny		World	0355
Sound	0392	Worldsat	0733
Sunsat	0736 0553	XCOM	0855
Sunstar	0536 0266 0392 0817 0155	Xrypton	0392
Tagra	0387	XSat	0855 0736
Tantec	0359 0478	Zaunkonig	0715
Tatung	0478	Zehnder	0344 0354 0543 0527 0392 0841 0765 0417 0240
Techniland	0369 0615 0387	Zeta	
TechniSat	0285 0524 0571 0564 0028 0223	Technology	0223
Technowelt	0630	Zodiac	0636
Teco	0396 0266 0536	Zwergnase	0817 0266
Telasat	0628 0630		
Teleciel	0636 0757		
Telecom	0736		

Cable Converters

Alcatel	0919 0920
Austar	0299
BT	0128 0739
Cabletime	0294 0400 0471 0688
Canal Plus	0466
Comcrypt	0466
Filmnet	0466
France	
Telecom	0474 0840 0919 0920
General	
Instruments	0299
Jerrold	0026 0299
Kabelvision	0026
Macab	0840
MNet	0466
Mr Zapp	0840
NTL	
Cabletell	0299
Optus	0299
Philips	0474 0840
PVP Stereo	
Visual	0026
Sagem	0840
Scientific	
Atlanta	0031 0300
Tele+1	0466
Telepiu	0466
Tudi	0309
United	
Cable	0026
Videotron	0273
Videoway	0273
Visiopass	0474 0840
Westminster	0128 0739

CD / Mini Disc

Aiwa	0147
Akai	0385
Alba	0638
Alto	0648
Arcam	0180
Ariston	0648
Audio	
Research	0180
Audiolab	0180
Audiomeca	0180
Audioton	0180
Bang &	
Olufsen	0235
BAT	0180
Bush	0638
Cairn	0180
California	
Audio Lab	0052
Cambridge	
Audio	0648 0180
Carver	0202
Craig	0638
Cyrus	0180
Denon	0026 0896
DKK	0023
Dynamic	
Bass	0202
Eclipse	0648

Fidelity	0648
Fisher	0202
Gemini	0648
Genexxa	0023 0060 0202 0055
Goldmund	0180
Goodmans	0648 0385 0638
Grundig	0180
GTX	0385
Harman/	
Kardon	0196 0180
HCM	0648
Hiro	0648
JVC	0095
Kenwood	0060 0213 0051 0704
Krell	0180
Lansay	0648
Linn	0180
Marantz	0180
Matsui	0180
MCS	0052
Meletronic	0385
Memorex	0055
Meridian	0180
Micromega	0180
Mission	0180
MTC	0648
NAD	0023
Naim	0180
NSM	0180
Panasonic	0052 0326 0390
Philips	0180 0297 0649
Pink	
Triangle	0648
Pioneer	0055 0267
Proton	0180
QED	0180
Quad	0180
Radiotone	0638 0648
RCA	0202
Realistic	0202
Revox	0180
Rotel	0180
SAE	0180
Sansui	0180 0648
Sanyo	0202
Schneider	0638
Sharp	0060
Siemens	0180
Sony	0023 0420 0513
SuperTech	0648
Synergy	0648
Tandy	0055
Teac	0648
Technics	0052 0230 0326
Thorens	0180
Thule	0180
Universum	0180 0385
Victor	0095
Watson	0638
Wharfedale	0385
Yamaha	0059 0210
Zenith	0638

Miscellaneous Audio

Aiwa	0033 0182 0427
Harman/	
Kardon	0500

JBL	0500
JVC	0096
Sanyo	0894
Sony	0182 0033

Amplifiers

Aiwa	0429
BAT	0292
Bush	0292 0444
Denon	0183 0295
Goldmund	0292
Goodmans	0444
Grundig	0292 0870
Linn	0292
Marantz	0292
Mark	1026 0292
Meridian	0292
Micromega	0292
Myryad	0292
Naim	0292
Panasonic	0331
Philips	0292
Pioneer	0036 0292
Quad	0292
Roadstar	0870
Teac	0444
Technics	0331
Telefunken	0870
Thorens	0292
Universum	0292
Yamaha	0166 0377

Amp/Tuners

Aiwa	0144 0428 0181
Akai	0369 0138 0463 0632
Anam	0304 0632
Arcam	0665 0212
Bang & Olufsen	0822
Brandt	0847
Cambridge Audio	0212
Carver	0065 0383
Clatronic	0767
Denon	0027 0296
Elta	0767
Fisher	0065 0383
Garrard	0304 0309 0463 0767
Genexxa	0209 0463
Goldmund	0212
GoldStar	0304
Goodmans	0632 0767 0463
Grundig	0212 0309 0304 0242 0767
Harman/ Kardon	0133 0212 0231
Harwood	0767
Inkel	0050 0514
Intersound	0767
JBL	0133
JVC	0097 0487
Kenwood	0050 0336 0337 0209 0262
Koss	0767

LG	0304
Linn	0212
LXI	0767
Marantz	0212 0435 0242
Matsui	0767
MCS	0062 0369
Memorex	0037
Micromega	0212
Mitsubishi	0463
NAD	0343
Nikkei	0767
NTDE	0767
Okano	0463
Onkyo	0158
Orient Power	0767
Panasonic	0332 0541 0786 0062
Philips	0212 0435 0665
Pioneer	0037 0103 0312 0209
Quasar	0062
RadioShack	0767
RCA	0369
Revox	0212 0209
Roadstar	0369
Saba	0847
Saisho	0369
Samsung	0309
Sansui	0212 0632 0369
Sanyo	0383 0242 0065
Schneider	0133 0767
Sharp	0209
Sherwood	0514
Siemens	0632
Sonic	0304
Sony	0181 0438
Soundwave	0632
TaeKwang	0463
Teac	0632 0133
Technics	0332 0541 0786 0231 0062
Techwood	0304
Telefunken	0847
Thomson	0847
Thorens	0212
Thorn	0767
Uher	0369
Universum	0304 0632 0767 0309 0463 0212
Victor	0097
Wharfedale	0463 0632
Yamaha	0199 0209
Zenith	0304 0767

Cassette Players

Aiwa	0220
Akai	0211
Arcam	0099
Denon	0099
Grundig	0052
Harman/ Kardon	0205 0052
Inkel	0093
JVC	0333 0296
Kenwood	0093
Magnavox	0052
Marantz	0052
Memorex	0122

Guarantee

UNIVERSAL ELECTRONICS INC. warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal use for a period of one (1) year from the date of the original purchase. Product will be replaced free of charge if it has been proven to be defective within the one (1) year period when said product is returned at customer expense within the warranty period. THIS WARRANTY DOES NOT COVER ANY EXPENSES INCURRED IN THE REMOVAL AND REINSTALLATION OF THIS PRODUCT.

This warranty does not cover damage or failures caused by products or services not supplied by TOTAL CONTROL, or which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, fire, water, lightning or other acts of God. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets, or any other items used in connection with the product.

There are no express warranties except as listed above. TOTAL CONTROL SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some countries do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from country to country.

To obtain warranty service during the warranty period, please carefully pack the product and send it prepaid and adequately insured to the address below, together with your purchase receipt or other proof of the date of original purchase.

In Australia:

Crest Electronics
Importers & National Distributors
7 Prosperity Place
P.O. Box 184
Geebung - Brisbane
4034 Queensland

IMPORTANT:

IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD, YOU MUST INCLUDE YOUR PURCHASE RECEIPT so that we may establish your eligibility for service and can replace your unit without cost. It would be helpful if you included a note detailing the problem. **IF THE UNIT IS RETURNED FOR SERVICE OUTSIDE THE WARRANTY PERIOD**, please include a cheque to cover the cost of replacement, handling and return postage. (Prices may differ per model.)

NOTHING IN THIS GUARANTEE AFFECTS YOUR STATUTORY RIGHTS.

TOTAL CONTROL is a trademark of Crest Electronics.

Copyright 2000 by Universal Electronics Inc. All rights are reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language or computer language, in any form or by any means, electronic, mechanical, or otherwise, without the prior written permission of Universal Electronics Inc.

701910

URC-4160



Printed on Recycled Paper

0801