





Parts Breakdown

BJV18

Products with multiple versions are listed in subsiding order with the newest version on top not indented

<u>Fig #</u>	<u>Part ID</u>	<u>Part Name</u>	<u>Quantity</u>
1	188207-9	HANDLE SET, BJV180	1
2	266048-4	T. SCREW 4X40, 4334DWD	1
3	266091-3	TAPPING SCREW 4X50, 6812	1
4	265995-6	TAPPING SCREW 4X18, 4323K	5
5	442138-9	PACKING, 4340FCT	1
6	214031-5	PLANE BEARING 4, 6913D	1
7	232207-2	LEAF SPRING, 4340FCT	1
8	256117-9	PIN 4, 4324	1
9	911111-5	P.H. SCREW M4X10, LS1011	2
10	911111-5	P.H. SCREW M4X10, LS1011	2
11	345240-6	LINEAR GUIDE, 4351FCT	1
12	345240-6	LINEAR GUIDE, 4351FCT	1
13	153338-3	GEAR HOUSING COVER CPL. 4340FCT	1
14	631744-7	LIGHT CIRCUIT, BJV180	1
15	689070-8	HEAT SINK, 6908DWA	1
16	911006-2	P.H. SCREW M3X8, 6233DWAE	1
17	232152-1	LEAF SPRING, 6832	1
18	419613-0	LOCK OFF BUTTON, BJV180	1
19	650584-4	SWITCH, BJV180	1
20	233118-4	COMP. SPRING 4, AF502	1
21	419754-2	SWITCH LEVER, BJV180	1
22	324233-6	SAFETY WIRE, 4340FCT	1
23	266034-5	TAPPING SCREW 4X16, 9524NB	4
24	643812-4	TERMINAL, BTD140	1
25	188207-9	HANDLE SET, BJV180	1
26	268090-1	PIN 4, 4340FCT	1
27	961017-7	STOP RING E-3, 4304	1
28	310134-4	SLIDER, 4340FCT	1
29	231659-4	TORSION SPRING 6, 4340FCT	1
30	419820-5	TOOL OPENER, BJV180	1
31	265026-1	P.H. SCREW M4, 3901	1
32	310135-2	PUSH PIN, 4340FCT	1
33	421817-2	DUST COVER, 4340FCT	1
34	962068-3	RETAINING RING R-18	1
35	165326-8	ROD	1
36	231660-9	TORSION SPRING 15, 4340FCT	1
37	310136-0	BLADE HOLDER, 4340FCT	1
38	188208-7	MOTOR HOUSING SET, BJV180	1
39	265995-6	TAPPING SCREW 4X18, 4323K	4
40	862966-0	NAME PLATE, BJV180	1
41	638504-8	ENDBELL CPL.,BJV180	1
42	638373-7	YOKE UNIT, BJV180	1
43	619206-5	ARMATURE, BJV180	1
44	961004-6	RETAINING RING S-8, DA391D	1
45	212014-9	N.R. BEARING 407, 4300DW	1
46	265353-6	H.S.H. BOLT M4X12, 4340FCT	2
47	153336-7	CRANK CPL. BJV180	1
48	313108-4	BALANCE PLATE, 4340FCT	1
49	158168-7	GEAR CPL.,BJV180	1
50	345235-9	PUSH PLATE, 4340FCT	1
51	253877-4	F. WASHER 8, 4301BV	1
52	266050-7	P.T. SCREW 4X30, 4304	4
53	961018-5	STOP RING E-5, LS1011	1
54	417839-8	SEAL PLATE, 4340FCT	1
55	286032-3	CAP 5, 4340FCT	1
56	233139-6	COMPRESSION SPRING 3, 4340FCT	1
57	272244-4	LEVER 17, 4340FCT	1
58	268063-4	PIN 4, RD1100/1101	1
59	158169-5	GEAR HOUSING CPL.,BJV180	1
60	252171-1	SQUARE NUT M5-8, 4340FCT	1
61	421816-4	DUST SEAL, 4351FCT	1
62	153334-1	RETAINER, BJV180	1
63	188208-7	MOTOR HOUSING SET, BJV180	1
64	191971-3	CARBON BRUSH SET CB-430, 6343DWA	1



Parts Breakdown

BJV18

65	643807-7	BRUSH HOLDER CAP, 6339DWDE	2
66	232208-0	LEAF SPRING, 43410FCT	1
67	922226-3	H. S. H. BOLT M5X18, HM0810B	1
68	345237-5	CRANK PLATE, 4351FCT	1
69	317565-8	BASE, 4340FCT	1
70	912107-9	C.S.H. SCREW M4X8, 5037NB	4
71	345238-3	BASE PLATE,4340FCT,BJV180	1
1001	415524-7	ANTI SPLINTERING PLATE, 4304	1
1002	417852-6	COVER PLATE	1
1005	A-02294	JIG SAW BLADE, 4301BV	1
1006	783202-0	HEX WRENCH 4, JR3000V	1
1008	194205-3	BL1830 BATTERY,LXT400, 3.0AH	2
1009	824775-5	PLASTIC TOOL CASE, BJV180	1
1012	450128-8	BATTERY COVER, BSS501	1
5001	810300-8	CAUTION LABEL, BTW450	1