
HANNSpree Quick Start Guide


ST06-15U1 15" Liquid Crystal Display TV

This Guide is designed as a reference to help you start using your LCD TV quickly. Please Refer to the User's Manual for more detailed installation and safety instructions.

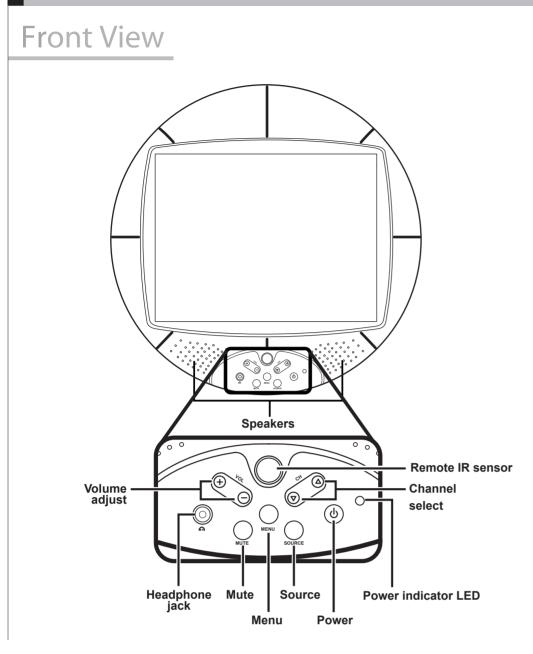

Making Connections

Connecting to Antenna/Cable TV

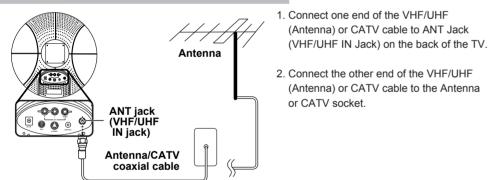


Connecting to a VCR, VCD, DVD Player, or Gaming Device

1. The illustration presented here shows you how to connect your TV to a VCR, VCD, DVD player or gaming device.

-0-0 0


DC-IN

09 0

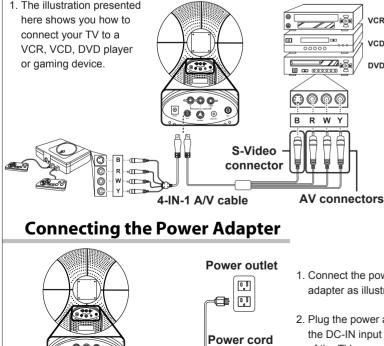

2. The cables are color-coded (black, red, white, and yellow). Connect each colorcoded cable to the appropriate connector on your

device

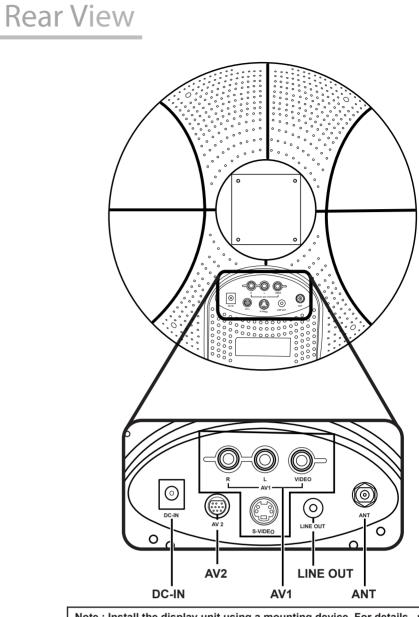

Note : Install the display unit using a mounting device. For details , refer to the operating instructions supplied with your mounting device .

A/V and Channel Setup

Watching Broadcast or Cable TV

- 1. After you have made the appropriate power and source connections, press the power button to turn on your television.
- 2. Press the SOURCE button to select TV.
- 3. Press the MENU button to open the OSD menu.
- 4. Use the CH ▼ button to select "TV"
- 5. Press the VOL + button to enter "TV MENU".
- 6. Press the VOL + button to enter "TV/CATV".
- 7. Press the VOL + button to select "TV" (broadcast TV) or "CATV" (cable TV).

Selecting A/V Sources

- 1. Make sure your TV is turned on and a device such as a DVD player is connected.
- 2. Press the SOURCE button on the control panel to select different source signals. The channel number, "AV1" or "AV2" appears on the screen.

Auto Channel Setup

1. Connect the power cord to the power adapter as illustrated. 2. Plug the power adapter connector into

the DC-IN input jack on the rear panel of the TV.

3. Insert the three-pronged plug at the other end of the power cord into a power outlet.

© Copyright 2005, Hannspree California, Inc. All rights reserved.

•

Power adapter

Please follow the instructions by using the control panel.

1. Press the **MENU** button to enter the OSD menu.

- 2. Use the CH ▼ button to select "TV".
- 3. Press VOL + button into the "TV MENU".

4. Press CH ▼ button until the "AUTO PROGRAM" feature is selected.

5. Press VOL + to begin "AUTO PROGRAM".

6. Your television will begin automatically memorizing the available channels.

Auto Program

TV MENU



The NBA and individual NBA member team identifications reproduced on this product are trademarks and copyrighted designs. and/or other forms of intellectual property, that are the exclusive property of NBA Properties, Inc. and the respective NBA member teams and may not be used, in whole or in part, without the prior written consent of NBA Properties, Inc. All rights reserved © 2005 NBA Properties, Inc. MAD-001131