

Franklin®

TES-121

Spanish ↔ English Phrasebook & Translator

User's Guide

www.franklin.com

License Agreement

READ THIS LICENSE AGREEMENT BEFORE USING THE ELECTRONIC REFERENCE. YOUR USE OF THE ELECTRONIC REFERENCE DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE ELECTRONIC REFERENCE AND YOUR PURCHASE PRICE WILL BE REFUNDED.

ELECTRONIC REFERENCE means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

Limited Use License

All rights in the ELECTRONIC REFERENCE remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use this ELECTRONIC REFERENCE. You may not make any copies of the ELECTRONIC REFERENCE or of the data stored therein at the time of purchase, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the ELECTRONIC REFERENCE. You may not export or reexport, directly or indirectly, the ELECTRONIC REFERENCE without compliance with appropriate governmental regulations. The

ELECTRONIC REFERENCE contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated by Franklin. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

Please read the following safety warnings and precautions before using your device.
Note: If this device is to be used by young children, this User's Guide should be read to them by an adult and their use of the device should be monitored. Failure to do so may cause injury.

Battery Precautions

This product uses one CR-2032, 3-volt lithium battery.

- Different types of batteries or new and used batteries should not be mixed.
- Non-rechargeable batteries are not to be re-charged. Never recharge batteries that come with the device.
- Rechargeable batteries are to be removed from the device before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- The supply terminals are not to be short-circuited.
- Do not expose batteries to direct heat or try to take batteries apart. Follow the battery manufacturer's instructions for battery use.
- Always remove a weak or dead battery from the device.
- To avoid damage caused by leakage of the battery fluid, replace the battery or batteries once every two years regardless of how much the device has been used during that time.
- Should a battery leak, the device may become damaged. Clean the battery compartment immediately, avoiding contact with your skin.
- Keep batteries out of reach of small children. If swallowed, consult a physician immediately.

Product Care








 
Your device is designed to be light, compact and durable. However, it is an electronic device and must be treated carefully. Putting unnecessary pressure on it or striking the device against other objects can cause damage.


In order to avoid damage to your device, please:


- Keep the lid closed when you are not using it. This will protect the screen from being broken, scratched or marred in any way.
- Do not drop, crush, bend, or apply excessive force to the device.
- Do not expose your device to moisture, extreme or prolonged heat, cold, humidity, or other adverse conditions. Avoid storing it in damp, humid or wet places. It is not waterproof.
- Clean the device by spraying a mild glass cleaner onto a cloth and wipe its surface. Do not spray liquids directly on your device.
- Should the device's display glass break, properly dispose of the product avoiding contact with your skin, then wash your hands immediately.
- Please keep screen protectors and plastic bags away from babies and children to avoid danger of suffocation.

Key Guide

Function Keys


-  Goes to the word entry screen to translate words. Toggles between English and Spanish source language at the word entry screen.
-  Goes to the Traveling phrases menu.
-  Goes to the Restaurants & Shops phrases menu.
-  Goes to the Health & Emergencies phrases menu.
-  Goes to the General phrases menu.
-  Goes back or erases a typed character.
-  Clears a search or stops the demo.
-  Goes to the word entry screen for Advanced Verb Conjugation.

 Selects an item or enters a word. In the calculator performs a calculation.

 Shows the following menu items: Translate Word, Calculator, Conversions, Games, Local & World, Databank, Language, and Demo.

 Turns the product on or off.

Direction Keys

 Press the right (▶) or left (◀) part of the button to move the cursor or scroll right or left. At an entry screen, press ▶ to type a space or press ◀ to delete typed characters. Press the up (▲) or down (▼) part of the button to scroll up or down. At the word entry screen type a letter, then press ▲ or ▼ to cycle through the available capital, lowercase and accented forms of the letter.

Calculator Keys

- A(+)** Adds two values.
- S(-)** Subtracts one value from another.
- D(x)** Multiplies two values.
- F(÷)** Divides one value from another.
- V(.)** Types a decimal point.
- H(MC)** Clears the memory.
- J(MR)** Recalls the number stored in memory.
- K(M-)** Subtracts the number from the number stored in memory.
- L(M+)** Adds a number to memory.
- Z(+/-)** Changes the number on the screen to a negative or positive number.
- C(√)** Calculates a square root.
- X(%)** Calculates a percentage.

Getting Started

Your TES-121 is powered by one CR-2032, 3-volt lithium battery. Before using the device, gently pull the battery insulation tab to remove it. Use a paper clip to gently press the RESET button on the back of the device. See "Resetting Your Device" for details.


Warning! Pressing the reset button with more than light pressure may permanently disable your unit.

To View a Demonstration

You can view a demonstration of this product to familiarize yourself with its features. Press **MENU**, press ▼ until you see *Demo* and then press **ENTER**. Press **CLEAR** at any time to stop the demonstration.

To Set the Message Language

The first time you use this translator you are prompted to select either English or Spanish as the message language.

1. Press .
2. Press **E** for English or **S** for Spanish to set the message language.

To Change the Message Language

1. Press **MENU**.
2. Press ▼ until you see *Language* and then press **ENTER**.
3. Press ▲ or ▼ until you see *English* or *Spanish* and then press **ENTER**.

Replacing the Battery

Replace the battery when you see the low battery indicator. Please have a small screwdriver at hand before you follow the steps below.

Warning! If the battery wears out completely, or if you take more than a few seconds while changing the battery, any user entered information may be erased. You should always keep written copies of your important information.

1. Turn the unit off and turn it over.
2. Use the screwdriver to unscrew the battery cover screw.

3. Push gently on the tab of the battery cover to remove it.
4. Remove the old battery.
Note: Use a paper clip, if necessary, to remove the old battery.
5. Install 1 new CR-2032 lithium battery with positive polarity facing up.
Important: Be sure that the battery is installed correctly. Wrong polarity may damage the unit.
6. Replace the battery cover and secure it with the screw.

For Your Information

✓ Follow the Arrows

The flashing arrows at the right of the screen show which arrow keys you can press to view more words.

✓ To Adjust the Screen Contrast

Press **MENU**, press ▼ until you see *Local & World* and then press **ENTER**. Press ▲ or ▼ to lighten or darken the screen contrast.
Note: You can adjust the screen contrast only at the clock display screen.

✓ Auto-Shutoff

If no key is pressed, your device will automatically shut off in two minutes. When you turn the device on again, operation resumes with your current settings.

Setting the Clock

This product features a Home Time clock and a World Time clock. After you set your home time you can view local times around the world.

Setting Home Time

1. Press **MENU**.
2. Press ▼ until you see *Local & World* and then press **ENTER**.

The home time displays an * in the upper left corner. Press **ENTER** until you see this display, and then press **S** to enter setting mode.

3. Press ▼ until you see *Time format* and then press **ENTER**.

Press ▲ or ▼ until you see the desired 24 or 12 hour *Day/Month/Year* format and then press **ENTER**.

4. Press ▼ until you see *Set DST* and then press **ENTER**.

Press ▲ or ▼ until you see *On* or *Off* and then press **ENTER**.

5. Press ▼ until you see *Set time* and then press **ENTER**.

Press ▲ or ▼ until the current hour is displayed. Press ► to move to minutes, press ▲ or ▼ until the current minute is displayed, and then press **ENTER**.

6. Press ▼ until you see *Set date* and then press **ENTER**.

Depending on the *Day/Month/Year* format you selected in *Time format*, press ► and ◀ to move to each setting, ▼ and ▲ to scroll to the correct date, and then press **ENTER**.

7. Press ▼ until you see *Set city* and then press **ENTER**.

Press ▲ or ▼ until your local city is displayed and then press **ENTER**.

Note: For the complete list of World Cities and their abbreviations please see the end of this manual. **Note:** The list of World Cities and their abbreviations are in English.

8. Press **BACK** to exit setting mode.

Setting World Time

1. Press **MENU**.
2. Press ▼ until you see *Local & World* and then press **ENTER**.

The absence of an * indicates World time. Press **ENTER** until you see this display, and then press **S** to enter setting mode.

3. Press ▼ until you see *Set DST* and then press **ENTER**.


Press ▲ or ▼ until you see *On* or *Off* and then press **ENTER**.

4. Press ▼ until you see *World City* and then press **ENTER**.

Press ▲ or ▼ to scroll through the list of world cities and then press **ENTER** to select your choice.

5. Press **BACK** to exit setting mode.

Translating Words

You can use this translator to translate a word from English to Spanish and Spanish to English. You can toggle between English and Spanish as the source language at the word entry screen by pressing . You can also access the word entry screen, by pressing **MENU**, then ▼ until you see *Translate Word* and then **ENTER**.

1. Press  to display desired source language.

Type a word you want to look up. For example, using English as the source language, type the word *train*, then press **ENTER**.

"*Found: 12*" displays, followed by the list of words and/or phrases. Press ▼ or ▲ to select the desired word or phrase then press **ENTER** to see its translation.

To see a word or phrase that does not fit on the screen, press ► repeatedly.

2. Press **BACK** to return to the list.
3. Press **CLEAR** for a new search.

✓ Typing Special Characters

You can type accent marks, diacritical marks, non-English letters, and capital letters, but they are not needed to find matches.

Special characters can be typed by first typing the desired letter and then repeatedly pressing ▼ or ▲ until the desired character is displayed.

To type a punctuation mark, press ► then press ▼ or ▲ repeatedly until the desired character is displayed.

Translating Phrases

Note: The phrases in this product are listed in the current source language.

You can access the phrases menus by pressing any of the four phrase function keys.

Press ...



For ...
Traveling phrases.



Restaurants & Shops phrases.



Health & Emergencies phrases.



other general categories of phrases.

Try the following example.

1. Press .

Press ▼ or ▲ to scroll to a category. For example, choose *Doing Business*.

2. Press ENTER.

Press ▼ or ▲ to scroll to a phrase, and press ENTER to see its translation.

To see a phrase that does not fit on the screen, press ► repeatedly.

3. Press BACK to return to the list.

4. Press CLEAR to return to the category menu.

✓ **Correcting Misspellings**

If you misspell a word in either language, or if you enter a word that is not contained in this translator, a list of corrections is displayed. Use ▼ or ▲ to scroll to a correctly spelled word and press ENTER.

Advanced Verb Conjugation

The advanced verb conjugation feature conjugates and translates forms in both English and Spanish. Pressing CONJ brings you to a word entry screen with the current source language saved.

1. Press CONJ.

Type the verb you want to search for and press CONJ.

Note: When a verb has only one translation the first conjugation and translation is displayed on the screen.

When a verb has more than one translation, a list is displayed. Use ▼ or ▲ to scroll to the desired translation and press CONJ. Use ▼ or ▲ to scroll to the desired form to see its translation.

2. Press CONJ to view the next tense.

Press CONJ repeatedly to cycle through all of the tenses.

3. Press BACK for a new search.

Storing Names & Phone Numbers

This product has a databank that can save as many as 100 names and phone numbers. The total amount of names and numbers that you can save depends upon the number of characters in each entry.

To Add an Entry to the Phone List

1. Press MENU.

2. Press ▼ until you see *Databank* and then press ENTER.

3. Press ▼ until you see *New Entry*.

4. Press ENTER.

5. Type a name and then press ENTER.

Each name can contain up to 30 characters, including spaces, with letters appearing as capitals. **Note:** Accented characters are not supported in the phone list.

To delete a character, press BACK or ◀. To type a space, press ►. To type a hyphen, an apostrophe or a period, press ►, then press ▲ repeatedly until the desired character is displayed.

6. Use the numbered keys to type a phone number and then press ENTER.

To type a hyphen between the parts of a phone number, press ►, then press ▲ repeatedly until the hyphen is displayed.

Note: You cannot type letters in a phone number.

To View the Phone List

1. Press MENU.

2. Press ▼ until you see *Databank* and then press ENTER.

3. Press ▲ or ▼, if needed, until you see *View List* and then press ENTER.

4. To view a name, type it or use ▼.

The name and number are displayed.

5. To view another entry, use ▼ or ▲, or start to type a name.

To Edit Phone List Entries

1. Press MENU.

2. Press ▼ until you see *Databank* and then press ENTER.

3. Press ▲ or ▼ until you see *Edit Entry* and then press ENTER.

4. Type the name you want to edit, or use ▼ or ▲ to select it, then press ENTER.

You are asked to confirm that you want to edit the entry. Press Y to edit the entry or N to cancel. Press BACK to delete characters. Type your changes and then press ENTER until the entry is changed. To cancel an edit, press MENU.

✓ **Keep Copies of Important Data**

Warning! Your phone list information is safely stored in memory as long as the battery supplies power. However, if the battery loses all power, this information will be permanently lost. Always keep written copies of your important information.

To Delete an Entry from the Phone List

1. Press MENU.

2. Press ▼ until you see *Databank* and then press ENTER.

3. Press ▲ or ▼ until you see *Delete Entry* and then press ENTER.

4. Press ▼ until you see the entry that you want to delete.

5. Press ENTER.

6. Press Y to delete the entry or N to cancel the deletion.

To Erase All the Phone List Entries

Warning! This procedure permanently erases all the names and numbers in your phone list.

1. Press MENU.

2. Press ▼ until you see *Databank* and then press ENTER.

3. Press ▲ or ▼ until you see *Erase All Data* and then press ENTER.

4. Press Y to erase all the entries or N to cancel the operation.

✓ **Checking the Memory**

To see how much memory is free in the phone list, press MENU, press ▼ until you see *Databank* and then press ENTER. Then press ▼ until you see, *Free: XX%*.

Using a Password

You can use a password to keep the information in the Phone List private. The password is requested when the unit is turned on and the Phone List is accessed.

Password Warnings

Warning! After you set the password, you must enter the password to access the phone list for the first time during a session. Always record your password and keep it in a separate place.

If you forget the password, you must reset the unit to access the phone list.

Warning! Resetting the unit erases all user-entered information. Always keep written copies of your data.

Use the end of a straightened paper clip to gently press the reset button.

Warning! Pressing the reset button with more than light pressure may permanently disable your unit.

If you do not have a reset button located on the back of your unit, or if the unit does not reset after pressing the reset button, remove the battery, wait at least two minutes, and then re-install it. For battery instructions, see "Replacing the Battery."

Password Setup


1. Press MENU.

2. Press ▼ until you see *Databank* and then press ENTER.

3. Press ▲ or ▼ until you see *Set Password* and then press ENTER.

4. Type a password and then press ENTER.

Your password can have up to 8 characters. You are prompted to retype your password and press ENTER to confirm.

5. To test the password, press  twice, type the password, and press ENTER.

6. To disable the password, repeat Steps 1 and 2 above, and press ENTER when *Password* displays.

Using the Calculator

To Use the Calculator

1. Press **MENU**.
2. Press **▼** until you see *Calculator* and then press **ENTER**.
3. Use the numbered keys to type a number.
To make a number negative or positive, press **Z(+/-)**. To type a decimal point, press **V(.)**.
4. Use **A(+)**, **S(-)**, **D(x)**, or **F(÷)** to enter a math function.
Note: To find a square root, press **C(√)**.
5. Type another number.
6. Press **ENTER** to calculate the equation.
To clear the calculation, press **CLEAR**.

To Use the Calculator Memory

1. Perform a calculation as shown above, or simply type a number in the calculator.
2. Press **L(M+)** to add the number to the calculator memory as a positive number, or **K(M-)** to add it to the memory as a negative number.
3. Press **CLEAR** to clear the calculator, or continue performing a calculation.
To retrieve the figure from the memory, press **J(MR)**.
To clear the entire calculator memory, press **H(MC)**.

Converting Measures & Currencies

You can convert temperatures, weights, liquid measures, and lengths. You can also convert currencies using an exchange rate that you enter.

1. Press **MENU**.
2. Press **▼** until you see *Conversions* and then press **ENTER**.
3. Press **▼** to select a conversion category and press **ENTER**.
4. Press **▼** repeatedly to scroll through the conversions, i.e., $^{\circ}\text{C} \rightarrow ^{\circ}\text{F}$, and then press **ENTER**.
5. Follow the instructions on the screen to convert and press **ENTER**.
6. To make another conversion, press **BACK**.
7. To return to the conversions list press **BACK** again.

✓ Converting Money

The first time you select the money converter, you will be asked to set the exchange rate equal to one unit of the home currency. For example, to convert between U.S. Dollars and Mexican Pesos, enter an exchange rate of 11.003. This means that 11.003 Mexican Pesos is the equivalent of 1 U.S. Dollar.


Type an exchange rate and press **ENTER**. Next use **▼** or **▲** to select a conversion, e.g., *Home* \rightarrow *other*. Press **ENTER**, then enter the amount to be converted.

To change the conversion rate, select *Money* from the Conversions menu, select *Rate*, and type in a new rate.

Playing the Games

To Play Hangman


Hangman selects a mystery word and lets you try to guess it letter by letter.

Note: To change the language for *Hangman*, you must change the source language before you play. Press  until the source language you want is displayed on the screen, then return to the game.

1. Press **MENU**.
2. Press **▼** or **▲** until you see *Games* and then press **ENTER**.
3. Press **▼** until you see *Hangman* and then press **ENTER**.
4. Type your guesses.
The ?s represent letters of the mystery word. The number shows how many guesses remain.
5. Press **ENTER** to show the word and end the round.
6. Press **ENTER** again to play again.

To Play Quiz

Quiz tests your translation skills.

Note: To change the language for *Quiz*, you must change the source language before you play. Press  until the source language you want is displayed on the screen, then return to the game.

1. Press **MENU**.
2. Press **▼** or **▲** until you see *Games* and then press **ENTER**.

3. Press **▼** until you see *Quiz* and then press **ENTER**.

Say the word and try to guess its translation.

4. Press **ENTER** to see its translation.

5. Press **ENTER** again to play again.

Resetting Your Device

If the keyboard fails to respond, or if the screen performs erratically, perform a system reset by following the steps below.

1. Hold **CLEAR** and press .
If nothing happens, try Step 2.
2. Use a paper clip to gently press the reset button located on the back of the unit.
3. Press **E** to set English message language.

You can also press **S** for Spanish.

Warning! Pressing the reset button with more than light pressure may permanently disable your unit. In addition, resetting the unit erases settings and information you may have entered.

Specifications

Model: TES-121 *Spanish* \leftrightarrow *English Phrasebook & Translator*

- **Size:** 10.2 x 7.3 x 1.3 cm
- **Weight:** 77.62 g
- **Battery:** 1 CR-2032 V lithium
- ISBN 978-1-59074-451-2

If you have a problem with this product, refer to the limited warranty. If you purchased this product outside the United States, contact the place of purchase to obtain warranty or repair information.

© 2001-2008 Franklin Electronic Publishers, Inc. Burlington N.J. 08016-4907 U.S.A. All rights reserved.



Recycling and Disposal

✓ Device Disposal


This device should be disposed through your local electronic product recycling system – do not throw into the trash bin.

✓ Packaging Disposal

Please save this User's Guide and all packing materials, as they contain important information. In case of disposal, please refer to your local recycling system.

✓ Battery Disposal

Do not dispose of batteries with normal household waste. Please obey your local regulations when disposing of used batteries.

This unit may change operating modes, lose information stored in memory, or fail to respond due to electrostatic discharge or electrical fast transients. Normal operation of this unit may be re-established by pressing the reset key, by pressing , or by removing and replacing the batteries.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to insure compliance.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Disclaimer of Warranties

Except as specifically provided herein, Franklin makes no warranty of any kind, express or implied, with respect to this product.

Limited Warranty (U.S. only)

LIMITED WARRANTY, DISCLAIMER OF WARRANTIES, AND LIMITED REMEDY
FRANKLIN WARRANTS TO THE ORIGINAL PURCHASER THAT THIS PRODUCT WILL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AS EVIDENCED BY A COPY OF THE SALES RECEIPT. THIS LIMITED WARRANTY DOES NOT COVER DAMAGE DUE TO ACTS OF GOD, ACCIDENT, MISUSE, ABUSE, NEGLIGENCE, MODIFICATION, UNSUITABLE ENVIRONMENT, OR IMPROPER MAINTENANCE. THE SOLE OBLIGATION AND LIABILITY OF FRANKLIN, AND THE EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, IS REPAIR OR REPLACEMENT AT THE SOLE OPTION OF FRANKLIN AND THIS REMEDY APPLIES ONLY IN THE CASE IN WHICH FRANKLIN DETERMINES THAT THE PRODUCT WAS DEFECTIVE AND THAT THE DEFECT AROSE WITHIN THE DURATION OF THE LIMITED WARRANTY. THIS REMEDY IS THE EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY. THIS WARRANTY GIVES YOU CERTAIN RIGHTS; YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM JURISDICTION TO JURISDICTION.

EXCEPT FOR THE LIMITED WARRANTY EXPRESSLY RECITED ABOVE, THIS FRANKLIN PRODUCT IS PROVIDED ON AN "AS IS" BASIS, WITHOUT ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, QUALITY, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING BY LAW, STATUTE, USAGE OF TRADE, OR COURSE OF DEALING. THIS WARRANTY APPLIES ONLY TO PRODUCTS

MANUFACTURED BY OR FOR FRANKLIN AND SPECIFICALLY DOES NOT INCLUDE BATTERIES, CORROSION OF BATTERY CONTACTS OR ANY OTHER DAMAGE CAUSED BY BATTERIES. FRANKLIN SHALL NOT HAVE ANY LIABILITY TO THE PURCHASER OR ANY OTHER PERSON OR ENTITY FOR ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOST OR CORRUPTED DATA, OR OTHER COMMERCIAL OR ECONOMIC LOSS, EVEN IF FRANKLIN HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR EVEN IF OTHERWISE FORESEEABLE. FRANKLIN IS NOT RESPONSIBLE FOR CLAIMS BY A THIRD PARTY. FRANKLIN'S MAXIMUM AGGREGATE LIABILITY SHALL NOT EXCEED THE AMOUNT PAID FOR THE PRODUCT AS EVIDENCED BY THE SALES RECEIPT. SOME STATES/JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IF THE LAWS OF THE RELEVANT JURISDICTION DO NOT PERMIT FULL WAIVER OF IMPLIED WARRANTIES, THEN THE DURATION OF IMPLIED WARRANTIES AND CONDITIONS ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY GRANTED HEREIN.

Warranty Service: If you think your product is defective, call Franklin's Customer Service Desk, 1-800-266-5626, to request a return merchandise authorization ("RMA") number, before returning the product (transportation charges prepaid) to:

Franklin Electronic Publishers, Inc.
Attn: Service Department
One Franklin Plaza
Burlington, NJ 08016-4907

If you return a Franklin product, please include your name, address, telephone number, a brief description of the defect and a copy of your sales receipt as proof of your original date of purchase. You must also write the RMA prominently on the package if you return the product; otherwise there may be a lengthy delay in the processing of your return. Franklin strongly recommends using a trackable form of deliver to Franklin for your return.

Limited Warranty (EU and Switzerland)

Notwithstanding the disclaimer of warranties above, this product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of two years from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time. This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.

Limited Warranty (outside U.S., EU and Switzerland)

Notwithstanding the disclaimer of warranties above, this product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of one year from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time. Products purchased outside the United States, the European Union and Switzerland that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.

World Cities and Abbreviations

CITY NAME	ABBREVIATION
LONDON	LON
LISBON	LIS
LOS ANGELES	LAX
KARACHI	KHI
KABUL	KBL
HONOLULU	HNL
HONG KONG	HKG
HELSINKI	HEL
GUAM	GUM
FERNANDO DE NORONHA	FER
DUBAI	DXB
DENVER	DEN
DELHI	DEL
DHAKA	DAC
CHICAGO	CHI
CARACAS	CCS
CAIRO	CAI
BANGKOK	BKK
BERLIN	BER
BEIJING	BEI
BARCELONA	BCN
AZORES ISLANDS	AZO
ANCHORAGE	ANC
AMSTERDAM	AMS
AUCKLAND	AKL
ADELAIDE	ADL
TORONTO	YYZ
WELLINGTON	WLG
TOKYO	TYO
TONGA	TNG
TEHRAN	THR
SYDNEY	SYD
SINGAPORE	SIN
RIYADH	RUH
ROME	ROM
RIO DE JANEIRO	RIO
YANGON	RGN
PARIS	PAR
NEW YORK	NYC
NOUMEA	NOU
MOSCOW	MOW
MIDWAY ISLANDS	MID
MID ATLANTIC	MAT