

INSTRUCTIONS

Handling Precautions

- 1. Before taking pictures of important events, such as weddings and trips, check to make sure the camera is working properly.
2. This camera is not resistant to water, and should not be used outdoors if it is raining or snowing.
3. Store the camera in a cool, dry, dust-free place.
4. Do not attempt to disassemble the camera yourself.
5. The battery may explode or cause burns if disassembled, recharged, shorted, exposed to high temperatures, or disposed of in a fire.

Convention
Warnings you should observe when using the camera.
Additional information on using the camera.
Please note that these instructions are for both the model with the date function and model without date function.

Loading the Battery and Checking the Battery Level

Loading the Battery

 
Applicable Battery: One lithium battery (CR2)

1 Open the battery cover.




2 Load a new battery.

- Align the + terminals correctly and insert the battery - end first.
The [] appears on the LCD panel.



3 Close the battery cover.

 - Push the cover closed until you hear a clicking sound.
The date display "----" on the LCD panel blinks. Set the date and time.



The camera will not operate if the + terminals are aligned incorrectly.

Checking the Battery Level

Check that [] appears on the LCD panel when you turn the power on. Change the battery if [] is displayed.

- (II) The battery level OK.
(II) Prepare a new battery.
() (blinking) Load a new battery.

 
A new battery will generally provide enough charge to shoot approx. 16 rolls of 24-exposure film (based on Canon's Standard Test Method at normal temperature and with 50% flash use). At low temperatures (-10°C/14°F), the battery life is approximately one third of the normal figure.

When you take consecutive shots using the flash, the battery level may drop off temporarily and prevent the LCD panel from displaying information correctly.


Loading and Removing the Film

Loading the Film

- 1 Open the back cover and load the film.
Push the back cover release lever down.




 2 Position the film correctly between the film guides.




3 Pull the film out to the [] (film leader position indicator).

 - Make sure that there is no slack in the film when you pull it out.
If the edge of the film leader goes beyond the film leader position indicator, rewind some of the film back into the cartridge.



4 Close the back cover.

 
- The film automatically winds on to the first frame and "1" appears on the frame counter.
If the frame counter shows a blinking "0", the film did not load correctly. Load the film again.



ISO 400 DX-coded film is recommended.

Removing the Film

 The film rewinds automatically when it reaches the end. When the film is fully rewound, the frame counter shows "0" and the [] blinks. Then open the back cover and remove the film.



If the [] is not blinking, press the [] button.

Taking Pictures in Autoflash (Full-auto) Mode

As long as the subject is in the wide area AF frame, the subject will be in focus. The flash also fires automatically in low light or backlit conditions.

1 Press the main switch to turn the camera on.

2 Decide on the size of your subject.

- Pressing [] zooms in on your subject while pressing [] zooms out for a wide-angle shot.

3 Set the focus.

- Position the wide area AF frame over your subject and lightly press the shutter button halfway down.
When the subject is in focus, the green lamp lights.
Keep the shutter button pressed halfway.



4 Compose the shot and take the picture.

- Press the shutter button fully.
Press the shutter button slowly and gently.

Holding the Camera

Grasp the camera firmly with both hands so that it does not move, and make sure that your hair, fingers or camera strap etc. do not come into contact with the lens, the AF sensor or the flash.

Shutter Button

The shutter button is a two-stage switch. Lightly press it halfway to automatically determine focus and exposure. Press it fully to take the picture.

If the lens is left extended and is not used for 4 minutes, it is automatically retracted to its wide-angle position.

Subjects Difficult to Autofocus


The green lamp may blink 4 times per second for subjects with the following characteristics that cannot be brought into focus. In situations like this, focus on something roughly the same distance away as your subject and lock the focus for the shot.

- Main types of subjects when focusing is difficult:
Subjects in scenes without much contrast, e.g. blue sky, or scenes of mainly one color.
Subjects in very dark places.
Subjects in extreme backlit situations or subjects which are extremely reflective, e.g. the body of a car which gives off a strong reflection.
Subjects in a photograph, some of which are close and some of which are in the distance, e.g. animals in a cage.
Subjects with a repetitive pattern, e.g. continuous windows in a building, etc.


Using Focus Lock

Lock the focus when you want the subject to be off center, or when the subject is within 1 m/3.3 ft. of the camera.


Nomenclature

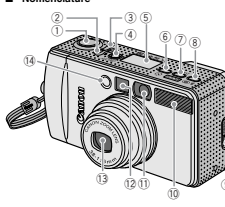

- 1 Shutter button
2 Zoom-in (telephoto) Set button
3 Zoom-out (wide-angle) Selection button
4 Main switch
5 Flash
6 AF sensor/metering window
7 Mode button
8 Flash mode button
9 Back cover release lever
10 Flash
11 Viewfinder window
12 AF sensor/metering window
13 Lens
14 Lens
15 Lens
16 Tripod socket

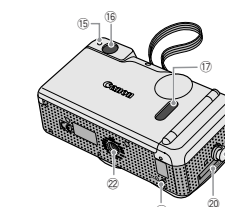


- 17 Mode button
18 Flash mode button
19 Back cover release lever
20 Flash
21 Viewfinder window
22 AF sensor/metering window

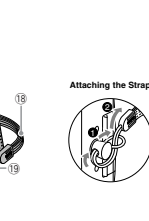

- Back
1 Green lamp
2 Viewfinder eyepiece
3 Film check window
4 Strap
5 Battery compartment cover
6 Mid-roll rewind button
7 Tripod socket



- 1 Date
2 Manual exposure compensation
3 Red-eye reduction mask
4 Frame counter
5 Film mark
6 Real-time release
7 Close-up

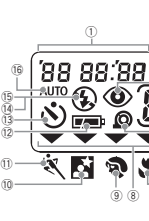

- 1 Date
2 Manual exposure compensation
3 Red-eye reduction mask
4 Frame counter
5 Film mark
6 Real-time release
7 Close-up

When "H" is displayed, remove the battery from the camera, wait until "H" is no longer displayed and then reload the battery.

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard "Digital Apparatus".

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard "Digital Apparatus".

Cat aparatur numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans le norme sur le matériel bruiteur "Appareils Numériques".

CE mark is a Directive conformity mark of the European Community (EC)

1 Set the focus.

- Position the wide area AF frame over your subject and lightly press the shutter button halfway down. Keep the shutter button pressed halfway.



2 Compose the shot and take the picture.


- Compose the shot and press the shutter button fully.



Take care that the distance from the camera to the subject does not change. If the distance does change, lock the focus again.

Close-up Photography

When the shooting distance is closer than 1 m/3.3 ft., there is a difference between what you see in the viewfinder and the picture you actually take, and therefore the part of the picture outside the close-up frame will be cut off.

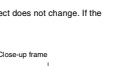

After locking the focus on your subject, bring the subject into the close-up frame, compose the shot and take the picture.

Flash Off with Manual Exposure Compensation

There is automatic exposure compensation in backlit conditions but manual exposure compensation is also optional.

- 1.5 Exposure Compensation: You can use this setting to prevent your subject being too dark (underexposed) when the surroundings are extremely bright, such as at a sunset stage.
1.5 Exposure Compensation: You can use this setting to prevent your subject being too bright (overexposed) when the surroundings are extremely dark, such as on a spotlight stage.
Because of the slower shutter speeds in dark places in 1.5, 1.5, and 1.5 modes, if the camera shake warning comes on (the green lamp blinks 16 times per second), you must use a tripod to keep the camera steady.

Imprinting the Date and Time

1 Select the Date mode.

- With the power off, press the [] button.



2 Select the date and time combination.

- By pressing the [] button, you can select the date and time combination. The display changes in the cycle shown below.



- Press the [] button and the power switches off.



Date/time etc. imprinted here

Setting the Date and Time

When you replace the battery or travel to the different time zone, use the following procedure to set or adjust the date and time settings.

1 Select the Date mode.

- With the power off, press the [] button.



2 Press the [] button for more than 2 seconds for date/time set mode.

- Press the [] button to select the setting position (numbers blinking).



 
3 Press the [] button to set the number.

- Setting position cycles through in the order year-month-day-hour-minute(-).



4 Press the [] button to set the number.

- Press the [] button while "1" blinking resets the seconds (:) setting to zero.



5 Repeat 3 and 4 above to set all digits of the date and time.

- Press the [] button and once "1" stops blinking, date and time setting is completed.



6 Finish setting the date and time.

- Press the [] button and once "1" stops blinking, date and time setting is completed.



 
Each time the [] button is pressed, the number increases by one. If kept pressed, the number increases continuously.

Setting the Custom Functions

You can customize the functions listed below to suit your preferences or the photography conditions.

1 Set the camera to Custom Function setting mode.

- With the power off, hold down the [] button and press the [] button.
"CF 1-0" appears on the LCD panel.



2 Select a function.

- Each time you press the [] button, the Custom Function number changes in the cycle shown below.

CF1 -> CF2 -> CF3 -> CF4 -> CF5



3 Set the function.

- Press the [] button to change the setting display to 1 (function number).
Press the [] button again to change the setting to 0 (function number).



CF1: Real-time Release

Refer to Shooting in Real Time for information on using the Real-time Release function.

CF2: Shooting Mode and Flash Mode Memory

Stores the shooting mode and the flash mode in memory immediately before the camera is switched off. Useful when you always want to set the shooting mode and the flash mode to a particular mode.

CF3: Disabling Automatic Film Rewind

Useful for situations where you do not want the sudden sound of the film rewinding. When you reach the end of the roll, the number on the frame counter and the [] blink. Press the [] button to start film rewinding.

CF4: Center-point AF

A convenient function when you want to place your subject off center (using focus lock) or focus on one particular subject. The subject must be positioned in the center of the wide area AF frame.

CF5: Continuous Shooting

While the shutter button is pressed, you can take continuous shots.

- The Custom Functions were all set to zero (0) at the factory setting.
The Custom Function settings are retained even when you switch the camera off and on, replace the battery, or replace the battery.

Major Specifications

Type: Fully-automatic 35 mm lens-shutter AF camera
Image Size: 24 x 36 mm
Lens: 115u: Canon zoom lens 38-115 mm f/4.6-13
105u: Canon zoom lens 38-105 mm f/4.6-11.9

Focusing: Passive 3-point AF
Viewfinder Coverage: Approx. 84%
Viewfinder Information: Picture frame, Wide area AF frame, Close-up frame

Green lamp: Camera ready indicator/low-close warning/focusing-not possible warning

Release lock: Release lock while the red-eye reduction lamp is lit/camera shake warning

Shooting Interval: 0.6 m (2.0 ft.) infinity

Close-up: 0.45 m (1.5 ft.) infinity

Film Speeds: DX-coded ISO 25-3200 set automatically in full-stop increments

Film Transport: Automatic, mid-roll rewind

Power Source: One CR2 lithium battery

Battery Life: Approx. 16 rolls (24-ex. normal temperature with 50% flash use)

Dimensions (W x H x D): 107.2 x 58.7 x 42.4 mm/4.2 x 2.3 x 1.7 in.

Weight: 195 g/6.9 oz. (excluding battery)

All the specifications above are based on Canon's testing and measuring standards. Specifications and physical appearance are subject to change without notice.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received.

Do not make any changes or modifications to the equipment unless otherwise specified in the instructions. If such changes or modifications should be made, you cannot be required to stop operation of the equipment.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and if not used properly, it can cause interference to other equipment.

Use of this equipment in areas with known or suspected radio frequency interference may cause interference to other equipment.

Use of this equipment in areas with known or suspected radio frequency interference may cause interference to other equipment.

Use of this equipment in areas with known or suspected radio frequency interference may cause interference to other equipment.

Use of this equipment in areas with known or suspected radio frequency interference may cause interference to other equipment.

Use of this equipment in areas with known or suspected radio frequency interference may cause interference to other equipment.

Use of this equipment in areas with known or suspected radio frequency interference may cause interference to other equipment.

Use of this equipment in areas with known or suspected radio frequency interference may cause interference to other equipment.

Use of this equipment in areas with known or suspected radio frequency interference may cause interference to other equipment.