


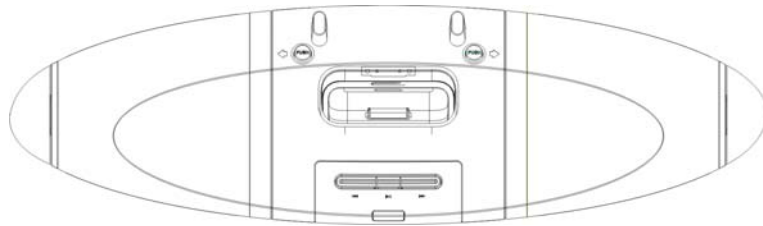

Universal Docking Station with 2.4GHz Wireless Speakers for iPhone/iPod

MODEL NO: PIWPD3



IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. Water and Moisture

The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a set basement.

2. Ventilation

The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.

3. Heat

The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.

4. Power Source

The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

5. Power Cord Protection

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet.

6. Cleaning

The unit should be cleaned only as recommended. See the section "Care and Maintenance" of this manual for cleaning instructions.

7. Object and Liquid Entry

Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.

8. Attachments

Do not use attachments not recommended by the product manufacturer.

9. Lightning and Power Surge Protection

Unplug the unit from the wall outlet. This will prevent damage to the product due to lightning and power-line surges.

10. Overloading

Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire of electric shock.

11. Damage Requiring Service

This unit should be serviced by qualified service personnel when;

- The power supply cord or plug has been damaged.
- Objects have fallen into or liquid has been spilled into the enclosure.
- The unit has been exposed to rain.
- The unit has been dropped or the enclosure damaged.
- The unit exhibits a marked change in performance or does not operate normally.

12. Periods of Nonuse

If the unit is to be left unused for an extended period of time, such as a month or longer, the power cord should be unplugged from the unit to prevent damage or corrosion.


13. Servicing

The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.


LOCATION OF CONTROLS

DOCKING STATION:


Front View

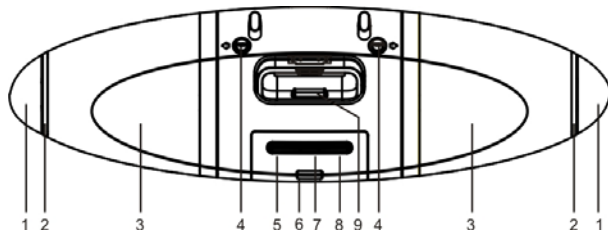


Backside

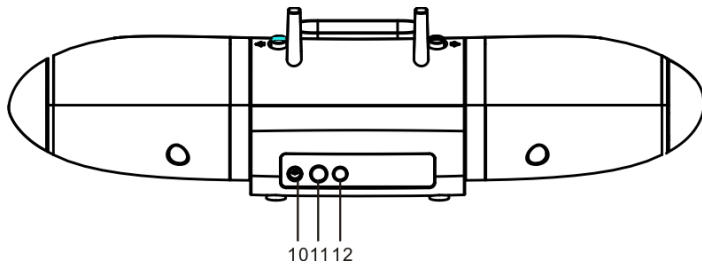 

Bottom View

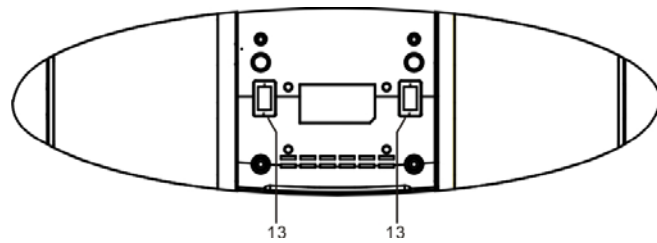 

REMOTE CONTROL

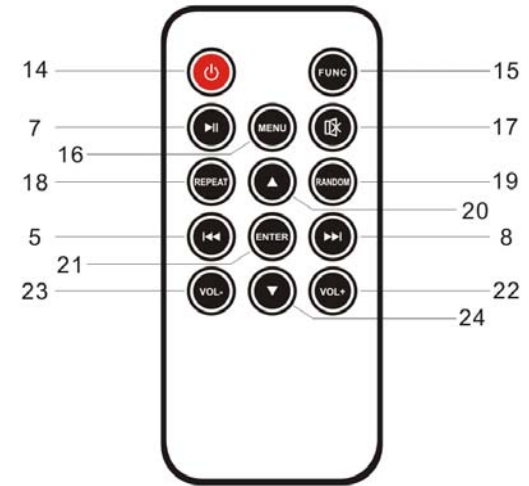 

1	Volume Rotary Knob	14	Power On/Standby
2	Speaker Charging Indicator light	15	Function button
3	Speaker	16	Menu button
4	Open button (Press to detach the Speaker from the main base)	17	Mute button
5	Skip - Button	18	Repeat button
6	Power on Indicator/Remote sensor	19	Random Button
7	Play/Pause button	20	UP button
8	Skip + Button	21	Enter button
9	iPhone/iPod Connector	22	VOL+ Button
10	DC 9V Jack	23	VOL- Button
11	RCA Video out Jack	24	Down button
12	Aux-In Jack		
13	Combination dead bolt		

POWER SOURCES

Power of Main Base

The main base is operated by an external AC-DC Power Adaptor with an output of 9V DC / 2000mA (included).

1. Insert the adaptor's DC output plug into the DC-IN jack on the back of the Main base
2. Plug the adaptor into a convenient AC wall outlet

Power of Individual Speaker

Each speaker has 1 built-in rechargeable lithium battery for independent playback. Before the first use, we recommend to charge each speaker for 4 hours. When speaker is placed on the powered base (the main base was connected with the AC adaptor), charging will start automatically. The speaker charging indicator light will turn on with red color, and it will turn green once the battery is fully charged, no further charge is applied.

Power of Remote Control

To use the remote control, please ensure the remote control battery CR2025 (included) is installed properly and take the insulation clarity paper out. (Once you stop to use the remote control, please Insert in it same as before). Replace the remote control battery when it stops working. It is highly recommended to use a good quality button cell.

Note: Room lighting and battery life can affect the operating range of remote control.

 


ACCESSORIES


- 1 x AC adaptor
- 1 x Remote Control (include button cell CR2025)
- 1 x User manual
- 1 x Line-in cable

GENERAL OPERATION

1. Select a proper docking adaptor (enclosed when purchase an iPod) and place it into the base, no adaptor required if you use iPhone, then dock your iPod/iPhone gently.

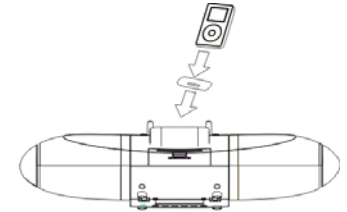

 2. Plug the AC adaptor plug into DC-IN Jack at the rear side of base, the main base will be turned on automatically, meanwhile, the power on indicator turns on with blue color.

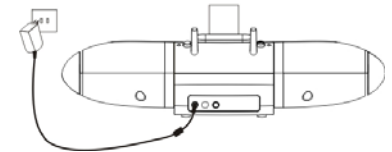

3. Turn the speakers on to play your iPod/iPhone.
4. Rotary the volume knob to choose a proper volume level, then you should now be able to take the speakers freely from room to room without disruption (Subject to its surroundings, approximately 100 feet in the open area without any interference).
5. Press and hold the Play/Pause on the main base or press the Power on button on remote control turn off the unit.

SPECIAL TIPS

Meanings of the Speaker Charging Indicator light

- 1) When the battery inside the speaker is charging, and the volume knob is turned off, the indicator light will be red color. Once it is fully charged, the light turns to green.
- 2) When the battery inside the speaker is charging, and the volume knob is turned on, the indicator light will be purple color. Once it is fully charged, the light turns to blue
- 3) When the docking station is working and the speakers are separate from the main base, the indicator light is blue. When the battery level is low, the sound of speaker will be weak, once the battery is truly exhausted, the speaker will stop working, meanwhile, the the indicator light turns off.

How to combine the speakers to main base?

1. Insert the speakers into the main base, make sure the direction marks (R & L) on the bottom of the speakers match to the main base.
2. Slide the Combination dead bolt to lock position.

How to separate the speakers and main base?

1. Slide the Combination dead bolts to unlock position.
2. Press the Open buttons to detach the speakers from the main base.

Using the Aux-in Jack

1. Press and hold the Play/Pause on the main base or press the Power on button on remote control to turn on the main base, the power on indicator will turn on with red color if there is no iPod or iPhone docked on the main base.

Note: the power on indicator turns to red color means the docking station is in AUX-IN mode.

2. Connect an audio cable to the headphone or line-out jack of an audio device and plug the other end into the Aux -in jack located on back of the main base

3. Turn audio device on and play this device.

4. Rotate the volume knob to choose a proper volume level. When finished, press and hold the Play/Pause on the main base or press the Power on button on remote control to turn off the main base. Remember to turn off the speakers and your audio device, too.

VIDEO OUT FROM THE iPod/iPhone

1. You can connect this unit to a television or other video display that has a composite video input.

2. Securely dock your iPhone or iPod with video.

3. Connect one end of an RCA cable (not included) to rear RCA video jack on the unit.

4. Connect the other end of the RCA cable to VIDEO IN of television or video display.

5. Press the **FUNCTION** button to select iPod/iPhone mode.

6. Select a movie from your iPod/iPhone menu.

7. iPod: On the main menu choose video then select video setting.

8. iPod: Make sure the TV Out section is set to "ON".

9. iPod: Switch back to the movie library and play the movie of your choice

Note: Video out will automatic when using an iPod touch or iPhone

TROUBLESHOOTING GUIDE

Should you experience difficulties in the use of this player, please refer to the following chart.

Symptom	Possible problem	Solution
The base does not switch on (no power)	AC adaptor is not plugged into a wall outlet or the connector is not plugged into the DC jack on the back of the unit.	Plug the AC adaptor into a wall outlet and plug the connector into the DC jack on the unit.
	Wall outlet is not functioning.	Plug another device into the same outlet to confirm the outlet is working.
	Using no/wrong iPod cradle.	Make sure the dock cradle is the proper fit for your iPod.
iPod/iPhone does not respond to the speaker system	iPod/iPhone is not installed properly.	Remove your iPod/iPhone from the dock and check for any obstruction on the connectors in the docking and on your iPod. Then reseat it in the dock.
	Your iPod/iPhone is locked up.	Please make sure that your iPod/iPhone is working properly before docking into the unit.
iPod/iPhone does not charge up	iPod/iPhone is not installed properly.	Remove your iPod/iPhone from the dock and check for any obstruction on the connectors in the docking and on your iPod. Then reseat it in the dock.
	iPod/iPhone battery has problem.	Please make sure your iPod/iPhone is working properly before docking into the unit.
Speakers do not play the sound from docked device	Speakers receive signal from other devices, or the other set of MW-1025A	Place the unit to a location where receive lesser external signal.
Sound is cut off or noisy	The unit experiences interference	Do not turn on other wireless devices simultaneously.
Sound is distorted	Sound source is distorted.	If the source is iPod/iPhone, try to check the sound at personal computer before putting into the iPod/iPhone. If you are using an external sound source like digital audio player, try reducing the output volume on the device itself.
	Volume level is set too high.	Decrease the volume.

SPECIFICATIONS

Power Supply

Power adaptor (included): Input AC 100-240V ~ 50/60Hz

Output DC 9V 2A

Power of remote control: 1 xDC 3V CR2025 button cell (included)

Wireless Transmission: 2.4GHz



The symbol opposite indicates that the electric and electronic components are the subject of a selective collection, it represents a dustbin on wheels barred of a cross. The electric and electronic products can contain substances having negative effects on the environment and health. Worn, they should not be thrown with domestic waste but to be imperatively recovered in the selective collections: dump, associations of social economy and interdependent.

The selection of waste decreases the potential effects on the environment and human health due to the substances dangerous which can compose certain components electric and electronic.

Take an active part: to remove you not from the apparatuses with domestic waste!



"Made for iPod," "Made for iPhone," mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, may affect wireless performance.

iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.