



LG *Bliss*[™]

QUICK START GUIDE



Touch UI
(Touch Screen)



Customizable
Home Screens



Intuitive Rotating
Display



Using the
Virtual QWERTY



Handwriting
Recognition



Transferring Music



Browsing the Web



Taking a Picture



Recording a Video



www.lgusa.com/bliss



LG

Life's Good

 
Getting to Know Your Phone



**Press this key to lock/unlock the phone.*

Touch UI (Touch Screen)


The sleek and ultra slim LG Bliss offers the latest technology right at your fingertips, including a next generation user interface with three customizable home screens, Flash UI for clear images and fun animations, and a built-in accelerometer, all accessible from a large 3.0" touch screen.

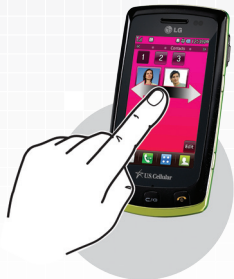




Navigate the Home Screens

1. Use the tip of your finger to access features on your phone. You only need a soft tap with the sensitive touch screen.
2. To move from one home screen to another, press and *drag* horizontally across the touch screen. The display rotates to the next home screen.

Search Contacts

1. From a home screen, tap the **Contacts Icon** .
2. Enter the name of the desired contact with the virtual QWERTY keyboard.

 Note: The touch screen automatically locks when the phone is left inactive. To unlock the touch screen, touch the **Unlock Icon**  or press the **Hold Key**  located on the right side of the phone.

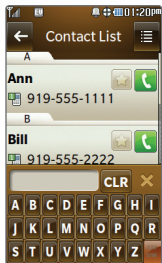

Customizable Home Screens

Make LG Bliss uniquely yours by customizing the home screens with shortcuts to your favorite features, media, and websites.

Main Home Screen

Access the Display Settings to customize the **Main Home Screen** to display date and time or calendar information.

Shortcut Home Screen

Quickly access the analog clock, timer, calendar, quick note, help wizard, and other shortcuts you add using the **Shortcut Home Screen**.

Contacts Home Screen

Add your favorite contacts to the **Contacts Home Screen**. Tap the contact to view contact information, add a photo, make a call, send a message, or view your chat history.

Multimedia Home Screen

The **Multimedia Home Screen** hosts shortcuts to multimedia files such as your favorite photos, music, and videos.



Intuitive Rotating Display

When you rotate your phone while viewing photos or browsing the web, your LG Bliss automatically detects the change and rotates the display from portrait to landscape or controls games using inclining, declining, and shaking movements.

To adjust the user interface, you simply rotate the phone. The vertical view is ideal for traditional phone use, while the horizontal view displays the QWERTY keyboard for easy messaging and web browsing.






Using the Virtual QWERTY

Your LG Bliss makes messaging and web browsing quick and easy with the virtual QWERTY keyboard. When you are in a text field and ready to type, just rotate your phone horizontally to change from the virtual keypad to the QWERTY keyboard. The familiar layout and superb design make the QWERTY keyboard a breeze to use!



Handwriting Recognition

Saving a Contact

1. From standby mode and with the phone unlocked, tap the **Menu Icon** .
2. Tap the **Contacts Icon** , and then tap **New Contact**.
3. Tap the **Name Field** to begin entering your contact's name.
4. There are a variety of text entry methods on LG Bliss. Tap the **Handwriting Recognition Icon**  on the right side of the display.
5. Write the letters of your contact's name in the dark gray area. To change case or shift between letters, numbers, and symbols, tap the icons below the text field. When you are finished, tap **Done**.
6. Enter additional information for your contact using the same steps as above. When you are finished, tap **Save**.

Note: You can also use the handwriting recognition feature when composing messages, entering URLs, and writing notes. To learn more about this feature and its guidelines, refer to the User Manual.



Transferring Music

Transform your LG Bliss into a portable music player. Copy music, pictures, and other media files to a microSD card to access them anywhere at any time. Have a favorite song? Add a shortcut to the multimedia home screen to listen to it whenever you want!



1. Insert a microSD card* into the card slot. To access the microSD card slot, you must remove the battery cover located on the back of your phone.
2. Connect your LG Bliss to your PC with a USB data cable.
3. Tap **USB Mass Storage**.
4. On your PC, select **Open folder to view files** and click **OK**.
5. While connected in mass storage mode, you may *drag* and drop files and folders through Windows Explorer as if your phone were an external hard drive.





**Requires microSD card (sold separately) and USB data cable (included with phone).*


Browsing the Web

 
 
LG Bliss lets you check email, read the news, or look at your favorite websites, all with touch navigation. Stay connected to your friends by adding Facebook® and Myspace™ to your **Favorites**.

Starting a Web Session

1. From standby mode and with the phone unlocked, tap the **Menu Icon** .
2. Tap the **Browser Icon** .
3. After a few seconds, the home page appears.
4. Tap the URL field.
5. Enter a web address using the QWERTY keyboard.
6. Tap **Done**.



Ending a Web Session

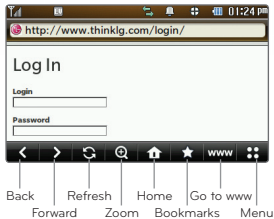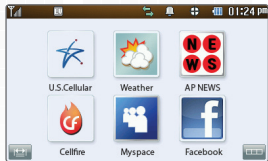
Press the **Power/End Key**  to end the web session.



 Taking a Picture



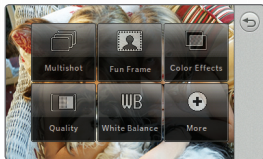

Capture special moments with the integrated 2.0 megapixel camera. LG Bliss' advanced editing features give you endless possibilities for creating fun pictures to send to your friends.

 
1. From standby mode and with the phone unlocked, quickly press the **Camera Key** .
2. You may adjust settings like brightness or resolution with the icons on the left or access the camcorder or previously captured images with the icons on the right.
3. When you're ready, press the **Camera Key**  to take a picture.



Recording a Video

Record all the action with LG Bliss' camcorder!

1. From standby mode and with the phone unlocked, press the **Camera Key** .
2. Tap the **Record Video Icon** .
3. You may adjust settings like zoom or recording time with the icons on the left or access the camera or previously recorded videos with the icons on the right.
4. Tap the **Recording Icon**  to begin recording your video.
5. When you are ready to stop recording, tap the **Stop Recording Icon** .

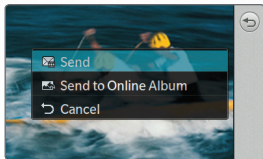

Optional Accessories

Maximize your phone with these cutting-edge accessories at www.lgusa.com/bliss.



Bluetooth® Headset
(HBM-310)



Bluetooth Headset
(HBM-520)



Bluetooth Solar Speakerphone
(HFB-500)



Bluetooth Stereo Headset
(HBS-250)



© 2009 LG Electronics, Inc. All rights reserved. LG is a registered trademark of LG Electronics, Inc. Bliss is a trademark of LG Electronics, Inc. **easyedge**SM is a service mark of U.S. Cellular[®]. microSD[™] is a trademark of SanDisk. The *Bluetooth*[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by LG Electronics MobileComm, U.S.A., Inc. is under license. All other marks are proprietary to their respective owners. All phone images are simulated. Unless otherwise specified herein, all accessories referenced herein are sold separately.



Mixed Sources

Product group from well-managed forests, controlled sources and recycled wood or fiber

www.fsc.org Cert no. XXX-XXX-XXX
© 1996 Forest Stewardship Council

