




KOMPERNASS GMBH · BURGSTRASSE 21  
D-44867 BOCHUM  
[www.kompernass.com](http://www.kompernass.com)  
ID-Nr.: KH550-01/07-V2

**bifinett**



Ⓒ **Electric Knife KH 550**  
Instructions for use



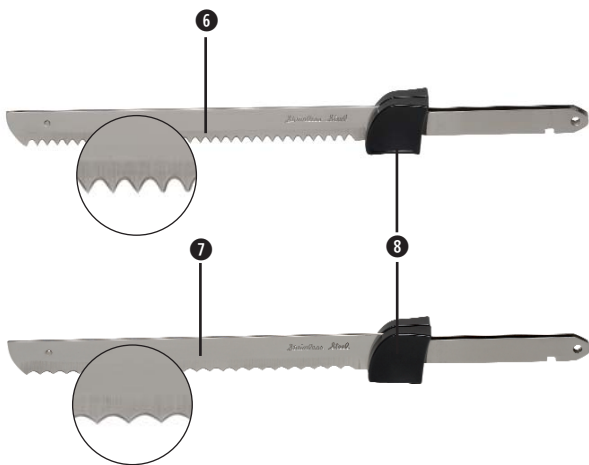

<b>Contents</b>	<b>Page</b>
<b>Intended use</b>	<b>4</b>
<b>Safety notes</b>	<b>4</b>
<b>Technical data</b>	<b>5</b>
<b>Items supplied</b>	<b>5</b>
<b>Appliance description</b>	<b>5</b>
<b>Operation</b>	<b>6</b>
Inserting the blades	6
Cutting foodstuffs	7
Removing the blades	7
<b>Cleaning</b>	<b>8</b>
<b>Disposal</b>	<b>8</b>
<b>Warranty and Service</b>	<b>8</b>
<b>Importer</b>	<b>9</b>

Read the operating instructions carefully before using the appliance for the first time and preserve this booklet for later reference. Pass the booklet on to whoever might acquire the appliance at a future date.

---

# Electric Knife KH 550

---

---

## Intended use

---

The electric knife is suitable for cutting various types of foodstuff. It is intended for domestic use only, not for commercial applications.

---

## Safety notes

---

### To avoid potentially fatal electric shocks:

- The rating of the local power supply must tally completely with the details given on the rating plate of the appliance.
- NEVER submerge the motor block in water. Wipe it off with a damp cloth only.
- Arrange for damaged power cables and/or plugs to be exchanged as soon as possible by a qualified specialist or the Customer Service .
- Arrange for appliances that do not operate correctly, or have been damaged, to be inspected and/or repaired by Customer Service as soon as possible.
- NEVER subject the appliance to rain and do not use it in wet or moist environments. Take steps to ensure that the power cable never becomes wet or moist during use.

### To avoid fire risks and burn injuries:

- This appliance is not intended for use by children or other persons without assistance or supervision if their physical, sensory or mental capabilities prevent them from using it safely. Children should be supervised to ensure that they do not play with the appliance.
- **Caution!** Keep children away from the power cable and the appliance. Children often underestimate the dangers from electrical appliances.
- Ensure that the power plug can be quickly removed from the socket in the event of danger and that people cannot stumble over the power cable.
- **Risk of Injury!**The blades are very sharp. Handle them with great care.

- The use of accessories which are not recommended or sold by the appliance manufacturer can cause electric shock or personal injury.

---

## Technical data

---

Mains voltage:	220 - 240 V~ 50/60 Hz
Power rating:	100 W
CO Time:	15 Minutes

### CO Time

The C.O. Time (Continuous Operation) details how long an appliance may be used without the motor overheating and being damaged. When the given C.O. Time has been reached, the appliance must be switched off until the motor has cooled itself down.

---

## Items supplied

---

### Electric Knife

- 1 Stainless steel knife blade
- 1 Stainless steel freezer-knife blade
- 2 Protective sheaths
- Instructions for use
- Warranty card

---

## Appliance description

---

- ① Blade insert slot
- ② Blade release button
- ③ On/Off switch
- ④ Safety switch
- ⑤ Power cable with power plug
- ⑥ Freezer-knife blade
- ⑦ Universal knife blade
- ⑧ Finger protection grip

---

## Operation

---


### Inserting the blades

**⚠ Important:** Hold the blades with the finger protection grips **8** only. The blades are very sharp - there is a risk of personal injury!

1. Select the blade suitable for the task to be done:
  - The universal knife blade **7** with the coarse, short teeth for cooked meats (without bones), cooked poultry, bread, cakes, filled bread rolls, fruit (without pips or stones) and vegetables.
  - The freezer-knife blade **6** with the long teeth for lightly frozen or partly thawed foodstuffs, but not for fully deep-frozen foodstuffs.

**⚠ Important:** NEVER try to cut through bones. This could irreparably damage the appliance.

2. Bring the selected two blades together as shown in Fig. 1:

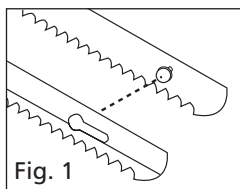

**ⓘ Notice:** NEVER use two different blades at the same time. Should you do so, the electric knife will not cut correctly and it could be irreparably damaged.

3. Hold the blades **6/7** with the finger protection grips **8** and insert them into the blade insert slot **1**. The teeth of the blades must be pointing downwards. The blades **6/7** must engage audibly.



## Cutting foodstuffs

**⚠ Important:** ALWAYS cut away from the body, NEVER towards the body. The sawing blades ⑥/⑦ can cause serious physical injuries.

1. Insert the power plug ⑤ into the power socket.
2. Press and hold the On/Off switch ③ with the thumb. At the same time, press the safety switch ④ with the other fingers.

**ⓘ Note:** The electric knife only runs when the On/Off switch ③ and the safety switch ④ are pressed at the same time.

3. Guide the blade ⑥/⑦ through the foodstuff to be cut.

**⚠ Important:** Never operate the electric knife for longer than 15 minutes without a break.

When the 15 minutes of continuous use is reached, leave the appliance switched off until the motor has cooled down completely. Otherwise, the appliance could be irreparably damaged by overheating.

4. Release the safety switch ④ and the On/Off switch ③ when the cutting task has been completed.


## Removing the blades


1. Remove the power plug ⑤ from the power socket.
2. To remove the blades ⑥/⑦ from the blade insert slot ①, firmly hold the blades by the finger protection grips ⑧.
3. Press the blade release button ②.
4. Carefully remove the blades ⑥/⑦ from the blade insert slot ①.

---

## Cleaning


---

 **Important:** Before cleaning, ALWAYS remove the power plug **5** from the wall socket and the blades **6/7** from the appliance.

 **Important:** NEVER submerge the motor block in water. Risk of electric shock.

Clean the blades with hot water and detergent.  
Afterwards, dry them well.

Wipe the motor unit with a lightly moistened cloth only.  
For stubborn soiling, apply some mild detergent to the cloth.

 **Important:** Do not use aggressive or chemical cleansers for cleaning. These can attack the upper surfaces and permanently damage the appliance.

---

## Disposal

---



Do not dispose of electrical appliances with normal household waste.

Dispose of the appliance through an approved disposal centre or at your community waste disposal facility. Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.



Dispose of the packaging materials in an environmentally responsible manner.

---

## Warranty and Service

---

The warranty conditions and the service address can be found on the supplied warranty slip.

---

## **Importer**

---

KOMPERNASS GMBH  
BURGSTRASSE 21  
D-44867 BOCHUM

[www.kompernass.com](http://www.kompernass.com)