

Dimensions (millimetres)

H	W	D
295	200	155

Model(s) Specification

DCU18LCD 1.8kW Electronic LCD Display

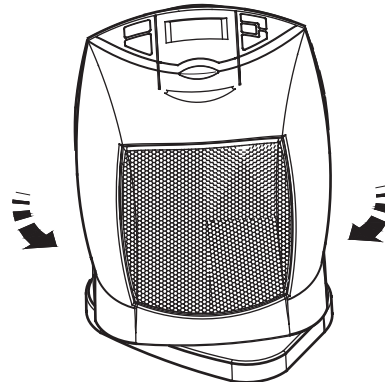 


Fig. 1

THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE.

IMPORTANT SAFETY ADVICE

READ THESE INSTRUCTIONS BEFORE USE.

DO NOT use the heater on deep pile carpets or the long hair type of rugs, or less than 750mm (30") away from any overhanging surface. Keep combustible materials such as drapes and other furnishings clear from the front, sides and rear of the heater. Do not use heater to dry your laundry.

DO NOT use the heater in the immediate surroundings of a bath, a shower or a swimming pool.


DO NOT place the heater directly below a fixed socket outlet. The socket-outlet must be accessible at all times to enable the mains plug to be disconnected as quickly as possible.

DO NOT COVER or obstruct the air inlet and outlet openings in any way.

The heater must be on a flat stable surface when in use. **DO NOT** operate the heater with the mains lead overhanging the front outlet grille.

NEVER leave the heater unattended when it is used by or near the aged, infirm person's or children.

If you use this heater in conjunction with an external thermal control, a programme controller, a timer or any other device which switches on the heater automatically, observe all safety warnings **AT ALL TIMES** since a fire risk exists when the heater is accidentally covered or displaced.

The heater carries the Warning symbol  indicating that it must not be covered.

The instruction leaflet belongs to the appliance and must be kept in a safe place. If changing owners, the leaflet must be surrendered to the new owner.

IMPORTANT – If the mains lead of this appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Electrical connection

This heater must be used on an **A.C.~** supply only and the voltage marked on the heater must correspond to the supply voltage. This heater is fitted with a plug incorporating a 13 amp fuse. When replacing the fuse, a 13 amp fuse approved by ASTA to BS 1362 must be used.

If the plug is not suitable for the socket outlets in your home, the plug must be cut off and an appropriate one fitted. A plug cut off from a mains lead will give a shock hazard if inserted into a 13 amp socket elsewhere in the house. To avoid this, it should be disposed of immediately.

 
NOTE: The fuse cover of a non-rewirable plug must be refitted when changing the fuse. Should the cover become lost, the plug must not be used until the correct replacement fuse cover is obtained from your supplier or by contacting our customer helpline.

IMPORTANT : The wires in this mains lead are coloured in accordance with the following code :

BLUE : NEUTRAL
BROWN : LIVE

As the colours of the wires in the mains lead may not correspond with the coloured markings in your plug, proceed as follows :

Connect the **BROWN** wire to the terminal marked 'L' or coloured **RED**. Connect the **BLUE** wire to the terminal marked 'N' or coloured **BLACK**.

Note : 'L' or 'N' must not be connected to the **EARTH** terminal marked 'E' or  or coloured **GREEN** or **GREEN AND YELLOW**.

If in doubt, consult your electrician.

Using the Heater

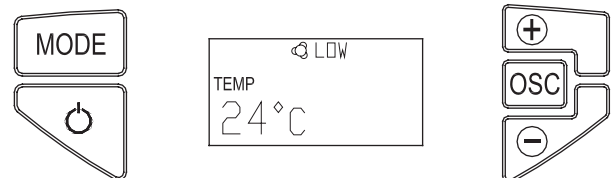 




Fig. 2

Operation

When the unit is plugged in and the power switch at the rear of the unit is switched on a red power light illuminates to indicate that there is power to the unit. The heater is now in standby mode. The red light will remain lit until the power switch is switched off or the heater is unplugged from the outlet. Pressing the  – see Fig. 2, will start the heater

pressing the  again will return the heater to standby mode. Upon turning the heater on, the unit will be in AUTO heat mode and the LCD displays a set temperature of 35°C. The current air temperature will also appear on the display. At this point the set temperature can be adjusted as desired using the "+" button or "-" button – see Fig. 2. Pressing the MODE button selects the heating mode. Pressing the MODE button will cycle the heater through the heating modes Low heat/High heat/Fan only/Auto heat. Pressing the MODE button once will set the heater into LOW heat mode, pressing twice will select High heat, press again to select Fan only operation. Pressing the MODE button once more will return the heater to AUTO heat mode. When the heater is in Low heat, High Heat or Fan only mode the current air temperature will appear on the display, the SET TEMP indicator will not be displayed. This heater is provided with an oscillating function. When the OSC button is pressed the heater will oscillate back and forth. Press it again and the oscillation will stop.

Note: If switched to standby MODE the heater will retain its last heat setting. The last heat setting will be cleared from memory once the power switch at the rear of the heater is switched off or the heater is unplugged from the outlet.

Thermostat

Press the MODE button until the display shows AUTO mode. To adjust the set temperature, press "+" to increase the temperature and "-" to decrease the temperature. The set temperature can be adjusted from 5°C to 35°C and this will be shown on the display. When the air temperature rises 3 degrees above the set temperature, the heat will switch off but the fan and oscillator will continue to run for approximately 15 seconds. When the air temperature drops below the set temperature, the unit will come back on.

Safety - overheat protection

For your safety, this appliance is fitted with a thermal cut-out. In the event that the product overheats, the cut-out switches the heater off automatically. To bring the heater back into operation, remove the cause of overheating, then turn off the electrical supply to the heater for a few minutes. When the heater has cooled sufficiently reconnect and switch on the heater.

If the cut-out operates repeatedly, contact your supplier.

Cleaning

WARNING: ALWAYS DISCONNECT FROM THE POWER SUPPLY BEFORE CLEANING THE HEATER.

Do not use detergents, abrasive cleaning powders or polish of any kind on the heater.

Wipe with a dry cloth to remove dust and a damp cloth (not wet) to clean off stains. Be careful not to allow moisture into the heater.

Ensure that dust or fluff does not accumulate inside the heater as this could lead to overheating of the element. Use a vacuum cleaner to remove any fluff which does accumulate.

Recycling

For electrical products sold within the European Community.



At the end of the electrical products useful life it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

After Sales Service

Your product is guaranteed for three years from the date of purchase.


Within this period, we undertake to repair or exchange this product free of charge provided it has been installed and operated in accordance with these instructions.

Your rights under this guarantee are additional to your statutory rights, which in turn are not affected by this guarantee.

Should you require after sales service you should contact our customer services help desk on 0870 727 0101. It would assist us if you can quote the model number, series, date of purchase, and nature of the fault at the time of your call. The customer services help desk will also be able to advise you should you need to purchase any spares.

Please do not return a faulty product to us in the first instance as this may result in loss or damage and delay in providing you with a satisfactory service.

Please retain your receipt as proof of purchase.

 The product complies with the European Safety Standards EN60335-2-30 and the European Standard Electromagnetic Compatibility (EMC) EN55014, EN60555-2 and EN60555-3 which cover the essential requirements of EEC Directives 73/23 and 89/336

Glen Dimplex UK Limited
Millbrook House
Grange Drive
Hedge End
Southampton
Hampshire. SO30 2DF

UK customer help line (8.00AM – 6.00PM Mon-Fri; 8.30AM-1.00PM Sat)

Customer Services:	Tel.	0870 7270101
	Fax.	0870 7270102
	e-mail	customer.services@glendimplex.com
Republic of Ireland	Tel.	01 8424833

[c] Glen Dimplex UK Limited

All rights reserved. Material contained in this publication may not be reproduced in whole or in part, without prior permission in writing of Glen Dimplex UK Limited.