 


This sheet is provided as a guide to help you get started setting up the commercial television. The User's Manual isn't packed with the product, but can be downloaded from the support section on www.rca.com/television.

www.rca.com/television

Remote Control and Jack Information

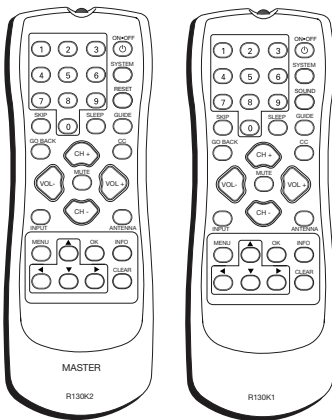

Master remote

Basic remote

The **R130K2** MASTER remote is what you use to make changes to the menu system. Contact your RCA Commercial Distributor to purchase a master remote.

The **R130K1** is the basic remote used by the consumer. The basic remote is packed with the product.



The **ClonePro™** remote can save you a lot of time if you use it after setting up a TV. Contact your RCA Commercial Distributor to purchase a ClonePro. Connect the ClonePro to the DSCI port, then turn on the TV. Press the LEARN button to begin the cloning process. *Cloning Complete* appears once it's complete. Take the ClonePro to each TV you want to TEACH the same settings from the first TV you set up.

Important Jacks

DSCI port located on the back panel is used to transfer information between the TV and another device, such as a ClonePro remote or interactive system.


Hospital Pendant (only available on some models), also known as a pillow speaker jack, allows you to connect a specialized remote for patient use while in bed. Turn on the *Hospital Mode* option in the *Access and Power options* menu.

Access & Power Options	
Go back	TV1...
Remote config.	Enabled...
Basic menu access	Enabled...
TV power	On always...
Energy saver	Disabled...
Front panel	Enabled...
Parental controls	Basic...
Min. standby power	Enabled...
Legacy mode	<input checked="" type="checkbox"/>
Info menu	<input type="checkbox"/>
Hospital mode	<input checked="" type="checkbox"/>
Channel Guide	<input checked="" type="checkbox"/>
Ignore PSIP	<input type="checkbox"/>

Menu Information


Using the Menu System

You, the installer, will use the main master menu (displayed as *Main Menu-Master* on-screen) to make changes to the menu system. Press MENU on the MASTER remote to make the *Main Menu- Master* appear.

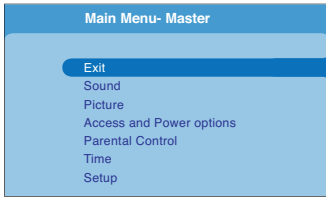

Access & Power Options Menu

 - **Remote Configuration** Set up a TV to respond to a specific remote. This feature is helpful if you have more than one RCA TV in the same room, but want to control them independently.

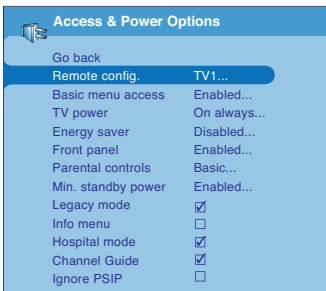

- **Basic Menu Access** Set to *Disabled* if you don't want the user to have access to the menu system.

 
- **TV Power** Set the option to *On always* and the TV is always on and can never be turned off. *Switched* allows the TV to be turned on or off.

- **Energy Saver** Set this feature to have the TV turn off after the set amount of time.

- **Front Panel** Enable or disable use of the front panel buttons.

- **Parental Controls** *Basic & Pwd* allows the user to access the menu by entering a password and then can change the password. *Basic* allows the user access to the menu by entering a password but can't change it. *NoBasic* removes Parental Control from the basic menu.

- **Minimum Standby Power** If *Enabled*, the TV operates to meet Energy Star standards (low power mode) when in standby mode. Set to *Disabled* and minimum standby power won't take effect. **If this feature is enabled, the DSCI and Hospital Pendant (pillow speaker jack) are disabled when power is turned off.**

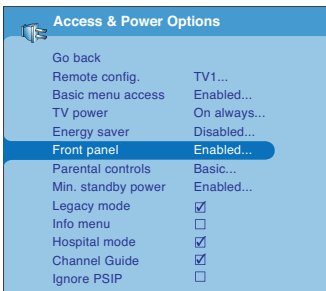


- **Legacy Mode** Allows the TV to work with initial "legacy" software. The feature is used for backwards compatibility with 3rd party DSCI devices that haven't been upgraded with the latest RCA DSCI version.

- **Info Menu** Enable or disable access to the Channel Banner, which is displayed when the user presses INFO on the remote.

- **Hospital Mode** Enable or disable use with the Hospital Pendant jack.

- **Channel Guide** Enable or disable access to the Channel Guide. If disabled, *Channel Guide* won't appear in the Basic menu and nothing will appear when the user presses GUIDE on the remote.

 
- **Ignore PSIP** Enable or disable the PSIP virtual channel references. Changing this feature erases the digital channel list in the TV.

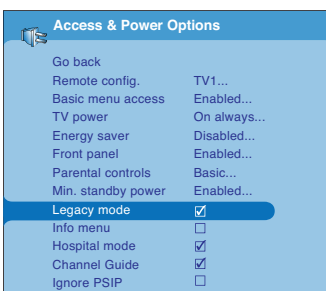

Advanced Sound Settings Menu

- **Initial Volume** Set the initial volume you want the TV to have when it's turned on.

- **Minimum and Maximum Volume** Set the minimum and maximum volume you want the TV to have so that the user can't turn the volume down lower or higher than what is set in this menu.

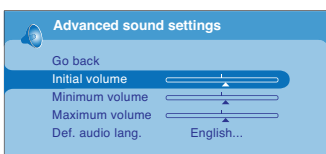

For more information on features, refer to the User's Guide that can be found in the support section on www.rca.com/television.

Thank you for your purchase. Before making a trip back to the retailer, please visit www.rca.com/television for more information or contact us at 1-800-336-1900 so that we may assist you in operating the unit, replacing missing parts, and ensuring your satisfaction with the product.