


# AMERICAN STRATOCASTER® HH, 0117100, R/W

## SWITCH & CONTROL FUNCTION

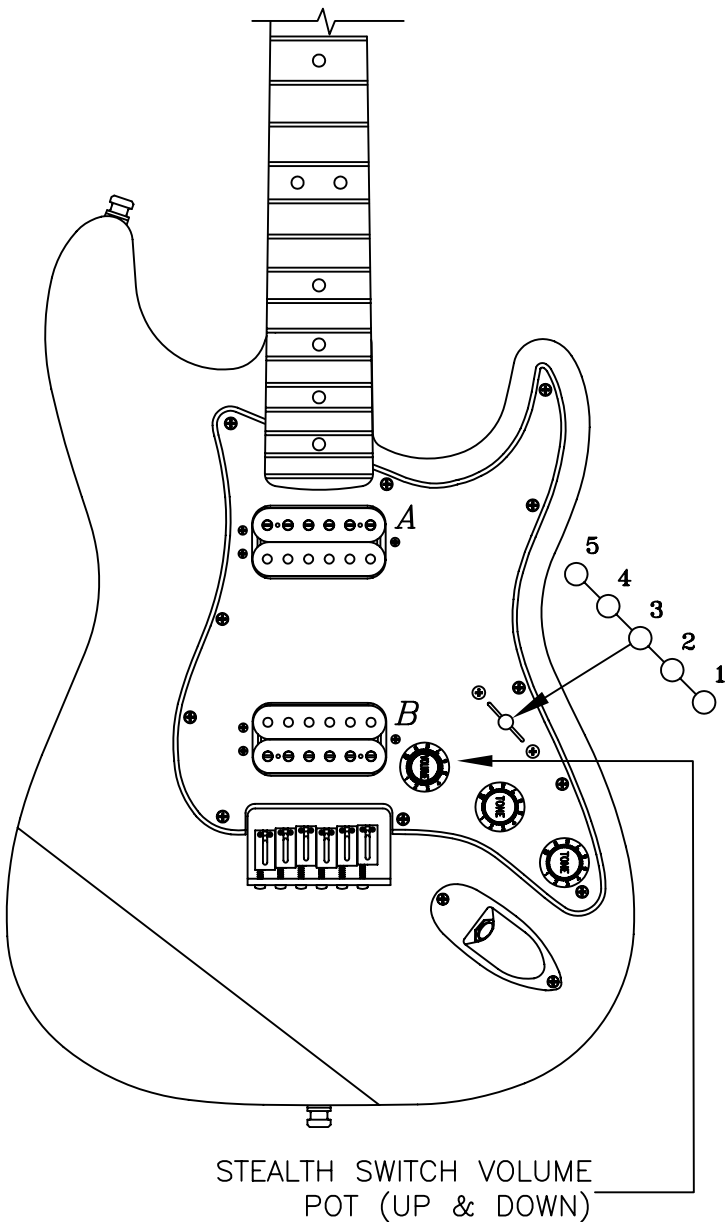

5 WAY SW POSITIONS, STEALTH SW UP					
5	4	3	2	1	POSITION
MV NT	MV NT	MV NT+BT	MV BT	MV BT	CONTROL
					← NECK PICKUP (A)
					← BRIDGE PICKUP (B)

5 WAY SW POSITIONS, STEALTH SW DOWN					
5	4	3	2	1	POSITION
MV NT	MV NT	MV NT+BT	MV BT	MV BT	CONTROL
					← NECK PICKUP (A)
					← BRIDGE PICKUP (B)

MV = MASTER VOLUME  
 NT = NECK TONE  
 BT = MID/BRIDGE TONE  
 SER = COIL PAIR IN SERIES  
 PAR = COIL PAIR IN PARALLEL  
 INS = INSIDE COILS IN PARALLEL,  
 SERIES WITH OUTSIDE COIL

	PICKUP IS ON
	PICKUP IS OFF
<i>A</i>	PICKUP (NECK)
<i>B</i>	PICKUP (MIDDLE)

INDICATES POSITION  
 OF 5 WAY SWITCH