

AutoGrinder Automatic coffee grinder

Instruction Booklet EM0410

Please read these instructions carefully and retain for future reference.



Contents

Sunbeam's Safety Precautions	1
Safety Precautions for your AutoGrinder	1
Features of your AutoGrinder	2
Handy hints for grinding coffee beans with the Sunbeam AutoGrinder	4
Using your Sunbeam AutoGrinder	5
Care and Cleaning of your AutoGrinder	6

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

كارى بكنيد كه احتياطهاى بالاحتما درك بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR SUNBEAM AUTO GRINDER.

• Always place the unit on a flat, level surface.

Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- Close supervision is necessary when your appliance is being used near children or infirm persons.
- Never leave an appliance unattended while in use.
- Young children should be supervised to ensure that they do not play with the appliance.

- The grinder cannot operate without the lid in position.
- Switch off and unplug at power point before cleaning.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
 Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- For safety reasons and to avoid maintenance by unskilled persons, some appliances are 'sealed' using tamperproof screws. Such appliances should always be returned to the nearest Sunbeam Appointed Service Centre for adjustment or repair if required.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been dropped or damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.

Features of your AutoGrinder

Transparent cover

For ease of use the cover of the AutoGrinder also doubles as a measuring cup and being transparent the user is able to observe the coffee beans being ground.

Stainless steel grinding bowl

As coffee beans are oily and aromatic, the stainless steel grinding bowl surface ensures minimal transfer of flavours and odours.

One touch power button

Easy to operate, simply press the power button and your work is done, the grinder will automatically stop when the selected grind is achieved.


Storage container

The storage container is ideal for storing excess coffee grounds.

Cleaning brush

For easy cleaning use the small brush to remove stubborn coffee grinds quickly and with no fuss to ensure quality, fresh grinding results every time.



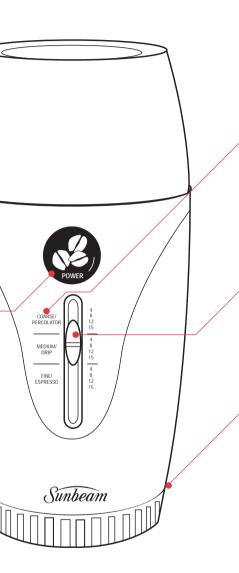

Style of coffee grind

The AutoGrinder gives you 3 choices of grind; coarse for percolated coffee, medium for drip filtered coffee and fine for espresso coffee.

Sliding grind selector

Decide on the style of coffee grind and slide the grind selector to the quantity of ground coffee desired.

Cord storage

Convenient and clever cord storage, turn the base of the grinder to retract the cord and simply pull the cord out for use.

Handy hints for grinding coffee beans with the Sunbeam AutoGrinder

- For a good cup of coffee only grind the amount you need for immediate use, as ground coffee quickly loses its flavour and aroma.
- With the Sunbeam AutoGrinder coffee beans can be ground from a range of coarse to a very fine grind. The required coffee grind will be determined by the brewing method used or style of coffee desired. The different brewing methods include:

BREWING METHOD	GRIND
Espresso Machines	Fine grind
Stove top Espresso	Medium grind
Drip Filtered	Medium grind
Plunger or Percolator	Coarse grind

- Do not leave coffee beans or grounds in the open air, for best flavour always store them in an airtight container.
- Excess coffee beans or grounds can be stored in the refrigerator or freezer as by doing so will slow down the rate at which the coffee reacts with the moisture in the air.
- When grinding more than 12 scoops of coffee beans, pour beans into cover, then turn the grinder upside down and lock onto the cover. Be sure to align the arrow on the lid/cover with the 'unlock' graphic on the rear of the grinder and turn the cover to the left/lock position.

Using your Sunbeam AutoGrinder


Before using your Sunbeam AutoGrinder, wipe the stainless steel grinding bowl and blades clean with a damp cloth and wash the transparent cover in warm soapy water. Dry thoroughly.

Note: Allow to dry completely before using.


- 1.Place the AutoGrinder on a dry, level surface.
- 2. Remove the cover of the AutoGrinder by turning it to the right/unlock position, then lift straight up.



- 3. Using the measurements on the cover/lid, fill with the desired amount of coffee beans and pour into the grinding bowl. Alternatively scoop the beans directly into grinding bowl.
- 4. Replace and lock the cover onto the AutoGrinder. Align the arrow on the lid/cover with the 'unlock' graphic, on the rear of the grinder, and turn the cover to the left/lock position.

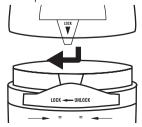

 - 5. Hold the plug and pull slowly to release the stored cord. Plug the power cord into a 230-240V AC power outlet and turn the power 'ON'.
- 6. Select the style of coffee (Percolator, Auto Drip, Espresso) and slide the grind selector to the quantity of ground coffee desired.



7. Press the 'Power' button to commence grinding and then remove finger. The Sunbeam AutoGrinder will stop automatically when the selected grind is achieved. To stop the grind cycle at anytime, push the 'Power' button. When the 'Power' button is pressed again, the grinder will start from the beginning of the timed cycle.

Important: Do not remove the cover before the blades have stopped moving.

8. Once the blades have stopped rotating unplug the cord from the power outlet and remove the cover. Gently tap the base of the AutoGrinder to loosen the freshly ground coffee from the stainless steel grinding bowl.

Note: The AutoGrinder will only operate when the cover is in the locked position.

Care and Cleaning

Do not immerse the motor base of the AutoGrinder in water.


Do not place the AutoGrinder in the dishwasher.

- 1. When you have finished grinding, unplug your Autogrinder from the power outlet.
- 2. Use the soft cleaning brush to clean around the blades. Carefully wipe the grinding bowl with a soft, damp cloth.

Important: Use care around sharp blades.

3. Wash the cover in warm soapy water. Rinse and dry thoroughly. Wipe the exterior of the AutoGrinder with a damp cloth.

 Hold the AutoGrinder and turn the base in a clockwise direction to retract the power cord.

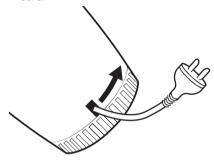

The storage container and brush should be washed in hot, soapy water. Rinse and let dry.

'Sunbeam', is a registered trademark.

Made in China. Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet. Backed by Sunbeam's 12 Month Replacement Guarantee and National Service Network.

$^{\hbox{\scriptsize @}}$ Copyright. Sunbeam corporation limited 2003.

(INCORPORATED IN N.S.W.) A.C.N. 000 006 771

Sunbeam Corporation is a division of GUD Holdings Ltd.

For more information or advice on this or any other Sunbeam appliance, visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Australia 1800 025 059 New Zealand (09) 912 0747.



Consumer Hotline

Australia 1800 025 059

New Zealand (09) 912 0747

www.sunbeam.com.au