


Cash Register

ECR 6900

USER'S GUIDE

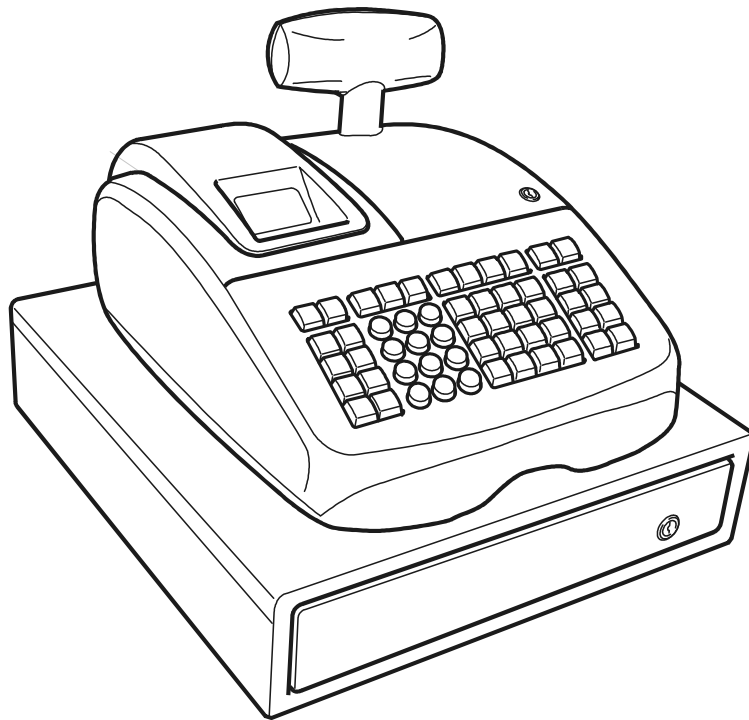

olivetti

PUBLICATION ISSUED BY:

Olivetti S.p.A.
www.olivetti.com

Copyright © 2007, Olivetti
All rights reserved



Your attention is drawn to the following actions that could compromise the characteristics of the product:

- incorrect electrical supply;
 - incorrect installation; incorrect or improper use, or, in any case, not in accordance with the warnings given in the User Manual supplied with the product;
 - replacement of original components or accessories with others of a type not approved by the manufacturer, or carried out by unauthorized personnel.
-

Nous attirons votre attention sur les actions suivantes qui peuvent compromettre la conformité attestée ci-dessus et les caractéristiques du produit:

- Alimentation électrique erronée;
 - Installation ou utilisation erronée ou non conforme aux indications exposées dans le manuel d'utilisation fourni avec le produit;
 - Remplacement de composants ou d'accessoires originaux par des pièces non approuvées par le constructeur, ou effectué par du personnel non autorisé.
-

Wir möchten Sie darauf hinweisen, daß folgende Aktionen die oben bescheinigte Konformität und die Eigenschaften des Produkts beeinträchtigen können:

- Falsche Stromversorgung;
 - Installations- oder Bedienungsfehler bzw. Nichtbeachtung der Hinweise in der Bedienungsanleitung, die mit dem Produkt geliefert wurde;
 - Das Auswechseln von Bauteilen oder Originalzubehör durch Unbefugte oder das Ersetzen durch Teile, die nicht vom Hersteller anerkannt werden.
-

Prestar mucha atención a las siguientes acciones que pueden comprometer la conformidad arriba certificada y, obviamente, las características del producto:

- Alimentación eléctrica errónea;
 - Instalación o uso erróneos, improprios o no conformes con las advertencias detalladas en el manual de uso suministrado con el producto;
 - Sustitución de componentes o accesorios originales con otros no aprobados por el fabricante o bien efectuada por parte personal no autorizada.
-

Het is belangrijk te weten dat de volgende acties nadelige gevolgen kunnen hebben voor de goede werking van het product:

- het verkeerd aansluiten van een stroombron;
 - onjuiste installatie; onjuist of oneigenlijk gebruik, of handelingen die worden uitgevoerd zonder inachtneming van de waarschuwingen in de handleiding bij het product;
 - vervanging van originele onderdelen of accessoires door onderdelen of accessoires van een type dat niet is goedgekeurd door de fabrikant, of vervanging die wordt uitgevoerd door onbevoegd personeel.
-

Chamamos a sua atenção para as seguintes acções que podem comprometer o desempenho do produto:

- abastecimento de corrente não adequado;
 - instalação incorrecta, utilização incorrecta ou indevida, ou não respeitando os avisos descritos no Manual do Utilizador que é fornecido com o produto;
 - substituição de componentes originais ou acessórios por outros de tipo não aprovado pelo fabricante, ou substituição realizada por pessoal não autorizado.
-






Vær opmærksom på, at følgende handlinger kan beskadige produktet:

- Forkert strømforsyning.
 - Forkert installation, ukorrekt eller forkert brug eller, som under alle omstændigheder, ikke er i overensstemmelse med advarselne i den medfølgende Brugervejledning.
 - Udskiftning af originale dele eller tilbehør med andre typer, som ikke er godkendt af fabrikanten, eller foretaget af uautoriseret personer.
-

Vi önskar fästa din uppmärksamhet på verksamheterna som anges nedan, eftersom dessa kan kompromittera produktens egenskaper:

- oriktig strömförsörjning;
 - oriktig installation; oriktig eller olämplig användning, eller som i alla fall inte överensstämmer med de varningar som ges i användarhandboken som levereras tillsammans med produkten;
 - byte av originalkomponenter eller tillbehör mot annan typ som ej godkänts av tillverkaren, eller som utförts av obehörig personal.
-

FIGURES - IMAGES
 ABBILDUNGEN - FIGURAS
 AFBEELDINGEN - FIGURAS
 FIGURER - BILDER

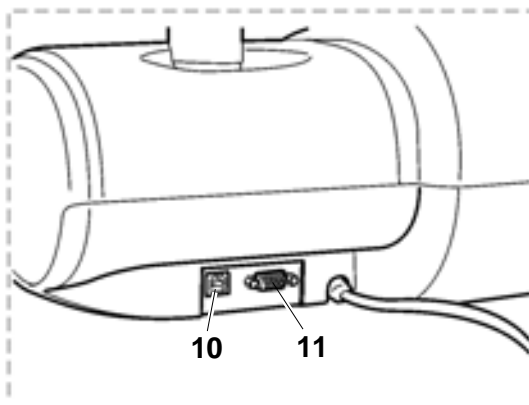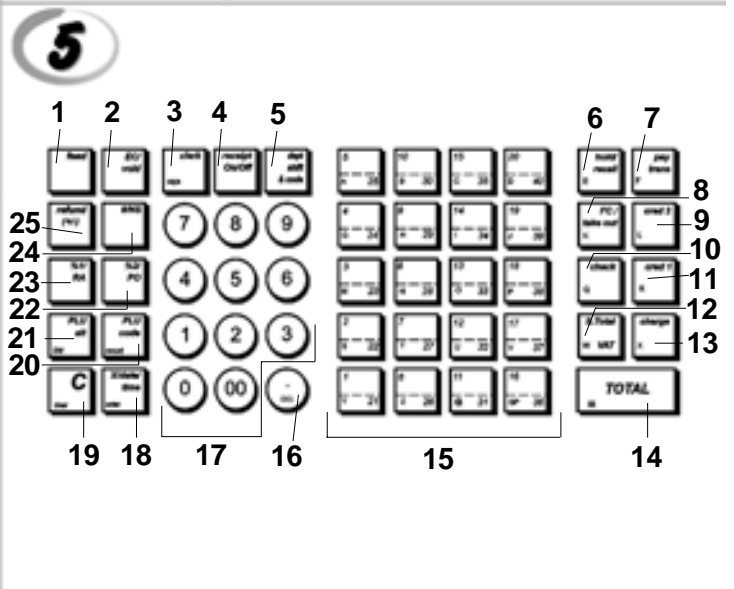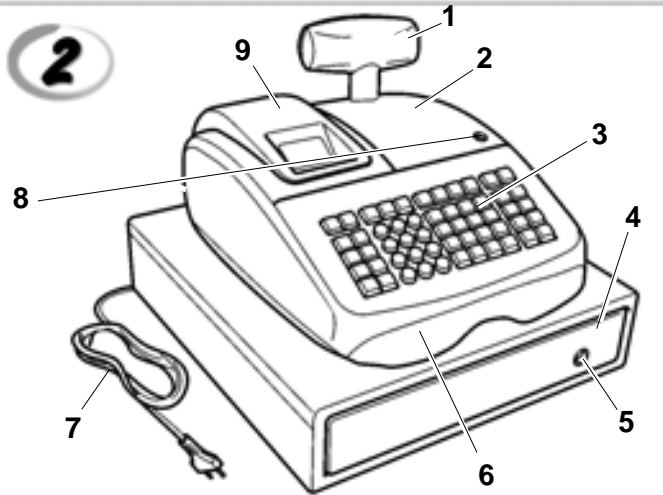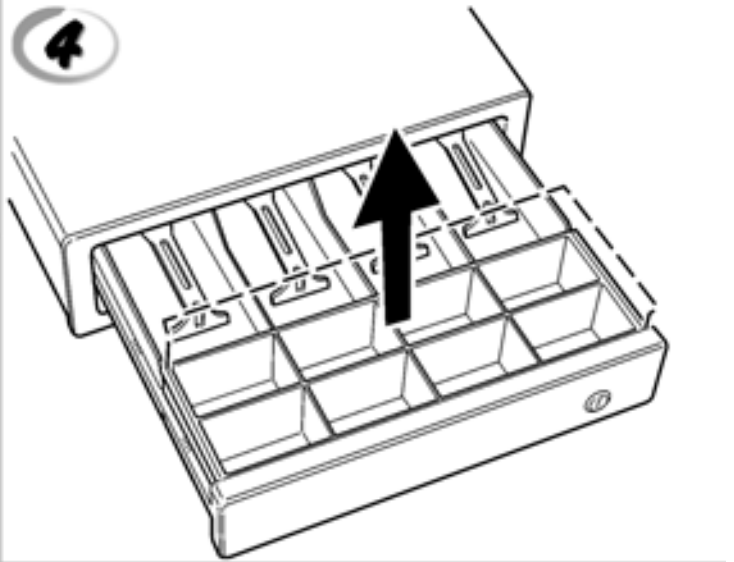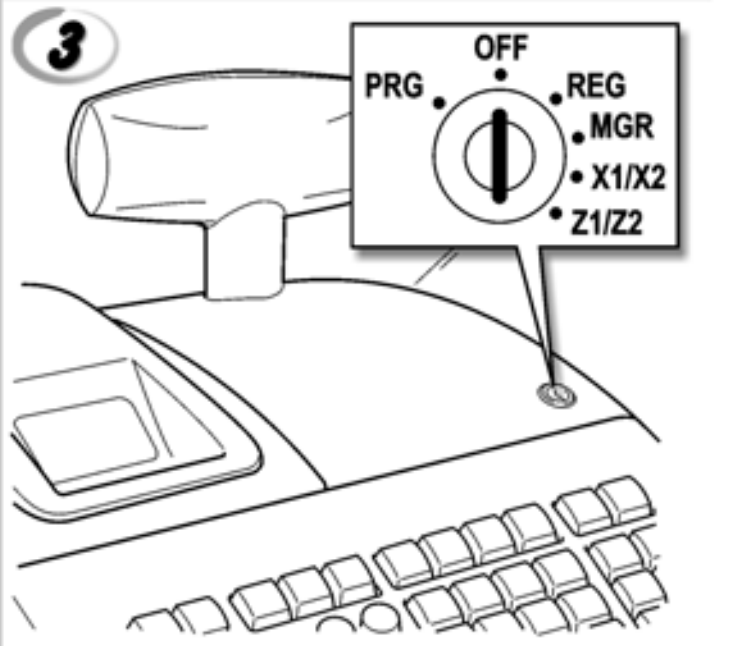



SAFETY INFORMATION
INFORMATIONS DE SECURITE
SICHERHEITSVORSCHRIFTEN
INFORMACIÓN DE SEGURIDAD
VEILIGHEIDSGEGENSTANDEN
INFORMAÇÃO SOBRE SEGURANÇA
SIKKERHEDSFORANSTALTNINGER
SÄKERHETSINFORMATION

GB

1. Connect the power cord to an electrical outlet that is near the product and easily accessible.
2. Install your cash register on a flat and stable surface, at a location where no one can step on or trip over the power cord.
3. Do not use your cash register near water, or with wet hands.
4. Do not expose your cash register to rain or moisture.
5. Unplug your cash register from the electrical outlet before cleaning.

F

1. Brancher le cordon d'alimentation à la prise électrique qui se trouve près du produit et facilement accessible.
2. Initialiser la caisse enregistreuse sur une surface plane et stable, dans une place où il n'y pas le risque de presser ou de heurter le cordon.
3. Ne pas utiliser la caisse enregistreuse près de l'eau, ou avec les mains mouillées.
4. Ne pas exposer la caisse enregistreuse à la pluie ou à l'humidité.
5. Débrancher la caisse enregistreuse de la prise électrique avant de la nettoyer.

D

1. Das Netzkabel an eine Steckdose anschließen, die in der Nähe der Maschine und leicht zugänglich ist.
2. Die Registrierkasse auf einer ebenen stabilen Fläche installieren. Darauf achten, dass keiner über das Netzkabel stolpern oder auf es treten kann.
3. Die Kasse nicht in der Nähe von Wasser oder mit nassen Händen benutzen.
4. Die Kasse nicht Regen oder Feuchtigkeit aussetzen.
5. Vor Reinigungsarbeiten die Kasse vom Stromnetz trennen.

E

1. Conecte el cable de alimentación a una toma eléctrica que se encuentre cerca del producto y que tenga un fácil acceso.
2. Instale su caja registradora en una superficie plana y estable, en un emplazamiento en el que nadie pueda pisar el cable de alimentación o tropezar con él.
3. No utilice la caja registradora cerca del agua ni si tiene las manos húmedas.
4. No exponga la caja registradora a la lluvia o la humedad.
5. Desconecte la caja registradora de la toma eléctrica antes de la limpieza.

NL

1. Sluit het netsnoer aan op een stopcontact dat zich in de buurt van het kasregister bevindt en vrij toegankelijk is.
2. Installeer uw kasregister op een plat en stabiel oppervlak, op een plaats waar niemand op het netsnoer kan trappen of erover struikelen.
3. Gebruik uw kasregister niet in de buurt van water, of met natte handen.
4. Stel uw kasregister niet bloot aan regen of vocht.
5. Trek de stekker uit het stopcontact voordat u het kasregister gaat schoonmaken.

P

1. Ligue o cabo de alimentação a uma tomada elétrica que esteja perto da máquina e seja de fácil acesso.
2. Instale a caixa registradora sobre uma superfície plana e estável, num local onde ninguém possa chocar com ela ou tropeçar no cabo de alimentação.
3. Não utilize a caixa registradora perto de água, nem a manuseie se tiver as mãos molhadas.
4. Não exponha a caixa registradora a chuva ou humidade.
5. Desligue a caixa registradora da tomada de corrente antes de a limpar.

DK

1. Tilslut de elektriske kabel til elnettet, som er ved siden af produktet og nemt tilgængelig.
2. Placér Deres kasseapparat på en flad, sikker og stabil overflade, et sted hvor ingen kan gå eller trampe over det elektrisk kabel.
3. Brug ikke Deres kasseapparat i nærheden af vand, eller med våde hænder.
4. Deres kasseapparat må ikke udsættes for regn eller fugtighed.
5. Slut Deres kasseapparat fra elnettet inden de går i gang med rengøring.

S

1. Stoppa in nätsladdens stickkontakt i ett lättåtkomligt vägguttag nära apparaten.
2. Installera kassaregistret på en jämn och stabil yta där ingen kan trampa på eller snubbla över nätsladden.
3. Använd inte kassaregistret nära vatten eller med våta händer.
4. Utsätt inte kassaregistret för regn eller fukt.
5. Dra ut stickkontakten från vägguttaget före rengöringen.



HOW DO I PROCEED?
COMMENT JE DOIT PROCEDER?
VORGEHENSWEISE
¿QUÉ DEBO HACER A CONTINUACIÓN?
HOE GA IK TE WERK?
O QUE DEVO FAZER?
FREMGANGSMÅDE?
HUR GÅR JAG VIDARE?

GB

1. Plug the cash register into a electrical outlet and insert the batteries.
2. Load the paper.
3. Proceed with Quick Start Programming.
4. Perform basic sales transactions.
5. Get to know your cash register in depth.

F

1. Brancher la caisse enregistreuse à la prise électrique et insérer les batteries.
2. Charger le papier.
3. Procéder avec la fonction Vite Démarre de Programmation.
4. Exécuter les transactions de ventes basiques.
5. Prendre confiance avec la caisse enregistreuse.

D

1. Die Kasse an eine Netzsteckdose anschließen und die Batterien einsetzen.
2. Papier laden.
3. Die Quick Start Programmierung durchführen.
4. Einfache Verkaufsvorgänge ausführen.
5. Sich mit allen Funktionen der Kasse vertraut machen.

E

1. Enchufe la caja registradora en una toma eléctrica e inserte las baterías.
2. Cargue el papel.
3. Continúe con la programación de la puesta en servicio rápida.
4. Realice transacciones de venta básicas.
5. Conozca más en detalle la caja registradora.

NL

1. Sluit het kasregister aan op een stopcontact en plaats de batterijen.
2. Plaats het papier.
3. Voer de snelstart-programmering uit.
4. Voer basis-verkooptransacties uit.
5. Leer uw kasregister grondig kennen.

P

1. Ligue a caixa registadora a uma tomada eléctrica e insira as pilhas.
2. Coloque o papel.
3. Continue com a Programação de Iniciação Rápida.
4. Realize transacções básicas de vendas.
5. Familiarize-se com a sua caixa registadora.









DK

1. Tilslut kasseapparatet til elnettet og sæt batterierne i.
2. Sæt papir i.
3. Gå frem med Hurtig Start Programmering.
4. Indret basis salgstransaktioner.
5. Lær Deres kasseapparat at kende.





S

1. Sätt in kassaregistersladden i ett vägguttag och sätt i batterierna.
2. Ladda pappret
3. Gå vidare med programmeringen för snabbstart.
4. Utför grundläggande försäljningstransaktioner.
5. Fördjupa kännedomen om kassaregistret.



INSERTING MEMORY BACKUP BATTERIES
INSÉRER LES BATTERIES TAMPONS DE LA MÉMOIRE
BATTERIEN ZUR SPEICHERSICHERUNG EINSETZEN
INSERCIÓN DE LAS BATERÍAS DE RESPALDO DE LA MEMORIA
INSTALLEREN VAN DE BATTERIJEN VOOR NOODVOEDING
INSERIR AS PILHAS DE BACKUP DA MEMÓRIA
INDSÆT HUKOMMELSE BACKUP BATTERIER
SÄTTA BACK-UP BATTERIERNÄ

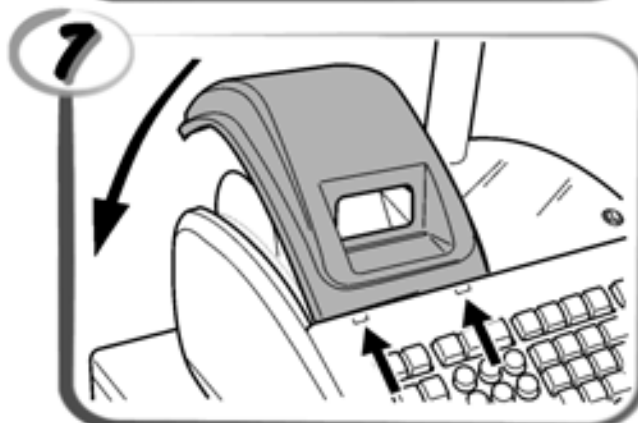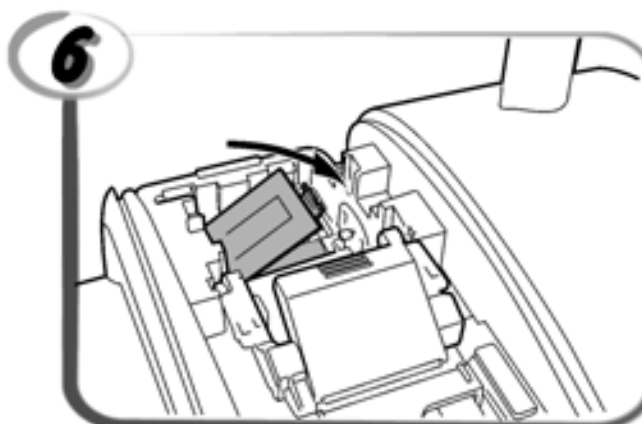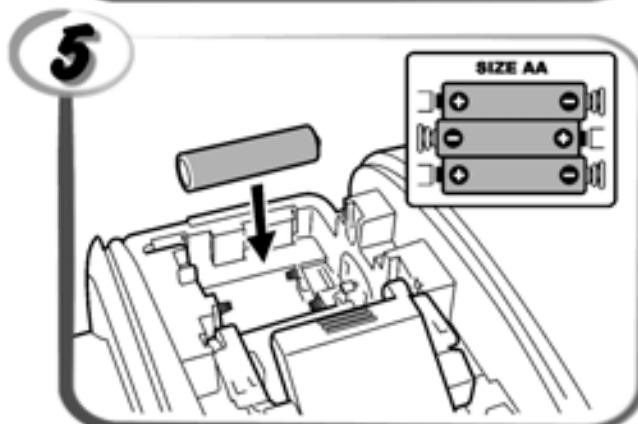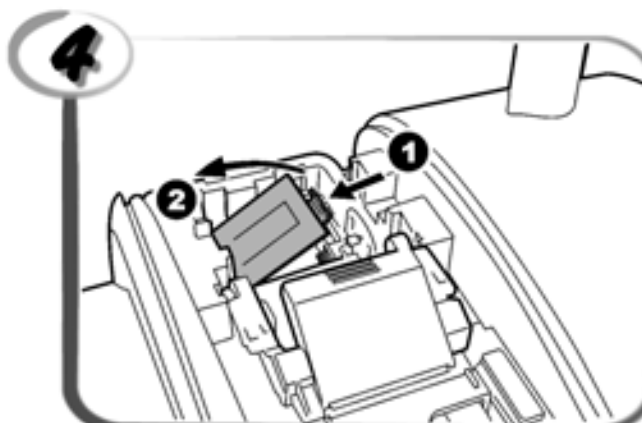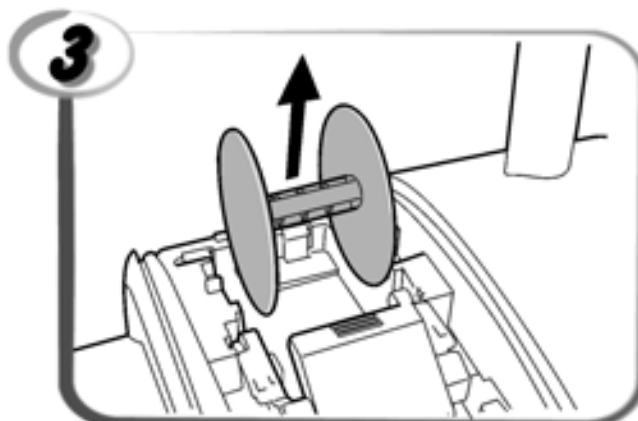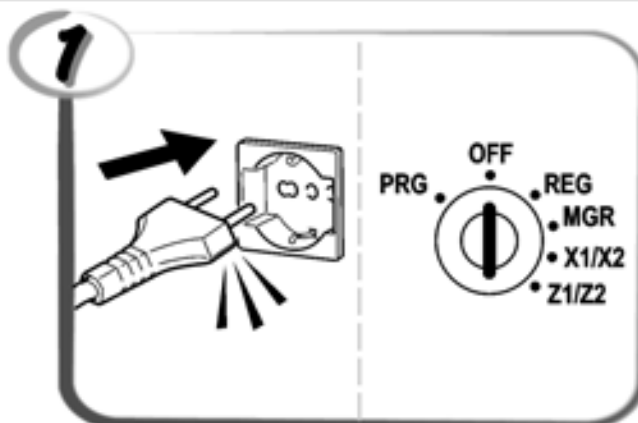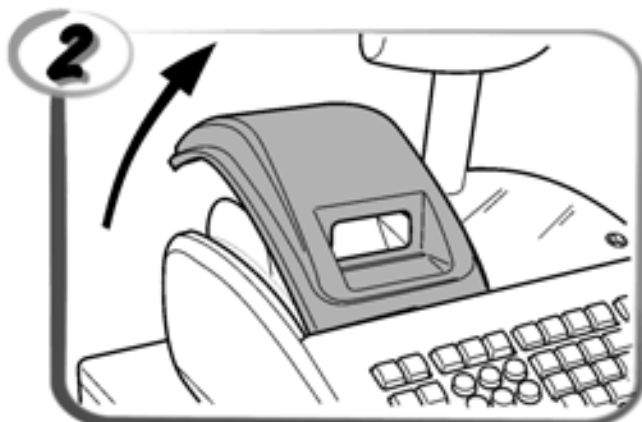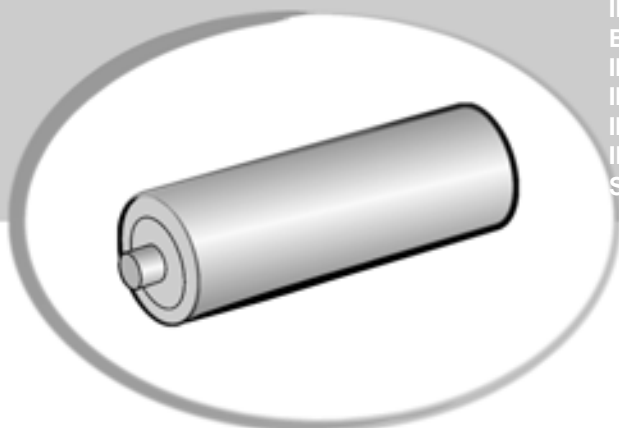

LOADING THERMAL PAPER
INSTALLATION DU PAPIER THERMIQUE
EINLEGEN VON THERMOPAPIER
CARGA DEL PAPEL TÉRMICO
THERMISCH PAPIER PLAATSEN
COLOCAR PAPEL TÉRMICO
ISÆTNING AF TERMOPAPIR
LADDA VÄRMEKÄNSLIGT PAPPER

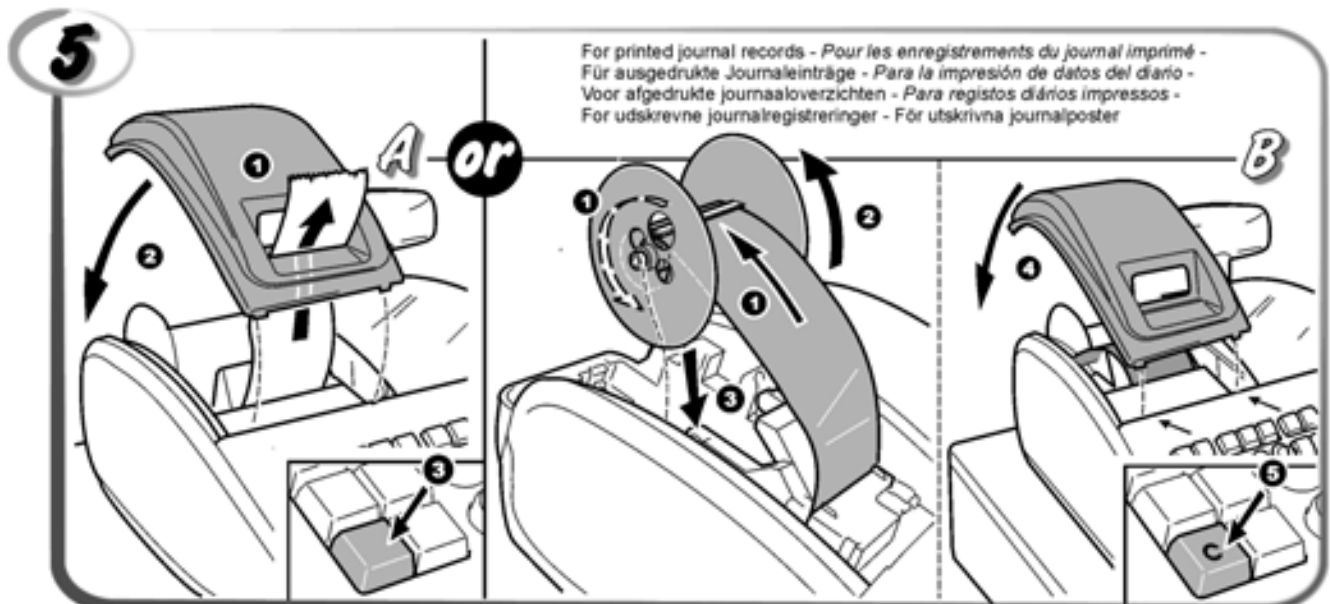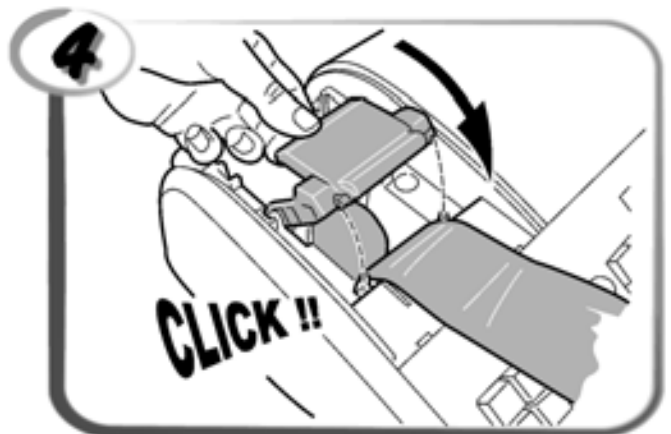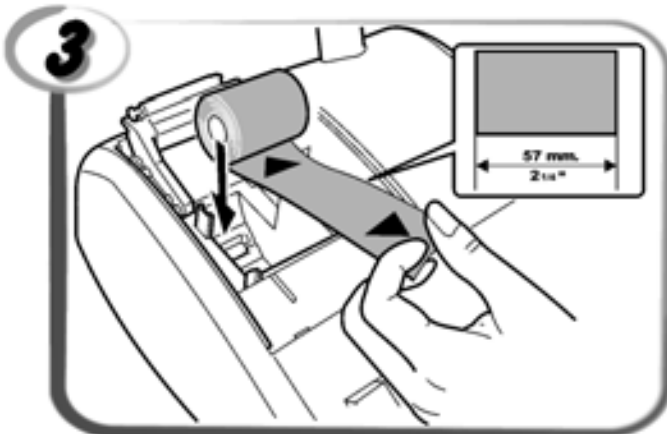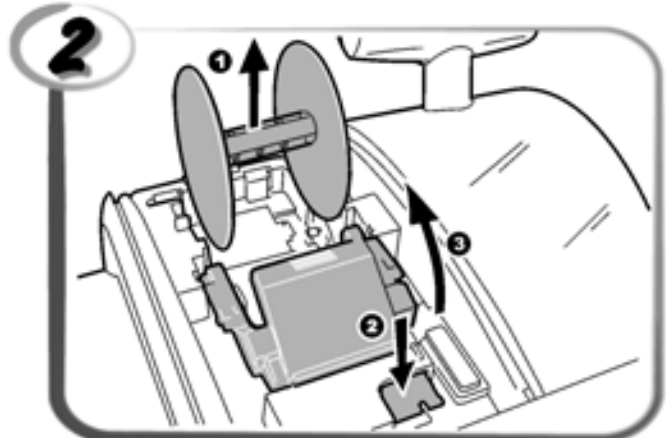



DAILY JOB OPERATIONS
 OPÉRATIONS QUOTIDIENNES
 TÄGLICHE ARBEITEN
 OPERACIONES COTIDIANAS DURANTE EL TRABAJO
 DAGELIJKSE TAKEN
 OPERAÇÕES DIÁRIAS
 DAGLIGE ARBEJDSOPERATIONER
 DAGLIGA ARBETSMOMENT

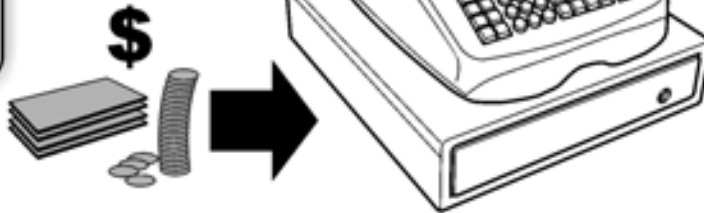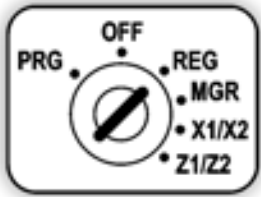

Morning startup
 Démarre du matin
 Einschalten zu
 Geschäftsbeginn
 Puesta en marcha al inicio
 de la jornada
 Morgens opstarten
 Arranque da manhã
 Morgens opstart



Sales transactions
 Transactions de ventes
 Verkaufsvorgänge
 Transacciones de venta
 Verkooptransacties
 Transacções de vendas
 Salgstransaktioner
 Igångsättning på morgonen

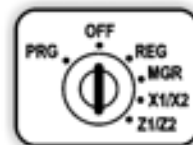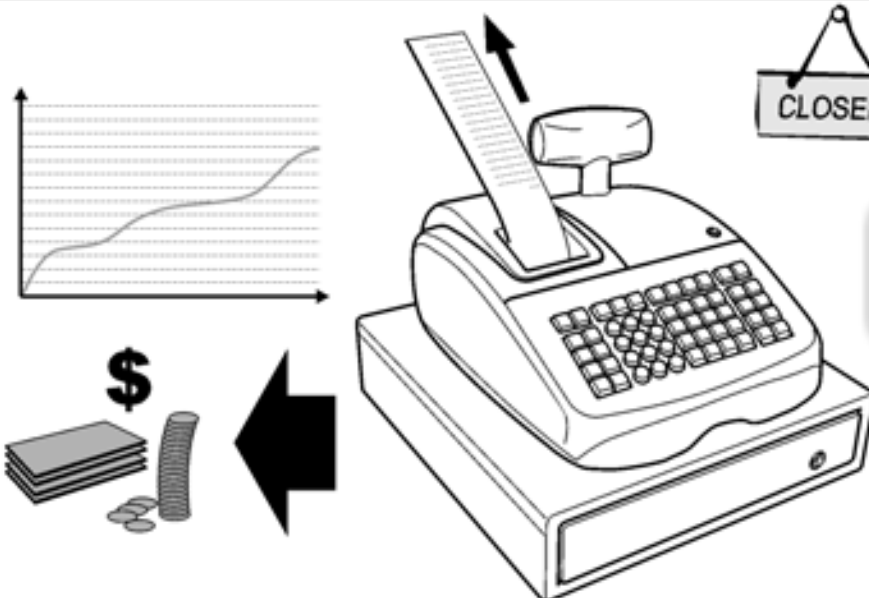

End of day reports
 Compte-rendu de fin journée
 Berichte bei Geschäftsende
 Informes de cierre de la
 jornada
 Einddaags-rapportages
 Relatórios de fim de dia
 Slut af dagens registreringer
 Försäljningstransaktioner
 Slut på dagen rapporter

Contents

Major Features	1
Cash Register Components	1
Removable Cash Drawer with Lock	2
Keypad Functions	2
The Control Lock	3
The Control Keys	3
Operator and Customer Displays	3
Barcode Reader	3
Personal Computer Connectivity	3
Error Conditions	3
Error Codes	3
Clearing an Error	4
Out-of-Paper	4
Cash Register Reset Operations	4
Electronic Journal	4
Quick Start Programming	5
Setting Your Language	5
Setting the Date	5
Setting the Time	5
Setting Fixed VAT Rates	5
Programming Departments	5
Programming Fixed Price Look-Ups (PLUs)	6
Cash Register Programming and Features	7
Changing How the Cash Register is Programmed	7
Caption Programming Using the Keypad and Character Table	7
Receipt Header and Footer	8
Percent Discount (-%) or Add on (+%)	8
Department Names	9
Department Group Names	9
PLU Item Names	9
Foreign Currency Descriptors	11
Rounding Option for Currencies	11
Decimal Point Position	11
Fraction Rounding for VAT Calculation	11
Printing VAT Information on Customer Receipts	12
Clerk System	12
Clerk Names	13
Manager Passwords	14
Using the Cash Register in a Password Protected Mode	14
Training Mode	14
Cash Register Identification Number	15
Programming In-Store Embedded Price Barcodes	15
Discount or Add-on Amounts (+/- Key)	16
System Options	17
Cash Register Programming Reports	19
Management Reports	20
X and Z Reports	20
Cash in Drawer Report	21
Clerk Report	21
PLU Sales Report	22
PLU Range Sales Report	22
Department Range Sales Report	22
Department Group Sales Report	22
Time Report	22
Training Report	22
Electronic Journal Reports	22
Sales Transactions	23

Major Features


- 99 departments that can be grouped into up to 10 merchandise categories;
- Up to 2,000 Price Look-Ups (PLU) with the possibility of associating a department and tax status to each;
- 15 clerk numbers to monitor the sales of individual employees, and the possibility of activating a Clerk Security System consisting of a three-digit security code;
- Electronic journal with a capacity of up to 13,000 transaction lines for storing all transaction data; signaling of EJ memory full and nearly full conditions;
- Single-line client and dual-line operator alphanumeric displays;
- Thermal printer with journal record or receipt printing capabilities;
- Creating PLUs for barcoded articles and barcode programming;
- Cash register programming via computer;
- Quantity entries using the decimal point;
- Training mode facility with related password;
- Replaceable keycaps;
- Receipt on/off capabilities;
- Possibility of naming departments, department (merchandise) groups, clerks, PLUs, foreign currencies and payment media captions;
- Possibility of defining manager passwords for the PRG and Z modes, X mode and Training mode;
- Customer sales receipt header personalization, receipt footer definition and logo creation via PC;
- Special rounding capabilities for Swiss, Danish and Swedish and Euro currencies;
- Customer receipt, management report and message display printing in English, French, German, Spanish or in another user-defined language;
- Detailed department programming;
- 4 foreign currency exchange rates with related currency descriptors;
- Cash, check, charge card and two other credit card tender media keys, with change tendered on all payments;
- 4 different VAT rates, with temporary override
- Possibility of programming the cash register to print a range of VAT totals on the sales receipt;
- Sales transaction hold and recall function;
- Battery back-up protection for the records and programming data.
- Programmable clerk operating limitations for enhanced security.
- Payment transfer from one payment media to another after transaction completion.

Cash Register Components

With reference to figure 2:









 

 

 
1. Customer display
2. Operator display
3. Keypad
4. Cash drawer
5. Cash drawer lock
6. Item deposit drawer
7. Power cord
8. Control lock
9. Printer compartment cover with receipt output window
10. USB interface
11. RS232 serial interface



 
 





 


 
 
 
Removable Cash Drawer with Lock




With reference to figure 4, the cash drawer has slots for banknotes and for coins. Open the drawer by pressing  or by sliding the hidden emergency button underneath the register.

Keypad Functions

The keys described here are those shown in figure 5. The symbol (*) indicates that the key is also used in caption programming.

1.  - Advances the receipt or journal paper one line feed; advances the paper continuously when held down. Interrupts report printing when kept depressed.
2.  - Deletes the last item entered, and corrects a particular entry after it is processed and printed, or full entries after a subtotal.
3.  - (*) Confirms the clerk code entered. When used in caption programming, toggles between caps on/off to allow captions to be written in upper or lower case letters.
4.  - Toggles the cash register between printing and not printing the sales receipt in REG and MGR modes.
5.  - Allows price entries for departments 21-40 and 41-99. For departments 21-40, press this key before pressing the appropriate department key. For departments 41-99, press this key, manually enter the department number using the numeric keypad and then press this key again.
6.  - (*) Holds and then recalls a sales transaction so that a second transaction can be performed in the meantime.
7.  - (*) Transfers payment from one form of payment to another after the sales transaction is finalized.
8.  - (*) As the [FC] key, automatically calculates and displays the value in foreign currency of the subtotal of a sale or of a particular amount registered. As the [Take-out] key, modifies temporarily the tax status associated with a PLU code.
9.  - (*) Registers sales paid with a credit card other than that defined as Credit card 1 or the Charge card.
10.  - (*) Registers sales paid by check. Confirms the three-digit clerk security code entered.
11.  - (*) Registers sales paid with a credit card other than that defined as Credit card 2 or the Charge card.
12.  - (*) Subtotals a sale, and used for programming VAT rates.
13.  - (*) Registers sales that are paid with Charge card tender.

14.  - (*) As the [Total] key totals exact cash transactions, computes change and totals transactions that are split tendered with check, credit card and/or cash. Used to exit a programming session. As the 2nd RC key prints one or more copies of the last receipt, depending on how the multiple receipts system option is programmed.
15.  - (*) Departments 1 through 20 to enter single or multiple item sales to a particular department. When pressed after  registers to Departments 21 through 40. In caption programming, these keys can be used to input the characters indicated on the related key as indicated in the Character Table. You can define clerk names, receipt header/footer, department names, department group names, PLU product names, currency identifiers and credit card captions. As the [SP] key,  can be used to add spaces between characters and to confirm entry of repeated characters.
16.  - (*) Enters a decimal point for defining product quantities with decimals during sales transactions. In caption programming, as the [DEL] key, it performs the typical backspace function for deleting the last character entered.
17.  -  /  - (*) Input amounts, indicate how many times a particular item repeats, add and subtract amounts and percentages, and input department numeric codes. In caption programming, specify the caption number for the [record] key.
18.  - (*) Multiplies [DEPARTMENT] and  entries. Toggles between displaying the current date, current time and the number of lines free in Electronic Journal. In caption programming, as the [enter] key, confirms the programming sequence entered.
19.  - (*) Clears an entry made from the numeric keypad or with  before finalizing a transaction with a Department or function key. Also used to clear error conditions.
20.  - (*) Price look-up function. Registers the preset price of an individual item to the appropriate department. In caption programming, as the [record] key, allows you to jump to the caption number you specify.
21.  - (*) Temporarily overwrites a price that was assigned to a PLU number. During caption programming, when pressed before a character, sets the character as double width.
22.  - As the [%2] key, when appropriately programmed, applies a preset percentage reduction or add on to the price of an item or to the sales total. As the [PO] key, registers any money taken out of the cash drawer that is not part of a sale.

23.  - As the [%1] key, when appropriately programmed, applies a preset percentage reduction or add on to the price of an item or to the sales total. As the [RA] key, registers any money received on account that is not part of a sale; for example, the start-up money put in the drawer at the start of each business day can be registered as an RA.
24.  - (*) Opens the cash drawer without registering any amount or when changing cash for a non-sales transaction. With the cash register in PRG mode, used to select the entity for caption programming. Press the key repeatedly to scroll through the entities and select the one to program.
25.  - As the [refund] key, subtracts an item that is returned for refund; sales and activity totals are also rectified. As the [(+/-)] key, subtracts or adds an amount from/to an item or sales total.

The Control Lock

Insert the PRG, REG or Z key into the Control Lock to use the cash register in the related mode. With reference to figure 3, turn the control key to one of the following positions:


- OFF The cash register is turned off and cannot be used.
- PRG Used to program the cash register according to your specific needs.
- REG The cash register is set for standard sales transactions. A customer receipt can be printed for each transaction.
- MGR Overrides clerk status programming thus allowing the clerk to perform unauthorized operations (for example, Voids, Refunds, Negative percent, Paying money out, etc.).
- X1/X2 Prints the X management (mid-day) report.
- Z1/Z2 Prints the Z management (end-of-day) report and resets totals (except the grand total) to zero.

The Control Keys

- REG The REGISTER key can be used in the OFF, REG, MGR and X lock positions, granting both Clerk and Supervisor access to cash register functions.
- PRG The PROGRAM key works in all modes (PRG, OFF, REG, MGR, X and Z). It is usually used by the Supervisor to program the cash register and print X and Z management reports.
- Z The Z key can be used in the OFF, REG, MGR, X and Z modes granting a higher-level access with respect to the REG key.

Operator and Customer Displays


Your cash register is equipped with a single-line customer display and a dual-line operator display. With reference to figure 6, the display is read from left to right as follows:

- Department** (1) - A set of digits indicating the department key pressed for each entry. At the end of a sales transaction, indicates the means of payment registered.
- Repeat/Multiply** (2) - A number displayed when repeating or multiplying items to indicate the number of items entered at the same price.
- Amount** (3) - Indicates entry amounts and sales totals.
- 1...15** (4) - With the Clerk System active, indicates the clerk number entered before working in the REG mode, or whenever  is pressed.


- Op. messages** (5) - Upper line of the operator display showing programming and transaction messages, and clerk identifiers.

Special Symbol Indicators

Special symbols appear at the far left-hand side of the displays during cash register operation:

- C (Change) Indicates that the displayed amount is the change due to the customer.
- E (Error) Indicates when an error is made during operation or when programming the cash register. An error tone sounds to alert the operator.
- ST (Sub-total) Indicates that the amount shown is the subtotal of a transaction, including sales tax if applicable.
- (Minus) Displays a negative entry. Also displays if subtotal or cash tendered total is a negative number due to a return or refund.
- _ (Line) Indicates, from left-to-right at the bottom of the display: caps lock mode (during character entries in the PRG mode), receipt off mode, training mode and a transaction hold condition. From right-to-left indicates: an electronic journal nearly full condition (less than 700 transaction lines available), take-out tax.
-  is pressed to indicate that the amount is displayed in foreign currency.
- Appearing on the far left, indicates a low battery condition.
- CA (Cash) Indicates a sales transaction paid by cash.
- Ch (Check) Indicates a sales transaction paid by check.
- Cr (Charge) Indicates a sales transaction paid by credit card.

These symbols clear automatically when you start the next

entry or press .

Barcode Reader

A barcode reader can be connected to the cash register via the RS232 serial interface on the back of the register. When programming PLUs, instead of manually entering the PLU code you can scan the barcode on an article to insert it automatically. You can then associate a price, status and department to the PLU code as usual. See "Programming Fixed Price Lookups".

Personal Computer Connectivity

The cash register can be programmed from a computer connected via its USB interface. For all programming features see the online help provided with the software.


Error Conditions


Error Codes

The following error codes can be displayed:

- E1 Operation error
- E2 Sales amount exceeded or HDLO error
- E3 Zero-price entry error
- E4 Incorrect full-void entry
- E5 Clerk number and password required
- E6 Manager password required.
- E8 Amount tender required.


Clearing an Error

Press  to clear an error. The tone ends, the displays clear and the keypad unlocks, allowing you to continue with the transaction or restart the program.

If an error condition cannot be cleared by pressing , reset the cash register by performing one of the cash register reset operations.


Out-of-Paper

When the paper runs out, the message PAPER END appears on the operator display. Load the paper and press

 to clear the error.

Cash Register Reset Operations


If the cash register does not function, for example while programming and the error signal cannot be stopped by

pressing , reset the cash register in OFF mode.

There are four reset operations; **be very careful when choosing the one to perform since you could unnecessarily cancel report data and cash register programming data.**

Partial Reset - <Reset D>

A Partial Reset operation just clears the cash register's working memory.


1. Control lock key position: **OFF**.
2. Press and hold down  for 2 seconds and then press

.

If the cash register still remains in an error condition, proceed with the Full Reset - Reports operation.

Full Reset Reports - <Reset C>

A Full Reset - Reports operation erases the cash register's working memory, and all totals and counters (all report data).


1. Control lock key position: **OFF**.
2. Press and hold down  for 2 seconds and then press

.

If the cash register still remains in an error condition, proceed with the Full Reset - New Language Entry Excluded operation.

Full Reset - New Language Entry Excluded - <Reset B>

A Full Reset - New Language Entry Excluded, erases the cash register's working memory, all totals and counters (all report data) and cancels all cash register programming data with the exclusion of the language-specific captions programmed. Be extremely careful when using this reset operation.

1. Control lock key position: **OFF**.
2. Press and hold down  for 2 seconds and then press



.

3. Reprogram the cash register.

If the cash register still remains in an error condition, proceed with the Full Reset - All Data operation.


Full Reset - All Data - <Reset A>

A Full Reset - All Data operation erases the cash register's working memory, all totals and counters (all report data) and cancels all cash register programming data. Be extremely careful when using this reset operation. Use this method as a last resort only.

1. Control lock key position: **OFF**.
 2. Press and hold down  for 2 seconds and then press
- .
3. Reprogram the cash register.

Electronic Journal


The cash register is equipped with an electronic journal memory that by default can contain up to 13,000 lines of transaction data. **The electronic journal is not active when you receive the cash register**, but you can activate it at any time as follows:

1. Control lock key position: **PRG**.
2. Press .


Once the Electronic Journal is activated, you can personalize some of its features by programming system options 4, 40, 41, 42 and 53. See "System Options" for details.

The Electronic Journal (EJ) stores all the sales receipts recorded in the REG and MGR modes, thus allowing you to print this record at any time or when memory reaches the nearly full or full condition.


To know how many lines are remaining in the electronic journal, in REG mode - outside of a sales transaction -


press .

When the electronic journal reaches a **nearly full condition**, there are less than 700 lines remaining in journal memory. The operator display indicates the number of lines remaining and a warning beep is emitted at the beginning and end of

each transaction performed (if programmed). Press  to continue with your transaction and then print the contents of the electronic journal as explained below, or otherwise continue with other transactions.

When the journal reaches a **full condition**, less than 300 lines are remaining in memory. A message is displayed indicating that the journal memory is full along with a warning

beep at the beginning of the transaction; press  to continue with your transaction. You can then either print the contents of the electronic journal as explained below, or continue with further transactions; remember, however, that further transaction data will NOT be stored in memory and the consecutive receipt counter will not increase. If you want

to terminate the sales transaction, press .

Printing and Clearing the Contents of the Electronic Journal

Make sure that plenty of paper is loaded in the printer.

- Control lock key position: **Z**.

- Press .

When the contents of the electronic journal are printed, a message is displayed along with a beep to indicate that the EJ memory capacity has been restored to its maximum programmed line capacity.

NOTE: You can also print the contents of the electronic journal with the control switch in the X position; doing so, however, will not clear the electronic memory.

Clearing Electronic Journal Memory Without Printing the Contents

The electronic journal memory contents are cleared and **not printed**:

- Control lock key position: **Z**.

- Press    .



Quick Start Programming





 
This section allows you to program basic cash register features so that you can start to work right away with your new product. Programs and transaction information for management reports are stored in the memory of the cash register which is protected by back-up batteries.

Before beginning to program the cash register or to perform sales transactions, insert the batteries to save this information if a power failure occurs or if the cash register is unplugged from the electrical outlet.

Setting Your Language




 
- Control lock key position: **PRG**.

- Press  .

- Press your language identifier:  for Spanish,  for French,  for German,  for the new language entry or  for English.

- Press .

Example: Program the cash register to print in French.

Type/Press:    
 Language identifier








Setting the Date

- Control lock key position: **PRG**.
- Type the current date in the DDMMYY format.

- Press .

Example: Set a date of May 25, 2007.

Type/Press:

      
 Day Month Year






The date format can be changed by programming system option 1.

Setting the Time

- Control lock key position: **PRG**.
- Type the current time in the HH:MM, 24-hour format.

- Press .

Example: Set the time at 3:30 PM.

Type/Press:     
 Hour Minutes


The time format can be changed by programming system option 2.

Setting Fixed VAT Rates

- Control lock key position: **PRG**.
- Type the 1-digit Vat Rate identifier [1 to 4], 1 for VAT1, 2 for VAT2, 3 for VAT3 and 4 for VAT4.









- Press .

- Type the VAT rate. Enter five digits, THREE digits placed after the decimal point.

- Press .

Example: Set a VAT1 rate of 5.50%.

Type/Press:

VAT number
       
 5 50

NOTE: Before changing a VAT rate, print a Z Financial report. See "X1 and Z1 Financial Reports".

See sections "Fraction Rounding for VAT Calculation" and "Printing VAT Information on Receipts" for other VAT-related features.

Programming Departments

A total of 99 departments are available. Programming a department means defining a department status and an associated price. The department status consists of a 9-digit code that characterizes the department as follows:

- positive or negative sales
- single or multiple item sales
- High Digit Lock Out (HDLO) status, whereby you prohibit item amounts over a certain number of digits.
- VAT rate (previously programmed)
- a VAT rate that can be applied to the department, temporarily replacing the preset VAT rate
- link to one of up to 10 merchandise categories.

You can then assign a preset price to the department.

The 9-digit department status can be programmed using the following options:

Positive/Negative Sales
0 = Positive department
 1 = Negative department





 



Multiple/Single Item Sales
0 = Multiple item sales
 1 = Single item sales

HDLO
0 = No HDLO
 1 = 0.01 - 0.09
 2 = 0.01 - 0.99
 3 = 0.01 - 9.99
 4 = 0.01 - 99.99
 5 = 0.01 - 999.99
 6 = 0.01 - 9999.99

Tax Status
00 = Tax-exempt
 01 = Taxable with VAT 1
 02 = Taxable with VAT 2
 03 = Taxable with VAT 3
 04 = Taxable with VAT 4


Take-out Tax Status
00 = Tax-exempt
 01 = Taxable with VAT 1
 02 = Taxable with VAT 2
 03 = Taxable with VAT 3
 04 = Taxable with VAT 4

Merchandise category
 00 - 10 (category number)

- Control lock key position: **PRG**.
- Press  to enter the department status programming mode.
- Define the department to program by typing the department number [1 to 99] and then press .
- Type the [Positive/Negative sales code], [Single/multiple item sales code], [HDLO code], [Tax Status code], [Take-out Tax Status] and [Merchandise Category] by referring to the previous table. A 9-digit status code must be entered.
- Press  followed by  to exit.
- Press  to enter the department price definition mode.
- Define the department to associate the price to by typing the department number [1 to 99] and then press .
- Type a [unit price] to assign, press  followed by  to exit.

Example: Program Department 2 as follows: multiple positive item sales, no HDLO, VAT 2, take-out VAT 0, link to category 3 and an associated price of £2.50.

Type/Press:

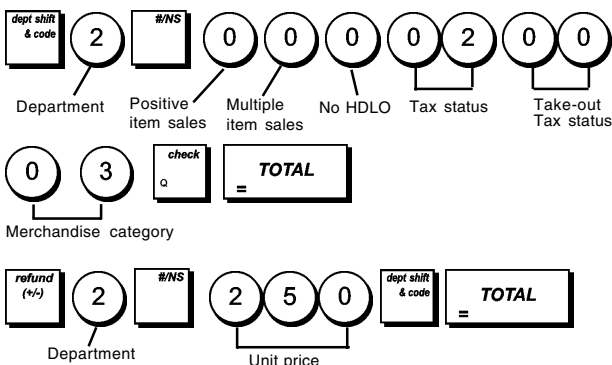

After you have programmed your departments, you can print a report that indicates the programming values. See section "Department Programming Report" for details.

Programming Fixed Price Look-Ups (PLUs)

Up to 2000 PLUs can be programmed. Programming a PLU item means associating a fixed price and a status to it, and then linking it to a department.

For each PLU you normally input a numeric code that identifies it (its PLU code). If you have a barcode reader, you can scan the barcode of an article to input the code automatically rather than typing it in.

 
 
 

 

 

 
 
 

The 5-digit PLU status can be programmed using the following options:

Price Status
0 = PLU price open with or without preset price
 1 = PLU price open without preset price
 2 = Only preset price allowed for PLU

Tax Status
00 = Tax-exempt
 01 = Taxable with VAT 1
 02 = Taxable with VAT 2
 03 = Taxable with VAT 3
 04 = Taxable with VAT 4


Take-out Tax Status

00 = Tax-exempt
 01 = Taxable with VAT 1
 02 = Taxable with VAT 2
 03 = Taxable with VAT 3
 04 = Taxable with VAT 4

- Control lock key position: **PRG**.
- Press  to enter PLU Price Definition mode.
- Type the PLU number [1 to 2000] and press  or scan the item's barcode.
- Type the unit price [0 to 99999.99] you wish to assign to the PLU, then press  and exit with .
- NOTE:** all prices entered must be specified to 2 decimal places.
- Press  to enter the PLU Status Definition mode.
- Type the PLU number from [1 to 2000] and press  or scan the item's barcode.
- Type the [Price Status], [Tax Status] and the [Take-out Tax Status], 5-digit code referring to the previous table.
- Press  followed by  to exit.
- Press  to enter PLU-Department link definition mode.
- Type the PLU number [1 to 2000] that you are currently programming and press  or, again, scan the item's barcode.
- Type the department number [1 to 99] that you want to link the PLU to. If tax is payable for a particular PLU item, be sure to link the PLU number related to the item to a department that is programmed for tax. To program a department for tax, refer to the section "Programming the Departments".
- Press  followed by  to exit.

Example: Create PLU 2 with a unit price of £2.69, status 2 01 00 and linked to Department 3.

Type/Press:

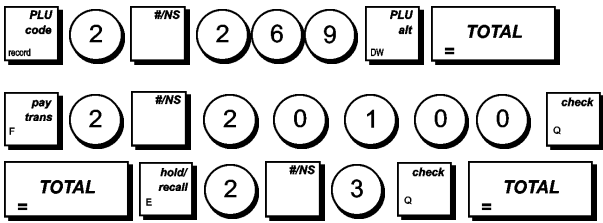

After you have programmed your PLU items, you can print a report that indicates the programming values. See section "PLU Programming Report" for details.

Cash Register Programming and Features

Programs and transaction information for management reports are stored in the memory of the cash register which is protected by back-up batteries.

Before beginning to program the cash register or to perform sales transactions, insert the batteries to save this information if a power failure occurs or if you unplug the cash register from the electrical outlet.

Changing How the Cash Register is Programmed

If you wish to make a change to your initial programming (such as an update to VAT rates, PLUs or exchange rates):

- Turn the control lock key to the PRG position.
- Re-do the program in question and confirm as explained in the next sections
- Turn the control lock key to another operating mode.

A new program entry will automatically overwrite a previous entry for the same program.

Caption Programming Using the Keypad and Character Table

In PRG mode, press the key repeatedly until you see

the entity for which you want to program a caption, displayed in this order:

1. PLU items: up to 2,000 PLU item names each a maximum of 16 characters in length.
2. Departments: up to 99 department names each a maximum of 12 characters in length.
3. Department groups (merchandise categories): up to 10 names each a maximum of 12 characters in length.
4. Clerks: up to 15 names each a maximum of 24 characters in length.
5. Receipt headers: up to 10 lines each a maximum of 24 characters in length.
6. Receipt footers: up to 10 lines each a maximum of 24 characters in length.
7. Foreign currencies: up to 4 identifiers each a maximum of 10 characters in length.
8. Payment media: up to 5 identifiers each a maximum 12 characters in length.

9. New language entry captions: up to 14 language captions each a maximum of 10 characters in length.
10. New language entry captions: up to up to 46 language captions each a maximum of 24 characters in length.

Use the keypad to enter non-accented capital letters and the Character Table to enter small letters, accented capital and small letters, special characters or symbols.

 
Using the Keypad

To use the keypad to enter capital non-accented caption letters, locate the letter wanted on the cash register's keypad and press its associated key (the letter will be displayed on the far right-hand side of the display).

- To give a determinate character a double width attribute, press before pressing the related character key.
- To enter a space between characters, press .
- If the same key has to be used for successive letters of a caption, press between the two letters.
- Any incorrect character can be canceled by pressing which provides the typical backspace function of the PC environment.
- To toggle between capital letter ON/OFF, press .
- To skip directly to a determinate record number (for example, to skip to Department number 4) type the record number using the numeric keypad and then press .
- Confirm your final caption by pressing .

Example: Enter the word BOOKS.

Type/Press:




NOTE: To abort a partially entered programming sequence, you can use the key.

Using the Character Table

The Character Table provides all the letters and symbols that your cash register is capable of printing. With reference to figure 7, the Character Table is divided into two parts: one identified with "CAPS" at the top left-hand corner and to be used with the CAPS mode activated, the other identified with "Non CAPS" to be used with the CAPS mode deactivated.

- To toggle the cash register between the **CAPS** and **Non CAPS** mode, press . When the cash register is in the CAPS mode, a line is displayed on the far left-hand side of the display.
- To use the character table:
- First look for the letter or symbol wanted and then identify its corresponding letter listed in the first column on the left.
 - Switch the cash register to the CAPS or Non CAPS mode depending in which part of the table the letter or symbol you want is located.

- Press the letter key on the keypad the number of times necessary to select the character, as indicated by the corresponding number on the row at the top of the table.
- Confirm your final caption by pressing .

NOTE: Special accented national letters are not displayed.


 
 

Example: Select the letters à and Ü.

Type/Press:

Receipt Header and Footer

By default your cash register prints a header on all customer receipts. It can also print a personalized footer, if you program system option 79 accordingly. See section "System Options" for details.

The default receipt header consists of up to 10 lines of 24 characters each, or 20 lines if you consider the footer as part of the header. If System Option 79 is set to 1 so that a footer is printed on the sales receipt, the header and footer will each consist of 10 lines of 24 characters each with default captions. You can change the cash register's default header, or the programmed default footer using the keypad and/or Character Table to enter the characters you want.

1. Control lock key position: **PRG**.
2. Press  repeatedly until the message is displayed indicating the first line of the receipt header, or the first line of the receipt footer.
3. To jump to a specific header or footer line to personalize, type the [line number] on the numeric keypad and then press .
4. Enter the letters or characters of the string you wish to define and then press . You are now prompted to personalize the following line.
5. Repeat steps 3 and 4 if you wish to program the remaining programmable header or footer lines.
6. Press  to exit.



Example: Change the third line of the default header to SALES ON NOW using the CAPS Character Table.


 
Type/Press:

 
Switch to Receipt header definition mode Receipt header line selection


Confirm entered header

Percent Discount (-%) or Add on (+%)

The  and  keys can be set up to apply a predefined percentage discount or percentage add on. The rate can be applied to an individual item or to the sales transaction total. The procedure for both keys is the same:

1. Control lock key position: **PRG**.
2. Type the [4-digit number] representing the desired percentage rate. A value in the range 0 to 99.99 can be specified. Two digits must be placed before the decimal point and two must be placed after.
3. Specify whether the rate is a discount or an add on by entering the appropriate code as indicated below:
 0 = Percent add on
 1 = Percent discount (default)
4. Enter the [4-digit] percentage rate limit. A value in the range from 0 to 99.99 can be used. Two digits must be placed before the decimal point and two must be placed after. The default is 9999.
NOTE: When the rate limit is set to 0000, it is not possible to override the predefined rate associated with the key.
5. Press  or  to assign the rate and function to the respective key.

Example: Program the  key with a standard 5.50%

discount and a discount limit of 75%, and the  key with a standard 10% add on and an add on limit of 90%.

Type/Press:





Units Decimals Percent discount code Discount max. limit 75%

Units Decimals Percent add on code Add on max limit 90%

Department Names


You can assign a name of up to 12 characters in length to each of the 99 departments available.

The department names that you define will be printed on the customer receipts, journal reports and on all management reports.

1. Control lock key position: **PRG**.
2. Press  repeatedly until the message indicating the first customizable department is displayed.
3. To jump to a specific department to personalize, type the department number [1 to 99] on the numeric keypad and then press .
4. Enter the letters or characters of the string you wish to define and then press . You are prompted to personalize the next department.
5. Repeat steps 3 and 4 for all department names you want to enter.
6. Press  to exit.

 



Example: Name department 3 "BOOKS" by using the CAPS Character Table.

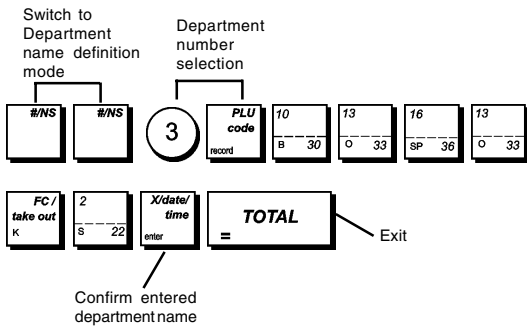Type/Press:



Department Group Names


You can assign a name of up to 12 characters long to each of the 10 merchandise categories (department groups) available. The merchandise category names that you define will be printed on the customer receipts, journal reports and on all management reports.

1. Control lock key position: **PRG**.
2. Press  repeatedly until the message indicating the first customizable department group is displayed.
3. To jump to a specific department to personalize, type the department group number [1 to 10] on the numeric keypad and then press .
4. Enter the letters or characters of the string you wish to define and then press . You are prompted to personalize the next department group.
5. Repeat steps 3 and 4 for all the department group names you want to enter.
6. Press  to exit.

Example: Name department group 1 "GROCERIES" using the CAPS character table.

 
 


Type/Press:

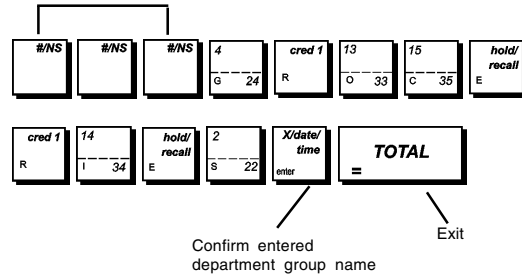Switch to Department group name definition mode



PLU Item Names

After associating a price to a PLU code, you can name the PLU to identify the product that it represents. The name that you can associate with the PLU code can be up to 16 characters long. The PLU names that you define will be printed on the customer receipts, journal reports and on the PLU management reports.


1. Control lock key position: **PRG**.
2. Press  to display the message indicating the first PLU.
3. To jump to a specific PLU to personalize, type the PLU number [1 to 2000] on the numeric keypad and then press .
4. Enter the letters or characters of the string you wish to define and then press . You are now prompted to personalize the following PLU.
5. Repeat steps 3 and 4 for all desired PLU names.
6. Press  to exit.

Example: Name PLU 2 "COFFEE" by using the CAPS character table.

Type/Press:

Switch to PLU name definition mode

PLU number selection

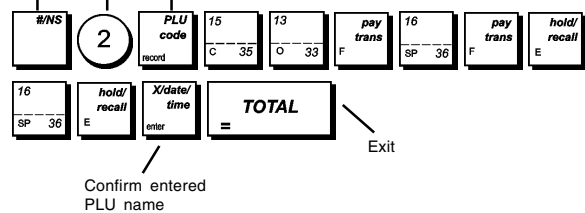
 




Payment Media Identifiers

You can assign a name of up to 12 characters in length to each of the media types that can be used for payment. In caption programming, the number identifying each media type is as follows:

- 1 = Cash
- 2 = Check
- 3 = Charge card
- 4 = Credit card 1
- 5 = Credit card 2


The media names you define are printed on the customer receipts, journal reports and on all management reports.

- Control lock key position: **PRG**.
- Press  repeatedly until the message indicating the first payment media is displayed.
- Using the numeric keypad, type the number of the media type you want to program and press .
- Enter the letters or characters of the string you want to define and then press . You are prompted to enter the name for the next credit card.

- Press  to exit.

Example: Identify credit card 1 as "VISA" using the CAPS character table.


Type/Press:

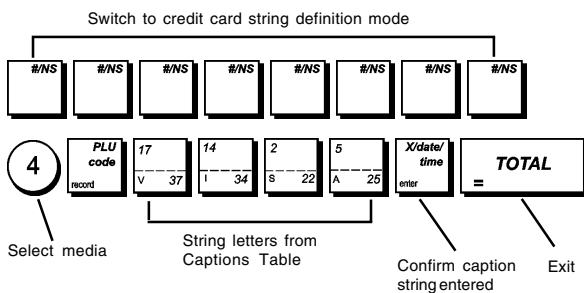
 



Machine Captions Personalization (New Language Entry)

Your cash register has a total of 114 operational caption strings that you can personalize in your own language. There are already 4 languages programmed in the cash register that you can select from, but you also have the option of defining specific language strings for each of the cash register's printed and displayed captions to best suit your needs. You can also personalize an additional 46 printed caption strings.

After programming, to be able to use your personalized captions change your cash register's language selection to "Programmable" by setting system option 96 to 4 as explained in section "Setting Your Language".


- Control lock key position: **PRG**.
- Press  repeatedly until the message "TXT - S001" is displayed indicating the first customizable caption string out of the 114 strings available, or the message "TXT - L001" is displayed indicating the first string out of the 46 print captions available.

- With reference to the "Caption Table" provided at the back of this manual, select the message string that you want to personalize. To jump to a specific string, type the string number [1 to 114], corresponding to the one that you wish to personalize and then press .
- Enter the letters or characters of the string you wish to define and then press . You are now prompted to personalize the next string.
- Repeat steps 3 and 4 for all the captions you want to define.
- Press  to exit.

NOTE: Remember to change you cash register's language selection to "Programmable" by setting system option 96 to 4 as explained in the section "Setting Your Language".

Example: Personalize the message string "TOTAL" to "TOTALE" using the CAPS character table.

Type/Press:

 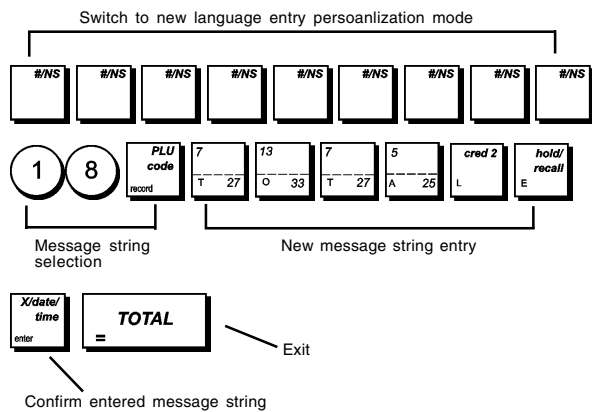






To see how you programmed your new language captions, print a New Language Entry Programming Report. Press



Foreign Currency Exchange Rates


You can program up to four different foreign currency exchange rates. The foreign currency value is displayed whenever

ever  is pressed during a sales transaction.

- Control lock key position: **PRG**.
- Type the identification number  to  corresponding to the foreign currency exchange rate that you wish to define.
- Press .
- Type the **[decimal point position]** of the exchange rate (0-8 digits after the decimal point). **Default = 0**.
- Type the **[decimal point position]** of the converted amount (0-3 digits after the decimal point). **Default = 2**.
- Type the **[exchange rate]** using up to six digits without specifying any decimal point.
- Press .

Example: Program the first exchange rate as:
1 GBP = 1.471 EURO.

Type/Press:

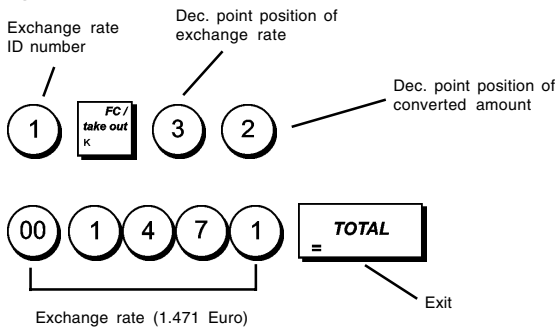


Foreign Currency Descriptors

You can define a currency descriptor of up to 10 characters long for each of the four exchange rates programmed. The descriptor of the foreign currency used is printed on the customer receipt during sales transactions that are finalized with payment in foreign currency, and on the management reports.

1. Control lock key position: **PRG**.
2. Press until the message is displayed indicating the first of the four possible foreign currency exchange rates.
3. To jump to a specific foreign currency, type the currency number [1 to 4] on the numeric keypad and press .
4. Enter the letters or characters of the string you wish to define and then press . You are now prompted to identify the next foreign currency.
5. Repeat steps 3 and 4 if you wish to assign a descriptor to the other foreign currencies, if defined.
6. Press to exit.

Example: Name foreign currency 1 "EURO" by using the CAPS character table.

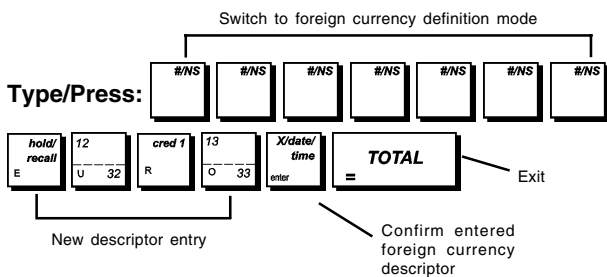

Rounding Option for Currencies

For the Swiss franc, Danish krone, Swedish krona and Euro currencies, you can program the machine so that the amount of a transaction is automatically rounded accordingly whenever the , or a [tender] key is pressed. The rounded result will be displayed on the operator and client displays, printed on the customer receipt and journal report. The total adjustments are indicated on the financial reports.

Setting the Rounding Option

With reference to the section "System Options", by setting system option 21 to the related value (1, 2, 3 or 4), you can program the machine to round off the subtotal or tender values of the related currency.


Decimal Point Position

1. Control lock key position: **PRG**.
2. Type the status number [0, 1, 2 or 3] to select the desired format as indicated in the following table:

Status Number	Format
0	x
1	x.X
2	x.xx (default setting)
3	x.XXX

3. Press to set the new format.

Example: Program the cash register so that three digits are left after the decimal point.

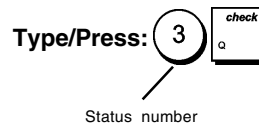


Fraction Rounding for VAT Calculation

Fraction rounding is used to round figures with decimals up or down to the nearest whole numbers and is used for percent tax and percent discount calculations. Choose from the following three options to select the rounding as needed:

Status Number	Fraction Rounding
0	a fraction of a pence is rounded down one pence
50	a fraction under one-half pence is rounded down one pence, a fraction above one-half pence is rounded up one pence (default setting)
99	a fraction of a pence is rounded up one pence

1. Control lock position: **PRG**.
2. Type the status number [0, 50 or 99] to select the desired fraction rounding.
3. Press to store the new setting.

Example: Program the rounding code so that a fraction under one-half pence is rounded down one pence, a fraction above one-half pence is rounded up one pence.

 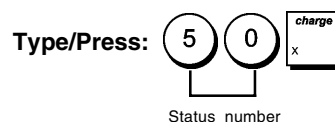


Printing VAT Information on Customer Receipts

You can program the cash register to print VAT information on the customer receipt according to your business' or country's requirements.

Programming the Cash Register to Print the Required VAT Information

With reference to the section "System Options", by setting system options 70, 71, 72, 73, 74, 75 and 76 you can program the cash register to print the VAT information that you need.

1. Control lock key position: **PRG**.
2. Type the [system option number] followed by status number **1**, then press .
3. Turn the control lock key to the **OFF** position.

Receipt With Sum of all VAT Amounts Calculated (TL-VAT) - System Option 71

TOTAL	*26.00	
AMOUNT	*50.00	
CHANGE	*24.00	
TL-VAT	*3.56	Sum of the individual VAT totals

Receipt With Taxed Sales Totals Split per Rate - System Option 72

TOTAL	*26.00	
AMOUNT	*50.00	
CHANGE	*24.00	
VAT1 5.5%	*0.08	VAT totals per programmed rate
VAT2 10%	*0.68	
VAT3 19%	*0.80	
VAT4 20%	*2.00	

Receipt With Sales Totals With VAT Split per Rate (TXBL_W) - System Option 73

TOTAL	*26.00	
AMOUNT	*50.00	
CHANGE	*24.00	
TXBL_W_1 5.5%	*1.50	Sales totals with VAT split per rate
TXBL_W_2 10%	*7.50	
TXBL_W_3 19%	*5.00	
TXBL_W_4 20%	*12.00	

Receipt with Overall Sales Total With VAT (TXBL_TL_W) - System Option 74

TOTAL	*26.00	
AMOUNT	*50.00	
CHANGE	*24.00	
TXBL_TL_W	*26.00	Overall sales total with VAT

Receipt With the Sales Totals without VAT Split per Rate (TXBL_0) - System Option 75

TOTAL	*26.00	
AMOUNT	*50.00	
CHANGE	*24.00	
TXBL_0_1 5.5%	*1.42	Sales totals without VAT split per rate
TXBL_0_2 10%	*6.82	
TXBL_0_3 19%	*4.20	
TXBL_0_4 20%	*10.00	

Receipt With Sales Total Without VAT (TXBL_TL) - System Option 76

TOTAL	*26.00	
AMOUNT	*50.00	
CHANGE	*24.00	
TXBL_TL_0	*22.44	Sales total without VAT

Clerk System

The Clerk System is a security feature that enables you to control access to the cash register and monitor the number of transactions and sales of up to 15 Clerks.

 
Your cash register is configured at the factory with the Clerk System deactivated. When the Clerk System is deactivated, the cash register can be used freely.

You can activate the Clerk System for a degree of protection and sales monitoring. With the Clerk System activated, the cash register can be used after entering just a clerk number from 1 to 15, or a clerk number and its associated 3-digit security code depending on the degree of security programmed.

 
With the Clerk System activated you can decide an operational status for each clerk, thus enabling all activities for the clerk or disabling the clerk from performing certain transactions.

You can also program other clerk-related features. See "System Options", system options 6, 7 and 62 for details.

Activating the Clerk System

1. Control lock key position: **PRG**.
2. Press **5** **1** .

Deactivating the Clerk System

1. Control lock key position: **PRG**.
2. Press **5** **0** .

Programming a Clerk Operational Status and Secret Code

With the Clerk System active, you can assign a 7-digit operational status code to each clerk that defines whether certain activities are enabled or disabled. You must then also define a 3-digit security code that the clerk will need to enter to access cash register functions.

Listed below are the activities that you can enable or disable for each clerk by using the related codes:

Void entries

1 = Disabled
0 = Enabled

Refund entries

1 = Disabled
0 = Enabled

Negative % entries

1 = Disabled
0 = Enabled

Paid Out entries

1 = Disabled
0 = Enabled

NOTE: Negative % entries and Paid Out entries must always be set to the same value (both 0 or both 1).

Negative department transactions & PLU function

1 = Disabled
0 = Enabled

Coupon entries

1 = Disabled
0 = Enabled




Training mode

0 = Normal clerk
1 = Training clerk

NOTE: By default, all the clerks are assigned the following 7-digit operational status code: 0000000. They are therefore programmed as Normal clerks enabled to perform the operations indicated above.


If certain operations are disabled for a clerk, the same clerk can, however, still perform these operations if they are authorized to use Manager mode. In this case, the control lock key must be switched to the MGR position so all the activities indicated above, excluding Training Mode operation, can be performed.

With the Clerk System active:


 
- Control lock key position: **PRG**.
- Type the number **1** to **15** corresponding to the clerk you want to program and then press .
- Type the **[VOID entries code]**, **[Refund entries code]**, **[Negative % entries code]**, **[Paid out entries code]**, **[Negative department transactions & PLU function code]**, **[Coupon entries code]** and **[Training mode code]** in this order and by referring to the previous table. A 7-digit status code must be entered.
- Press .
- Define a three-digit secret code by typing three **[numeric keys]** and then press .

Example: Set Clerk 1 as a normal clerk, disabled for all activities, and assigned a secret code 106.

Type/Press:

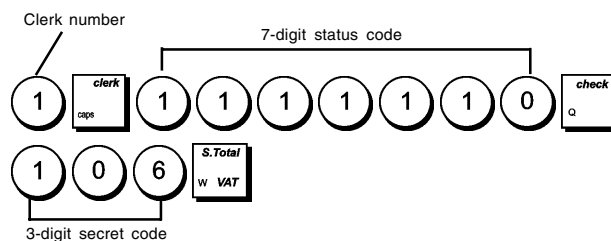


 


Entering a Clerk Number/Secret Code Before Cash Register Operations

- Control lock key position: **REG** or **MGR**.
- Type a Clerk number **1** to **15** and press .
- Type the corresponding three-digit code (if programmed) and press . By default, the secret code is 000.

The clerk number is shown on the display (two digits far left) to identify the clerk in operation and to indicate that transactions can now be performed. The clerk number or programmed name is printed on the sales receipt and on management reports.


Clerk Names

You can program a clerk name or identifier of up to 24 characters long by using the keypad or the Character Table. It will be automatically printed on all receipts, journal records and management reports.

- Control lock key position: **PRG**.
- Switch the cash register to the Clerk name definition mode by pressing  repeatedly until the message indicating the first Clerk number is displayed.
- To define a specific clerk, type the clerk number **1** to **15** on the numeric keypad and then press .
- Enter the letters or characters of the string you wish to define and then press . You are prompted to identify the next clerk.
- Repeat steps 3 and 4 for all the clerk names you want to define.
- Press  to exit.

Example: Program **Alex** as the name of Clerk number 1 using the CAPS character table.

Type/Press:

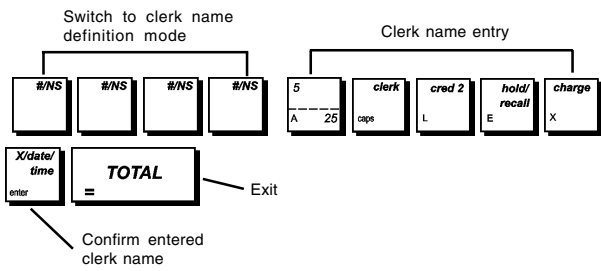

Manager Passwords

You can define two different manager passwords, one to prevent unauthorized access to the machine's **PRG** and **Z** modes and one to prevent unauthorized access to the **X** mode.


Since the management report taken in the **Z** mode resets transaction totals to zero, a management password prevents accidental resetting of these totals by unauthorized personnel. The **X** mode password safeguards the confidentiality of transaction report data.

Defining a PRG and Z Mode Manager Password

1. Control lock key position: **PRG**.
2. Press (1) (1) (1) (1) (1) (1) and then press **TOTAL**.
3. Type your 4-digit manager password and press **S.Total w VAT**.

NOTE: If you define a manager password of 0000, the password security protection feature will not work.

Example: Define manager password 9876 for the **PRG** and **Z** modes.

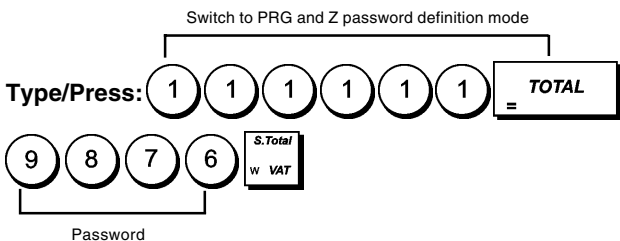


Defining an X Mode Manager Password

1. Control lock key position: **PRG**.
2. Press (2) (2) (2) (2) (2) (2) and then press **TOTAL**.
3. Type your 4-digit manager password and press **S.Total w VAT**.

NOTE: If you define a manager password of 0000, the password security protection feature will not work.

Example: Define manager password 6789 for the **X** mode.

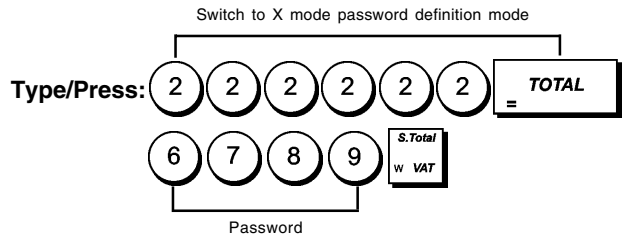

Clearing the PRG, Z and X Manager Passwords

To clear a **PRG**, **Z** or **X** mode password, program password (0) (0) (0) (0) by following the instructions of sections "Defining a **PRG** and **Z** Mode Manager Password" and "Defining an **X** Mode Manager Password".

Using the Cash Register in a Password Protected Mode

If a manager password was defined to protect unauthorized access to the **PRG**, **Z** and **X** modes, proceed as follows to enter the specific password:

1. Control lock key position: **PRG**.
2. Type the specific 4-digit password.
3. Press **check**.

Training Mode

Training mode allows you to use the cash register to perform true sales transactions for learning purposes. All transactions performed in this mode are not recorded in the management financial reports and sales receipts are not numbered consecutively: four asterisks are printed instead. When the cash register is switched to training mode, all training transactions can be performed in **REG** and **MGR** modes. You can also print a detailed training report to keep track of the transactions performed in this mode. See "Training Report" for details.

To use the training facility in **PRG** mode:

1. Control lock key position: **PRG**.
2. Press (5) (5) (5) (5) (5) (5) **TOTAL**. A line appears on the display to indicate that the cash register is in Training Mode.
3. Turn the control lock key to **REG** or **MGR** to perform training sales transactions.

To exit the training facility in **PRG** mode:

1. Control lock key position: **PRG**.
2. Press (5) (5) (5) (5) (5) (5) **TOTAL**.

 
To access the training facility from **REG** mode, enter the password:

1. Control lock key position: **REG**.
2. Type your [4-digit password] for training mode and press **S.Total w VAT**.

A line appears on the third digit from the left of the display to indicate that the cash register is in Training Mode.

To exit the training facility from the REG mode:

1. Control lock key position: **REG**.
2. Type your [4-digit password] for training mode and



Programming a Training Mode Password

A training mode password prevents unauthorized access to the training facility from REG mode.


1. Control lock key position: **PRG**.
2. Press **3 3 3 3 3 3** and then press



3. Type your [4-digit password] and press 

NOTE: Do not assign a password of 0000.

 
Example: Define training mode password 9876.

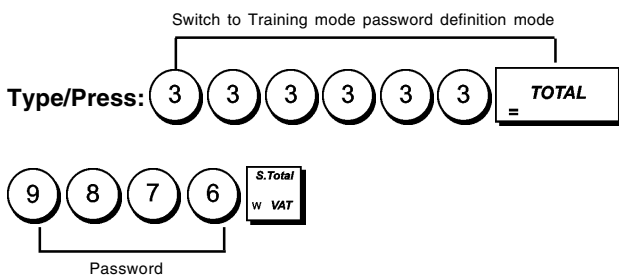

Cash Register Identification Number

The 4-digit machine identification number is printed on the sales receipts, journal records and management reports issued by the cash register. It is useful to identify the activities of this cash register when more than one cash register is used in the business.

1. Control lock key position: **PRG**.
2. Type your [4-digit identification number] and



Example: Define identification number 0006.



Payment Media Status

For payment media programming, you can specify a 4-digit status for each of the media types.

Media Types

- 1 = Cash
- 2 = Check
- 3 = Charge card
- 4 = Credit card 1
- 5 = Credit card 2

The 4-digit status consists of [HDLO] and flags for [Specify Tender Amount], [Change Given] and [Drawer Open].

High Digit Lock Out

- 0 = No HDLO
- 1 = 0.01 - 0.09
- 2 = 0.01 - 0.99
- 3 = 0.01 - 9.99
- 4 = 0.01 - 99.99
- 5 = 0.01 - 999.99
- 6 = 0.01 - 9999.99

Change Given

- 0 = Enabled
- 1 = Disabled

Specify Tender Amount



- 0 = Not compulsory
- 1 = Compulsory

Drawer Open


- 0 = Enabled
- 1 = Disabled

NOTE: The Change option setting applies to all types of payment media excluding cash (Change Given is always enabled for this type of payment).

To program the payment media:

1. Control lock key position: **PRG**.
2. Specify the [1-digit Media Type] and press 
3. Enter the [4-digit Status].
4. Press 

Example: For check payment media, define a high-digit lock out of 6 (9999.99), with non-compulsory entry of tender amount, change given and drawer open disabled.

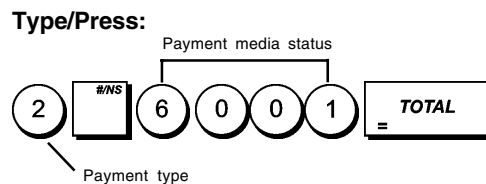

Programming In-Store Embedded Price Barcodes

The barcode reader must be able to read 8- or 13-digit EAN/UPC barcodes. EAN/UPC codes read from a product barcode label represent a standard numbering structure that identifies the product being sold.

The barcode with embedded price of an article has a specific structure that depends on the country in which it will be used and to the EAN/UPC code you wish to use. You can program up to 10 different barcode configurations.

The following parameters need to be defined to program your barcode:

Code Type

- 0 = Long (13-digit)
- 1 = Short (8-digit)

Code prefix length

1 to 3 digits

Check digit

- 0 = Disabled
- 1 = Enabled

Country-specific code prefix

000 - 999
(always enter 3 digits)



Price length

Max. 8 digits


Barcode price currency

- 0 = Local
- 1 = Foreign Currency no. 1
- 2 = Foreign Currency no. 2
- 3 = Foreign Currency no. 3
- 4 = Foreign Currency no. 4

To program an in-store price barcode:

1. Control lock key position: **PRG**.
2. Enter your in-store code [1 to 10] that identifies the configuration of the barcode that you are programming.
3. Press .
4. Enter the code type [0 or 1].
5. Enter the max. 3-digit country-specific code prefix [000 to 999]. **Three digits must always be used; for example, to define a prefix of 24, enter [024].**
6. Enter the number of digits [1 to 3] that the country-specific code prefix consists of. For example, if your code prefix is 24, enter [2].
7. Enter the number of digits [1 to 8] that the price incorporated in the bar code consists of.
8. Define whether to use a price check digit or not.
9. Enter the currency identifier [1 to 4].
10. Press .

No Sales Receipt Key Status

Depending on how it is programmed, the  key can be activated in MGR mode, or in both MGR and REG modes, to open the cash drawer without the need to register a sales amount, or when changing money for a non-sales code.

The 6-digit Status consists of flags for [Drawer Open], [Register Mode], [Print Receipt], [Print Receipt Header], [Input Electronic Journal] and [Consecutive Receipt Number Update]. Defaults are indicated in **bold**.

Drawer Open Register Mode


0 = Enabled **0 = REG and MGR**
 1 = Disabled 1 = MGR only



Print Receipt Print Receipt Header

0 = Enabled **0 = Enabled**
 1 = Disabled 1 = Disabled

Input E.J. Consec. Rec. No. Update

 
0 = Enabled **0 = Enabled**
 1 = Disabled 1 = Disabled

To program the  key:

1. Control lock key position: **PRG**.
2. Type **6** and press .
3. Enter the [6-digit status].
4. Press .

Example: Define a status enabling drawer open in MGR mode only, receipt printing with consecutive numbers, and no header or electronic journal input.

Type/Press:



Switch to key status definition mode

PO and RA Key Status Programming

 
For these keys you can specify a 2-digit Status consisting of a [HDLO] and a [Print Receipt Header] flag.



High Digit Lock Out

 
0 = No HDLO
 1 = 0.01 - 0.09
 2 = 0.01 - 0.99
 3 = 0.01 - 9.99
 4 = 0.01 - 99.99
 5 = 0.01 - 999.99
 6 = 0.01 - 9999.99

 

Print Receipt Header


0 = Enabled
 1 = Disabled

To program the  key:

 
1. Control lock key position: **PRG**.
2. Press .
3. Enter the [2-digit status].
4. Press .

To program the  key:


1. Control lock key position: **PRG**.
2. Press .
3. Enter the [2-digit status].
4. Press .

Example: For the  key, define a HDLO of 4 (99.99)

with no receipt header printing.



Discount or Add-on Amounts (+/- Key)


A High Digit Lock Out (HDLO) and a positive or negative status can be assigned to the  key. You can limit the number of digits, i.e. the maximum value of a minus or plus key operation, from 1 to 6 digits. This makes sure that amounts do not exceed a maximum value. You can also assign a discount (-) or add-on (+) status to this key so that specific amounts are discounted or added on. Make your selections for this feature from the following options (defaults in bold):

High Digit Lock Out


0 = No HDLO
 1 = 0.01 - 0.09
 2 = 0.01 - 0.99
 3 = 0.01 - 9.99
 4 = 0.01 - 99.99
 5 = 0.01 - 999.99
 6 = 0.01 - 9999.99

Discount or Add-on

0 = Negative (discount)
 1 = Positive (add-on)





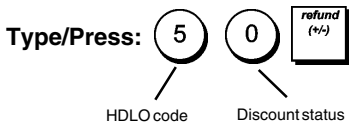



1. Control lock key position: **PRG**.
2. Type the required HDLO code [0 to 6] with reference to the table above.
3. Type the required discount or add-on status **0** or **1**.
4. Press .

Example: Allocate a maximum of 5 digits and a discount status to this key.






Consecutive Receipt Number Programming

To program consecutive receipt numbers:

 
1. Control lock key position: **PRG**.
2. Press:       and then .
3. Enter a [Receipt number from 1 to 9999].
4. Press .

Z1/Z2 Counters


To program the Z1 and Z1 counters:

1. Control lock key position: **PRG**.
2. Press:  for Z1 counter or  for Z2 counter.
3. Enter [4-digit counter number from 0001 to 9999].
4. Press .

Changing the Cash Register's Standard Settings

1. Control lock key position: **PRG**.
2. Type the [number] of the system option (1-96 as indicated in the table) that you wish to change.
3. Type the [number] of the required setting.
4. Press .

Example: Program the cash register to issue multiple receipts.

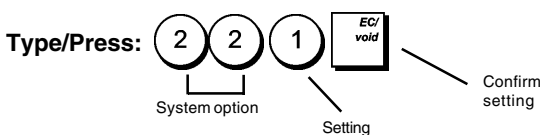


System Options

Your cash register's system options programming feature includes a number of options for the operation of the cash register. Each of the functions described in this section is already set upon delivery of the cash register to meet the most frequent requirements.

The cash register's factory default settings, which you can reprogram at any time, are indicated in **bold** print in the table below. You can, at any time, print a report indicating how your cash register is programmed. See "Cash Register Programming Report" for details.

- 1 Set date format
0 = Month/Day/Year
1 = Day/Month/Year
- 2 Set time format
0 = 24 hour format
1 = 12 hour format
- 3 Key touch-tone
0 = Enabled
1 = Disabled
- 4 Electronic Journal activation
0 = Standard electronic journal
1 = Dynamic electronic journal
- 5 Clerk System activation
0 = Disabled
1 = Enabled
- 6 Compulsory clerk secret code entry
0 = Disabled
1 = Enabled
- 7 Compulsory clerk secret code entry at each transaction
0 = Disabled
1 = Enabled
- 8 Clerk login displayed when register is idle
0 = Enabled
1 = Disabled
- 9 Winding motor flag (excl. REG and MGR modes)
0 = Enabled for only EJ report
1 = Enabled for PRG, X and Z modes
- 10 Reset consecutive receipt number after Z1 report
0 = Enabled
1 = Disabled
- 11 Reset Grand Total after Z1 financial report
0 = Disabled
1 = Enabled
- 12 Reset Z1 and Z2 Counter after Z report
0 = Disabled
1 = Enabled
- 13-14 Reserved
- 15 Post transaction tenders
0 = Enabled
1 = Disabled
- 16 Zero price registrations
0 = Enabled
1 = Disabled
- 17 Tax calculations
0 = Reserved
1 = Add-on tax calculation
2 = VAT calculation

- 18 Position to print tax details
0 = Print details after tender amount
 1 = Print details before total amount
- 19 Assign addition and subtraction
 pos/neg % results to the department
0 = Enabled
 1 = Disabled
- 20 Foreign currency exchange calculation
0 = Divide for currency calculation
 1 = Multiply for currency exchange calculation
- 21 Rounding
0 = No European rounding
 1 = Special rounding selection - Swiss
 0.01 – 0.02 = amount rounded to 0.00
 0.03 – 0.07 = amount rounded to 0.05
 0.08 – 0.09 = amount rounded to 0.10
 2 = Special rounding selection - Swedish
 0.00 – 0.24 = amount rounded to 0.00
 0.25 – 0.74 = amount rounded to 0.50
 0.75 – 0.99 = amount rounded to 1.00
 3 = Special rounding selection - Danish
 0.00 – 0.12 = amount rounded to 0.00
 0.13 – 0.37 = amount rounded to 0.25
 0.38 – 0.62 = amount rounded to 0.50
 0.63 – 0.87 = amount rounded to 0.75
 0.88 – 0.99 = amount rounded to 1.00
 4 = Special rounding selection - Euro
 0.01 – 0.03 = amount rounded to 0.00
 0.04 – 0.07 = amount rounded to 0.05
 0.08 – 0.09 = amount rounded to 0.10
- 22 Issuing multiple receipts
 0 = Disabled
1 = Enabled
- 23 Duplicate Z report printing
0 = Enabled
 1 = Disabled
- 24 Zero skip on financial reports
0 = Enabled
 1 = Disabled
- 25 Set register operation mode
 0 = Print journal records
1 = Print receipts
- 26-39 Reserved
- 40 Storage in electronic journal
0 = Sales receipts only
 1 = Full activity registration
- 41 Warning beep sounds at start of
 transaction in an electronic journal memory
 nearly full condition
 0 = Enabled
1 = Disabled
- 42 Warning beep sounds at end of
 transaction in an electronic journal
 memory nearly full condition.
 0 = Enabled
1 = Disabled
- 43-49 Reserved
- 50 Print line space value selection:
 0 = 0.500 mm
 1 = 0.667 mm
 2 = 0.833 mm
3 = 1.00 mm
 4 = 1.167 mm
 5 = 1.333 mm
 6 = 1.500 mm
 7 = 1.667 mm
 8 = 1.833 mm
 9 = 2.00 mm
- 51 Receipt printing format
0 = Normal
 1 = Compressed
 2 = Double height
- 52 X/Z report printing format
1 = Compressed
 2 = Double height
- 53 Compressed electronic journal
 report print format
 0 = Disabled
1 = Enabled
- 54 Compressed printing in PRG mode
 0 = Disabled
1 = Enabled
- 55-59 Reserved
- 60 Print date
0 = Enabled
 1 = Disabled
- 61 Print time
0 = Enabled
 1 = Disabled
- 62 Print clerk name
0 = Enabled
 1 = Disabled
- 63 Print machine number on receipt
0 = Enabled
 1 = Disabled
- 64 Print consecutive receipt number
0 = Enabled
 1 = Disabled
- 65 Print PLU number
 0 = Enabled
1 = Disabled
- 66 Print the subtotal when  is pressed
0 = Enabled
 1 = Disabled
- 67 Print the Z1/Z2 counter
0 = Enabled
 1 = Disabled
- 68 Print the Grand Total
0 = Enabled
 1 = Disabled
- 69 Print refund total on financial report
0 = Enabled
 1 = Disabled


- 70 **Print tax rate on receipt**
0 = Disabled
1 = **Enabled**
- 71 Print total tax amount on sales receipt
0 = **Disabled**
1 = Enabled
- 72 Print tax amount split per rate on sales receipt
0 = **Disabled**
1 = Enabled
- 73 Print taxable amount split per rate on sales receipt
0 = **Disabled**
1 = Enabled
- 74 Print total taxable amount on sales receipt
0 = **Disabled**
1 = Enabled
- 75 Print taxable amount without VAT, split per rate on sales receipt
0 = **Disabled**
1 = Enabled
- 76 Print total taxable amount without VAT, on sales receipt
0 = **Disabled**
1 = Enabled
- 77 Print tax symbol to the right of the amount
0 = **Disabled**
1 = Enabled
- 78 Print a customer receipt header
0 = **Enabled**
1 = Disabled
- 79 Print a customer receipt footer
0 = **Enabled**
1 = Disabled
- 80 Print header on X/Z reports
0 = Disabled
1 = **Enabled**
- 81 Print ratio % in Department & PLU report
0 = **Enabled**
1 = Disabled
- 82-89 Reserved
- 90 Print graphic header on receipt
0 = Enabled
1 = **Disabled**
- 91-95 Reserved
- 96 Language selection
0 = **English**
1 = Spanish
2 = French
3 = German
4 = Programmable (free text)

Cash Register Programming Reports


This section explains how to print the different reports that show how your cash register is programmed. These reports are all taken in the PRG mode.

To stop the printing of a report, press and hold down .


Department Programming Report

- Control lock key position: **PRG**.
- Type **1** **0** and then press .


Department Range Programming Report

- Control lock key position: **PRG**.
- Type **2** **0**.
- Type the department number **[01 - 99]** that you want to start from.
- Type the department number **[01 - 99]** that you want to end at.
- Press .



Department-Department Group Link Report

- Control lock key position: **PRG**.
- Type **3** **0**.
- Type the department group number **[00 - 10]** for which to view a list of the associated departments.
- Press .


PLU Programming Report

- Control lock key position: **PRG**.
- Type **4** **0** and then press .


PLU Range Programming Report

- Control lock key position: **PRG**.
- Type the PLU number **[0001 - 2000]** you want to start from and press .
- Type the PLU number **[0001 - 2000]** that you want to end with.
- Press .


PLU-Department Link Report

- Control lock key position: **PRG**.
- Type **6** **0**.
- Type the department number **[01 - 99]** for which to view a list of the associated PLUs.
- Press .


Clerk Programming Report

1. Control lock key position: **PRG**.
2. Type **7** **0** and then press 


Overall Cash Register Programming Report

1. Control lock key position: **PRG**.
2. Type **8** **0** and then press 


Header/Footer Strings Programming Report

1. Control lock key position: **PRG**.
2. Type **8** **1** and then press 


Foreign Currency Strings Programming Report

1. Control lock key position: **PRG**.
2. Type **8** **2** and then press 


Payment Media Strings Programming Report

1. Control lock key position: **PRG**.
2. Type **8** **3** and then press 

New Language Entry (10-character Strings) Programming Report

1. Control lock position: **PRG**.
2. Type **9** **0** and then press 

New Language Entry (24-character Strings) Programming Report

1. Control lock position: **PRG**.
2. Type **9** **1** and then press 

Management Reports

Transaction data is maintained in the memory of the cash register as long as the battery back-up system is in effect. This data can be printed as a report for management review. The Management Report can be printed from either the X or Z position on the control switch.

X and Z Reports

Turning the control lock key to the **X** position prints the accumulated transaction information and **RETAINS ALL TOTALS IN MEMORY**. Take this report any time of the day to print periodic reading of the transactions performed (some users call the X report a mid-day report). X reports include the PLU Report, Clerk Report, and the X1 and X2 Financial Reports.

Turning the control lock key to the **Z** position prints the same information as the X report. The only difference is that after a Z report printout **ALL TRANSACTION TOTALS ARE RESET TO ZERO**, except for the grand total unless programmed otherwise in the system options programming mode. This report is usually taken at the end of the day so that all the transaction totals are cleared to start from zero the following day.


NOTE: To prevent accidental printing of the Z report, assign a PRG and Z mode manager password as explained in the section entitled "Defining a PRG and Z Mode Manager Password".

An **X2** report is called a period-to-date financial report which is usually taken on a weekly basis. It accumulates all the transaction totals. A **Z2** report is the same as an X2 report with the exception that all the transaction totals are reset to zero after it is taken. It is usually taken as a monthly sales report to view end-of-month sales totals for each department.

NOTE: Before printing a management report, make sure that you have plenty of paper loaded in the cash register.



Z1/Z2 Financial Report Counter Programming

You can override the cash register's default Z1/Z2 financial report counter by programming the number from which you want the counter to start counting consecutively each time a financial report is printed.


1. Control lock key position: **PRG**.
2. Press **1** for the Z1 report counter, or press **2** for the Z2 report counter.
3. Type a number **[0001 to 9999]** from which you want the cash register to start counting each Z1 or Z2 report.
4. Press 


Grand Total Programming

You can program the transaction grand total value printed on the management reports.

1. Control lock key position: **PRG**.
2. Press **7** **7** **7** **7** **7** **7** and then press 
3. Type your grand total value of a maximum 12 digits.
4. Press 

X1 and Z1 Financial Reports


NOTE: If you run out of paper during the printing of a Z report, you can print only one duplicate report by pressing 

followed by 

1. Control lock key position: **X** or **Z** (bear in mind that a Z1 printout resets all totals to zero).

2. If a PRG and Z mode, or X mode, manager password was

defined type the [4-digit password] and press .

3. Press .

15-12	18-07-2007	Consecutive receipt number
MC NO. 1962	0173	X counter
< X 1	0001	Department 1 activity counter
DEPT 01	80	Department 1 sales total
14.89%	*785.00	
DEPT 02	78	
19.48%	*1027.09	
DEPT 03	106.5	
25.18%	*1538.68	
DEPT 04	70	
33.64%	*1773.49	
DEPT 05	-1	
	*-1.00	
DEPT 06	2	
0.13%	*6.65	
DEPT 07	7	
1.54%	*81.20	
DEPT 09	1	
0.09%	*5.00	
DEPT 10	2	
0.14%	*7.50	
DEPT 40	1	
0.09%	*4.50	
DEPT 45	1	
0.01%	*0.50	
DEPT 52	9	
0.83%	*44.00	
TOTAL	*5272.61	Sales total for all departments
VAT1 5.5%	*46.62	
TXBL..0.1 5.5%	*846.53	
TXBL..W.1 5.5%	*893.15	
VAT2 10%	*137.43	
TXBL..0.2 10%	*1374.83	
TXBL..W.2 10%	*1512.26	Total amount VAT 1, 2, 3 and 4
VAT3 19%	*146.25	
TXBL..0.3 19%	*769.67	
TXBL..W.3 19%	*915.92	
VAT4 20%	*296.80	
TXBL..0.4 20%	*1484.27	
TXBL..W.4 20%	*1781.07	
NON TAX	*170.35	
TL-COUPON	*-65.20	Coupon (-) total
TL..ADD ON	*0.00	
	*0.83%1	Percent add-on total
	*0.49%1	
	*-32.95%2	Percent discount total
	*-0.35%2	
NET	*5272.75	Refund total
REFUND	*-74.99	
VOID/CORR	*-39.89	Gross sales total
GROSS	*5125.12	
CASH	0129	Cash sales total
TL-CHECK	*2890.60	Check sales total
0011		
TL-CHARGE	*560.49	Charge sales total
0012		
CARD 1	*779.19	Card 1 sales total
0008		
CARD 2	*670.97	Card 2 sales total
0003		
TL-RECD AC	*371.50	Received on account total
0004		
T-PAID OUT	*421.00	Paid out total
0004		
TL-NS	*390.00	Cash in drawer total
0004		
C-C-I-D	*2886.76	Check in drawer total
CHECK ID	*595.33	
CHARGE ID	*779.19	
C CRED1 ID	*670.97	
C CRED2 ID	*371.50	
FC 1 *1.471	*361.31	
GR	*5272.75*	
		Grand total

X2 and Z2 Financial Reports

- Control lock key position: **X** or **Z** (bear in mind that a Z2 printout resets all totals to zero).
- If a PRG and Z mode, or X mode, manager password was defined type the [4-digit password] and press



3. Type **9 9** and press .

Cash in Drawer Report

This report tells you the financial status of your cash drawer. It provides the totals for cash, check, charge, credit 1 and credit 2 payments.

- Control lock key position: **X** or **Z** (bear in mind that a Z Clerk Report resets all totals).
- If a PRG and Z mode, or X mode, manager password was defined type the [4-digit password] and press



3. Press .

15:14	18-12-2007	Cash in drawer total
MC NO. 1962	0174	Check in drawer total
C I D	*2886.76	Charge in drawer total
CHECK ID	*595.33	Credit 1 in drawer total
CHARGE ID	*779.19	Credit 2 in drawer total
C CRED1 ID	*670.97	
C CRED2 ID	*371.50	

Clerk Report

This report lists the number of transactions and sales totals for each Clerk. At the end of the receipt you are given the sales total of all clerks.

For all clerks, normal sales only:

- Control lock key position: **X** or **Z** (bear in mind that a Z Clerk Report resets all totals).
- If a PRG and Z mode, or X mode, manager password was

defined type the [4-digit password] and press .

3. Press .

Time	15:16	18-07-2007	Consecutive receipt number
	MC NO. 1962	0176	X report identifier
	CLERK REPORT	< X	
	CLERK01		Sales total of clerk 1
Clerk 1 number or assigned name	TOTAL	*2778.98	
	VAT1 5.5%	*18.21	
	TXBL..0.1 5.5%	*330.34	
	TXBL..W.1 5.5%	*348.55	
	VAT2 10%	*82.93	
	TXBL..0.2 10%	*829.77	
	TXBL..W.2 10%	*911.60	
	VAT3 19%	*69.01	
	TXBL..0.3 19%	*363.14	
	TXBL..W.3 19%	*432.15	
	VAT4 20%	*172.66	
	TXBL..0.4 20%	*863.47	
	TXBL..W.4 20%	*1036.13	
	NON TAX	*50.50	
	TL-COUPON	*-50.00	
	TL..ADD ON	*0.00	
		*0.83%1	
		*0.30%1	
	DISCOUNT	*-11.60%2	
		*-0.35%2	
	NET	*2779.93	Summary of clerk 1 activities
	REFUND	*-37.00	
	VOID/CORR	*-4.50	
	GROSS	*2631.49	
	CASH	0073	
	TL-CHECK	*1582.26	
	0004		
	TL-CHARGE	*162.00	
	0008		
	CARD 1	*593.69	
	0004		
	CARD 2	*249.48	
	0002		
	TL-RECD AC	*191.50	
	0002		
	T-PAID OUT	*215.00	
	0001		
	TL-NS	*150.00	
	0002		
	C-C-I-D	*1647.26	
	CHECK ID	*162.00	
	CHARGE ID	*593.69	
	C CRED1 ID	*249.48	
	C CRED2 ID	*191.50	
	FC 1 *1.471	*72.74	
	GT	*5272.75*	Machine Grand Total

For all clerks, training sales only, repeat the procedure above replacing step 3 with:

- Press **8 8** .

For normal sales and training sales of a specific clerk, repeat the procedure above replacing step 3 with:

- Enter [clerk number] and press .

PLU Sales Report

This report provides the number of times a particular PLU is used, the totals for that number and the sales total for all PLUs.

1. Control lock key position: **X** or **Z** (bear in mind that a Z PLU Report resets all PLU totals to zero).
2. If a PRG and Z mode, or X mode, manager password was defined type the **[4-digit password]** and press



3. Press

PLU number or assigned name	15: 19	18-07-2007	
	MC NO. 1962	0177	
	PLU REPORT	X	PLU 1 sales counter
	PLU 0001	16	
PLU 1 sales total	13.86%	*214.65T2	
	PLU 0002	5	
	4.84%	*75.00T4	
	PLU 0042	1	
	0.13%	*2.00	
	PLU 0201	7	
	4.97%	*76.93T4	
	PLU 0202	4	
	0.39%	*6.00T1	
	PLU 0301	5	
	4.13%	*64.00T2	
	PLU 0302	5	
	3.11%	*48.23T1	
	TL-PLU	*1549.24	Total PLU sales

PLU Range Sales Report

This report provides the same transaction information as the PLU Sales Report but pertaining to a defined range of PLUs.

1. Control lock key position: **X** only.
2. If an X mode manager password was defined, type the

[4-digit password] and press

3. Type the PLU number **[0001 - 2000]** that you want to start from.

4. Press

5. Type the PLU number **[0001 - 2000]** that you want to end with.

6. Press

Department Range Sales Report

This report provides the number of transactions performed by the departments within the defined range, and their related sales totals.

1. Control lock key position: **X** only.
2. If an X mode manager password was defined, type the

[4-digit password] and press

3. Type the department number **[01-99]** that you want to start from.

4. Type the department number **[01-99]** that you want to end with.

5. Press

Department Group Sales Report

This report provides the same information as a Department Range Sales Report, but for all the departments associated with the defined department group.

1. Control lock key position: **X** only.
2. If an X mode manager password was defined, type the

[4-digit password] and press

3. Type the department group number to . To issue a report containing the sales of the departments of all the department groups, type .

4. Press

Time Report

The time report provides the net total sales performed by the cash register on an hourly basis.

1. Control lock key position: **X** or **Z** (bear in mind that a Z time report resets all time totals to zero).
2. If a PRG and Z mode, or X mode, manager password was

defined type the **[4-digit password]** and press

3. Type and then press

Training Report

This report provides an X or Z report of the transactions performed in the training mode. Like the ordinary X and Z financial reports, a Z report resets all transaction totals to zero and provides the same information as an ordinary X or Z financial report with the exception that the report identifier is "XO" or "ZO".

1. Control lock key position: **X** or **Z**. Bear in mind that in the Z position the training report contents are cleared.
2. If a training mode password was defined, type the

[4-digit password] and press

3. Press

Electronic Journal Reports

 

An electronic journal report executed with the control switch in the X position does not clear the electronic journal memory (and therefore all transaction data are retained) **while the report executed with the control switch in the Z position cancels electronic journal memory thus restoring it to its maximum 13,000 line capacity programmed.**

To momentarily interrupt report printing, press . Press this key again to resume printing (for example, to load paper and avoid an out-of-paper condition).

To cancel report printing, press

Complete Electronic Journal Report



This report is a complete listing of transaction receipts and Z financial reports taken within the maximum 13,000 line capacity programmed.

1. Control lock key position: **X** or **Z**. Bear in mind that in the Z position the electronic journal memory contents are cleared. Make sure there is plenty of paper loaded in the printer.
2. If a PRG and Z mode, or X mode, manager password was defined type the **[4-digit password]** and press .
3. Press .

When the contents of the electronic journal are printed, a message is displayed along with a beep to indicate that the EJ memory capacity has been restored to its programmed 13,000 lines.



Oldest Transaction Report

By entering the number of transactions you wish to view, this report prints the selected number of oldest receipts and Z financial reports performed and stored within the programmed 13,000 line capacity.

1. Control lock key position: **X** or **Z**. Bear in mind that in the Z position the journal report contents are cleared. Make sure there is plenty of paper loaded in the printer.
2. If a PRG and Z mode, or X mode, manager password was defined type the **[4-digit password]** and press .
3. Type a number between **[001 and 999]** indicating the number of oldest reports wanted and press .



Latest Transaction Report

By entering the number of transactions you wish to view, this report prints the most recent receipts and Z financial reports performed and stored within the programmed 13,000 line capacity.

1. Control lock key position: **X** or **Z**. Bear in mind that in the Z position the journal report contents are cleared. Make sure there is plenty of paper loaded in the printer.
2. If a PRG and Z mode, or X mode, manager password was defined type the **[4-digit password]** and press .
3. Type a number between **[001 and 999]** indicating the number of latest reports wanted and press .




Daily Report

By entering the number of Z financial reports that you wish to view, this report prints the receipts recorded before the defined Z financial report along with the report itself.

1. Control lock key position: **X** or **Z**. Bear in mind that in the Z position the journal report contents are cleared. Make sure there is plenty of paper loaded in the printer.
2. If a PRG and Z mode, or X mode, manager password was defined type the **[4-digit password]** and press .
3. Type a number between **[01 and 99]** indicating the number of oldest end-of-day reports wanted and press .




Sales Transactions

Entering and Exiting the Register Mode

1. Unlock the printer compartment and turn the control lock key to the REG mode.
2. If the Clerk System option was set to active and a clerk code was programmed, enter the related Clerk number assigned, press , type the associated three-digit secret code and then press . If the Clerk System option was set to active and a secret code was not programmed, type any Clerk number and then press .




Date and Time Display

You can display the current date and time outside of a sales transaction and with the cash register in the REG mode.

Press  to display the date,   to display the time.

Electronic Journal Capacity Display

If the electronic journal was activated, you can also display the number of sales data lines still available in the journal's

memory. Press    outside of a sales transaction and with the cash register in REG mode. The value is displayed on the upper line of the operator display.

Sample Receipts

The following receipt is a typical receipt issued by the cash register.

Customer receipt header with max. 24 characters per line

```

*****
*   YOUR RECEIPT   *
*   THANK YOU     *
*                 *
*****
Time              11:07
Machine number    MC NO. 1962
Clerk number or assigned name CLERK01
Date              18-12-2007
Consecutive receipt number 0088
Departments      DEPT 01 *10.00T1
                  DEPT 02 *2.50T3
                  DEPT 07 *12.95
                  DEPT 03 *5.00T2
                  DEPT 04 *15.50T4
-----
SUBTOTAL          *45.95
-----
TOTAL             *45.95
AMOUNT            *50.00
CHANGE            *4.05
-----
/  HAVE A NICE DAY /
/  PLEASE COME AGAIN /
/                   /
-----
Customer receipt footer with max. 24 characters per line

```

Labels for the receipt above:

- Time: 11:07
- Machine number: MC NO. 1962
- Clerk number or assigned name: CLERK01
- Departments: DEPT 01, DEPT 02, DEPT 07, DEPT 03, DEPT 04
- Date: 18-12-2007
- Consecutive receipt number: 0088
- Item price with department VAT rate identifier: *10.00T1, *2.50T3, *12.95, *5.00T2, *15.50T4
- Item price in non-taxable department: *10.00T1, *5.00T2
- Subtotal: *45.95
- Cash tendered: TOTAL *45.95, AMOUNT *50.00, CHANGE *4.05
- Total balance due: *45.95
- Change due: *4.05

The following example receipt contains the least information possible. To obtain this receipt, program system options 60, 61, 62, 63, 64, 66, 77, 78 and 79 accordingly. See "System Options" for details.

```

Departments      DEPT 01 *10.00
                  DEPT 02 *2.50
                  DEPT 07 *12.95
                  DEPT 03 *5.00
                  DEPT 04 *15.50
-----
TOTAL             *45.95
AMOUNT            *50.00
CHANGE            *4.05
-----

```

Labels for the receipt above:

- Item price: *10.00, *2.50, *12.95, *5.00, *15.50
- Departments: DEPT 01, DEPT 02, DEPT 07, DEPT 03, DEPT 04
- Cash tendered: TOTAL *45.95, AMOUNT *50.00, CHANGE *4.05
- Total balance due: *45.95
- Change due: *4.05


Receipt On/Off Modes

Outside of a sales transaction, the cash register can be switched to non-print mode during which time transactions performed in REG mode are not printed. In non-print mode, sales totals are maintained and management reports can be printed.

1. Control lock key position: **REG**.

2. Press .

NOTE: If you set system option **22** to **1** (Issuing multiple receipts) as explained in the "System Options" section, you can override this setting and print the receipt of the last sales

transaction by pressing  for as many receipts you require.

Exiting Receipt-Off Mode


 
 
 

 

1. Control lock key position: **REG**.

2. Press .

Registering a Single Item Sale with Change Tender

Up to eight digits can be used for entering the amount.







 
 





 

 
 
 

Example: Register a £1.00 item in Department 1. Compute change for £5.00.

- Press    .
- Press   .

The transaction is terminated and the change due to the customer is displayed.






 




 



Registering a Multiple Item Sale with Exact Cash Tender

Example: Register a £2.50 item to Department 1, a £0.50 item to Department 45 and a £1.65 item to Department 37, with an exact tender of £4.65.

- Press     .
- Press      .
- Press      .
- Press .
- Press .

Registering a Multiple Item Sale with Exact Cash Tender in Foreign Currency



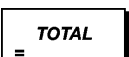


 
 



Example: Register a £10.00 item to Department 1, a £20.00 item to Department 2, with an exact tender in the programmed foreign currency number 1.

- Press     .
- Press     .
- Press  to display and print the current balance due in Local currency.
- Press  for foreign currency number 1 programmed and press  to display the current balance due in the foreign currency.
- Press .

Registering a Sale of Multiple Items at Same Cost

Up to two digits can be used for the quantity multiplied.

Example: Multiply two items costing £1.50 and register the sale to Department 1. Compute change for £5.00.




 
 



 



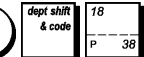
 

 





1. Press  .
2. Press    .
3. Press .
4. Press   . The change due to the customer is displayed.

Steps 1 and 2 in the procedure above could be replaced with the following to achieve the same result:

Press     .



 
 


 
 
 
Registering a Multiple Department Sale with Payment in Foreign Currency and Change Tender in Local Currency

Example: Register a £69.99 item to Department 1, a £5.99 item to Department 4 and a £3.50 item to Department 38. Compute change for €150.00 (Euro = foreign currency number 1).

1. Press     .
2. Press    .
3. Press    .
4. Press  to display and print the current balance due in Local currency.
5. Press  for foreign currency number 1 and press  to display the current balance due in foreign currency.
6. Type the amount tendered in the foreign currency     and press . The change due to the customer is displayed.


 
 
 


 
 
 
 

 
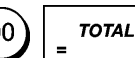
 
Registering a Charge Card Transaction

Example: Register a £2.50 item to Department 1 and a £3.00 item to Department 2 as an exact charge card transaction.

1. Press    .
2. Press   .
3. Press .
4. Press .




 
 


 
 
 
Split Cash/Charge Card Tender

Example: Register a £10.00 item and a £15.00 item to Department 2. Split the amount tendered between £20.00 cash and £5.00 charge.

1. Press    .
2. Press    .
3. Press .
4. Press    . The remaining balance due (5.00) is displayed.
5. Press .




 
 


 
 
 
Credit Card 1 Tender

Example: Register a £120.00 item to Department 2 and a £50.00 item to Department 3. Complete the transaction with payment using a credit card.

1. Press     .
2. Press    .
3. Press .



 
 
 
Credit Card 2 Tender

Example: Register a £120.00 item to Department 2 and a £50.00 item to Department 3. Complete the transaction with payment using a different credit card with respect to the one used for a Credit Card 1 tender.

1. Press     .
2. Press    .
3. Press .

Check Tender

Example: Register a £70.00 item paid by check to Department 4.

1. Press    .
2. Press .

Check Tender with Change

Example: Register a £19.50 item to Department 4, a £2.50 item to Department 5 and a £5.00 item to Department 29. Compute the change for a £30.00 check tender.

1. Press     .

- Press **2 5 0**
- Press **5 00**
- Press
- Press **3 0 00** . The change due to the customer is displayed.

Check Tender in Foreign Currency with Change in Local Currency

Example: Register a £19.50 item to Department 4, a £2.50 item to Department 5 and a £5.00 item to Department 28. Compute the change in Local currency for a €40.00 check tender.

- Press **1 9 5 0**
- Press **2 5 0**
- Press **5 00**
- Press to display and print the current balance due in Local currency.
- Press **1** for foreign currency number 1 (previously programmed as Euro), and press to display the current balance due in foreign currency.
- Type the amount tendered by check in foreign currency **4 0 00** and press . The change due in local currency is displayed.

Split Check/Cash Tender

Example: Register a £24.00 item to Department 1, a £36.00 item to Department 3 and a £4.00 item to Department 4. Split the tender between £60.00 check and £4.00 cash.

- Press **2 4 00**
- Press **3 6 00**
- Press **4 00**
- Press
- Press **6 0 00** . The remaining balance due is displayed.
- Press

Registering a Single and Multiple (-) Reduction (Coupon)

Up to 8 digits can be used to enter the amount for a transaction.

Example: Register a £0.10 reduction (coupon) on a £2.00 item to Department 2 and a £1.00 discount on the sale of 3 items costing £5.00 each to Department 52.

- Press **2 00**
- Press **1 0**
- Type the number of the multiple item sale **3**, press and then enter the unit price **5 00**.
- Press **5 2**
- Type the number of items of the multiple item sale to be discounted by pressing **3** followed by and then type the discount **1 00** followed by
- Press

Discounting the Total Sale Using a Programmed Discount Rate

Example: Register a programmed 10% discount to an entire sales transaction. Compute the change tender.


The key must have been programmed to apply a 10% percent discount.



 
 


 
 
 
 
 

 
 
 
 
- Press **2 5 0**
- Press **9 9**
- Press
- Press . The amount discounted is displayed.
- Press
- Press **5 00** . The change due to the customer is displayed.

Discounting the Total Sale Using a Random Discount Rate

Up to 4 digits can be used to specify the discount percentage (in the range 0.01 - 99.99%).

 
Example: Register a 20% discount to a sales transaction.



 
 


 
 
 

 


 
 
 
 
 

Compute the change tender. The  key must have been programmed to apply percent discounts.

1. Press    .
2. Press    .
3. Press .
4. Press   . The amount discounted is displayed.
5. Press .
6. Press   . The change due to the customer is displayed.

Discounting Individual Items Using Programmed and Random Discount Rates

 
Example: Register a £2.50 item to Department 1, apply the programmed discount to a £3.50 item to Department 23 and apply a discount rate of 3% to a £5.00 item to Department



 


 

 
 


 
 
2. Compute change tender. The  key must have been programmed to apply a 3% percent discounts.

1. Type    .
2. Type    .
3. Press  to apply the programmed discount. The amount discounted is displayed.
4. Press   .
5. Press  . The amount discounted is displayed.
6. Press .
7. Press    . The change due to the customer is displayed.

Applying the Programmed Percent Plus Rate to a Total Sale

Example: Register a programmed 10% add-on to an entire sales transaction. Compute the change tender.

 
The  key must have been programmed to apply a 10% add-on.



 



 

 



 

 
 
1. Press    .
2. Press   .
3. Press .
4. Press . The amount added-on is displayed.
5. Press .
6. Press   . The change due to the customer is displayed.

Applying a Random Percent Plus Rate to a Total Sale

Up to 4 digits can be used for the percent add on rate (from 0.01 to 99.99%).

Example: Register a 20% add-on to a sales


 

 

 
 

transaction. Compute the change tender. The  key must have been programmed to apply percent add-ons.

1. Press    .
2. Press    .
3. Press .
4. Press   . The add on amount is displayed.
5. Press .
6. Press   . The change due to the customer is displayed.

Registering a Sales Transaction Using Preset PLU Item Prices




 
 



To use this feature, PLU item prices must have been previously programmed.

Example: Use preset PLU item prices to register an entire transaction: register PLU 1 and multiply 3 PLUs 2. End the transaction with an exact cash tender.

1. Press  .
2. Press    . The amount of the multiplication is displayed.
3. Press .
4. Press .




 





 




 


 
Overwriting a Preset PLU Price Associated with a Barcode

Example: Overwrite the preset price associated with a barcode with £3.50. Compute change for a £5.00 tender.

1. Press    .
2. Scan the barcode to register the PLU code.
3. Press .
4. Press   . The change due to the customer is displayed.

Voiding a Complete Sales Transaction




 
 


 



 


 




 
 
 

Example: Register a £2.50 item to Department 1, a £5.00 item to Department 66 and a £1.65 item to Department 40, then void the entire transaction.

1. Press    .
2. Press      .
3. Press      .
4. Press .
5. Press .

NOTE: A full void cannot be performed when the number of items registered for the transaction exceeds 50.

 



 
 



 
 
 
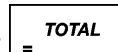
Voiding the Previous Entry in the Middle of a Sale

Example: Void a £2.50 entry erroneously made to Department 2. Then register a £3.00 item to this same Department. Then void an incorrect £10.00 entry. End the transaction with an exact cash tender.

1. Press    .
2. Press . The amount voided is displayed and printed.
3. Press   .
4. Press    .
5. Press   .
6. Press      .
4. Press .
5. Press .

Refunding Multiple Items

Example: Refund a £4.99 item to Department 4 and three £2.00 items to Department 5.

1. Press .
2. Press    . The amount to be refunded is displayed.
3. Press .
4. Press     . The amount to be refunded is displayed.
5. Press .
6. Press .

Registering Multiple Void and Refund Transactions

Example: Overwrite the preset PLU 6 with £3.00, register the sale of a £2.50 item to Department 1, and of a £1.00 item to Department 2. Void the £3.00 sale to PLU 6 and then register the sale of four £5.00 items to PLU 6. Void the sale of the £2.50 item previously made to Department 1 and then refund 3 items costing £4.00 each. Subtotal the sale and end the transaction with an exact cash tender.

- Press
- Press
- Press
- Press
- Press
- Press
- Press
- Press
- Press

Registering Money Received on Account

Up to 8 digits can be used for registering money received on account.

Example: Register £200.00 received on account.

- Press

The cash drawer opens and the transaction is recorded on receipt.

Registering Negative Department Transactions

As prerequisite to negative department transactions, program a normal department to a negative status as explained in section "Program the Departments". These transactions are useful when the clerk pays back money to the customer, such as the refund of a deposit.

Example: With Department 40 activated for Single, negative item sales, register a deposit refund of £1.00 for the return of bottles.

- Press
- Press

Registering Product Quantity Transactions

Example: Register the sale of 1.5 Kg of apples costing £3.00 per kilogram to Department 3.

- Press
- Press

Paying Money Out

Up to 8 digits can be registered for money paid out.

Example: Pay out £150.00.

- Press

The cash drawer opens and the transaction is recorded on receipt.

Registering an Identification Number to a Transaction

Up to 10 digits can be used for the identification number. This entry can be made prior to any operation. The identification number is not added to the management report or totals.

Example: Assign the identification number 3459 to a £1.00 sale to Department 4. Enter an exact cash tender sale.

- Press
- Press
- Press

Registering a No Sale

This operation opens the cash drawer and prints a no sale receipt. The activity is registered to the activity counter in the financial report.

If you do not want to print a No Sales receipt, see "No-Sales Receipts Key Status".

- Press




Issuing a Copy of the Last Sales Receipt

You can print one or more copies of the last receipt issued. **For this feature to be operational, system option 22 must be set to 1 (Issuing multiple receipts).** See "System Options" for details.

To be able to issue a copy of the last sales receipt, the cash register can accumulate a maximum of 60 transaction lines in Random Access Memory (RAM). If the last sales receipt has more than 60 lines, the copy will only provide the resulting sales total.

NOTE: This feature will override non-print mode if it was previously activated by pressing


 

 
 

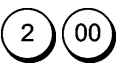
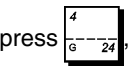
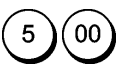

 
 



 
 
Example: Register a £13.50 sale to Department 3 and enter an exact cash tender sale. Print a copy of the sales receipt.

1. Press .
2. Press .
3. Press .

Holding and Recalling a Sales Transaction

You can temporarily put a sales transaction on hold, start and conclude a separate transaction in the mean time, then recall and conclude the held transaction. This allows the clerk to serve a second customer to avoid delays if for any reason the customer being currently served is not ready to finalize the transaction. Only one transaction can be held at a time.

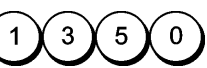Example: Register a £13.50 sale to Department 3 and a £23.00 sale to Department 2. Subtotal the transaction and then put it on Hold. Serve another customer by registering the sale of a £2.00 item to Department 4, a £5.00 item to Department 37 and finalizing the sale with a Credit card 1 tender. Recall the suspended transaction, register the sale of a £4.50 item to Department 40 and finalize the transaction with a check tender.

1. Type  and press , then type  and press .
2. Press .
3. Press . A line is displayed to indicate that the transaction was put on hold. Tear off the sales receipt and put it aside.
4. Start the second transaction. Type  and press , then type  and press 
.
5. Press  to finalize the second transaction. A beep sounds to remind you to conclude the transaction that you previously put on hold.
6. Press . The transaction that was put on hold resumes from where you left off.
7. Type  and press 
.
8. Finalize the transaction by pressing .


 


 
 
 
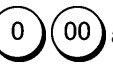

Transferring a Finalized Payment to Another Means of Payment

Upon conclusion of a sales transaction, you can transfer the payment just made to another form of payment. This is particularly useful if the customer decides to pay with another means after the finalization of the sales transaction.

Payment transfers also allow you to give the customer cash back as long as the payment is transferred to a cash tender and you specify an amount that is greater than the sales transaction total.

Payment transfer operations can be performed only once after finalization. No receipt is issued, but the transfer is recorded in the management reports. Payment transfers do not apply to tenders with foreign currencies.


 


 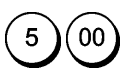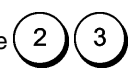



Example: Register a £5.00 sale to Department 3 and a £23.00 sale to Department 2 as a charge transaction. Transfer a £50.00 payment to a cash tender with a cash back to the customer.

1. Type  and press , then type 
 and press .
2. Press .
3. Press , type  and then press . The cash drawer opens and the cash back amount due to the customer is displayed.

After-Tender Change Transactions

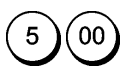Allowed only for cash tenders, with this feature the clerk can finalize a sales transaction as an exact cash tender and then afterwards register the cash collected from the customer and give the required change.

Example: Register a £5.00 sale to Department 3 and a £23.00 sale to Department 2 as an exact cash tender. Register the collection of £50.00 and compute the related change.

1. Type  and press , then type 
 and press .
2. Press .
3. Type the cash collected  and then press . The cash drawer opens and the change due to the customer is displayed.

CAPTION TABLE

Line	Description	Digit	ENGLISH	ESPAÑOL	FRANÇAIS	DEUTSCH
1	COUPON	10	COUPON	CUPON	COUPON	COUPON
2	TOTALCOUPON	10	TL-COUPON	TL-CUPON	TL-COUPON	TL-COUPON
3	ADDON	10	ADDON	INCREMENTO	MAJORATION	AUFSCHLAG
4	TOTALADDON	10	TL_ADDON	TL_INCREM.	TL_MAJOR.	TL_AUFSCHL
5	DISCOUNT	10	DISCOUNT	DESCUENTO	REMISE	RABATT
6	CHARGE	10	CHARGE	CARGO	CREDIT	KREDIT
7	TOTALCHARGE	10	TL-CHARGE	TL-CARGO	TL-CREDIT	TL-KREDIT
8	VOID/CORRECTION	10	VOID/CORR	ANUL/CORRC	CORR/ANNUL	STORNO
9	TOTAL VOID/CORRECTION	10	TL -VD/CORR	ANUL/CORRC	TL-COR/NUL	TL-STORNO
10	SUBTOTAL	10	SUBTOTAL	SUBTOTAL	SOUS-TOTAL	ZW.SUMME
11	CHANGE	10	CHANGE	CAMBIO	RENDU	RÜCKGELD
12	CASH	10	CASH	EFFECTIVO	ESPECES	BAR
13	TOTALCASH	10	TL-CASH	T-EFFECTIVO	TL-ESPECE	TL-BARGELD
14	PRICE	10	*PRICE*	"PRECIO"	PRIX	PREIS
15	AMOUNT	10	AMOUNT	CANTIDAD	MONTANT	BETRAG
16	CHECK	10	CHECK	CHEQUE	CHEQUE	SCHECK
17	TOTAL CHECK	10	TL-CHECK	TL-CHEQUE	TL-CHEQUE	TL-SCHECK
18	TOTAL	10	TOTAL	TOTAL	TOTAL	GESAMT
19	TOTAL PLU	10	TL- PLU	TL- PLU	TL-PLU	TL-PLU
20	TOTAL CLERK	10	TL- CLERK	TL-EMPLEAD	TL-VENDEUR	TL-BEDIEN.
21	NO SALE	10	NO SALE	NO VENTA	NON-VENTE	NULL BON
22	TOTAL NO SALE	10	TL-NS	TL-NON-VTA	TL-NON-VTE	TL-NULLBON
23	RECEIVED on ACCOUNT	10	RECD ACCT	ACUENTA	ENTRÉE	EINZAHLUNG
24	TOTAL RECEIVED on ACCOUNT	10	TL-RECD AC	TL-A CUENT	TL-ENTRÉE	TL-EINZAHL
25	PAID OUT	10	PAID OUT	SALIDAS	SORTIE	AUSZAHLUNG
26	TOTAL PAID OUT	10	T-PAID OUT	TL-SALIDAS	TL-SORTIE	TL-AUSZAHL
27	NONTAXABLE	10	NONTAX	SIN IVA	SANSTVA	OHNE MWST
28	TRANSFER	10	TRANSFER	TRANSFER.	TRANSFERT	TRANSFER
	TOTAL %1	10	TL-%1	TL-%1	TL-%1	TL-%1
	TOTAL %2	10	TL-%2	TL-%2	TL-%2	TL-%2
29	TOTAL DEPARTMENT	10	DEPT TOTAL	TOTAL DPTO	TL-DEPT	WG TOTAL
30	REFUND	10	REFUND	REEMBOLSO	RETOUR	RUCKZAHLNG
31	NET	10	NET	NETO	NET	NETTO
32	GROSS	10	GROSS	BRUTO	BRUT	BRUTTO
33	GRAND TOTAL	10	GT	GT	GT	GT
34	TAXABLE with TAX	10	TXBL_W_	IMPC/IMP.	MT-TTC	VERST.m.ST
35	TAXABLE without TAX	10	TXBL_O_	IMPS/IMP.	MT-HT	VERST.o.ST
36	TAX	10	VAT	IVA	TVA	MWST SATZ
37	TAX TOTAL	10	TL-VAT	TL-IVA	TL-TVA	TL-MWST
38	TAXABLE TOTAL with TAX	10	TXBL_TL_W	T.IMP.C/I.	TL-TTC	TAX_TL_M
39	TAXABLE TOTAL without TAX	10	TXBL_TL_O	T.IMP.S/I.	TL-HT	TAX_TL_O
40	Cash in Drawer	10	C-I-D	EFFECT CAJA	NET-TIROIR	BAR-IN-LAD
41	CHECK in Drawer	10	CHECK ID	CHEQ. CAJA	CHEQUE-TIR	SCHECK-I-L
42	CHARGE in Drawer	10	CHARGE ID	CARG. CAJA	CREDIT-TIR	RECHNG-I-L
43	CARD CREDIT1 in Drawer	10	C CRED1 ID	CRD1. CAJA	C CRD1-TIR	KARTE1-I-L
44	CARD CREDIT2 in Drawer	10	C CRED2 ID	CRD2. CAJA	C CRD2-TIR	KARTE2-I-L

Line	Description	Digit	ENGLISH	ESPAÑOL	FRANÇAIS	DEUTSCH
45	CARD CREDIT 1	10	CARD 1	CREDITO1	CARTE1	KARTE 1
46	CARD CREDIT 2	10	CARD 2	CREDITO2	CARTE2	KARTE 2
47	NEW BALANCE	10	NEW-BAL	SALDON.	N - SOLDE	SALDONEU
48	OLD BALANCE	10	OLD-BAL	SALDOANT.	A - SOLDE	SALDOALT
49	CLOSE BALANCE	10	CLOSE-BAL	SALDO FIN	SOLDE	ENDSALDO
50	TABLE NUMBER	10	TABLE#	MESA No	No TABLE	TISCHNR.
51	GUEST VALUE	10	GUEST#	COMENSAL	NB COUVERT	GASTNR:
52	OPEN TABLE	10	OPENTABLE	MESAAB.	TABLE OUV	OFF.TISCHE
53	INVOICE	10	INVOICE	FACTURA	FACTURE	RECHNUNG
54	DUE	10	DUE	VENCIMTO.	MT DU	FÄLLIG
55	TRAY TOTAL	10	TRAY TOTAL	TL_BANDEJA	TL_PLATEAU	TL_TABLETT
56	TAKE OUT	10	TAKE OUT	P. LLEVAR	EMPORTE	AUSSERHAUS
57	PRICE NUMBER (n = 1 or 2)	9	PRICE-n	PRECIO n	PRIX - n	PREIS n
58	PLUPAGE NUMBER (n = 1 or 2 or 3)	9	PLU PAGE-n	PÁG.ART.n	PAGE PLU n	PLU-SEITEn
59	ADJUST	10	ADJUST	AJUSTE	AJUST	ANPASSEN
60	DATE	10	DATE	FECHA	DATE	DATUM
61	TIME	10	TIME	HORA	HEURE	ZEIT
62	E.J. FREE LINE (nnnnn:number of free lines)	5	L. EJ nnnnn	L. DE nnnnn	L. JE nnnnn	F. EJ nnnnn
63	ELECTRONIC JOURNAL FULL	10	E.J.-FULL	D.E.SAT	J.E.-PLEIN	EJ VOLL
64	ELECTRONIC JOURNAL CLEAR	10	EJ CLEAR	D.E.BORR.	REMA 0 JE	EJ LÖSCH
65	RESET	10	RESET	PONER CERO	RE INITIAL	RESET
66	PAPER END	10	PAPER END	FIN PAPEL	FIN PAPIER	PAPIERENDE
67	HEAD TEMPERATURE	10	HEAD TEMP	TEMP.CABZ.	TEMP TETE	KOPFTEMP
68	PRINTER POWER FAIL	10	POWER FAIL	PB CORRIEN	ALIM IMPR	DRUCK FELH
69	ERROR	10	ERROR	ERROR	ERREUR	FEHLER
70	Over flow error	10	OVERFLOW	DESBORD.	ECAPACITE	EINGABEFEH
71	0 price error	10	0 PRICE ER	ERR.PREC.0	E PRIX 0	PREIS 0
72	Full void error (item over)	10	FULL V D ER	ERR.ANL.C.	E NUL TICK	STOR VOLL
73	CLERK ERROR	10	CLERK ERR	ERR.CAJERO	ERR VEND	BED.FEHLER
74	GUEST# compulsory error	10	GUEST NR.?	COMENSAL?	No COUVERT?	GASTNR.?
75	Amount Tender compulsory error	10	AMTREQ	IMPORTE?	MONTANT?	SUMME?
76	TABLE# compulsory error	10	TABLE NR.?	No MESA?	No TABLE?	TISCHNR.?
77	SECURITY CODE	10	SEC CODE	COD SEGUR I	COD SECRET	GEHEIMCODE
78	MACHINE NUMBER	6	MCNO.	N.MAQ	No MC	MC NR.
79	PRG/Z mode Manager PASSW.	10	PRG/Z PASS	COD PRG/Z	COD PRG/Z	PRG/Z CODE
80	X mode Manager PASSWORD	10	X PASS	CODIGO X	CODE X	X CODE
81	Training mode Manager PASSW.	10	T PASS	CODIGO T	CODE T	T CODE
82	TAX RATE (n : Number of tax)	9	TAX RATE n	POR.IMP.n	TAUX TVAn	MWST SATZn
83	FC RATE (n : Number of FC)	9	FC RATE n	CAMB.DIV.n	TX DEVISE n	KURS n
84	GRAND TOTAL PRESET	10	GT PRESET	PRE GT	PROG GT	GT PROG
85	PLU	3	PLU	PLU	PLU	PLU
86	Department	4	DEPT	DEPT	DEPT	WGR
87	Department Group	5	DPT-G	G-DPT	G-DEP	WGR -G
88	CLERK	5	CLERK	CAJER	VEND	BED.
89	CLERK	3	CLK	CAJ	VDR	BED
90	Receipt HEADER LINE (nn = Line# : 01 - 10)	6	HEAD Lnn	L.TÍ.nn	LH LOGnn	KOPFZ nn
91	Receipt FOOTER LINE (nn = Line# : 01 - 10)	6	FOOT Lnn	L.PIE nn	LB LOGnn	FUSSZ nn

Line	Description	Digit	ENGLISH	ESPAÑOL	FRANÇAIS	DEUTSCH
92	PAYMENT MEDIA programming (n = Media# : 1 - 5)	6	PAYMNTn	PAGON	PMT-n	ZLG-n
93	divide PAYMENT mes. LINE (n = Line# : 1 - 5)	6	:PAY Ln	:PAGO	:PMTn	:ZLG-n
94	Free Text (Short: 10 digits) (nn = Number of text)	5	TXT-Snn	TXT-Cnn	TXT-Cnn	TXT-Knn
95	Free Text (Long: 24 digits) (nn = Number of text)	5	TXT-Lnn	TXT-Lnn	TXT-Lnn	TXT-Lnn
96	SYSTEMOPTION	7	SYSOPT	OPC.SIS	OPT.SYS	SYSOPT
97	Programming COUPON	10	P COUPON	CUP.PROG.	P COUPON	P COUPON
98	Programming majoration (+)	10	P MAJOR+	P CARGO+	P MAJOR+	P GEBÜHR+
99	Program. AMOUNTDEC.POINT	10	PRG DEC P	POSIC.COMA	PRG DEC P	PDEZI-PKT
100	Program. FRACTIONROUNDING	10	P ROUNDING	REDON.FRC.	P ARRONDI	P RUNDUNG
101	Programming RA	10	P_REC DAC	P_ACUENT	P_ENTRÉE	P_EINZAHL
102	Programming PO	10	P_PAIDOUT	P_SALIDAS	P_SORTIE	P_AUSZAHL
103	Programming CONSECUTIVE#	10	P_CONSNUM	P COM NR	P NOTICK	P BON NR
104	FC (Foreign Currency)	2	FC	DV	DE	FW
105	STATUS	2	ST	ES	ST	ST
106	SECURITY CODE	2	SC	CS	CS	SC
107	PRICE	2	PR	PR	PX	PR
108	PRICE 1	2	P1	P1	P1	P1
109	PRICE 2	2	P2	P2	P2	P2
110	Link Department	2	LD	VD	LD	LW
111	GROUP	2	GR	GR	GR	GR
112	EXP.	4	EXP.	EXP.	EXP.	EXP.
113	Decimal Point	3	DP.	CD.	DP.	DP.
114	Instore Programming	7	INSTORE	INSTORE	INSTORE	INSTORE

PRINT CAPTIONS

Line	Description	ENGLISH	ESPAÑOL
1	E.J. USED LINE PRINT	E.JOURNAL USED L	DIA ELEC USADO L
2	E.J. FREE LINE PRINT	E.JOURNAL FREE L	DIA ELEC LIBRE L
3	REFUND	REFUND	REEMBOLSO
4	CLERK REPORT HEAD	CLERK REPORT X	INFORME CAJERO X
5	HOURLY REPORT HEAD	HOURLY REPORT X	INFORME HORA X
6	E.J. REPORT HEAD	ELECTRIC JOURNAL X	DIARIO ELECTRONI X
7	E.J. CLEAR PRINT	E. JOURNAL CLEAR X	BORRAR DIA ELEC X
8	INVOICE	I N V O I C E	F A C T U R A
9	PROFORMA	P R O F O R M A	P R O F O R M A
10	REVIEW	R E V I E W	R E V I S A D A
11	COPIED	C O P I E D	C O P I A D A
12	TAKEOUT	* T A K E O U T *	* P A R A L L E V A R *
13	PLUREPORT	P L U R E P O R T X	I N F O R M E P L U X
14	OPEN TABLE REPORT	O P E N T A B L E R E P O R T	I N F O R M E M E S A A B I E R T A
15	HOLD PRINT	H O L D	R E T E N E R
16	RECALL PRINT	R E C A L L	R E C U P E R A R
17	FULL VOID PRINT	F U L L V O I D	A N U L A C I O N T O T A L
18	"RESET PRINT" (n: Number of reset A - D)"	<<< R E S E T n >>>	<<< P O N E R A C E R O n >>>
19	POWER FAIL PRINT	- - - - - !!! - - - - -	- - - - - !!! - - - - -
20	DEPARTMENT DUMP	DEPT * * ST. sssssss GR. gg	DEPT * * ES. sssssss GR. gg
21	CLERK DUMP	CLK * * ST. sssssss SC. ccc	CAJ * * ES. sssssss CS. ccc
22	RECEIPT HEADER LINE.1	* * * * *	* * * * *
23	RECEIPT HEADER LINE.2	* YOUR RECEIPT	* SU RECIBO *
24	RECEIPT HEADER LINE.3	*	* GRACIAS *
25	RECEIPT HEADER LINE.4	* THANK YOU *	* *
26	RECEIPT HEADER LINE.5	* *	* * * * *
27	RECEIPT HEADER LINE.6	* * * * *	
28	RECEIPT HEADER LINE.7		
29	RECEIPT HEADER LINE.8		
30	RECEIPT HEADER LINE.9		
31	RECEIPT HEADER LINE.10		
32	RECEIPT FOOTER LINE.1	~ ~ ~ ~ ~	~ ~ ~ ~ ~
33	RECEIPT FOOTER LINE.2	H A V E A N I C E D A Y	Q U E T E N G A U N B U E N D I A
34	RECEIPT FOOTER LINE.3	P L E A S E C O M E A G A I N	V U E L V A A V I S I T A R N O S
35	RECEIPT FOOTER LINE.4		
36	RECEIPT FOOTER LINE.5	~ ~ ~ ~ ~	~ ~ ~ ~ ~
37	RECEIPT FOOTER LINE.6		
38	RECEIPT FOOTER LINE.7		
39	RECEIPT FOOTER LINE.8		
40	RECEIPT FOOTER LINE.9		
41	RECEIPT FOOTER LINE.10		
42	DIVIDE AND EXTRA INVOICE LINE 1	M E N U	F A C T U R A
43	DIVIDE AND EXTRA INVOICE LINE 2	M E A L	D E
44	DIVIDE AND EXTRA INVOICE LINE 3	A N D	C O M I D A
45	DIVIDE AND EXTRA INVOICE LINE 4	B R E W E R Y	Y B E B I D A
46	DIVIDE AND EXTRA INVOICE LINE 5	Service and VAT include	Servicio e IVA incluidos

PRINT CAPTIONS

Line	Description	FRANÇAIS	DEUTSCH
1	E.J. USED LINE PRINT	ELJ UTILISE L	E. JOURN EIN L
2	E.J. FREE LINE PRINT	ELJ DISPONIBLE L	E. JOURN FREI L
3	REFUND	RETOUR	RÜCKZAHLUNG
4	CLERK REPORT HEAD	RAPPORT VENDEUR X	KASSIERERBERICHT X
5	HOURLY REPORT HEAD	RAPPORT HORAIRE X	STUNDEN BERICHT X
6	E.J. REPORT HEAD	JOURNAL ELECTRO X	ELECTRON JOURNAL X
7	E.J. CLEAR PRINT	REMISE OELJ X	E. JOURN LOESCHEN X
8	INVOICE	F A C T U R E	R E C H N U N G
9	PROFORMA	P R O F O R M A	P R O F O R M A
10	REVIEW	M O N T A N T D U	P R Ü F R E C H N U N G
11	COPIED	C O P I E F A C T U R E	R E C H N U N G S K O P I E
12	TAKEOUT	* E M P O R T E *	* V E R K A U F A U S S E R H A U S *
13	PLU REPORT	RAPPORT P L U X	P L U - B E R I C H T X
14	OPENTABLE REPORT	RAPPORT TABLE OUVERT	B E R I C H T O F F E N E T I S C H
15	HOLD PRINT	TICKET EN ATTENTE	A N H A L T E N
16	RECALL PRINT	RAPPEL TICKET	W E I T E R
17	FULL VOID PRINT	ANNULATION TICKET	V O L L S T O R N O
18	"RESET PRINT" (n: Number of reset A - D)"	< < < REMISE A ZERO >>>	< < < RESET n >>>
19	POWER FAIL PRINT	- - - - - !!! - - - - -	- - - - - !!! - - - - -
20	DEPARTMENT DUMP	DEPT * * ST. sssss GR. gg	WRG * * ST. sssss GR. gg
21	CLERK DUMP	VDR * * ST. sssssss CS. ccc	KAS * * ST. sssssss SC. ccc
22	RECEIPT HEADER LINE.1	* * * * *	* * * * *
23	RECEIPT HEADER LINE.2	* VOTRE TICKET *	* IHRE RECHNUNG *
24	RECEIPT HEADER LINE.3	* MERCI *	* VIELEN DANK *
25	RECEIPT HEADER LINE.4	* *	* *
26	RECEIPT HEADER LINE.5	* * * * *	* * * * *
27	RECEIPT HEADER LINE.6		
28	RECEIPT HEADER LINE.7		
29	RECEIPT HEADER LINE.8		
30	RECEIPT HEADER LINE.9		
31	RECEIPT HEADER LINE.10		
32	RECEIPT FOOTER LINE.1		
33	RECEIPT FOOTER LINE.2	~ ~ ~ ~ ~	~ ~ ~ ~ ~
34	RECEIPT FOOTER LINE.3	BONNE JOURNEE	AUF WIEDERSEHEN
35	RECEIPT FOOTER LINE.4	REVEZ NOUS VISITER	KOMMEN SIE BALD WIEDER
36	RECEIPT FOOTER LINE.5		
37	RECEIPT FOOTER LINE.6	~ ~ ~ ~ ~	~ ~ ~ ~ ~
38	RECEIPT FOOTER LINE.7		
39	RECEIPT FOOTER LINE.8		
40	RECEIPT FOOTER LINE.9		
41	RECEIPT FOOTER LINE.10		
42	DIVIDE AND EXTRA INVOICE LINE 1	M E N U C O M P L E T	M E N Ü
43	DIVIDE AND EXTRA INVOICE LINE 2	R E P A S	S P E I S E N
44	DIVIDE AND EXTRA INVOICE LINE 3	E T	U N D
45	DIVIDE AND EXTRA INVOICE LINE 4	B O I S S O N	G E T R Ä N K E
46	DIVIDE AND EXTRA INVOICE LINE 5	Service et TVA inclus	Bedienung und MWST inkl

ENGLISH

Cash Register Specifications and Safety

Technical Characteristics

Listed below are the technical characteristics of this cash register model.

Type:	Electronic cash register with clamshell thermal printer, 10 department groups, 99 departments, 15 clerks, up to 2,000 PLU settings and 13,000 line electronic journal
Displays:	Two 10-digit operator and client alphanumeric displays. Symbols for error, change, subtotal, minus, total, foreign currency value, electronic journal memory nearly full or full, department number and item count shown
Capacity:	8-digit input and readout
Printer:	24-column line thermal printer with drop-in paper loading
Paper supply:	57.5 ± 0.5 mm thermal paper
Batteries:	3 standard "AA" size batteries which safeguard memory contents in the event of power failures
Technology:	CMOS RAM
Power cons.:	Standby 12.1 W, Operating 41.8 W
Operating Temperature:	32 – 104 °F (0 °C – 40 °C)
Dimensions:	410 mm (W) x 430 mm (D) x 294 mm (H)
Weight:	7.7 Kg (16,98 lbs)

DEUTSCH

Registrierkasse: Technische Eigenschaften und Sicherheitshinweise

Technische Eigenschaften

Im folgenden sind technischen Eigenschaften dieses Registrierkassenmodells zusammengestellt.

Typ:	Elektronische Registrierkasse mit Thermodrucker, 10 Abteilungsgruppen, 99 Abteilungen, 15 Kassierern, bis zu 2,000 PLU-Einstellungen und Elektronischem Journal mit 13.000 Zeilen
Displays:	Zwei 10-stellige Kassierer- und Kundendisplays, Anzeige von Symbolen für Fehler, Rückgeld, Zwischensumme, Minus, Gesamtsumme, Fremdwährungswert, „Journal Speicher fast voll“ Abteilungsnummer und Artikelanzahl
Kapazität:	8-stellige Eingabe und Ausgabe
Drucker:	Thermodrucker mit 24 Spalten und Papierschnellladen
Papier:	57,5 ± 0,5 mm Thermopapier
Batterien:	3 Standard "AA" Batterien zur Speicherhaltung bei Stromausfall
Technologie:	CMOS RAM
Stromverbrauch:	Bereitschaft 12,1 W, in Betrieb 41,8 W
Betriebs-temperatur:	0 °C – 40 °C
Abmessungen:	410 mm (W) x 430 mm (T) x 294 mm (H)
Gewicht:	7,7 Kg

FRANÇAIS

Spécifications techniques et de sécurité de la caisse enregistreuse

Caractéristiques techniques

Voici la liste des caractéristiques techniques de ce modèle de caisse enregistreuse.

Type:	Caisse Enregistreuse Electronique avec imprimante thermique à mécanisme "clamshell", 10 catégories de marchandises, 99 départements, 15 vendeurs, jusqu'à 2.000 paramètres PLU et journal électronique à 13.000 lignes
Afficheurs:	Deux afficheurs alphanumériques à dix chiffres opérateur et client. Symboles pour erreur, change, sous-total, moins, total, valeur de la devise étrangère, mémoire du journal électronique presque pleine ou pleine, nombre du département et compteur articles
Capacité:	8 chiffres en entrée
Imprimante:	Imprimante thermique avec 24-colonnes
Rouleau de papier:	57,5 ± 0,5 mm papier thermique
Piles:	3 piles standard "AA" pour la sauvegarde du contenu de la mémoire en cas de coupure de courant
Technologie:	CMOS RAM
Consommation:	Au repos 12,1 W, en fonction 41,8 W
Température de fonctionnement:	0 °C – 40 °C
Dimensions:	410 mm (L) x 430 mm (P) x 294 mm (H)
Poids:	7,7 Kg

ESPAÑOL

Descripciones y Seguridad de la Caja Registradora

Características Técnicas

Se han incluido a continuación las características técnicas de este modelo de caja registradora.

Tipo:	Caja registradora electrónica con impresora térmica pinza con 10 categorías de mercadería, 99 departamentos, 15 cajeros, hasta 2.000 entradas de PLU y diario electrónico de 7.200 líneas
Pantallas:	Dos Pantallas cajero y cliente alfanuméricas de 10 caracteres. Visualización de símbolos para error, cambio, subtotal, menos, total, valor divisa extranjera, memoria del diario electrónico casi llena o llena, número de departamento y recuento de artículos
Capacidad:	Introducción y lectura de 8 dígitos
Impresora:	Impresora térmica de 24 columnas por línea con carga del rollo "drop-in"
Soporte papel:	Papel térmico de 57,5 ± 0,5 mm
Pilas:	3 pilas estándar formato "AA" que protegen el contenido de la memoria en caso de fallos de corriente
Tecnología:	CMOS RAM
Cons. corriente:	Standby 12,1 W, Operando 41,8 W
Temp. operativa:	0 °C – 40 °C
Dimensiones:	410 mm (A) x 430 mm (P) x 294 mm (H)
Peso:	7,7 Kg

NEDERLANDS

Specificaties en veiligheid

Technische eigenschappen

Hieronder vindt u de technische eigenschappen van dit model kasregister.

Type:	Elektronisch kasregister met clamshell thermische printer, 10 warencategorieën 99 omzetgroepen, 15 medewerkers, maximaal 2.000 PLU-instellingen en elektronische journaal met maximaal 13.000 regels
Displays:	Twee 10-cijferige displays, voor medewerker en klant. Symbolen voor fouten, wisselgeld, sub totaal, korting, totaal, valuta-conversie, elektronisch journaalgeheugen bijna vol of vol, Nummer omzetgroep en aantal artikelen
Capaciteit:	8 cijfers invoer en uitlezen
Printer:	Thermisch, 24 tekens per regel met drop-in papiertoevoer
Papier:	57,5 ± 0,5 mm rol thermisch papier
Batterijen:	3 standaard "AA" batterijen die de inhoud van het geheugen waarborgen bij stroom uitval
Technologie:	CMOS RAM
Stroomverbruik:	Standby 12,1 W, bij gebruik 41,8 W
Bedrijfs-temperatuur:	0 °C – 40 °C
Afmetingen:	410 mm (B) x 430 mm (D) x 294 mm (H)
Gewicht:	7,7 Kg

DANSK

Kasseapparatets specifikationer og sikkerhed

Tekniske specifikationer

Nedenfor finder de kasseapparatets tekniske specifikationer.

Type:	Den elektroniske kasseapparat med en muslingeskalkformet termoprinter, 10 varekategorier, 99 Varegrupper, 15 ekspedienter, op til 2.000 PLU indstillinger og 13.000 linjer elektronisk journal
Displays:	To 10-cifrede alfanumeriske ekspedient og kundedisplays. Symboler for fejl, byttepenge, subtotal, minus, total, beløb i udenlandsk valuta, elektronisk journal hukommelse næsten fuld, varegruppe nummer eller fuld og varetæller
Kapacitet:	8-cifret indtastning og aflæsning
Printer:	24 kolonne linier termoprinter med drop-in papirfremføring
Papir:	57,5 ± 0,5 mm termopapir
Batterier:	3 stk. standard AA batterier, der beskytter hukommelsen i tilfælde af strømsvigt
Teknik:	CMOS RAM
Forbrug:	Standby 12,1 W, i drift 41,8 W
Driftstemperatur:	0 °C til 40 °C
Mål:	410 mm (B) x 430 mm (L) x 294 mm (H)
Vægt:	7,7 Kg

PORTUGUÊS

Especificações e Segurança da Caixa Registradora

Características Técnicas

Abaixo estão descritas as características técnicas deste modelo de caixa registradora.

Tipo:	Caixa registradora electrónica com impressora térmica, 10 categorias de mercadoria 99 departamentos, 15 funcionários, até 2.000 PLU programáveis e registo electrónico com 13.000 linhas
Visores:	Dois visores alfanuméricos de 10 dígitos, um para o operador e outro para o cliente. Símbolos para erro, troco, subtotal, menos, total, valor em moeda estrangeira, memória de registo electrónico quase cheia ou cheia, número de departamento e número de itens
Capacidade:	Entrada e leitura de 8 dígitos
Impressora:	Impressora térmica de linhas a 24 colunas
Abastecimento de papel:	Papel térmico de 57,5 ± 0,5 mm
Pilhas:	3 pilhas normais de formato "AA" que mantêm o conteúdo da memória no caso de falhas de corrente.
Tecnologia:	CMOS RAM
Consumo de energia:	Em espera 12,1 W, Em Operação 41,8 W
Temperatura de Operação:	0 °C – 40 °C
Dimensões:	410 mm (L) x 430 mm (P) x 294 mm (A)
Peso:	7,7 Kg

SWENSKA

Kassaregisterspecifikationer och säkerhet



Tekniska egenskaper

Nedan beskrivs de tekniska egenskaperna för den här kassaregistermodellen.

Typ:	Elektroniskt kassaregister med termisk skrivare av clamshell-typ, 10 varugruppkategorier, 99 varugrupper, 15 expediter, upp till 2.000 PLU inställningar och en 13.000 raders elektronisk journal
Displayer:	Två alfanumeriska 10-siffriga Displayer för operatör resp kund. Symboler för fel, byttepengar, delsumma, minus, total, belopp i utländsk valuta, elektronisk journal med minne nästan fullt eller fullt, samt visning, varugruppsnummer av antal artiklar
Kapacitet:	8-siffrig inknappning och avläsning
Skrivare:	24-teckens termisk skrivare med drop-in pappersladdning
Papper:	57,5 ± 0,5 mm värmekänsligt papper
Batterier:	3 standard AA batterier vilka skyddar innehållet i minnet i fall av strömavbrott
Teknik:	CMOS RAM
Strömförbrukning:	Standby 12,1 W, i drift 41,8 W
Driftstemperatur:	0 °C – 40 °C
Mått:	410 mm (B) x 430 mm (L) x 294 mm (H)
Vikt:	7,7 Kg

FIGURES - IMAGES
 ABBILDUNGEN - FIGURAS
 AFBEELDINGEN - FIGURAS
 FIGURER - BILDER

6

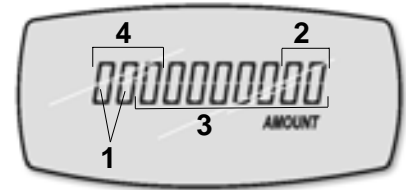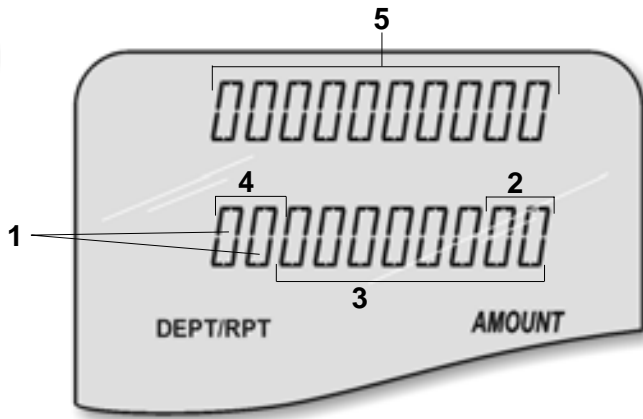

7

Character Table
 Tableau des Caractères
 Zeichentabelle
 Tabla de Caracteres

Non CAPS	1	2	3	4	5	6	7	8	9	10
[a]	a	á	à	â	ã	ä	1			
[b]	b	2								
[c]	c	ç	ó	3						
[d]	d	4								
[e]	e	é	ê	è	é	ê	ë	5		
[f]	f	6								
[g]	g	g̃	7							
[h]	h	8								
[i]	i	í	ì	9						
[j]	j	0								
[k]	k									
[l]	l	l̃								
[m]	m									
[n]	n	ñ	ñ							
[o]	o	ó	õ	ö	ò	ó	õ	õ	õ	ó
[p]	p	p								
[q]	q									
[r]	r									
[s]	s	ş	ş							
[t]	t									
[u]	u	ú	ü	ü	ü	ü	ü			
[v]	v									
[w]	w									
[x]	x									
[y]	y									
[z]	z	z̃	z̃							
[@]	1	2	3	4	5	6	7	8	9	10
	!	"	#	\$	%	&	'	()	*
	11	12	13	14	15	16	17	18	19	20
	+	,	-	.	/	:	;	<	=	>
	?	`								

Tekencodetabel
 Tabela de Caracteres
 Karakterkode Tabel
 Teckentabell

CAPS	1	2	3	4	5	6	7	8	9	10
[A]	A	Á	À	Ā	Â	Ã	Ä	Å	1	
[B]	B	2								
[C]	C	Ç	Ó	Ç	3					
[D]	D	Ð	4							
[E]	E	É	Ê	É	Ê	Ë	Ë	5		
[F]	F	6								
[G]	G	Ĝ	Ĝ	7						
[H]	H	8								
[I]	I	Í	Ì	Î	Ï	9				
[J]	J	0								
[K]	K									
[L]	L	Ł								
[M]	M									
[N]	N	Ñ	Ñ							
[O]	O	Ó	Ô	Õ	Ö	Ó	Ô	Õ		
[P]	P									
[Q]	Q									
[R]	R									
[S]	S	Ş	Ş	Ş						
[T]	T									
[U]	U	Ú	Û	Ü	Ü	Ü	Ü			
[V]	V									
[W]	W									
[X]	X									
[Y]	Y	ÿ								
[Z]	Z	Ž	Ž							
[@]	1	2	3	4	5	6	7	8	9	10
	@	[\]	^	_	{		}	~
	11	12	13	14	15	16	17	18	19	20
	¡	§	→	←	Σ	∅	Æ	Œ	™	¿
21	22	23	24	25	26	27				
	I	II	III	Γ	J	↑	.			

DIRECTIVE 2002/96/CE ON THE TREATMENT, COLLECTION, RECYCLING AND DISPOSAL OF ELECTRIC AND ELECTRONIC DEVICES AND THEIR COMPONENTS

1. FOR COUNTRIES IN THE EUROPEAN UNION (EU)

The disposal of electric and electronic devices as solid urban waste is strictly prohibited: it must be collected separately. The dumping of these devices at unequipped and unauthorized places may have hazardous effects on health and the environment.

Offenders will be subjected to the penalties and measures laid down by the law.

TO DISPOSE OF OUR DEVICES CORRECTLY:

- Contact the Local Authorities, who will give you the practical information you need and the instructions for handling the waste correctly, for example: location and times of the waste collection centres, etc.
- When you purchase a new device of ours, give a used device similar to the one purchased to our dealer for disposal.



The crossed dustbin symbol on the device means that:

- When it to be disposed of, the device is to be taken to the equipped waste collection centres and is to be handled separately from urban waste;
- Olivetti guarantees the activation of the treatment, collection, recycling and disposal procedures in accordance with Directive 2002/96/CE (and subsequent amendments).

2. FOR OTHER COUNTRIES (NOT IN THE EU)

The treatment, collection, recycling and disposal of electric and electronic devices will be carried out in accordance with the laws in force in the country in question.

DIRECTIVE 2002/96/CE SUR LE TRAITEMENT, LA COLLECTE, LE RECYCLAGE ET LA MISE AU REBUT DES EQUIPEMENTS ELECTRIQUES ET ELECTRONIQUES ET DE LEURS COMPOSANTS

1. POUR LES PAYS DE L'UNION EUROPEENNE (UE)

Il est interdit de mettre au rebut tout équipement électrique ou électronique avec les déchets municipaux non triés : leur collecte séparée doit être effectuée. L'abandon de ces équipements dans des aires non appropriées et non autorisées peut nuire gravement à l'environnement et à la santé. Les transgresseurs s'exposent aux sanctions et aux dispositions prévues par la loi.

POUR METTRE CORRECTEMENT NOS EQUIPEMENTS AU REBUT, VOUS POUVEZ EFFECTUER L'UNE DES OPERATIONS SUIVANTES :

- Adressez-vous aux autorités locales, qui vous fourniront des indications et des informations pratiques sur la gestion correcte des déchets (emplacement et horaire des déchetteries, etc.).
- A l'achat d'un de nos équipements, remettez à notre revendeur un équipement usagé, analogue à celui acheté.



Le symbole du conteneur barré, indiqué sur l'équipement, a la signification suivante :

- Au terme de sa durée de vie, l'équipement doit être remis à un centre de collecte approprié, et doit être traité séparément des déchets municipaux non triés.
- Olivetti garantit l'activation des procédures de traitement, de collecte, de recyclage et de mise au rebut de l'équipement, conformément à la Directive 2002/96/CE (et modifications successives).

2. POUR LES AUTRES PAYS (NON UE)

Le traitement, la collecte, le recyclage et la mise au rebut des équipements électriques et électroniques doivent être effectués conformément à la loi en vigueur dans chaque pays.

DIRECTIVA 2002/96/CE RELATIVA AO TRATAMENTO, RECOLHA, RECICLAGEM E ELIMINAÇÃO DE RESÍDUOS DE EQUIPAMENTOS ELÉTRICOS E ELECTRÓNICOS E DE SEUS COMPONENTES

1. PARA OS PAÍSES DA UNIÃO EUROPEIA (UE)

É proibido eliminar qualquer resíduo de equipamentos eléctricos ou electrónicos como lixo sólido urbano: é obrigatório efectuar uma recolha separada. O abandono de tais equipamentos em locais não especificamente preparados e autorizados, pode ter efeitos perigosos sobre o ambiente e a saúde. Os transgressores estão sujeitos às sanções e às disposições legais.

PARA ELIMINAR CORRECTAMENTE OS Nossos EQUIPAMENTOS, É POSSÍVEL:

- Dirigir-se às Autoridades Locais que fornecerão indicações e informações práticas sobre a gestão correcta dos resíduos, por exemplo: local e horário dos centros de entrega, etc.
- Na compra de um nosso novo equipamento, devolver ao nosso Revendedor um equipamento usado, semelhante ao comprado.



O símbolo do contedor riscado, indicado sobre o equipamento, significa que:

- O equipamento, quando chegar ao fim de sua vida útil, deve ser levado para centros de recolha aparelhados e deve ser tratado separadamente dos resíduos urbanos;
- A Olivetti garante a activação dos procedimentos no tocante ao tratamento, recolha, reciclagem e eliminação do equipamento em conformidade com a Directiva 2002/96/CE (e mod. post.).

2. PARA OS OUTROS PAÍSES (FORA DA UE)

O tratamento, a recolha, a reciclagem e a eliminação de equipamentos eléctricos e electrónicos terão de ser realizados em conformidade com as Leis em vigor em cada país.

RICHTLIJN 2002/96/EG BETREFFENDE AFGEDANKTE ELEKTRISCHE EN ELEKTRONISCHE APPARATUUR

1. VOOR DE LANDE VAN DE EUROPESE UNIE (EU)

Het is verboden om elektrische en elektronische apparatuur als huishoudelijk afval te verwerken: het is verplicht om een gescheiden inzameling uit te voeren. Het achterlaten van dergelijke apparatuur op plekken die niet specifiek hiervoor erkend en ingericht zijn, kan gevaarlijke gevolgen voor het milieu en de veiligheid met zich meebrengen. Overtreders zijn onderworpen aan sancties en maatregelen krachtens de wet.

OM OP CORRECTE WIJZE ONZE APPARATUUR TE VERWERKEN KUNT U:

- Zich wenden tot de plaatselijke instanties die u aanwijzingen en praktische informatie over de correcte behandeling van het afval zullen verschaffen, zoals bijvoorbeeld: locatie en openingstijden van de inzamelcentra, enz.
- Bij aankoop van een nieuw apparaat van ons merk, het oude apparaat, dat gelijk moet zijn aan het gekochte apparaat bij onze wederverkoper inleveren.



Het symbool van de doorkruiste vuilnisbak, aangebracht op de apparatuur, betekent dat:

- Het apparaat aan het einde van zijn levensduur bij geuitleende inzamelcentra moet worden ingeleverd en gescheiden van het huishoudelijk afval moet worden verwerkt;
- Olivetti de activering garandeert van de procedures inzake behandeling, inzameling, recycling en verwerking van de apparatuur conform de Richtlijn 2002/96/EG (en latere wijzigingen).

2. VOOR DE OVERIGE LANDE (NIET EU)

De behandeling, de inzameling, de recycling en de verwerking van elektrische en elektronische apparatuur dienen overeenkomstig de wetten die in elk land van kracht zijn te gebeuren.

RICHTLINIE 2002/96/CE FÜR DIE BEHANDLUNG, SAMMLUNG, WIEDERVERWERTUNG UND ENTSORGUNG VON ELEKTRO- UND ELEKTRONIK ALTGERÄTEN UND DEREN BESTANDTEILE

1. FÜR DIE LÄNDER DER EUROPÄISCHEN UNION (EG)

Es ist verboten, jede Art von Elektro- und Elektronik-Altgeräten als unsortierten Siedlungsabfall zu entsorgen: es ist Pflicht, diese separat zu sammeln. Das Abladen dieser Geräte an Orten, die nicht speziell dafür vorgesehen und autorisiert sind, kann gefährliche Auswirkungen für Umwelt und Gesundheit haben. Widerrechtliche Vorgehensweisen unterliegen den Sanktionen und Maßnahmen laut Gesetz.

UM UNSERE GERÄTE ORDNUNGSGEMÄß ZU ENTSORGEN, KÖNNEN SIE:

- Sich an die örtliche Behörde wenden, die Ihnen praktische Auskünfte und Informationen für die ordnungsgemäße Verwertung der Abfälle liefert, beispielsweise: Ort und Zeit der Sammelstation etc.
- Beim Neukauf eines unserer Geräte ein benutztes Gerät, das dem neu gekauften entspricht, an unseren Wiederverkäufer zurückgeben.



Das durchgekruzte Symbol auf dem Gerät bedeutet, dass:

- Nach Ableben des Gerätes, dieses in ausgerüstete Sammelzentren gebracht werden und separat von Siedlungsabfällen behandelt werden muss;
- Olivetti die Aktivierung der Behandlungs-, Sammel-, Wiederverwertungs- und Entsorgungsprozedur der Geräte in Konformität mit der Richtlinie 2002/96/CE (u. folg.mod.) garantiert.

2. FÜR DIE ANDEREN LÄNDER (NICHT-EG-STAATEN)

Das Behandeln, Sammeln, Wiederverwerten und Entsorgen von Elektro- und Elektronik-Altgeräten muss nach den geltenden Vorschriften des jeweiligen Landes erfolgen.

DIRECTIVA 2002/96/CE SOBRE EL TRATAMIENTO, LA RECOGIDA, EL RECICLAJE Y LA ELIMINACIÓN DE APARATOS ELÉCTRICOS Y ELECTRÓNICOS Y DE SUS COMPONENTES

1. PARA LOS PAÍSES DE LA UNIÓIN EUROPEA (UE)

Está prohibido eliminar cualquier tipo de aparato eléctrico y electrónico como residuo urbano no seleccionado: en el caso de estos equipos es obligatorio realizar su recogida selectiva. La eliminación de estos aparatos en lugares que no estén específicamente preparados y autorizados puede tener efectos peligrosos para el medio ambiente y la salud. Los transgresores están sujetos a las sanciones y a las medidas que establece la Ley.

PARA ELIMINAR CORRECTAMENTE NUESTROS APARATOS EL USUARIO PUEDE:

- Dirigirse a las Autoridades Locales, que le brindarán las indicaciones y las informaciones prácticas necesarias para el correcto manejo de los desechos, por ejemplo: lugar y horario de las instalaciones de tratamiento, etc.
- En el momento de comprar uno de nuestros equipos nuevos, puede entregar a nuestro Revendedor un aparato usado, similar al que ha adquirido.



El símbolo del contenedor con la cruz, que se encuentra en el aparato, significa que:

- Cuando el equipo haya llegado al final de su vida útil, deberá ser llevado a los centros de recogida previstos, y que su tratamiento debe estar separado del de los residuos urbanos;
- Olivetti garantiza la activación de los procedimientos en materia de tratamiento, recogida, reciclaje y eliminación de los equipos, de conformidad con la Directiva 2002/96/CE (y suces. mod.).

2. PARA LOS OTROS PAÍSES (FUERA DE LA UE)

El tratamiento, la recogida, el reciclaje y la eliminación de equipos eléctricos y electrónicos se deberán llevar a cabo de conformidad con las Leyes vigentes en cada País.

DIREKTIV 2002/96/EC AVSEENDE HANTERING, UPPSAMLING, ÅTERTVINNING OCH BORTSKAFFNING AV ELEKTRO- OCH ELEKTRONIKUTRUSTNINGAR SAMT DERAS KOMPONENTER

1. AVSEENDE LÄNDERNA I DEN EUROPEISKA UNIONEN (EU)

Det är förbjudet att skaffa bort all slags elektro- och elektronikutrustning som fast stadsavfall: en separat uppsamling måste obligatoriskt göras. Avlämning av sådan utrustning på ej specifikt förberedda platser kan farligt påverka både miljön och hälsan. De som överträder dessa förordningar kommer att undergå de straff och påföljder som förutsätts i lagstiftningen.

FÖR EN KORREKT BORTSKAFFNING AV VÅR UTRUSTNING KAN DU BETE DIG PÅ FÖLJANDE SÄTT:

- Vänd dig till de lokala myndigheterna där du kan få praktisk anvisning och information om hur du ska gå tillväga för att kunna hantera avfallet på korrekt sätt, t.ex: plats och öppettider i avlämningsstationer, osv.
- När du köper en ny utrustning från oss kan du lämna tillbaka en begagnad utrustning liknande den nyköpta till återförsäljaren.



Symbolen med den korsade behållaren som visas på utrustningen anger att:

- När utrustningens livslängd gått ut, måste denna föras till organiserade uppsamlingscentraler och behandlas separat från stadsavfallet;
- Olivetti garanterar aktivering av procedurer avseende hantering, uppsamling, återvinning och bortskaffning i överensstämmelse med Direktivet 2002/96/CE (och efterföljande ändringar).

2. AVSEENDE ÖVRIGA LÄNDER (EJ INOM EU)

Hantering, uppsamling, återvinning och bortskaffning av elektro- och elektronikutrustningar ska utföras i överensstämmelse med lagstiftelsen i landet i frågan.

Code: 541301