




# COOKTOP PARTS

For Models: GR673LXSQ0, GR673LXSS0, GR673LXSB0  
(White) (Stainless Steel) (Black)

30" ELECTRIC CERAN  
FREESTANDING RANGE  
SELF CLEAN CONVECTION OVEN

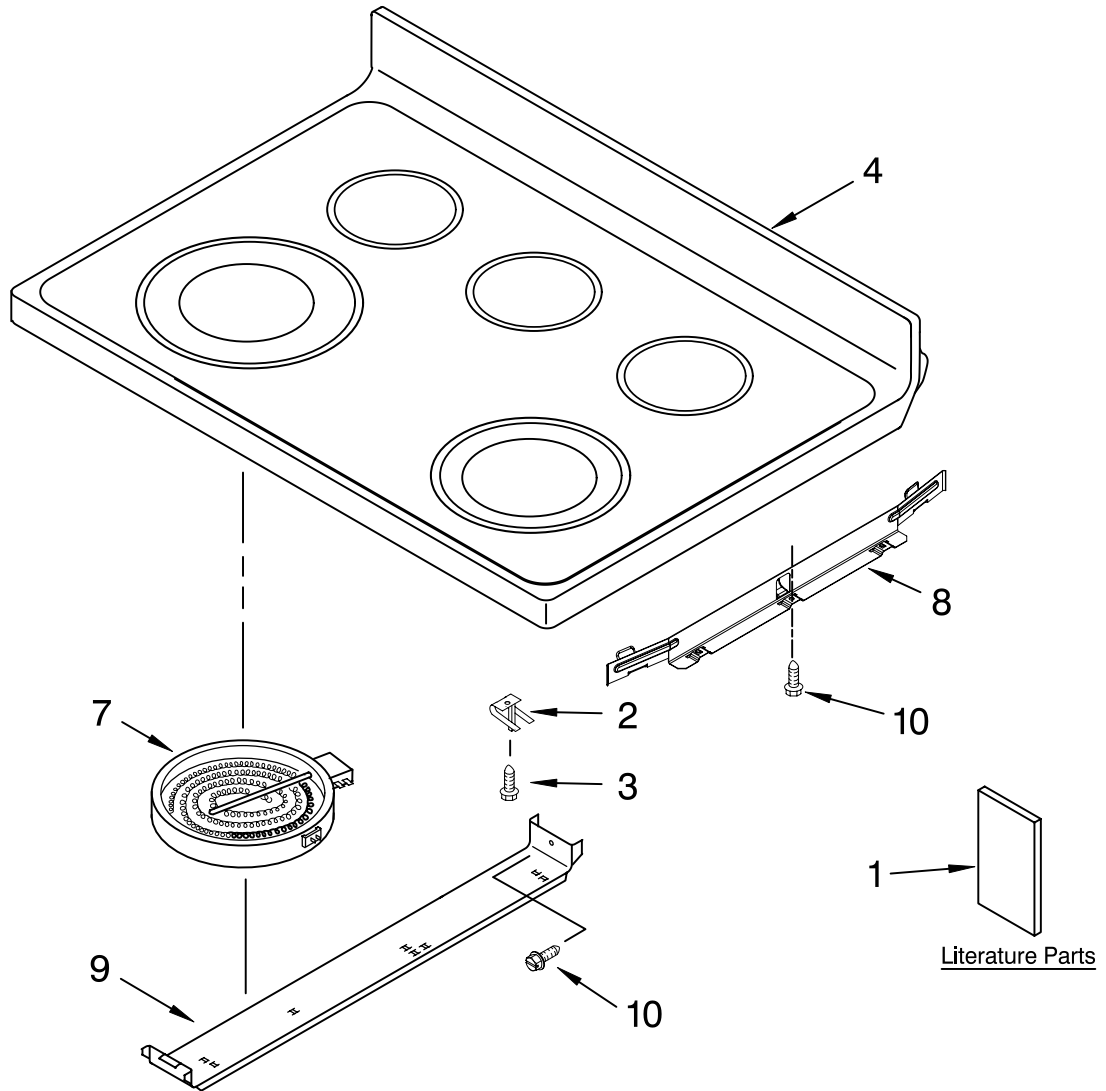

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	9763001	Owner's Manual
	9762982	Tech Sheet
	9762996	Installation Instructions
		Template, Anti-Tip
	9757143	English/French
	9757142	English/Spanish
	9762761	Brochure, Tips Safe Cooking


Illus. No.	Part No.	DESCRIPTION
2	3149191	Spring, Locator
3	3196170	Screw
4		Cooktop
	9763334	White
	9763336	Black

Illus. No.	Part No.	DESCRIPTION
7		Element, Surface
	9759351	2400/1200 W - LF
	8523698	1200 W - LR
	8523698	1200 W - RR
	9759351	2400/1200 W - RF
	8523700	100 W - CR
8	8524132	Shield, Wiring
9		Bracket, Element
	8272791	(2)
	8273720	(1)
10	3196169	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

For Models: GR673LXSQ, GR673LXSS0, GR673LXSB0  
(White) (Stainless Steel) (Black)

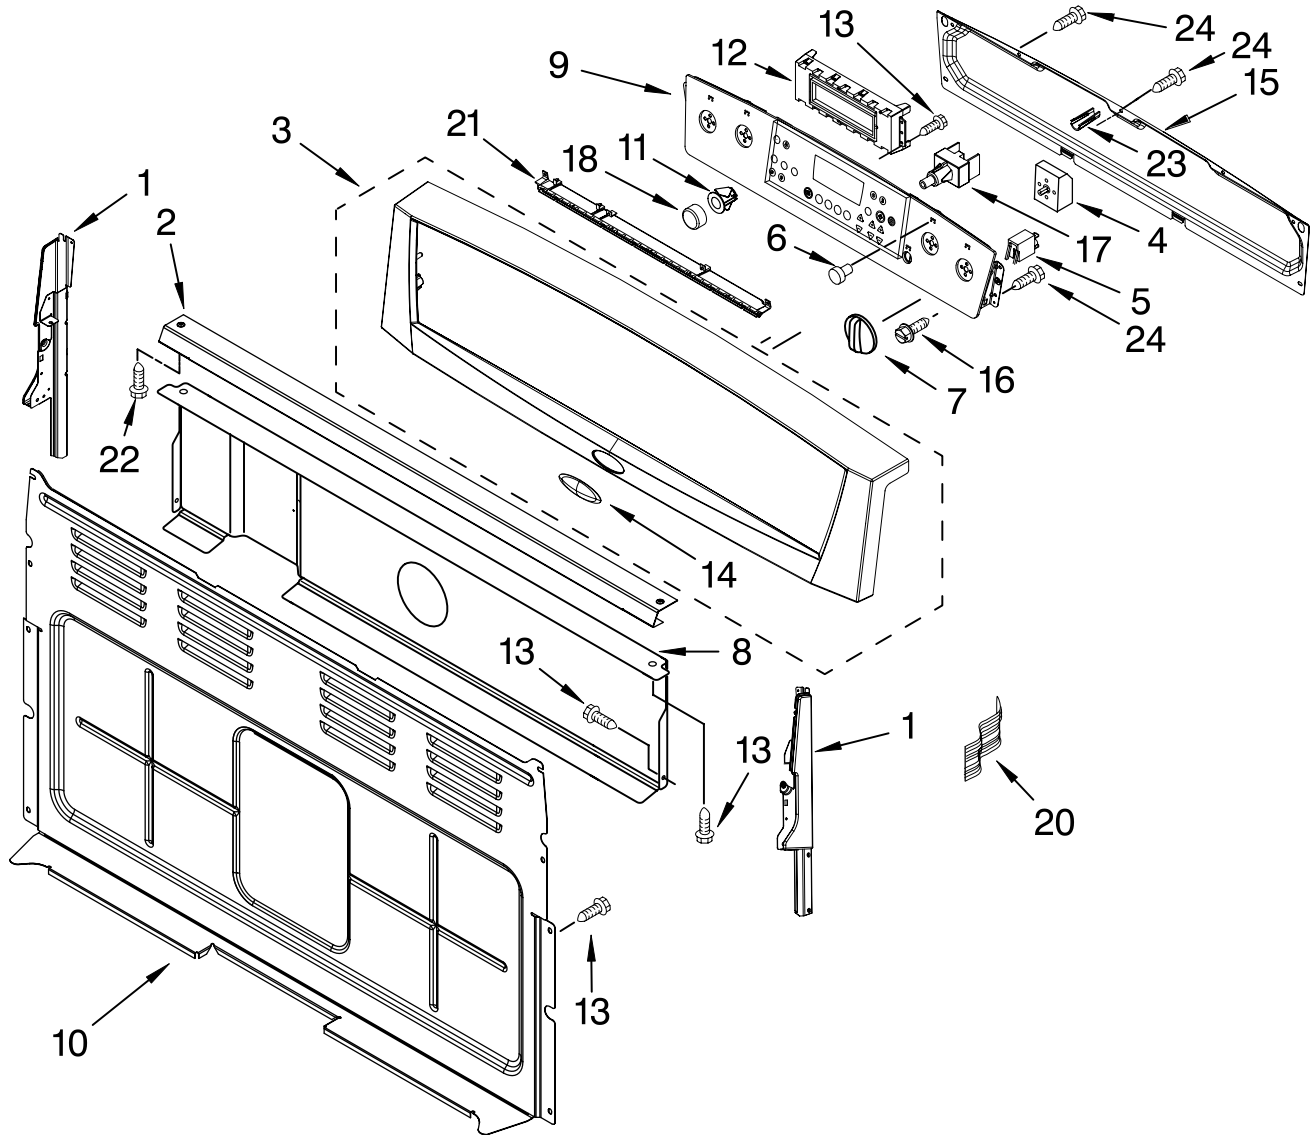

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	W10009040	White Left Hand
	W10009050	White Right Hand
	W10009080	Black Left Hand
	W10009090	Black Right Hand
2	9762095	Bracket, Console
3		Panel, Backguard
	9762585	White
	9762588	Stainless Steel
	9762586	Black
4		Switch, Infinite
	9758060	Left Front (Dual)
	3148951	Left Rear
	3148951	Right Rear
	9758060	Right Front (Dual)
5	8523265	Light, Indicator


Illus. No.	Part No.	DESCRIPTION
6	3196068	Lens, Light
7		Knob, Infinite (4)
	9757132	White
	9758129	Black
8	8523280	Shield, Heat
9		Glass, Switch Membrane
	9763548	White
	9763549	Black
10	9756999	Cover, Rear
11		Bezel, Keep Warm
	9757489	White
	9758489	Black
12	9763042	Control, Range
13	3196178	Screw
14	9757613	Nameplate

Illus. No.	Part No.	DESCRIPTION
15	9756366	Cover, Rear (Console)
16	3400882	Screw
17	8272820	Switch
18		Button
	9757492	White
	9758491	Black
20	9762426	Control Cable, Flex
21	9757358	Reflector, Light
22		Screw
	3196166	White
	3196168	Black
23	9757490	Support, Glass
24	3196178	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

For Models: GR673LXSQ0, GR673LXSS0, GR673LXSB0  
(White) (Stainless Steel) (Black)

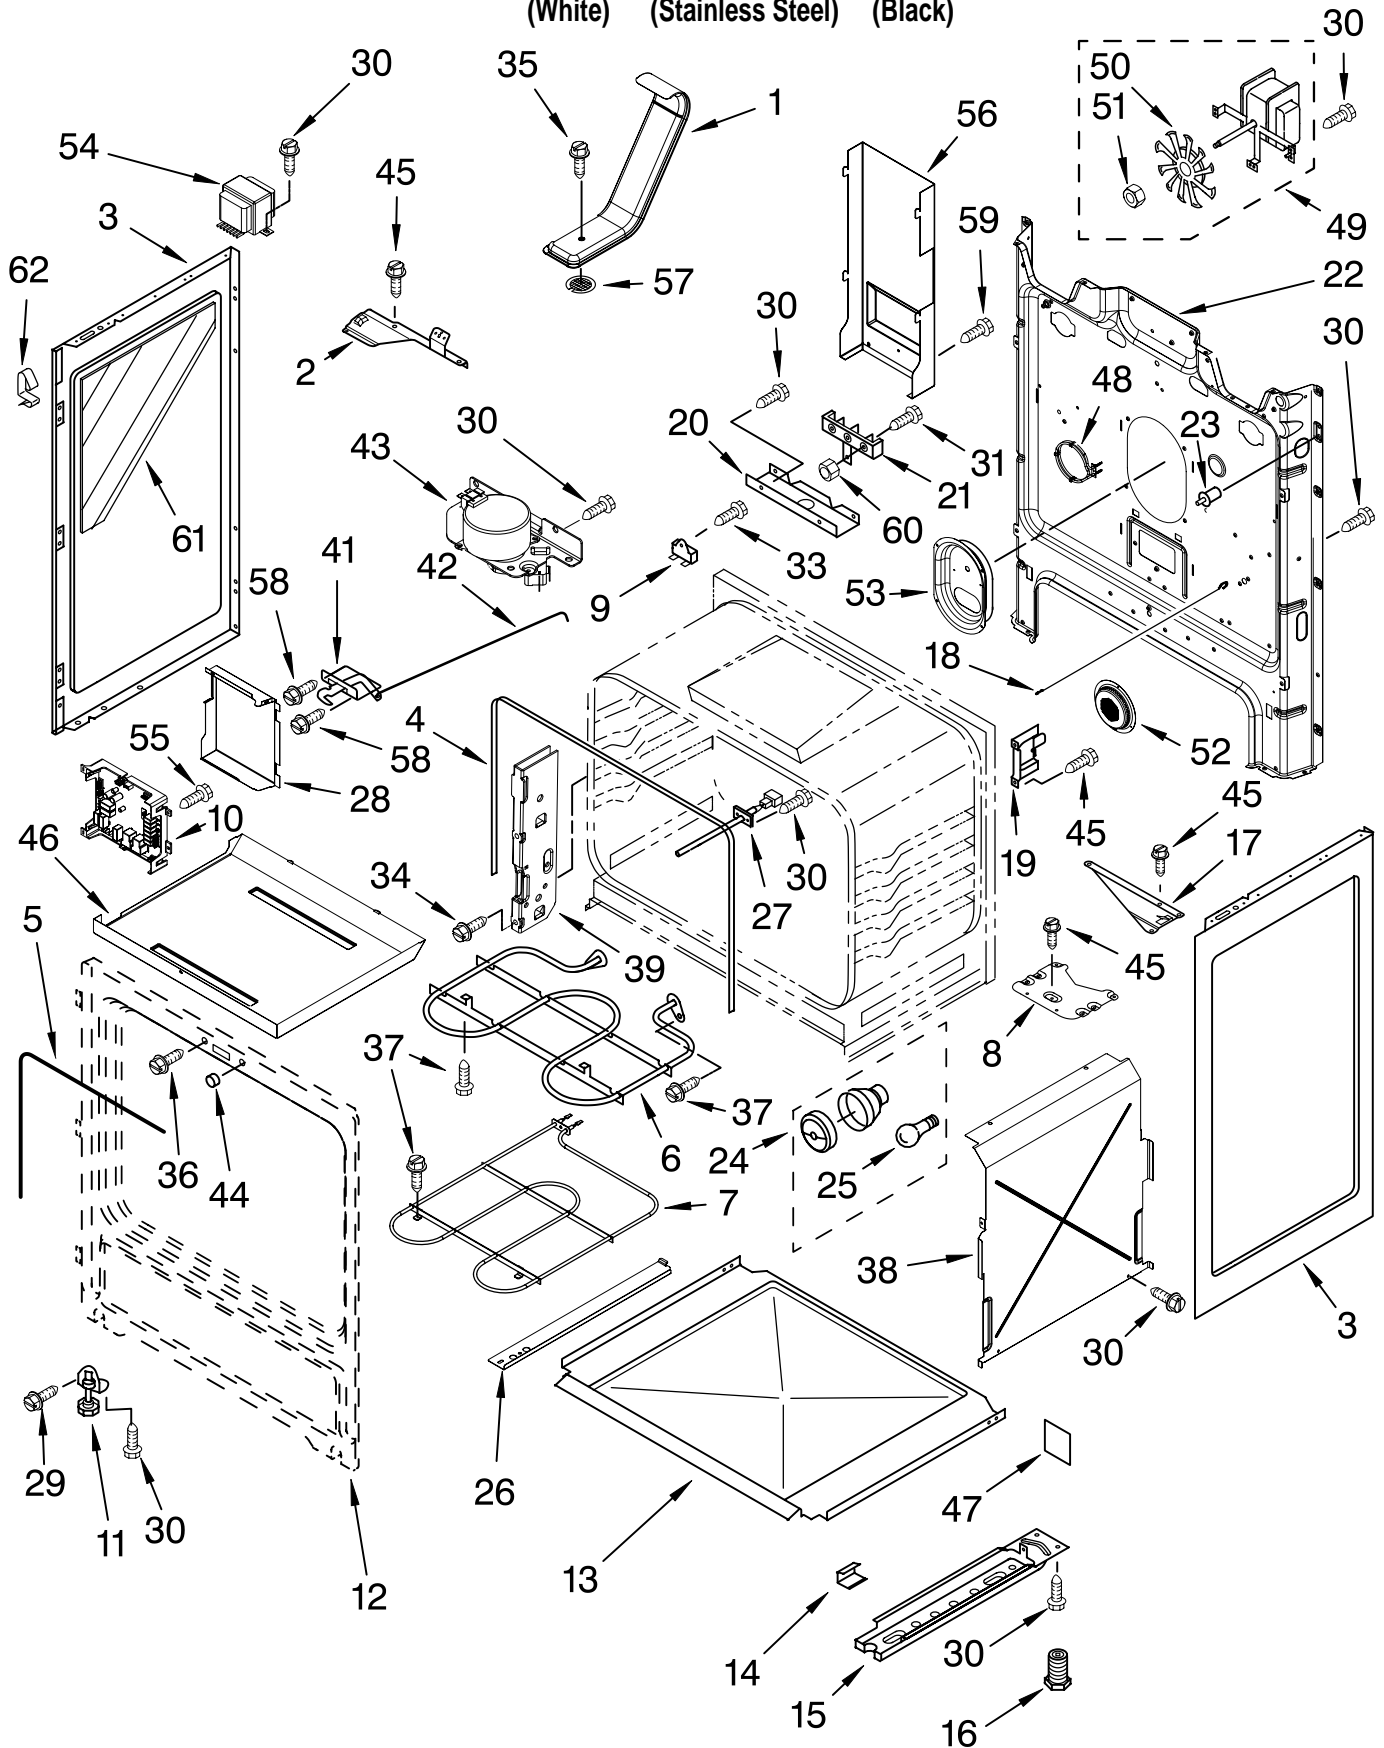

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

For Models: GR673LXSQ0, GR673LXSS0, GR673LXSB0  
(White) (Stainless Steel) (Black)


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	9761300	Vent Tube Asmbly	23	9757262	Switch, Door	47	9759689	Card, Insulator
2	8273905	Support, Corner LR	24	3196701	Light Socket Assy	48	9758525	Element, Convection
3		Panel, Side (2)	25	311255	Bulb, Oven Light	49	9758925	Fan Motor, Convection
	8053830	White	26	9755771	Cover, Tray	50	4452226	Fan Blade
	8053832	Black	27	8273902	Sensor, Oven	51	4452227	Nut
4	W10010350	Seal, Oven Flange	28	9757970	Cover	52	9755775	Cover, Fan
5	8522416	Seal, Oven Door	29	3196179	Screw	53	9755776	Bracket, Fan
6	9757341	Element, Broil	30	4449809	Screw	54	9757311	Transformer
7	9755770	Element, Bake (Hidden)	31	3400016	Screw	55	8533930	Screw
8	3195736	Support, Front (2)	33	3196172	Screw	56	9757972	Cover, Box
9	3196548	Fuse, Thermal	34	W10031780	Screw	57	9761301	Screen – Catalyst
10	9761909	Appliance Manager	35	3196566	Screw	58	3196560	Screw (2)
11	3196037	Foot, Front (2)	36	3196168	Screw	59	3196178	Screw
12		Frame, Front (Not Serviced)	37	3196174	Screw	60	112432	Nut (3)
13	8054068	Tray, Insulation	38	9758238	Retainer, Side (2)	61	9761490	Insulation
14	3196576	Clip, Panel (6)	39	9760407	Brkt – Mounting	62	3195813	Clip, Mounting
15	9760314	Rail, Base (2)	41	9761013	Latch, Door	<b>INSULATION</b>		
16	9761935	Foot, Rear (2)	42	3196961	Rod, Latch	8272616		Insulation, Wrap
17	3195987	Guard, Wire	43	9757241	Latch Asy, Rear	9755772		Insulation, Back
18	9757239	Rod – Dr Switch	44	9758701	Spacer, Door	8272613		Insulation, Vent
19	3186116	Support, Oven (2)	45	3196169	Screw			
20	3186034	Bracket, Service	46	9755769	Tray, Hidden Bake Element			
21	9761958	Block, Terminal						
22	9757029	Back, Main						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DRAWER & BROILER PARTS

For Models: GR673LXSQ0, GR673LXSS0, GR673LXSB0

(White) (Stainless Steel) (Black)

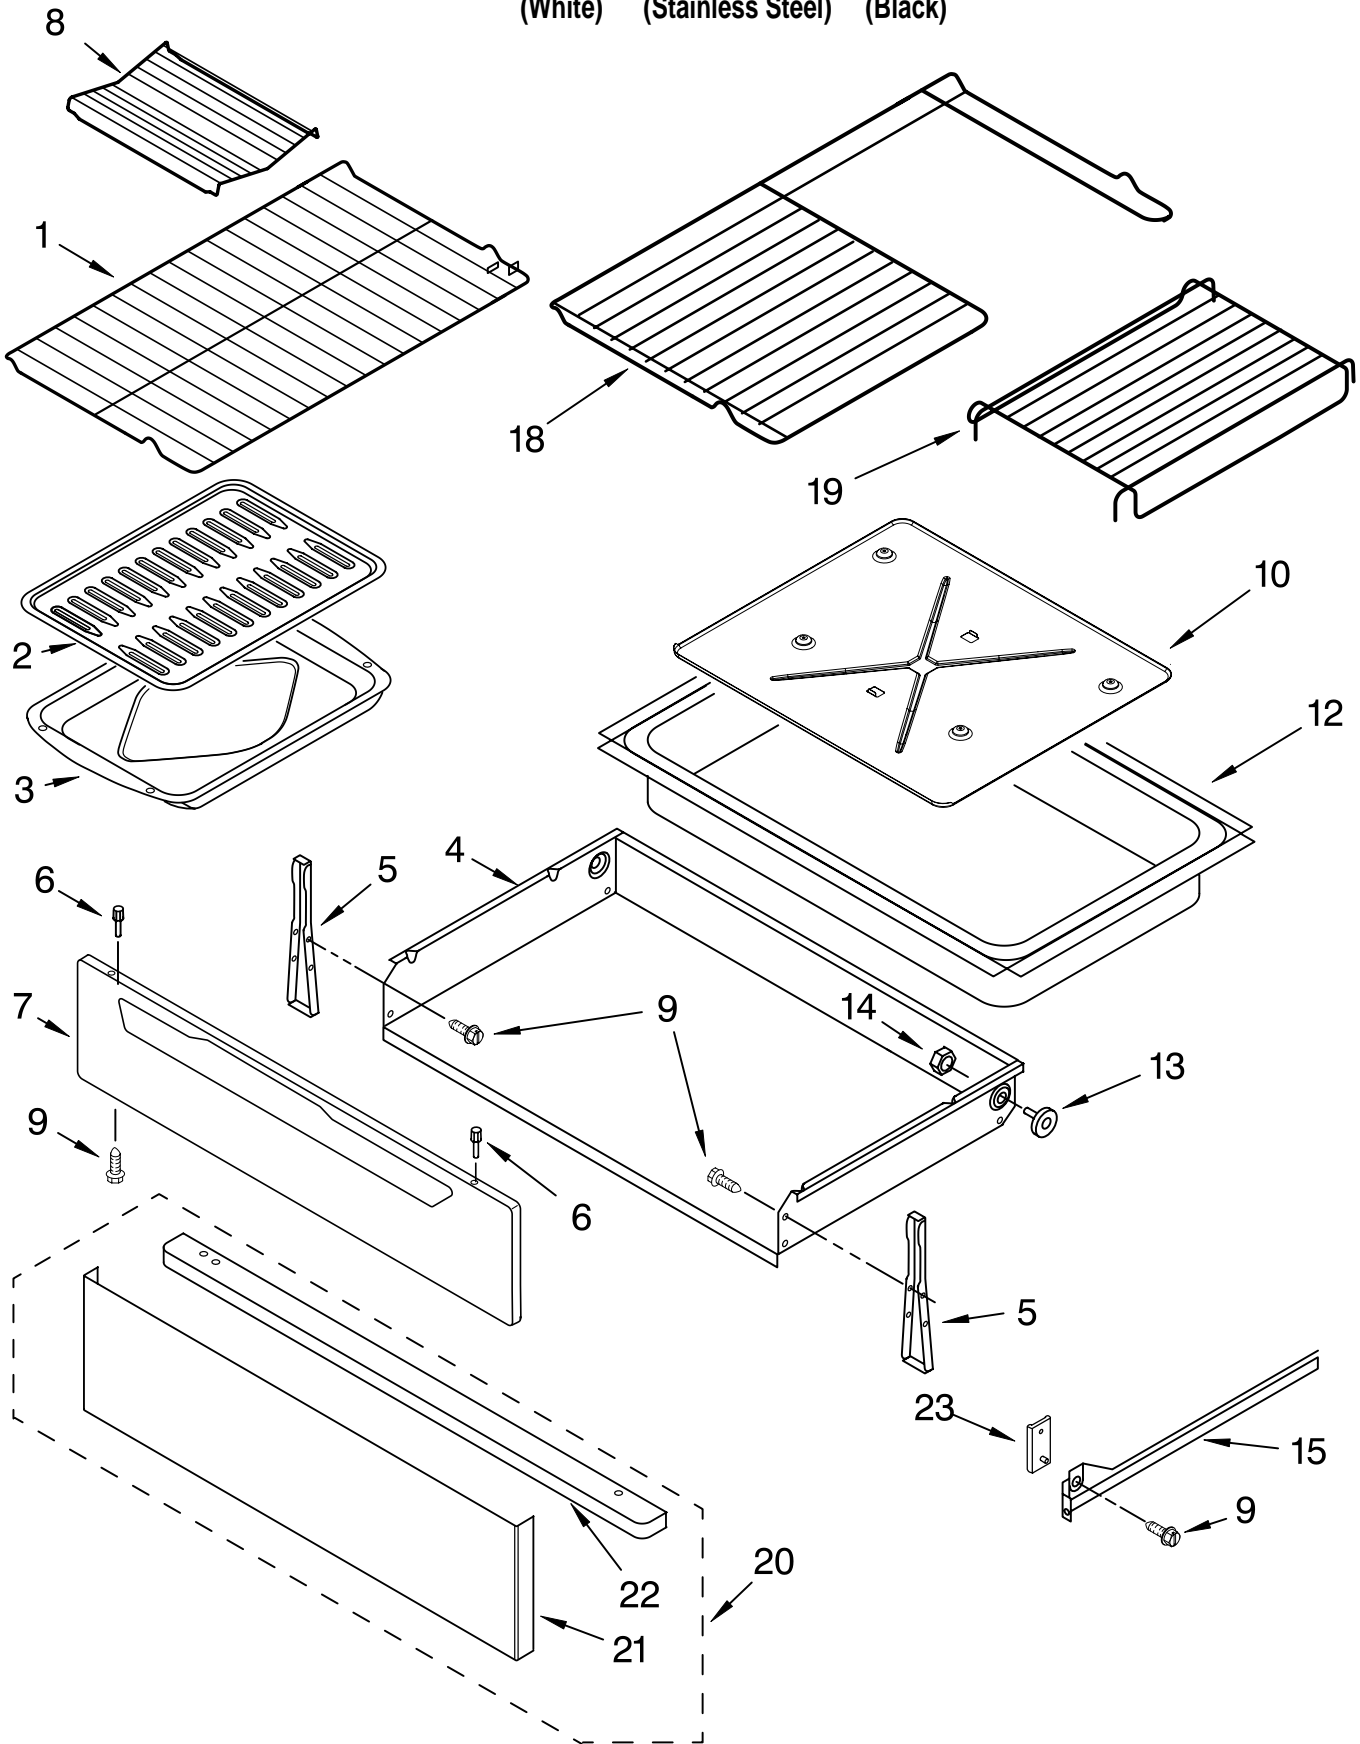

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DRAWER & BROILER PARTS


For Models: GR673LXSQ0, GR673LXSS0, GR673LXSB0  
(White) (Stainless Steel) (Black)

Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
2	3195996	Grill, Broiler
3	3196076	Pan, Broiler
4	9761030	Drawer, Storage
5	9758200	Brkt-Mntg, Drawer
6		Rivet, Push (2)
	3196814	White
7		Panel, Drawer Frnt
	8053339	White
	8053341	Black
8	3181534	Rack, Roasting
9	3196168	Screw
10	9756711	Heat Shield,Drwr
12	9761032	Liner, Drawer
13	9751138	Roller (2)
14	487939	Nut (2)
15		Slide, Drawer
	8274190	Left Hand
	8274191	Right Hand
18	8274021	Rack, Partial
19	8274022	Rack, Insert
20		Stainless Model Only
21	9755798	Panel Stainless
22	9762251	Handle
23	8522669	Spacer, Glide

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR PARTS

For Models: GR673LXSQ0, GR673LXSS0, GR673LXSB0  
(White) (Stainless Steel) (Black)

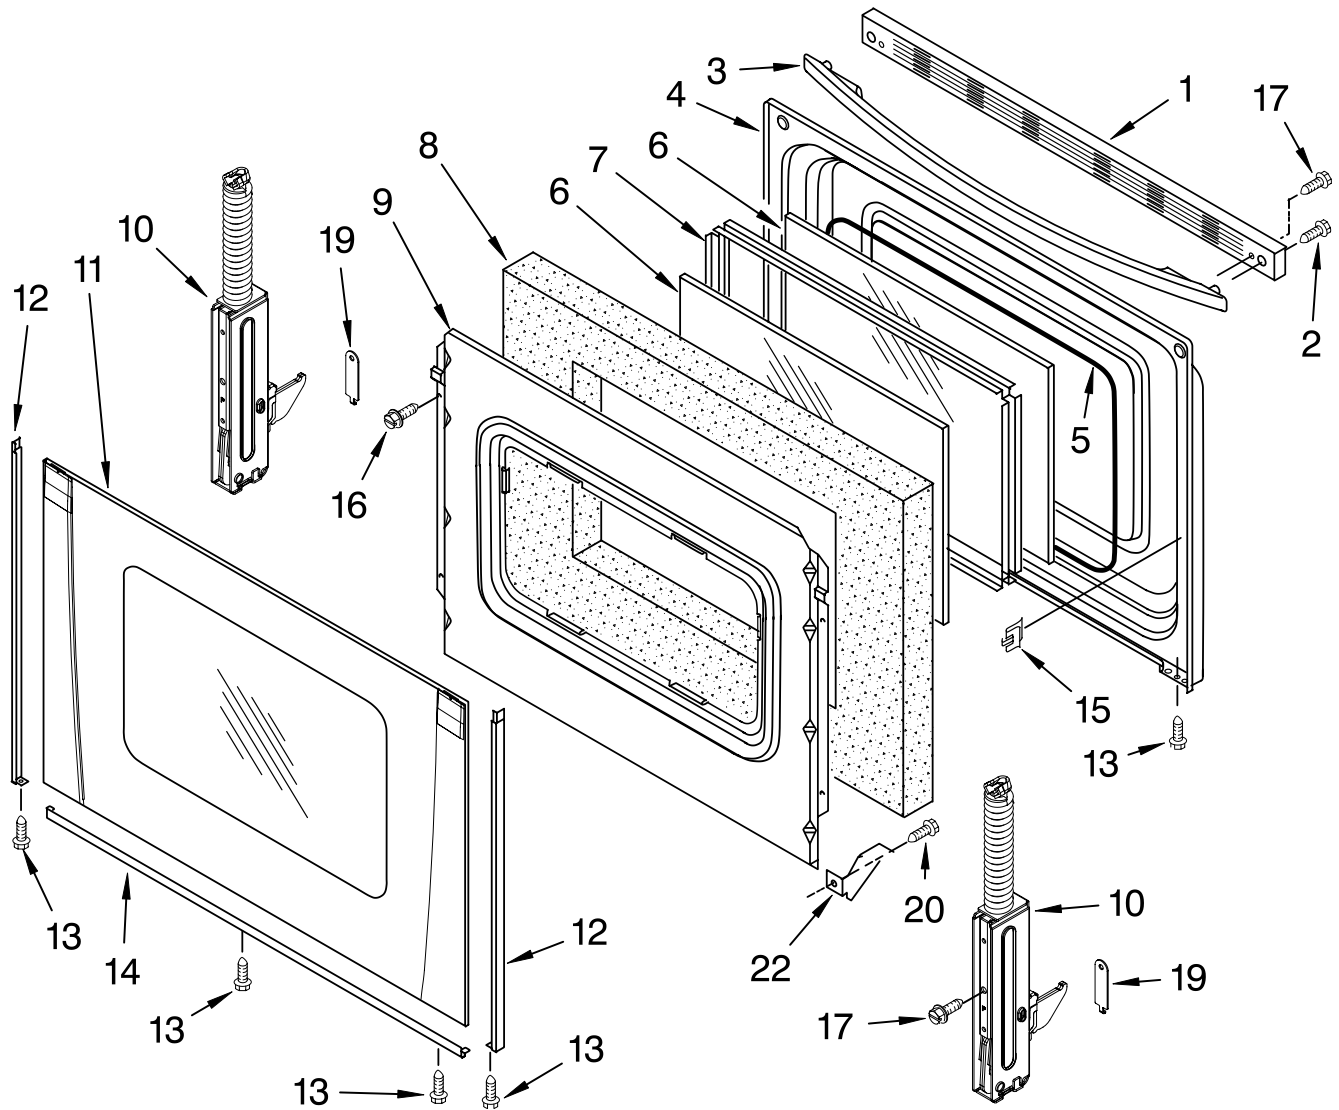

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	9761975	Trim, Top	9	9761357	Retainer, Insul.	13	3196160	Screw
	9761977	White	10	9761496	Hinge, Door (2)	14		Trim, Lower
	9762391	Stainless Model	11		Glass, Outer		8523175	White
2	3196164	Black		W10010660	White		8523177	Black
3		Screw		W10010680	Black	15	3196025	Clip, Glass (4)
		Handle, Door		W10010690	Stainless Steel	16	W10031790	Screw
	9761978	White	12		Trim, Side	17	W10031780	Screw
	6761979	Black		8523166	White Left Hand	19	9761517	Clip, Dr Mntg (2)
	9761981	Stainless Steel		8523172	White Right Hand	20	3196165	Screw
4	9761344	Liner, Door		8523171	Black Left Hand	22	3196794	Bracket, Window(2)
5	8522414	Seal, Window		8523165	Black Right Hand			
6	9758162	Glass, Inner (2)		9762249	Unvrsl Slvr LH			
7	3186289	Frame, Glass		9762250	Unvrsl Slvr RH			
8	8272618	Insulation, Door						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS

For Models: GR673LXSQ0, GR673LXSS0, GR673LXSB0  
(White) (Stainless Steel) (Black)

Illus. No.	Part No.	DESCRIPTION
Following Parts Not Illustrated		

**SPLICING WIRES--25FT. LENGTH**

242828	Wire, Black 12 Ga. 150° c
242821	Wire, Blue 14 Ga. 150° c
242822	Wire, Brown 14 Ga. 150° c
242830	Wire, Brown 14 Ga. 200° c
242823	Wire, Green 14 Ga. 150° c
242824	Wire, Orange 14 Ga. 150° c
242825	Wire, Red 14 Ga. 150° c
242831	Wire, Red 14 Ga. 200° c
242827	Wire, Yellow 14 Ga. 150° c

**REFINISHING MATERIAL**

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

Illus. No.	Part No.	DESCRIPTION
<b><u>INSULATION</u></b>		

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

**PAINT, TOUCH-UP (1/2oz.)**

72017	White
4392899	Biscuit
511873	White Porcelain (2 Oz.)

**PAINT, PRESSURIZED SPRAY (12 oz.)**

350930	White
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

**PAINT, BULK (1 qt.)**

799344	White (Uncut)
4392900	Biscuit (Uncut)

**ACCESSORY PARTS**

241430	Foil, Aluminum Oven (18" x 25')
3184478	Cleaner, Glass

Illus. No.	Part No.	DESCRIPTION
<b><u>ANTI-TIP KIT</u></b>		

W10017440 Anti-Tip Kit

**WIRING HARNESS PARTS**

Following Parts Not Illustrated

9762815	Harness, Wire (Cooktop Left)
9763105	Harness, Wire (Cooktop Right)
9762964	Harns-Wire, Warm
9758438	Harness, Wire (Main)
9758193	Harness, Wire (Console)
9756550	Harness, Bake Element (Hidden)
8523279	Wire, Ground
313660	Clip, Ground Wire
3196154	Screw

**Miscellaneous**

3196897 Pin Kit-Dr Removal