LASER  $\lambda = 780 \text{ nm}, P \text{ max} = 5$ 

Rating Information: At bottom of the unit this unit complies with the existing requirements

In accordance with the rating plate of the unit, this unit complies with current standards concerning electrical safety and electromagnetic compatibility









# 2. FCC Information

In the event that service should

be required, you may need both

the model number and the serial

purchase, and the serial number

This product should be serviced

only by those specially trained in

techniques. For instructions on

warranty included in this Guide

Technical specification

**Electrical Consumption** 

Comercializadora Thomson de

Álvaro Obregón No. 151. Piso 13.

Model: RP2800

2 x "AA" Batteries

México, S.A. de C.V.

Col. Roma. Delegación

C.P. 06700. México, D.F.

RFC: CTM-980723-KS5

Telefono: 52-55-11-020360

s B digital appara adian ICES-003.

**IMPORTER** 

Cuauhtémoc

Product: Personal CD Player

how to obtain service, refer to the

number. In the space below,

record the date and place of

Date of Purchase

Place of Purchase

Service Information

appropriate servicing

## **FCC Information**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Inc. could void the user's authority to operate this product.

This device generates and uses radio frequency (RF) energy, and if not installed and used properly this equipment may cause interference to radio and television reception. If this equipment does cause

interference to radio or television reception (which you can determine by unplugging the unit), try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference Plug the unit into a different
- wall outlet so that the unit and the equipment receiving interference are on different branch circuits

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions, Also, the Federal Communications Commission has prepared a helpful booklet "How To Identify and Resolve Radio TV Interference Problems.' This booklet is available from the U.S. Government Printing Office, Washington, DC 20402.

Please specify stock number 004-000-00345-4 when ordering This product complies with DHHS Rules 21 CFR Subchapter J. Applicable at the date of


For Your Records


# 3. Before you begin

### **Unpacking Your Unit** You should have the following:

- · one main unit
- one set of ear bud phones one user's guide

## 4. CD Player General Control

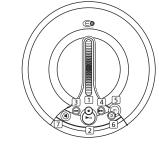

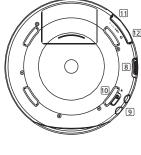

- stop button- Turns the unit off / stops CD playback. ▶II play/pause button - Turns on the unit, starts or pauses CD
- playback Skips / searches backward a track.
- → Skips / searches forward a track button - Selects playmode.
- 6. **p** button Enters program mode
- Selects music modes (EQ). open switch - Slide to open CD door.
- 9. Volume buttons Adjust the volume ("+" to increase and "-" to decrease volume).
- 10. Lock switch Locks or unlocks the buttons. 11. DC jack - Connect with a power adapter for indoor use Line Out / 
   \( \oldsymbol{\Omega} \) Headphones - Insert your headphones here.







WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

# 6. CD Player

5. Power

**Battery Power Supply** 

to power the CD player.

adapter (not provided)

Two "AA" batteries are required

AC/DC Outlet Power Supply

You can power your CD player with an AC/DC power adapter (4.5V DC, THOMSON adapter

5-4079B recommended). AC/DC power adapter is purposed for

Remove the jack from the device

indoor use in dry rooms only.

to use it with the batteries.

Car (DC) Power Supply

adapter (not provided)

Plug a car (DC) power supply

adapter into the AC/DC in 4.5V

jack at the rear/side of the CD player and then into the cigarette lighter receptacle in your car.

## The display



- POP) Random playback
- Program mode
- Volume Intro playback
- Repeat current track Repeat all tracks
- Low battery level
- Player buttons are locked 10. Track number, playback time and volume level

Listening to a Compact Disc Slide the **open** switch to the right to open the door. Insert a disc and press lightly on the center to lock

## Playback

- Press play/pause ▶II button on the main unit to start playback. "- -" will appear on the display followed by the total number of tracks and time of the CD. CD begins playback shortly after displaying the number of tracks and time of CD.
- If the disc compartment is empty or the disc cannot be read, diSC or Er will appear on the display

The **ELECTRONIC SHOCK PROTECTION\*** system prevents sound interruptions when impacts or vibrations occur. Electronic anti-shock consumes less power and increases the battery life. Therefore, the  $\ensuremath{\textbf{ESP}}$  function is always ON. After many successive impacts,

the buffer might be emptied causing a brief sound interruption for the memory to reload.

### Skip / Search • Press ◄ once to go back to

- t h e beginning of the current track. Press twice consecutively to skip to the previous track. Press and ho to search backward within a Press but to skip to the next
- Press and hold to track. search forward within a track

# Pause

- During playback, press play/ pause II on the main unit pause playback. The playback time flashes when playback is paused. To resume playback, press
- play/pause ▶ II

Stop and power off Press stop on the main unit. Press **stop** again to turn the unit off

# Rock and Surround.



r 11 - replay the current track. rall - replay all tracks. 10 seconds of each track.

\* press play/pause ►II after selecting these modes to start playback in the selected manner.

## Program

tracks you selected in the order 20 tracks. the disc into place. Close the door.

flashes on the

- 2. The first unoccupied program location will show on the
- Press ▶ or ◄ to select a track into the program
- selection
- more tracks
- listen to your programming.

Program will be cancelled when you change the disc or turn off the

Cancel Program

To exit program mode. press stop ■. Press p to enter program mode again

# Lock

unwanted functions. Lock icon will show on the

- slide the controls again.
- battery consumption, the unit switches off Music mode

Press Preparedly to select among Normal, Pop,

Playmode You can replay the entire CD or one track. listen to the tracks in random order and the beginning

Note:

functioning. To cut the power supply off, the AC/DC

adapter must be unplugged

Power is fed to the

unit even when it is not

In CD mode, press m repeatedly

\* - play the beginning ♠\* - play tracks randomly.

# This function lets you listen to the

you want. You can program up to 1. Press **p** to enter program

mode. 

and track number display.

- display, e.g. "01"
- 4. Press **p** to confirm your
- 5. Repeat steps 2 to 4 to select
- 6. Press play/pause ▶II to

Exit Program mode

Slide the lock switch on the main unit to **HOLD** position **a** to lock the buttons on the main unit to avoid accidental activation of display when the buttons are

- Note: Remember to
- lock switch to the ON position to activate the To prevent excessive
- automatically in all modes (except in playback and pause mode) after 30s if no key has been activated. If the lock switch is in the
- Hold position when the unit is off, pressing the Play/Pause button will display the lock icon on the display letting you know that the lock switch is in the Hold position.



User manual Manual de usuairo

Comercializadora Thomson de México, S.A. de C.V. Álvaro Obregón No. 151. Piso 13. Col. Roma. Delegación Cuauhtémoc C.P. 06700. México, D.F. Telefono: 52-55-11-020360 RFC: CTM-980723-KS5

Thomson Inc. P.O. Box 1976, Indianapolis, IN 46206-1976 ©2007 Thomson Inc. ©2007 Thomson Inc.
Trademark(s) © Registered
Marca(s) © Registrada(s)
Marque(s) © Deposée(s)
www.rcaaudiovideo.com
Printed in China/Impreso en China

5642872B (EN/E)

Clean the player with a soft cloth, or a damp chamois leather. Never use solvents.

# Useful advice

- · Do not store CDs in damp
- temperatures. Do not put any tape or
- You should avoid leaving the CD door open. Dust is liable to impair performance of the
- Do not use your set immediately after transport from a cold place to a warm place: there may be
- surface. Make sure that you keep your set away from water and high temperatures. If you do not use your set on
- one month, we advise you to take out all the batteries. To prevent personal injury, do

battery power for more than

- Discard leaking batteries immediately. Leaking batteries can cause skin burns or other
- This apparatus shall not be exposed to dripping and splashing.
- Prolonged use of the CD player at full volume can

## Notes on CD-R/RW Discs Do not affix any type of labels

- to either side (recordable or labeled side) of a CD-R/RW disc as this may result in the unit malfunctioning.
- CD-R/RW disc. do not open the disc compartment door while the disc is being read. Do not load an unrecorded

CD-R/RW disc into the unit.

read the disc. Playback capability for CD-RW discs may vary due to variations in the quality of the CD-RW disc and the recorder

Please respect the environment!

Before throwing any batteries away, consult your distributor who **Headset Safety** 

may be able to take them back for

specific recycling

### Have a Blast- Just Not in Your Eardrums Make sure you turn down the volume on the unit before you

put on headphones Increase the volume to the desired level only after headphone



- your ears, reduce volume or discontinue use. You should use with extreme caution or temporarily discontinue use in potentially
- hazardous situations. Even it your headset is an open-air designed to let you to hear outside sounds, do not turn up the volume so high that you are unable to hear what is around you.

Technical specifications \* Frequency response: 20Hz to

# **Power Supply**

 4.5V DC through AC/DC adapter

2 "AA" batteries 4.5V DC (through car DC Damage from misuse or neglect.

900

**RP2800** 

It is important to read this instruction book prior to using your new product for the first time Es importante leer este manual antes de usar por vez primera su equipo.

# U.S. Limited Warranty

What your warranty covers

Defects in materials or workmanship

## For how long after your purchase: One year from date of purchase.

The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes

### What we will do: Provide you with a new, or at our option, a refurbished unit. The

- exchange unit is under warranty for the remainder of the original product's warranty period. Proof of purchase in the form of a bill of sale or receipted invoice
- which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

## How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:
- Product Exchange Center 11721 B Alameda Avenue Socorro, Texas 79927
- Insure your shipment for of loss or damage. Thomson accepts no liability in case of damage or loss en route to Thomson.
- Pay any charges billed to you by the Exchange Center for service not covered by the warranty A new or refurbished unit will be shipped to you freight prepaid
- What your warranty does not cover: Customer instruction. (Your Owner's Manual provides information
- regarding operating Instructions and user controls. For additional information, ask your dealer.)

Thomson Inc.

- Installation and setup service adjustments Batteries.
- Products which have been modified or incorporated into other products Products purchased or serviced outside the USA.

Acts of nature, such as but not limited to lightning damage

Product Registration: Please complete and mail the Product registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

WARRANTY.

- Limitation of Warranty: THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.


How state law relates to this warranty:

information.

Note

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may
- If you purchased your product outside the USA: This warranty does not apply. Contact your dealer for warranty

have other rights that vary from state to state

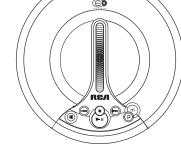

7. More Information

- Do not expose CDs to high
- adhesives on either side of the
- laser optical unit.
- condensation problems. Do not touch the playing
- not reverse any battery and do not mix battery types.
- personal injury.
- damage the user's ear.
- To avoid damages to the
- This may take a longer time to used to create the disc.

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice. The English version serves as the final nce on all products and operational details should any discre

