

Premier Office Keyboard

User's Guide

Model: IN3007KB

CAUTION: To use this device properly, please read the user's guide before installation.

Tripp Lite World Headquarters
1111 W. 35th Street • Chicago, IL 60609 USA
(773) 869-1234 • www.tripplite.com

Copyright © 2006 Tripp Lite. All rights reserved. All trademarks are the property of their respective owners.

The policy of Tipp Lite is one of continuous improvement.

Installation

To connect your keyboard:

- 1) Turn off your computer power
- 2) Unplug the existing keyboard
- 3) Connect your new keyboard using the steps below

The keyboard comes with 5 connectors		USB plug
Plug the black plug into the USB port.		
Plug the purple plug into the PS/2 keyboard port (purple round port).		PS/2 plug
Plug the pink plug into the sound card's microphone port (pink round port).		Microphone plug
4. Plug the light green plug into the sound card's earphone (speaker) port (light green		Earphone plug
round port).	THE PLANT OF THE PARTY OF THE P	Extra
Plug the speaker plug (light green female type port) into BOTH the headset and speaker ports.		speaker bypass plug
Headset extension port is located on the left side of the keyboard.		
	Headset extension port	
USB 2.0 extension port is located on the right side of the keyboard. Supports most IT devices: Mouse • Digital Camera • MP3 Player	S S S S S S S S S S S S S S S S S S S	
Flash Drive • And more	USB 2.0 extension port	

NOTE: For built-in extension ports on the keyboard

The built-in extension ports (1 USB/1 Audio in/1 Audio out) on the keyboard are available only when the USB plug and headset plugs are connected to your computer.

Installing the Keyboard Software


Before you can take advantage of the many features of your keyboard, you must install the driver. The driver is in the installation CD that came packaged with the keyboard.

Windows 95/98/ME/2000/NT4.0/XP installation:

- 1. Insert the included CD into your CD-ROM.
- 2. The Auto-run installation Menu window will pop up for your setup.
- 3. Follow the on-screen instructions to accomplish the installation.

Using the iOfficeWorks Software

To launch the iOfficeWorks software, double-click the iOfficeWorks icon on the Windows Taskbar. The iOfficeWorks software brings you closer to your desktop, allowing you to set up and organize your keyboard for optimal use. Using the Hot keys and the iOfficeWorks software, customize your keyboard to access your Internet home page, favorite chat room, or run your e-mail application with the push of a button.

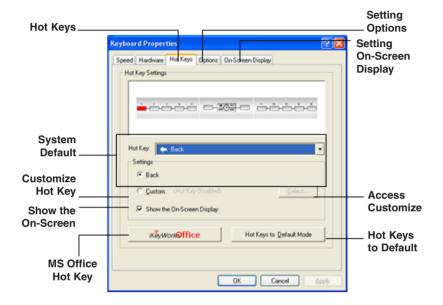

Popular Hot Keys

There are 17 programmable Hot Keys with default functions that are automatically supported by Windows 2000 or above Windows OS. (You have to establish the iKeyWorks to enable the Hot Keys in Windows 98 OS.)

Hot Keys		Default Functions	Microsoft Office Program Functions	
0	Back	Back to previous page	Back to previous document	
	Forward	Forward to next page	Forward to next document	
(x)	Stop	Stop the page	Open Address Book	
•	Refresh	Refresh the page	Open Winzip	
	Internet Browser	Access your default web page	Back to your default home web page	
0	Volume Increase	Increase the sound volume	Zoom out	
	Stop	Stop play	Adobe Photoshop	
	Play/Pause	Play or pause the media	Acrobat Reader	
0	Mute	Decrease the sound volume to silence	Office Tools	
K	Previous Track	Play the previous track	Decrease font size in Microsoft Word	
	Next Track	Play the next track	Increase font size in Microsoft Word	
	Volume Decrease	Decrease the sound volume	Zoom in	
@	Search	Web search	Microsoft PhotoDraw	
0	Favorite	Open your "Favorites" folder	Open documents	
0	E -mail	Launches an e-mail application	Open default Email Software (Ex: Outlook Express)	
	My Computer	Open My Computer folder	My documents	
0	Calculator	Display the online calculator	Microsoft Outlook	



Tripp Lite World Headquarters
1111 W. 35th Street • Chicago.IL60609 USA
(773)869-1234 • www.tripplite.com