 


Atomic Wall Clock

Thank you for purchasing your Atomic Wall Clock from **RadioShack**. Please read this user's guide before installing, setting up, and using your new clock.



Check package contents

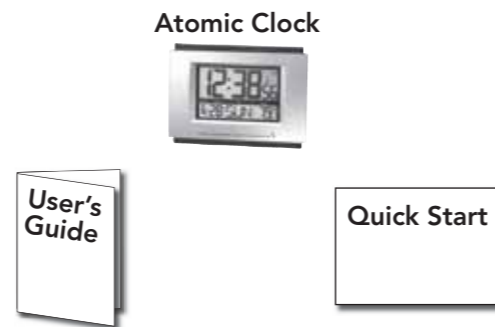

 
Features

- Sets automatically and stays set
- Synchronizes with the U.S. atomic clock in Fort Collins, Colorado
- Automatically updates for Daylight Savings Time
- Mounts on a wall, or sits on a flat surface
- Displays time in 12 or 24 hour format, date, day of the week, and temperature in Fahrenheit or Celsius

① Install Batteries

Your clock requires 2 AA batteries (not supplied) for power.

1. Flip open the stand.
2. Lift the tab on the battery cover on the back of the clock.

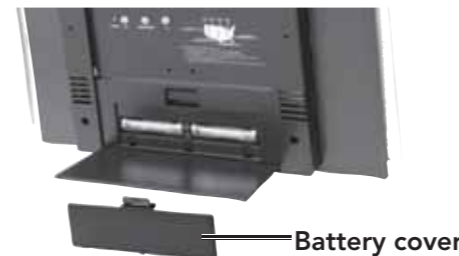

3. Insert two AA batteries into the battery compartment, following the polarity symbols (+ and -) marked inside.
4. Replace the cover.

Battery Notes

- Dispose of batteries promptly and properly. Do not burn or bury them.
- Use only fresh batteries of the required size and type.
- Do not mix old and new batteries, different types of batteries (alkaline, or rechargeable), or rechargeable batteries of different capacities.

② Display your clock

Using the stand

Flip open the stand on the back and push it into the slot at the base of the clock until it clicks. Place the clock on a flat surface.




Mounting on a wall

1. Drill a hole in the wall at the desired location.
2. If needed, insert an anchor (not supplied) into the hole. Drive a screw (not supplied) into the hole, leaving about $\frac{3}{16}$ in. (4.8 mm) exposed.
3. Slide the clock's keyhole slot onto the exposed screw head.

③ Set up your clock (Optional)

The clock shows the current time, day of the week, and indoor temperature. The clock attempts to synchronize with the atomic time signal automatically when you first set up the clock and whenever you press **RESET**. If the clock does NOT automatically display, do the following:

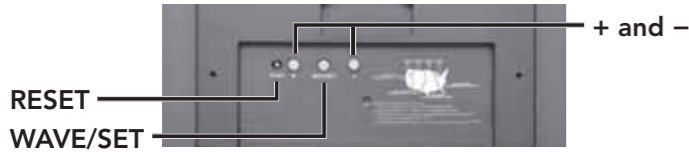

1. Hold down **WAVE/SET** for about 2 seconds to enter settings manually.
2. The time zone and DST (Daylight Savings Time) flash. Press + to select your time zone. Press – to turn DST to On or Off. The default settings are PST and DST on.
3. Press **WAVE/SET** to confirm these settings.
4. The year digits flash. Press + or – to select the year.
5. Press **WAVE/SET** to confirm the year.
6. The date digits flash, press + or – to select the date.
7. Press **WAVE/SET** to confirm the date.
8. The time digits flash. Press + or – to select the time.
9. Press **WAVE/SET** to confirm the time.
10. The time format and temperature flash. Press + to select between the 12 Hr and 24 Hr format. Press – to select between Celsius and Fahrenheit.
11. Press **WAVE/SET** to confirm the hour format and temperature.

Notes:

- Manually setting your clock may decrease battery life.

- When setting the year, date, and time, press and hold + or – to scroll rapidly through the choices.

Resetting your Clock

Press **RESET** when the clock is inaccurate, even if “WAVE OK” or “OK” appears. Sometimes severe external noise may interfere with the time signal.

Signal Reception

Your clock will search for an atomic time signal and display the time automatically. Once a signal is found, stops flashing. If the initial reception fails, the clock will display the time you set, and search again every 3 hours.

Notes:

- Each reception attempt will last for several minutes, depending on signal strength in your location.
- If flashes, your clock is actively searching for the time signal. If is static, your clock is not searching for the signal.
- It is normal for “WAVE OK” to appear when the clock receives a signal during the last search. “WAVE OK” may not appear daily due to interference between your location and Fort Collins, Colorado.
- Start signal reception at any time by pressing **WAVE/SET**. flashes.

- For best reception, place your Atomic Clock near a window facing Fort Collins, Colorado. Move the clock to another location if you encounter difficulty while receiving the time signal.

Care and Use

- Avoid contact with any corrosive materials such as perfume, alcohol, or cleaning agents.
- Do not subject the clock to excessive force, shock, dust, temperature or humidity. Any of these conditions may shorten the life of the clock.
- Do not tamper with any of the internal components of this clock. This will invalidate the warranty and may cause damage.



Protect the environment by recycling used electronics. Go to E-CyclingCentral.com to find a recycle location near you.

Limited Warranty

RadioShack warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase from a **RadioShack**-owned store or an authorized **RadioShack** franchisee or dealer. **RADIOSHACK MAKES NO OTHER EXPRESS WARRANTIES.**

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a **RadioShack** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the **RadioShack** sales receipt as proof of purchase date to any **RadioShack** store in the U.S. **RadioShack** will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the

same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of **RadioShack**. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

RADIOSHACK EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, **RADIOSHACK** SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF **RADIOSHACK** HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact **RadioShack** at: **RadioShack** Customer Relations
300 RadioShack Circle, Fort Worth, TX 76102

www.RadioShack.com

04/08

©2009. **RadioShack** Corporation.
All rights reserved. **RadioShack** and **RadioShack.com** are trademarks used by **RadioShack** Corporation.

Printed in China 02A09 63-247