 


Portable Stereo Sound System

Model: iS133

Location Of Controls And Indicators

- 1.) Left Speaker.
- 2.) Battery Compartment **OPEN** Button.
- 3.) Battery Compartment Cover.
- 4.) Power 'On' LED Indicator.
- 5.) Right Speaker.
- 6.) Mini Stereo Plug with Cable.
- 7.) **VOLUME + / -** Control.
- 8.) **DC IN 6V** Input Jack (On Back Cabinet).
- 9.) **POWER** On/Off Switch.

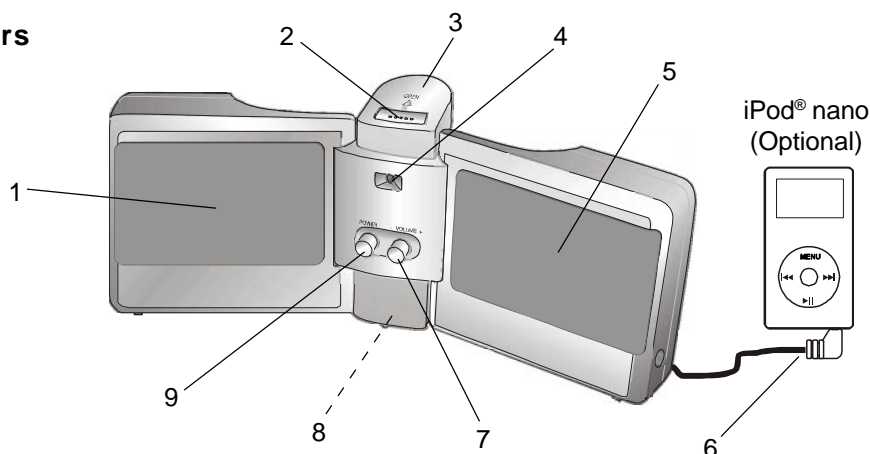

Power Source

This unit is designed to operate on 4 "AAA" (UM-4) batteries, or an external AC adapter. The batteries and adapter are not included.

Battery Operation

 
- 1.) Open the battery compartment cover by sliding **OPEN** button in the direction of the arrow and lifting up on the cover.

To prevent loss the cover is attached to the cabinet and cannot be removed completely.

- 2.) Insert four fresh "AAA" batteries into the compartment according to the polarity markings (+ / -) engraved on the top cabinet. If the batteries are inserted incorrectly the unit will not work.

NOTE: We recommend that you use a well-known brand of alkaline batteries for longest life and best performance.

- 3.) Close the battery compartment cover and make sure that it is locked.

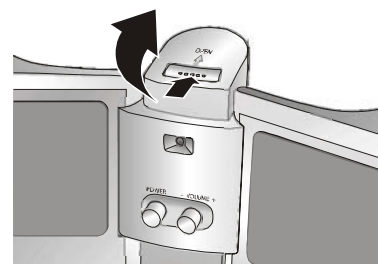


AC Adapter Operation

This player can also be operated by with an optional AC/DC converter/adapter, not included. If you decide to purchase an optional AC/DC adapter the specification must be as follows:

Input: 120V 60Hz AC.

Output: 6V DC, 850mA.

 Plug: Female Type with Positive Center, "UL" Listed.

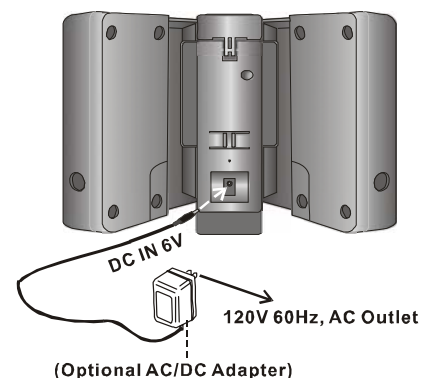

You may also purchase a "Universal" type AC/DC adapter which allows you to select the required output voltage and plug polarity, and normally includes multiple plug sizes to fit most brands of equipment. Always look for the "UL" listing mark when you purchase an adapter.

Operating Instructions

- 1.) Connect the mini stereo plug from this unit to your external device such as an iPod®, MP3 player, personal CD player, personal cassette player, or personal stereo radio.
- 2.) Press the **POWER** button of this unit to turn the power 'On'. The Power LED indicator comes on.
- 3.) Operate your external device as usual.
- 4.) Rotate the **VOLUME + / -** control to adjust the volume of this unit.

NOTE: If you connected this speaker system to the headphone jack of your external device you will need to adjust the volume controls of both devices to find the desired level. If you connected this speaker system to the Line Out of your external device, you only need adjust the Volume control of this speaker system. The Volume control on your external device will have no effect on the sound level.

- 5.) When you are finished listening press the **POWER** button of this unit to turn the power 'Off'. The Power LED goes off.
Don't forget to shut off the power of your external device as well, if necessary.

Changing the Batteries

When the sound output of this system becomes weak or distorted you should replace all four batteries as soon as possible.

Do not leave exhausted batteries in the unit for an extended period of time as they may eventually leak and cause damage to the unit.

Battery Precautions

- Replacement of batteries must be done by an adult.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- The supply terminals are not to be short-circuited.
- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed.
- Only batteries of the equivalent type are to be used.
- Batteries are to be inserted with the correct polarity.
- Dispose of batteries properly. Do not dispose of batteries in fire.
The batteries may explode or leak.

LIMITED WARRANTY

Emerson Radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of ninety (90) days from the date of original purchase in the U.S. With your dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion. For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$5.00 (not required by California residents) to cover shipping and handling costs, and enclose a copy of your proof of purchase. Send your unit to:

Emerson Radio Corp.,
5101 Statesman Drive,
Irving, TX 75063.

Customer Service Hotline: 1-800-898-9020.

This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or products purchased, used, serviced or damaged outside of the United States.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

AU898H